




PAY YOUR ATTENTION PLEASE!!!


According to the duty cycle requirements, you need to let this transformer stop working for 18min, once this has worked for 2min.

Transformer Assembly Instructions

(1S1V & 3S2V)

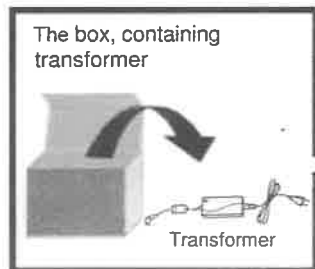

Pre-connected actuator cable.
DO NOT touch or remove

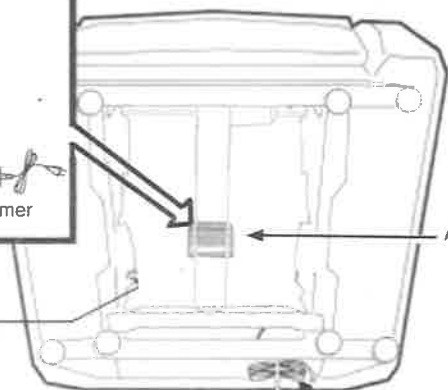


Actuator cable setup guide




① Remove transformer from the hardware box




 
② Cut the cable tie to extend the actuator cable




③ Connect the actuator plug to the transformer

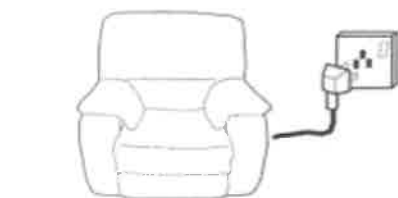

④ Place the sofa in the upright position and connect transformer plug to the wall socket

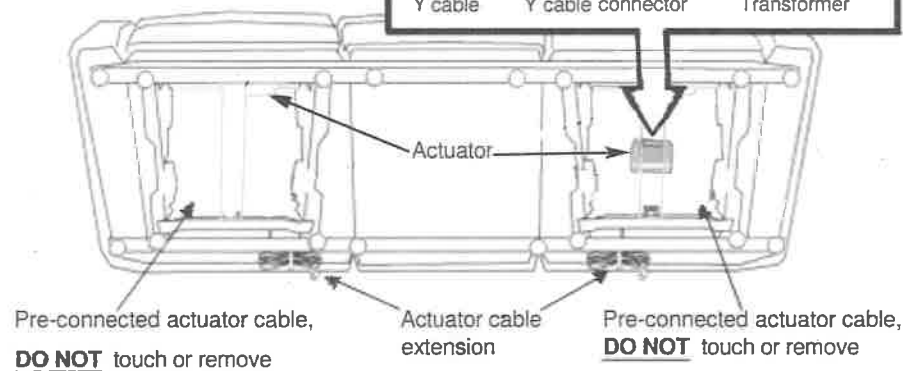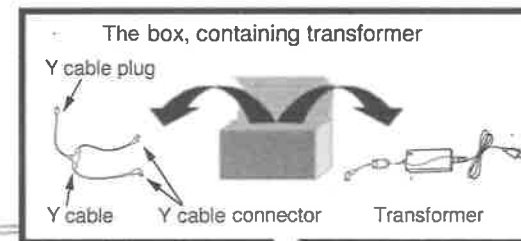

Actuator cable setup guide

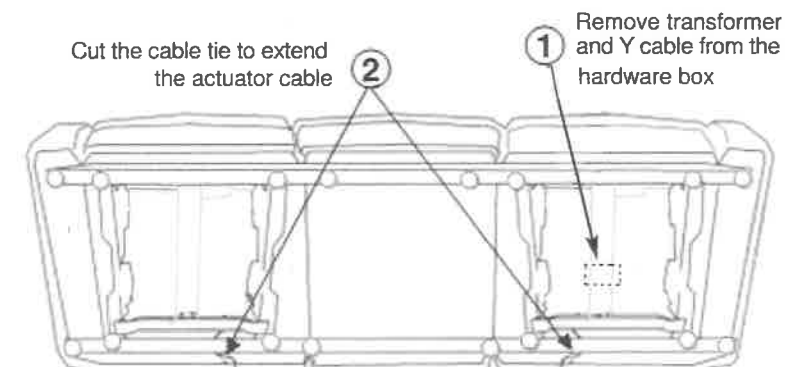

③ Connect the Y cable to both the actuator extension cable and the transformer.

④ Return the sofa to its upright position and connect transformer plug to the wall socket



Operating Instructions

Type 1 :

Push switch



To recline

Press the front button found on the side of the chair. The footrest will extend out. Keep fingers on the button until it reaches the desired position.



To retract

Press the rear button found on the side of the chair until the footrest returns to the closed position.

Type 2 : Lever Release



To extend footrest

Pull lever on the side of the chair. The lever will activate the mechanism and extend the footrest.



To recline

With footrest extended, lean back. The back is counter-balanced and requires only minimum pressure to recline smoothly into your desired position. Place both hands behind the head to assist the movement.




To retract

Sit up and the recline will return to its original position.



To return footrest


Move your body weight forward and press down with your legs until the footrest returns to the closed position. It will be locked in this position.

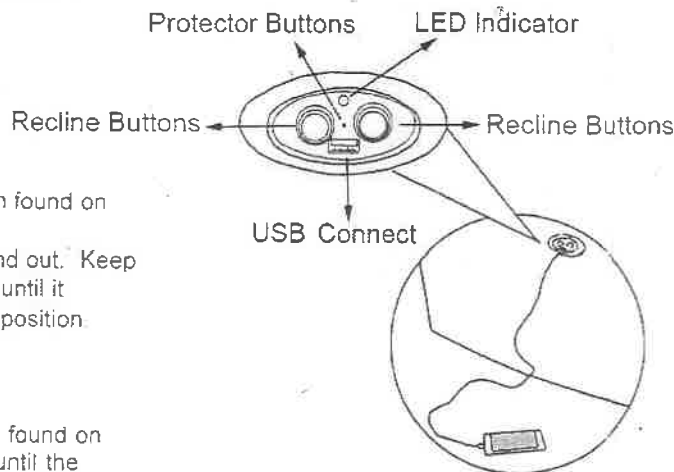

Be careful:

Users may activate/deactivate the protection button by using a pen. Ensure that the protection button is deactivated prior to use. The LED indicator will emit a green light when the power recliner unit is plugged to a power point. The LED indicator will emit a red LED light when the recline buttons are activated. The LED indicator will not emit any green/red light when the power recliner unit is unplugged from the power supply.

Reclining Sofa : Safety Instructions

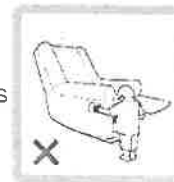

Do not allow children and pets to play on mechanised furniture and extended footrest. Close supervision is necessary when this furniture is used by, on or near children, pets, invalids, or disabled person.



Ensure that no persons are near the furniture when it is in operation.



Never drop or insert any object into any openings. Keep hands away!




Do not place sofa over the power cords or cause power cords to be entangled with furniture.



Do not allow liquids to come in contact with any electric components.




Switch off and unplug from outlet when not in use, and before putting on or taking off parts.

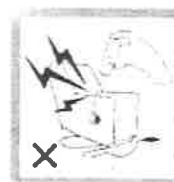


Never operate the electric operated furniture if it has a damaged cord or plug, if it is not working properly, if it has been damaged or damaged by water. Contact your supplier for examination and repair. Electric components should not be tampered with.

Instruction of the adjustable HR


You can lift the HR to the desired level, the HR will maintain its position after each click.

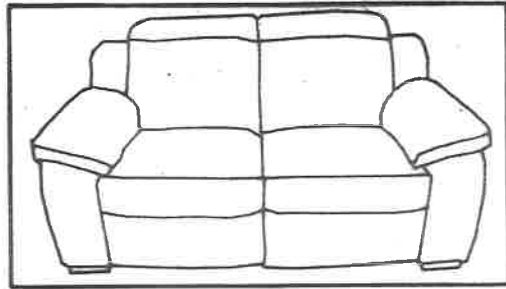


The finish sofa image

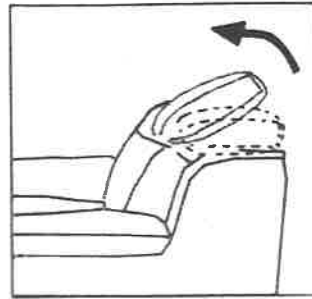

lift the HR up
(low level)

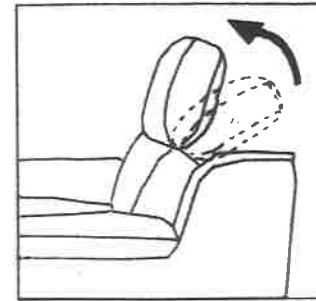

lift the HR again
(high level)

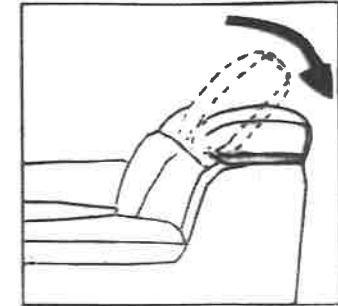

back to original position

If you want to let the HR go back to its original position. DO NOT press the HR downwards suddenly, please lift the HR all way upright, push it toward, the mechanism will unhinge itself, then put the HR go back.

CAUTION: when the HR at any lifted position
DO NOT use force on the HR
DO NOT sit on the HR
DO NOT stand on the HR

