




ketchup



chocolate



oil

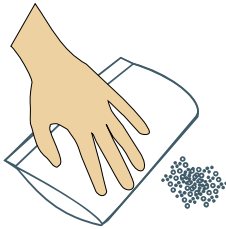

Remove using absorbent paper



non abrasive cloth



extra gently wash with mild soap and water mixture



Warning


- Avoid exposing the sofa to direct sunlight or too powerful lamps to ensure the color of the covering remains bright.
- The above listed causes, as well as the use of unapproved detergent substances, may irreparably damage the leather covering, causing cracks and changes in color.
- If you purchase a new sofa, with a covering that is an identical article and/or is of the same color as the sofa, that you already own, it is possible that you may note slight differences in shades of color between the two, because of the unique personality of each hide.





SECTIONAL MODELS

Metal hook assembly

The connecting system consists of a single metal components for the left and right versions, mounted on the modular side.

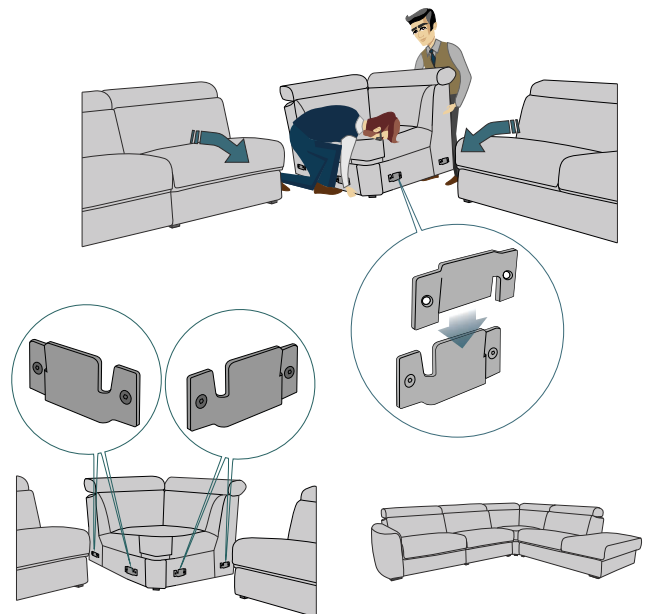

Lift and move the left/right component until it is completely detached.

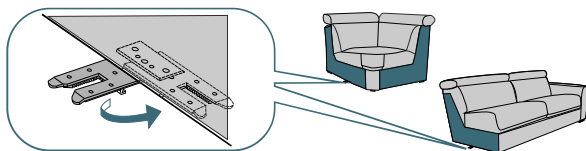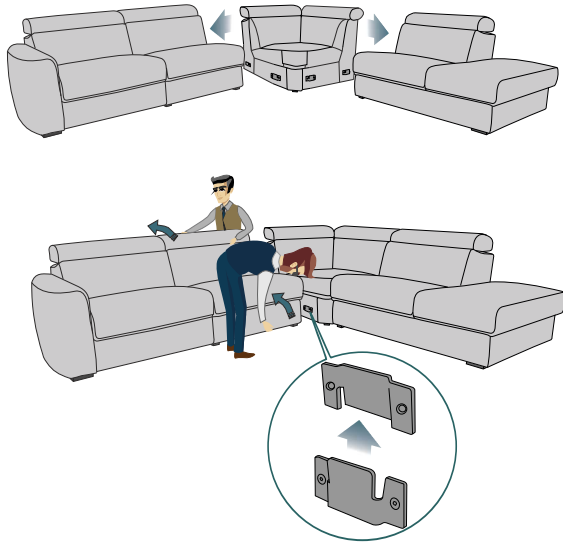

Warning


- Do not lift and move the sofa while it is still connected.
- Do not lift the right side component, to avoid detaching the connecting lever.
- THE LEVERS MAY BE FITTED IN A DIFFERENT WAY IN CERTAIN VERSIONS: IN THESE CASES, PLEASE FOLLOW THE INSTRUCTIONS DETAILED IN THE ILLUSTRATING LEAFLET ATTACHED TO THE SOFA.



Armchairs and sofas with mechanism

THE RELAX FUNCTION

Armchairs and sofas with reclining mechanism offer the possibility of changing the inclination of the back, positioning the legs horizontally and changing the seat position. If you have purchased armchair or sofa with sliding function (Zero Wall), you will also have possibility of reclining the armchair or sofa without having to move the upholstered furniture from the wall. In fact, the seat and back move forward during extension, thanks to a special mechanism.

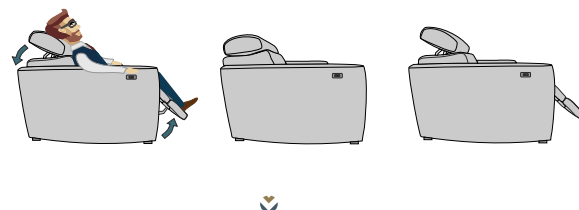


Reclining with armrests and headrests


These models are equipped with a manual „ratchet“ mechanism that allows you to regulate the inclination of the headrest and armrest you desire. To return the armrest or the headrest to the initial position you first need to extend it fully and then apply pressure in the opposite direction.

OPENING


0

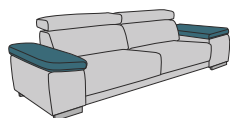


1

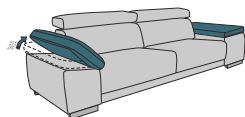

0

 


1

 


CLOSING

 1




2

 

1



 2



Electric reclining model

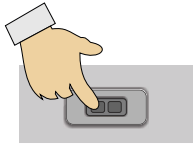


Fig. 28

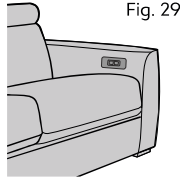
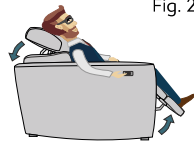



Fig. 29




Fig. 30

The extension mechanism is achieved by using the buttons positioned on the outside (Fig.28), inside (Fig. 29) of the armrest. On the edge of the inside seat.(Fig.30)
Pushing button causes footrest/headrest (Fig.28) to extend and vice-versa.

OPENING

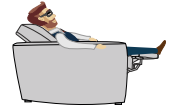

CLOSING

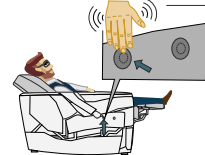

OPENING



CLOSING



Electric reclining model with manual headrest

OPENING



CLOSING




MODEL WITH TWO BUTTONS

OPENING




CLOSING

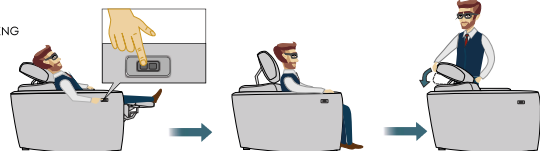

Electric reclining model with electric opening headrest

OPENING

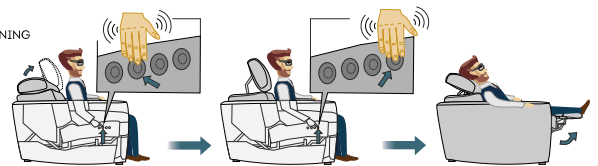

CLOSING

