

## TAKING CARE OF YOUR LIGHTSPEAKER

- Water** – The unit is IP44 rated and is suitable for use near sources of water including swimming pools, bathrooms, beaches, gardens etc. The unit, however, should not be placed directly into water, submerged or in the direct path of a water source.
- Heat** – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
- Power Sources** – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the unit.
- Power-Cable Protection** – Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
- Cleaning** – The unit should be cleaned only using a warm damp cloth. Do not use solvents, etc.
- Attachments** – Do not use attachments that are not recommended by the product manufacturer.
- Lighting and Power Surge Protection** – Unplug the unit from the wall socket and disconnect power cable during a lighting storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lighting and power-line surges.
- Overloading** – Do not overload wall sockets or extension cords as this can result in a risk of fire or electric shock.
- Damage Requiring Service** – The unit should be serviced by qualified service personnel when:
  - the power supply cable or plug has been damaged.
  - objects have fallen into or liquid has leaked into the enclosure.
  - the unit has been dropped or the enclosure damaged.
  - the unit exhibits a marked change in performance or does not operate normally.
- Periods of Non-use** – If the unit is to be left unused for an extended period of time, such as a month or longer, the power cable should be unplugged from the unit to prevent damage or corrosion.
- Servicing** – The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

## TROUBLESHOOTING

### The light speaker does not turn on

- The battery may be completely discharged. Connect the power adapter and wait 30 minutes for the unit to partially charge enough to operate.

### Volume too low

- Increase the volume setting on the music source (e.g. smartphone).
- The recording may have low volume. Try a different recording.
- The battery may be low. Connect the power adapter to provide power and recharge the battery.

### Distorted Sound

- The quality of the audio that you are playing affects the quality of the audio the light speaker produces. Because the light speaker is a high-performance audio reproduction system, you may not have been previously able to hear the distortion in the audio, but now it may be evident. Changing your audio to a high-quality file or format will allow you to hear a higher quality signal. The light speaker cannot correct deficiencies in the audio source.

- Lower the volume setting on the source device and/or the light speaker.
- Ensure the surface the light speaker is sitting on is not interfering with the sound.
- The battery may be low. Connect the power adapter.
- Water may be in the speaker. Turn the unit upside down and let the water drain through the protective mesh.

### Unresponsive to user input

If the light speaker becomes unresponsive to any user input (unable to power off, keys not responding, audio streaming cannot be started or stopped, etc.), let the unit discharge its battery and this will reset the device.



# LIGHTSPEAKER



We apologise for any inconvenience caused by minor inconsistencies in these instructions, which may occur as a result of product improvement and development.

## INSTALLATION AND OPERATING INSTRUCTIONS

# LIGHT SPEAKER

## IP44 Bluetooth Compatible LED Loudspeaker

TECHNICAL SPECIFICATIONS	
Power Adapter:	AC 100-240V 50/60Hz
Input:	5V/1A
Battery:	3.7V 2000mAh
Speaker Output:	5W RMS
RGB+White LED:	2W
Working Time:	5 - 7 Hrs
Charging Time:	3 - 4 Hrs
Bluetooth Name:	Light Speaker
Bluetooth Range:	10M Max
IP Rating:	IP44

### INTRODUCTION

Thank you for purchasing the Light Speaker. This product is designed to provide high quality wireless sound for your iPad, iPhone, iPod, computer, PDA or any other Bluetooth compatible audio device.

Please follow these instructions carefully as improper use of the device can result in damage and invalidation of your warranty.

Please read all safety and operating instructions thoroughly before installation and use, and keep these instructions handy for future reference.

Take special note of all warnings listed in these instructions and on the unit.

### CONNECTING A BLUETOOTH COMPATIBLE DEVICE

 
Press the ON/OFF button on the base of the light speaker or press the remote control ON button. The unit should beep once to indicate that the power has been turned on.

Switch on your Bluetooth compatible device and connect to the device named 'Light Speaker'. Upon connection the light speaker will beep twice.

Please Note: After 20 minutes of inactivity between the light speaker and your Bluetooth compatible device the connection will be lost. Repeat steps 1 - 2 to reconnect your device.

### WARNING

- Although the light speaker is IP44 rated the power supply is not. It is recommended to charge the light speaker indoors.
- If the light speaker malfunctions switch the unit off, unplug the power supply and contact your local authorised service centre.
- The rated voltage of the device is 100-240V 50/60Hz. Please do not exceed this voltage.
- Do not place the unit directly into water.
- Do not open or disassemble the unit as this will invalidate the warranty.
- After charging ensure the rubber seal cover is securely in place before using the light speaker.
- The Lithium-Ion battery in the light speaker is not user replaceable and can only be replaced by Authorized Service Provider.

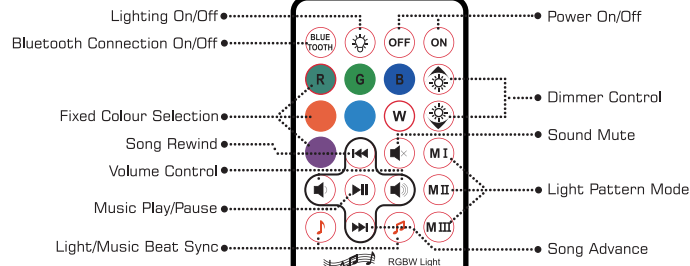

### REMOTE CONTROL

**IMPORTANT:** The remote control is NOT IP44

 
Before using the remote control remove the PVC battery protector from the bottom of the remote unit.

### CHARGING


**IMPORTANT:** Before first use please allow the light speaker to charge fully

Connect the power adapter to the light speaker DC input jack (located under the rubber seal on the bottom of the unit) and a wall outlet.

The POWER indicator is red while charging and turns green when the battery is 90% or more charged.

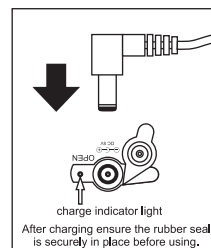

Remove PVC before operation

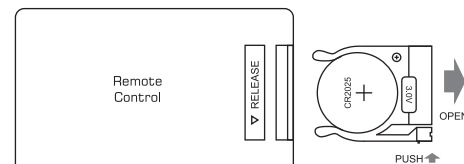 

Replacement Battery Type: CR2025

