


Transformer Assembly Instructions



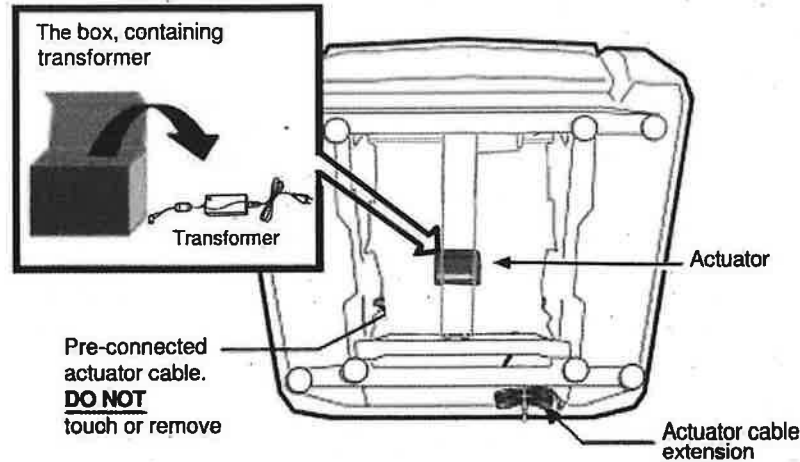


PAY YOUR ATTENTION PLEASE!!!

According to the duty cycle requirements, you need to let this transformer stop working for 18min, once this has worked for 2min.



Actuator cable setup guide

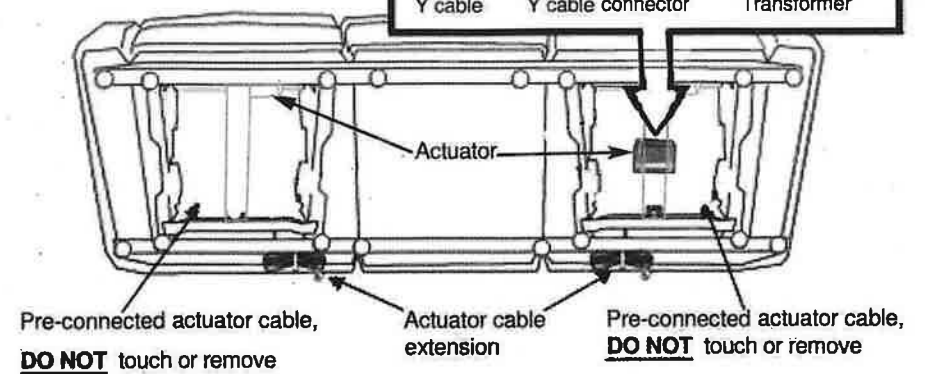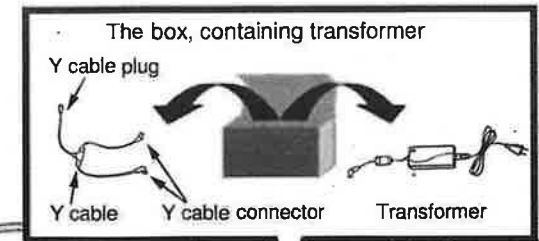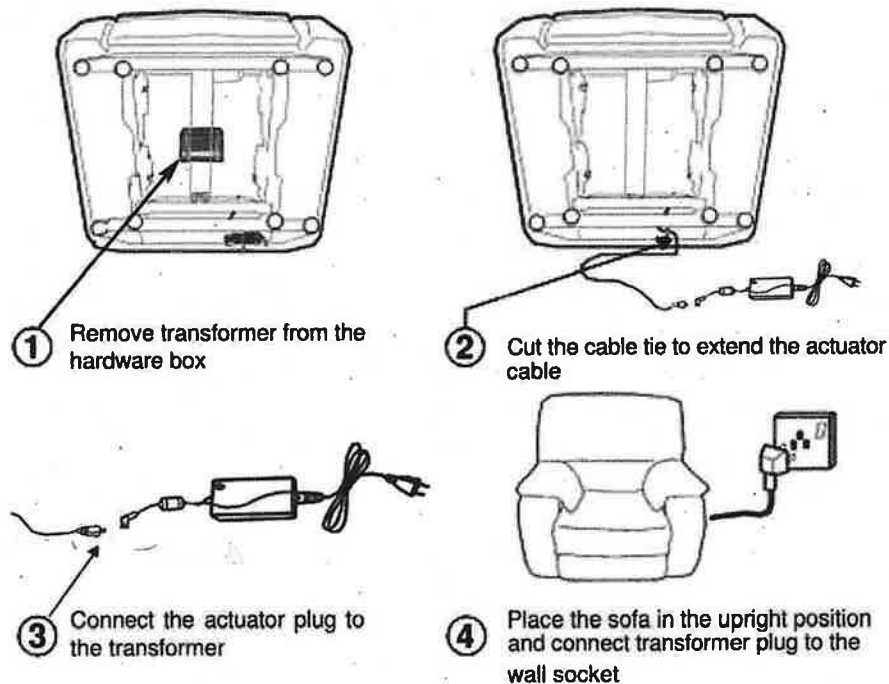

Actuator cable setup guide

