




45min

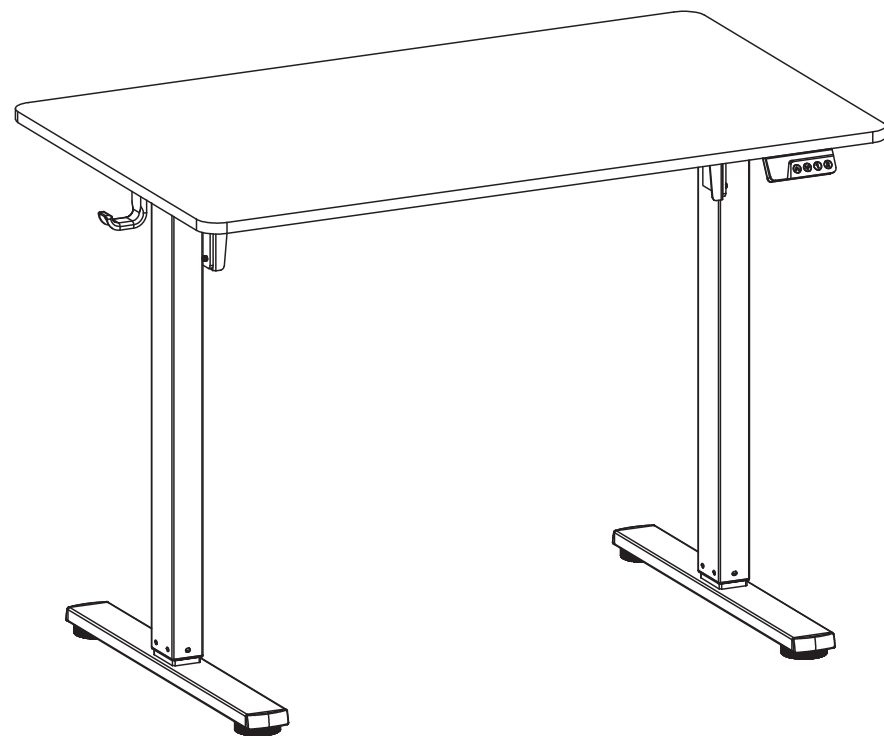

1	x1	2	x1	3	x1	4	x2	5	x2	6	x4
7	x1	8	x1	9	x1	10	x2	11	x1	12	x2
13	x1	14	x1	15	x2	16	x1	A	x26	B	x8
									M6*12mm		M6*35mm
C	x2	D	x4	E	x6	F	x1				
	M4*25mm		M8*16mm		M4*14mm		M5				

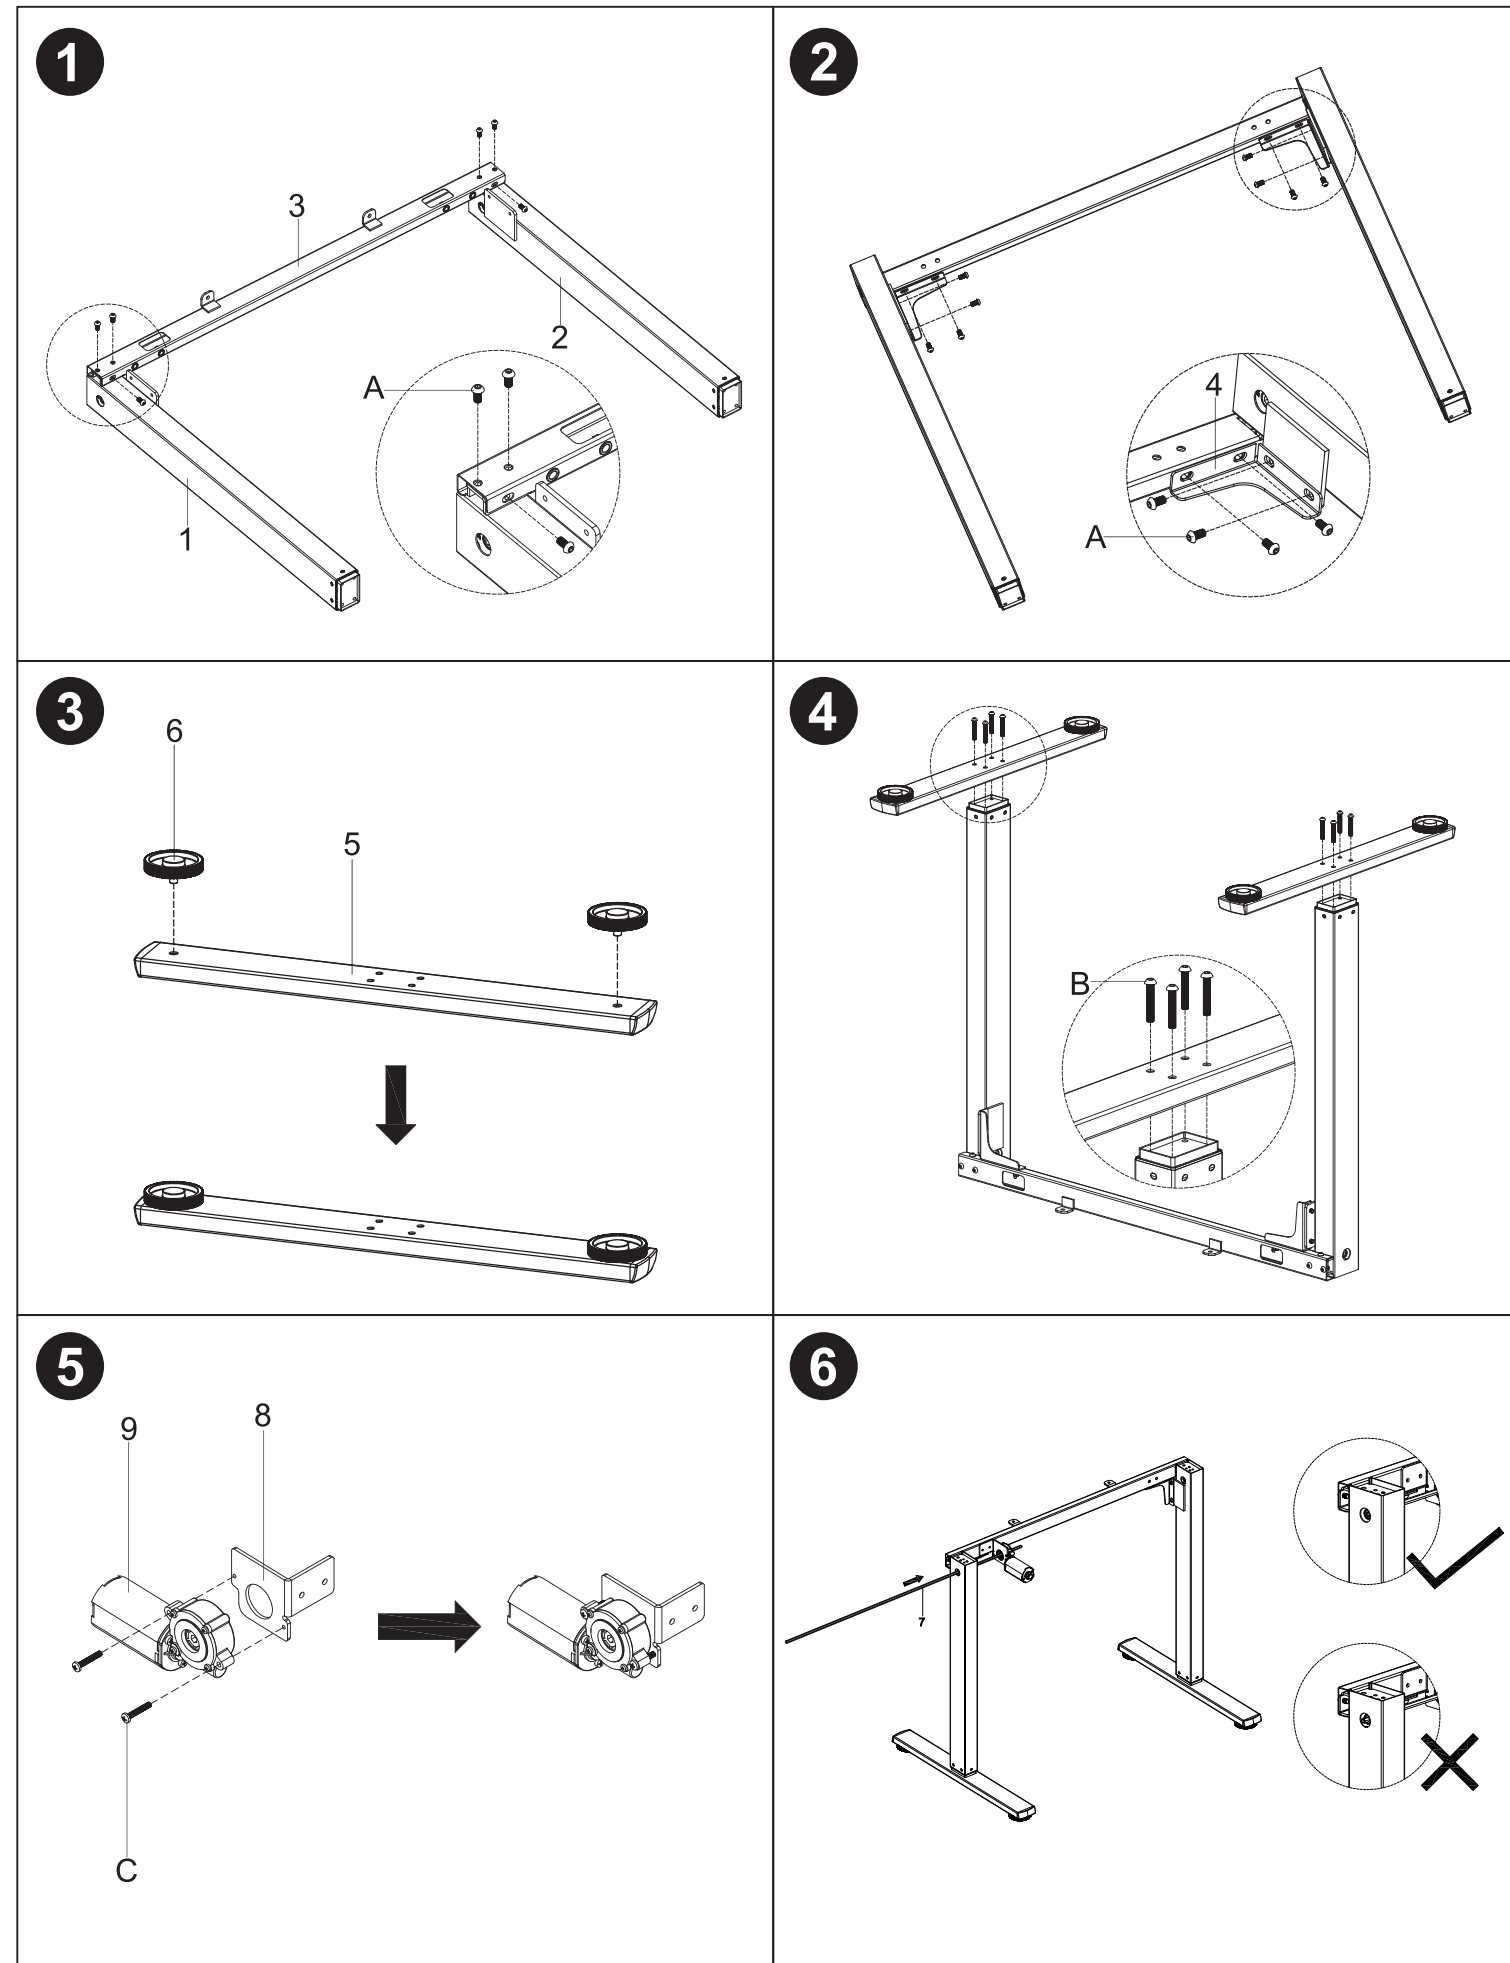

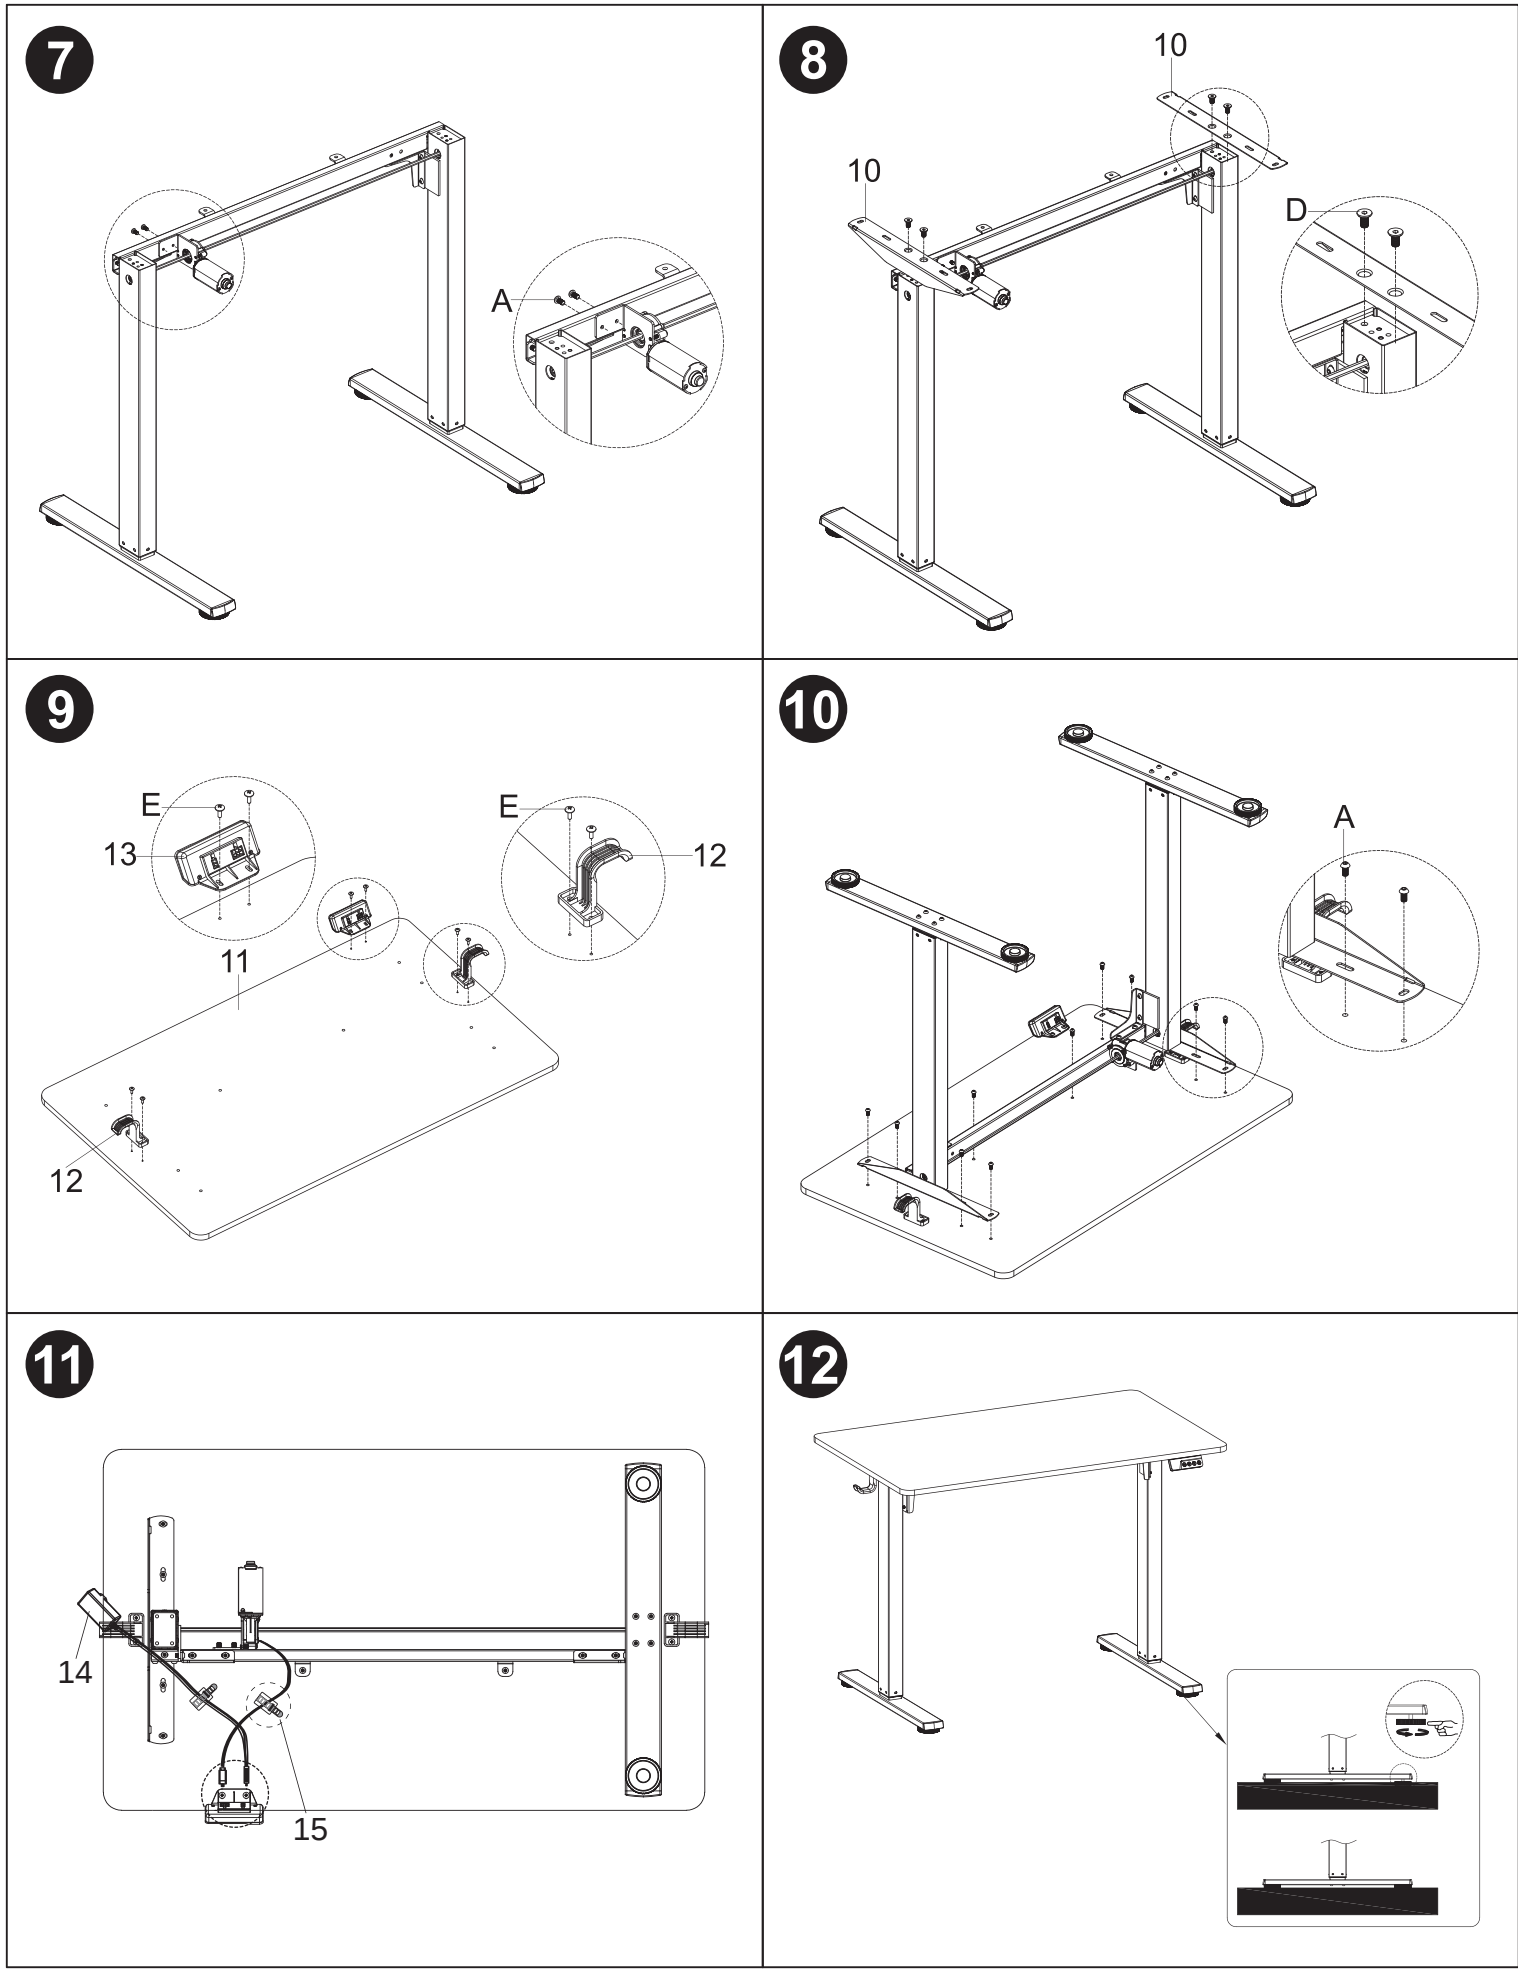

Warnings and care instructions:

Use only the power adapter provided by the manufacturer or specified in the manual. Ensure the power voltage matches local standards and the outlet is properly grounded. Keep the power cord away from heat sources and avoid pinching or tangling.

Never exceed the maximum load capacity indicated on the desk plate. Overloading can cause motor damage, structural instability, or accidental lowering.

Keep children and pets away from the moving area during adjustment. Do not allow them to play with the controls or climb on the desk.

Always use the desk on a flat, solid floor. Uneven or unstable surfaces may cause the desk to tilt or shift.

If the desk produces unusual noise, vibration, odor, or moves unevenly, stop use immediately and disconnect power

Turn off and unplug the desk. Wipe the desktop and frame with a soft, slightly damp cloth. Avoid abrasive cleaners, strong acids/alkalis, alcohol, or solvents to prevent surface damage.

No user lubrication is required. Keep the rails and lifting columns clean and free of dust and debris buildup.

Use coasters to protect the desktop from hot or wet containers. Avoid scratching the surface with sharp objects

Properly use the cable management features under the desktop to avoid excessive bending or pulling of wires.

Performance data:Input:100-240V~50/60Hz 1.5A, Output:12.0V 12V---;2 A , Duty Cycle:3 minutes off.



Before You Start


- ⚠ Please read all instructions carefully.
- ⚠ Retain instructions for future reference.
- ⚠ Separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.
- ⚠ Press reset before use
Press and hold the "∨" and "1" keys for 3 seconds until the controller displays a flashing "RST." The desk will automatically lower to the lowest position, rebound about 1 cm/0.4", and complete the reset process.



Return / Damage Claim Instructions

- ⚠ **DO NOT discard the box / original packaging.**
In case a return is required, the item must be returned in original box. Without this your return will not be accepted.
- ⚠ **Take a photo of the box markings.**
A photo of the markings (text) on the side of the box is required in case a part is needed for replacement. This helps our staff identify your product number to ensure you receive the correct parts.
- ⚠ **Take a photo of the damaged part (if applicable).**
A photo of the damage is always required to file a claim and get your replacement or refund processed quickly. Please make sure you have the box even if it is damaged.
- ⚠ **Send us an email with the images requested.**
Email us directly from marketplace where your item was purchased with the attached images and a description of your claim.

Controller instruction

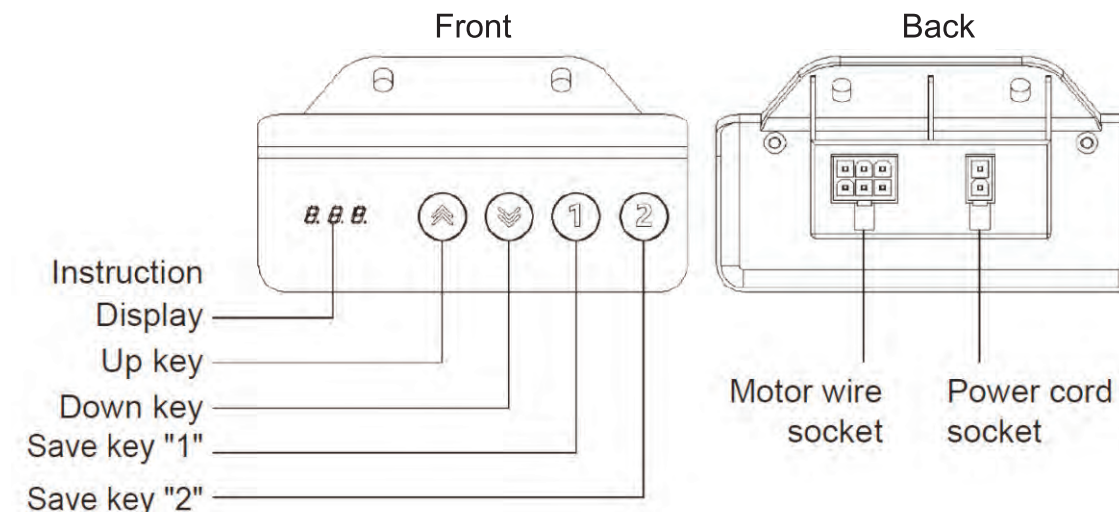

Up/Down Key Operation

- Press the "∧" key to raise the desk until it reaches the highest point.
- Press the "∨" key to lower the desk until it reaches the lowest point.
- Hold the "∧" or "∨" key to start the desk movement, achieving a smooth start.

Position Storage/Memory Position Operation

- Position Storage: You can store 2 memory points. Storage method: When the desk reaches the desired height, press and hold the "1/2" key for 3 seconds until the digital display flashes, saving the current height as a memory point.
- Memory Position Operation: Briefly press the "1/2" key. The digital display will flash the memory height value and show "P01/2" for 2 seconds. The desk will automatically move to the stored height. During movement, pressing "∨" or "∧" will stop the operation.

Clear Error Code

When an error is displayed, fix the issue and press and hold the "1" key for 3 seconds. If the error is not cleared, the display will continue to show the error after the motor operates.

Zero Position Reset

Press and hold the " √ " and "1" keys for 3 seconds until the controller displays a flashing "RST." The desk will automatically lower to the lowest position, rebound about 1 cm/0.4”, and complete the reset process.

Lock and Unlock

- Lock: Press and hold the " √ " and " ^ " for 3 seconds. When the display shows "L," the system is locked and cannot be operated.
- Unlock: Press and hold the " √ " and " ^ " for 3 seconds. When the display changes from "UL" to the normal digital display, the system is unlocked.

Anti-Collision Sensitivity Adjustment

Press and hold the "1" + "2" keys for 3 seconds. The display will show "S t (0-9)." Use the up/down key to adjust sensitivity (9 is the highest sensitivity, 0 turns it off). Press "1" to exit and save the setting.

Protection Modes	
E1	Alarm when voltage exceeds the required value. Power off first, check the connection between the power supply and control terminal, then restart.
E6	Alarm when voltage is below the required value. Power off first, check the connection between the power supply and control terminal, then restart.
HOT	Overheat protection: The motor will stop running if operated continuously to prevent damage. Wait for a while before making any further height adjustments.
E11	Alarm when the motor is not detected. Power off, check the connection between the motor and control terminal, then power on again.
E13	Hall signal lost. If this occurs repeatedly, the unit needs repair.
E16	Block alarm. If the alarm occurs while the desk is rising, remove the items from the desk and try again. If the alarm occurs while the desk is lowering, first turn off the power supply, remove the items from the desk, and then power on again.
E18	Overload alarm. If the alarm occurs while the desk is rising, remove the items from the desk and try again. If the alarm occurs while the desk is lowering, first turn off the power supply, remove the items from the desk, and then power on again.
Obstruction Protection (E02)	During operation, if the desktop shakes, collides, or tilts, the system will trigger an alarm and stop immediately. The protection can be automatically cleared by reversing the desk for a preset distance, or manually cleared by pressing any key during reverse movement. Before resuming operation, ensure the desk is free from the aforementioned issues