



Do not throw away the packing materials until assembly is complete; From scratching or other damages: assemble this item on a soft surface, such as cardboard or carpet, to protect finish;

Hardware may loosen overtime. Periodically check that all conections are tight; Protect sofa from an environmental factors such as: heat, direct sunligt and humidity;


Do not use sofa outdoors.

Do not fix the sofa yuorself, sofa could be fixed only in our factory, our after-sales service workshop or by licensed and qualified professionals, by using only original replacement parts, otherwise, the warranty could be considered as void.

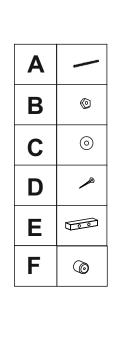

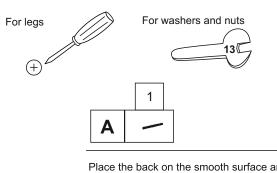


 Place the back on the smooth surface and fasten a bolt in each pre-drifled hole.






Place the seat in the top of the backabove the bolts, add washers and fasten nuts on each bolt, but keep it loose. Screw hook on top of the back.

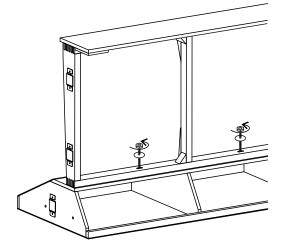



Fasten one bolt in each pre-drilled hole in the armrests.

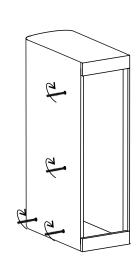



Put the in the armrest together with the backrest and the seat. Fasten nuts on each bolt, but keep it loose.

