

Screw the legs on the bottom of the sofa, as shown in the schema.


 Nr. 43

 Nr. 29

	5
D	
E	
F	


1S/S1

 1 set of legs = 4 wooden legs




2S/S2

 1 set of legs = 4 wooden legs




3S

 1 set of legs = 4 wooden legs




D3/3D

 1 set of legs = 6 wooden and 2 plastic legs

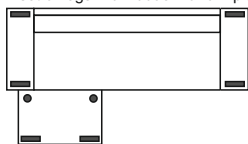


2A/A2

 1 set of legs = 4 wooden and 3 plastic legs

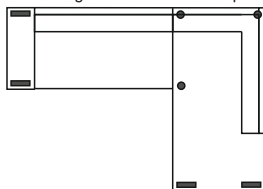



D3A/A3D

 1 set of legs = 6 wooden and 5 plastic legs

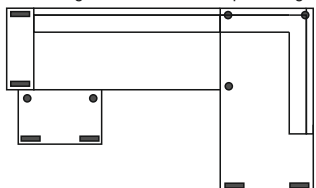


3A/A3

  1 set of legs = 4 wooden and 3 plastic legs

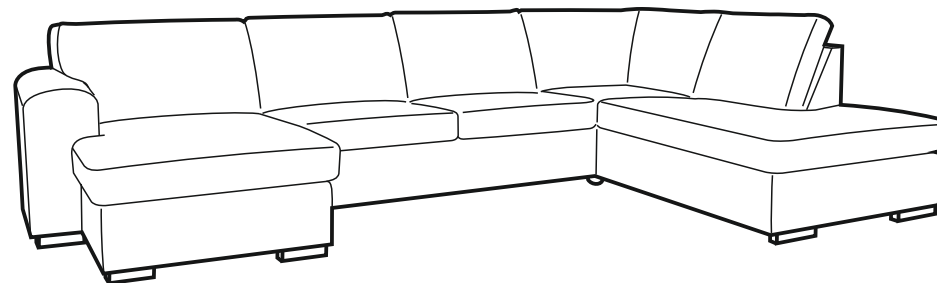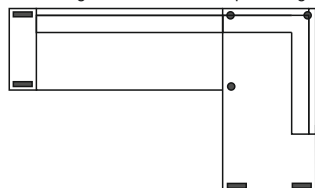


Do not throw away the packing materials until assembly is complete;
From scratching or other damages: assemble this item on a soft surface, such as cardboard or carpet, to protect finish;
Hardware may loosen overtime. Periodically check that all connections are tight;
Protect sofa from environmental factors such as: heat, direct sunlight and humidity;
Do not use sofa outdoors.
Do not fix the sofa yourself, sofa could be fixed only in our factory, our after-sales service workshop or by licensed and qualified professionals, by using only original replacement parts, otherwise, the warranty could be considered as void.

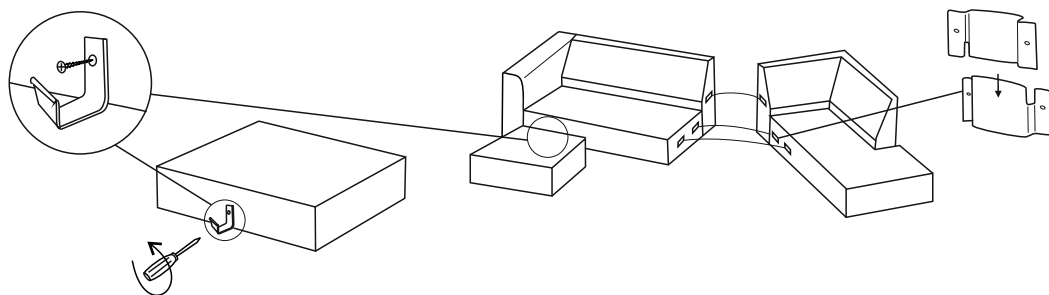 


A	
B	
C	
D	
E	
F	

 For legs

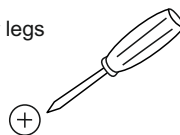


For washers and nuts

 


	1
A	

 Place the back on the smooth surface and fasten a bolt in each pre-drilled hole.

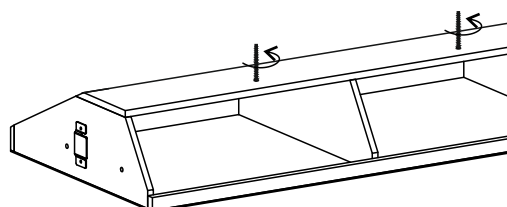


	2
B	
C	

 Place the seat in the top of the back above the bolts, add washers and fasten nuts on each bolt, but keep it loose. Screw hook on top of the back.

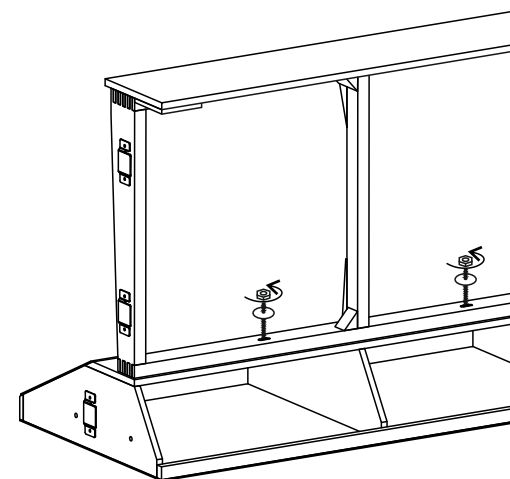


	3
A	

 Fasten one bolt in each pre-drilled hole in the armrests.

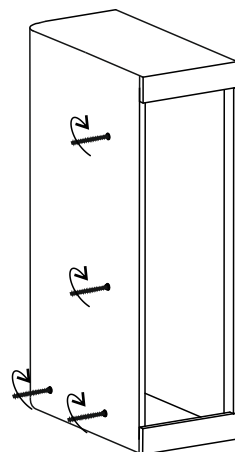

	4
C	
D	

 Put the in the armrest together with the backrest and the seat. Fasten nuts on each bolt, but keep it loose.

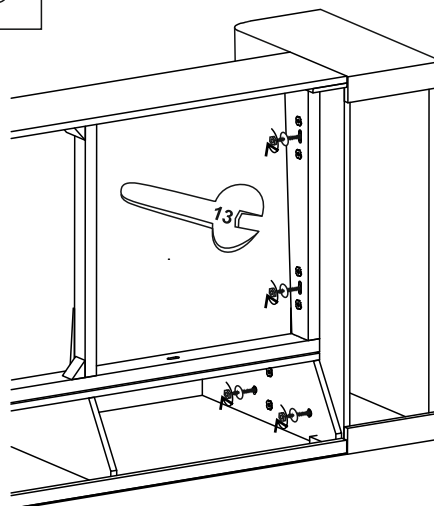

	5
D	
E	
F	

Screw the legs.

