
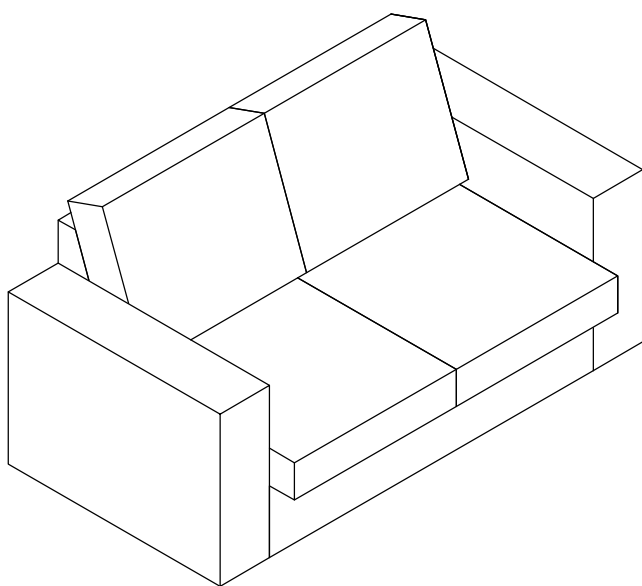
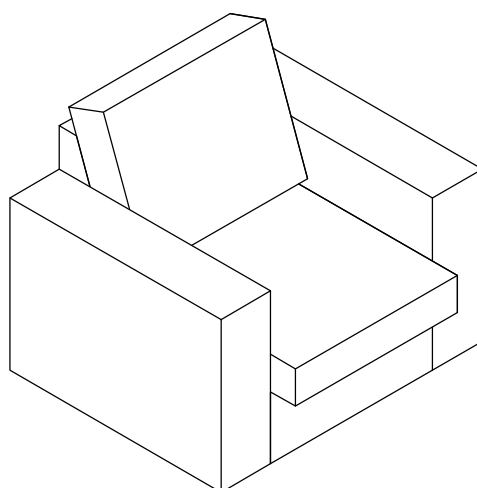











Assembly instruction SCANDIA

A-B-C

1

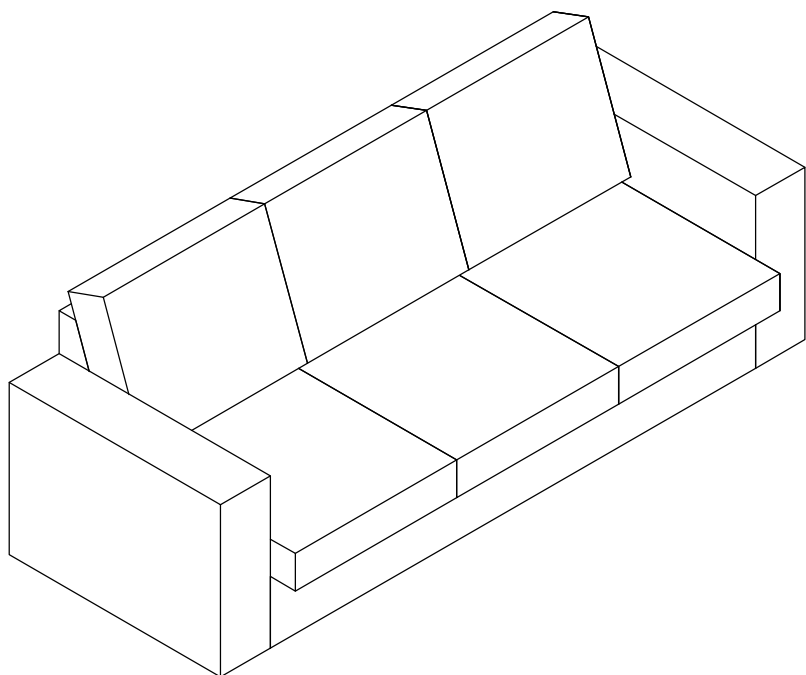


Module	Leg	Support leg
A	x 4	x 1
B	x 4	x 1
C	x 4	-

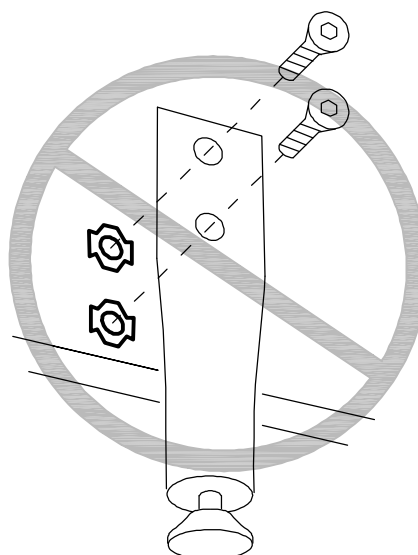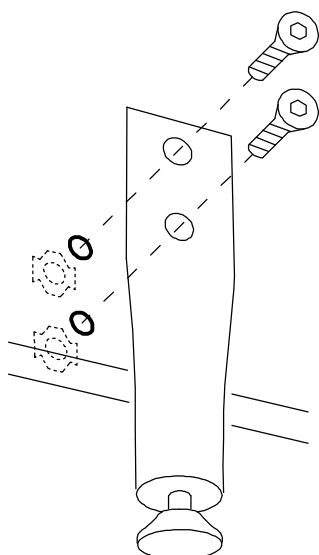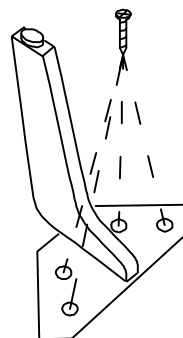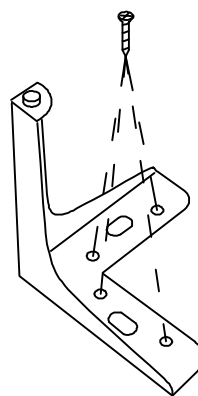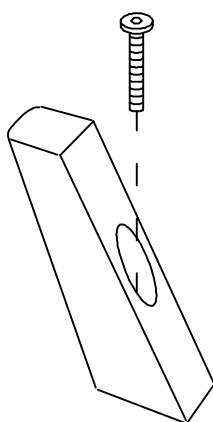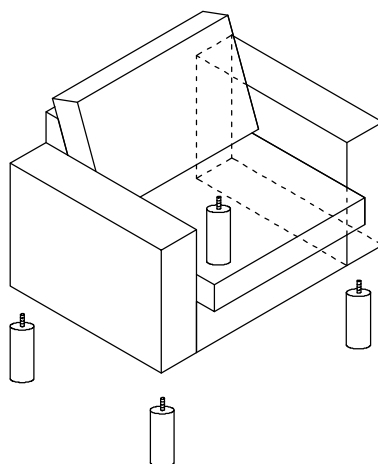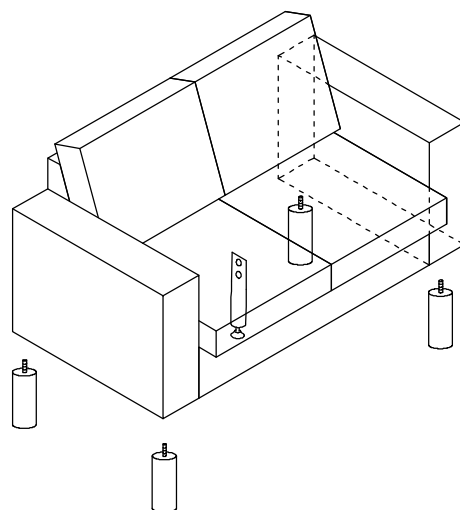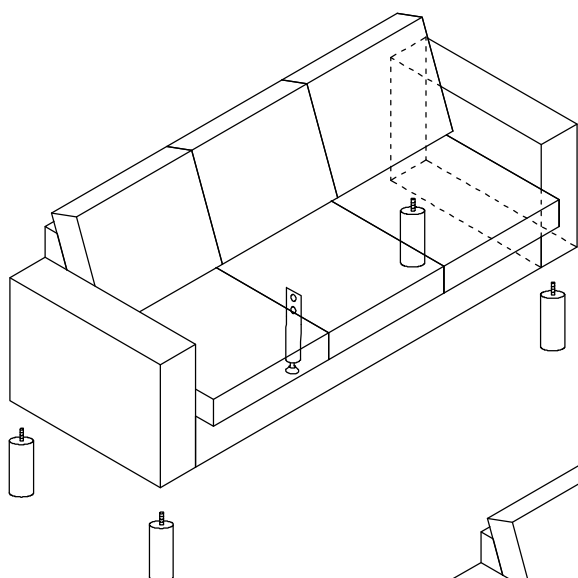


A-B

3

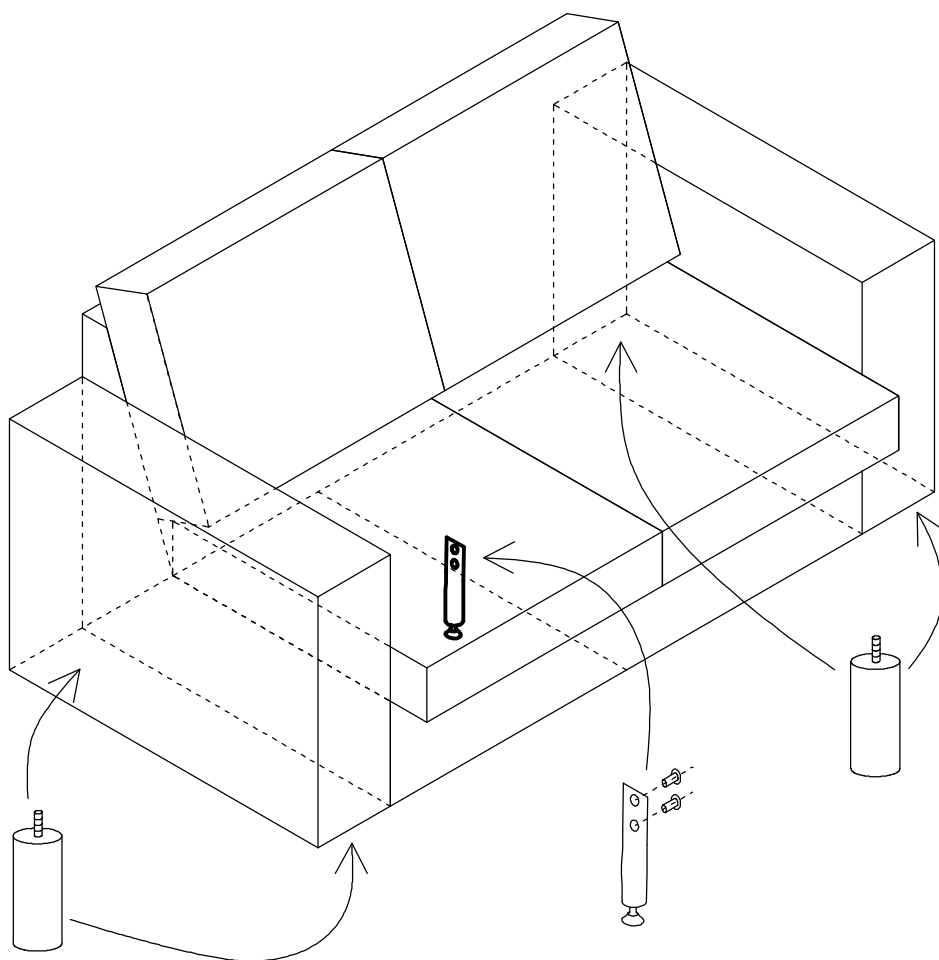


C

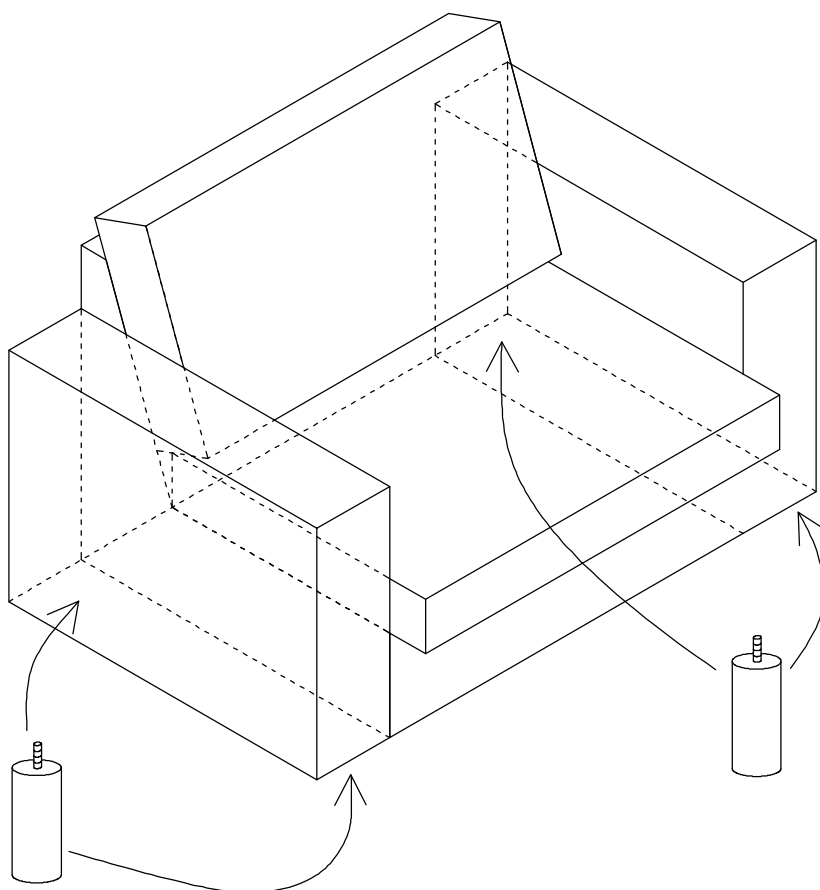








Assembly instruction SCANDIA

BV-HJ-BH

1

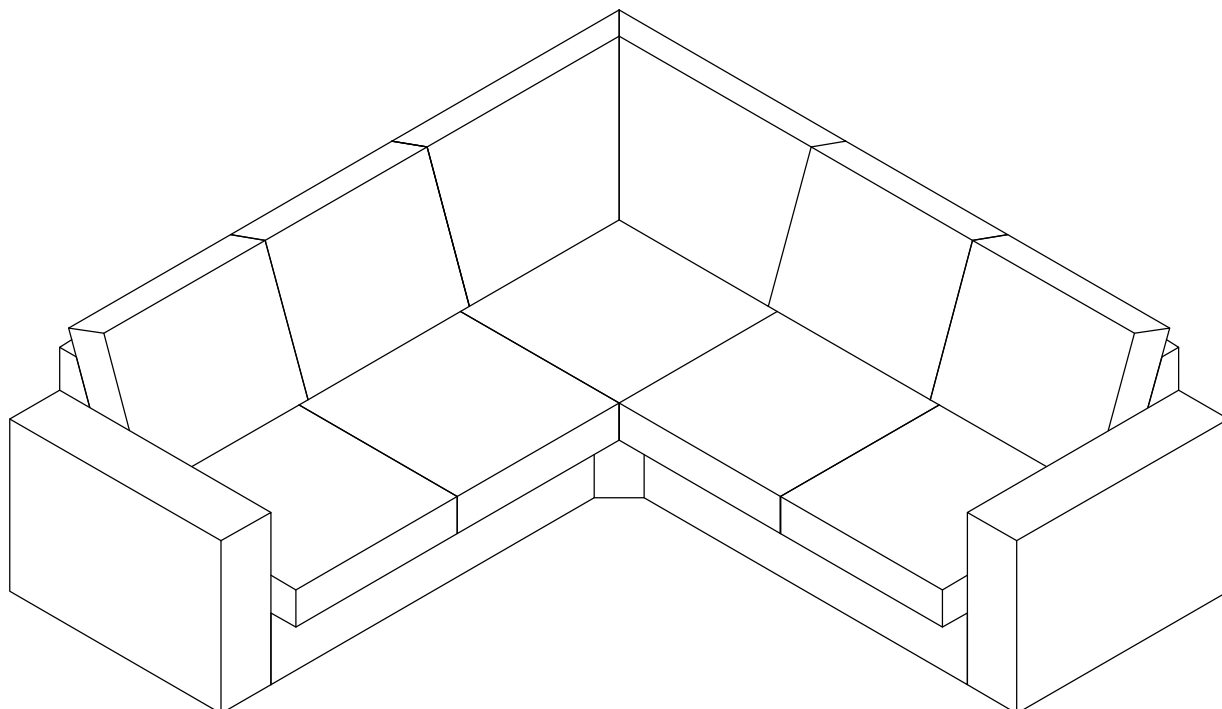


Module	Leg	Support leg
BV / BH	x 2	x 1
HJ	x 4	-

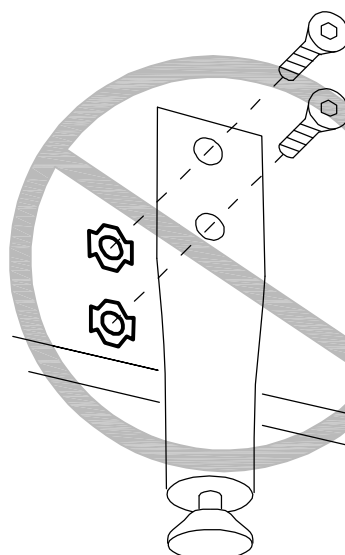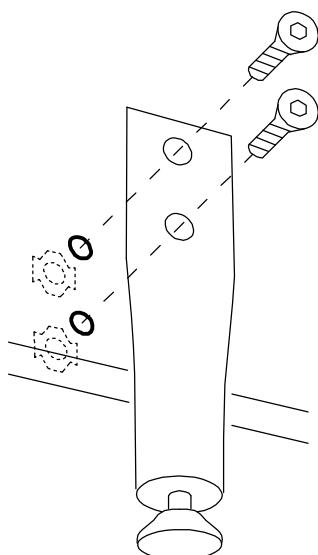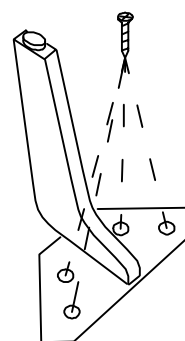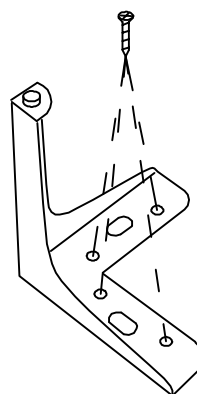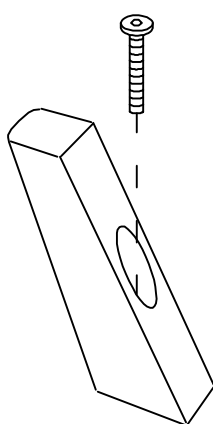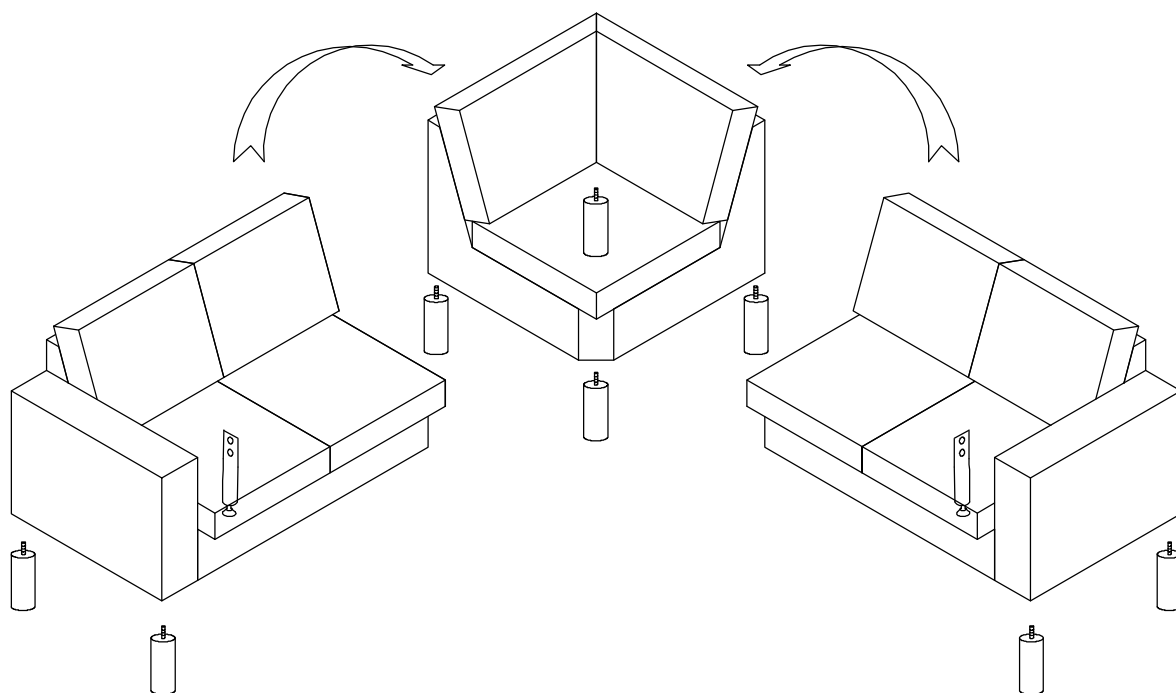



1st HJ

3

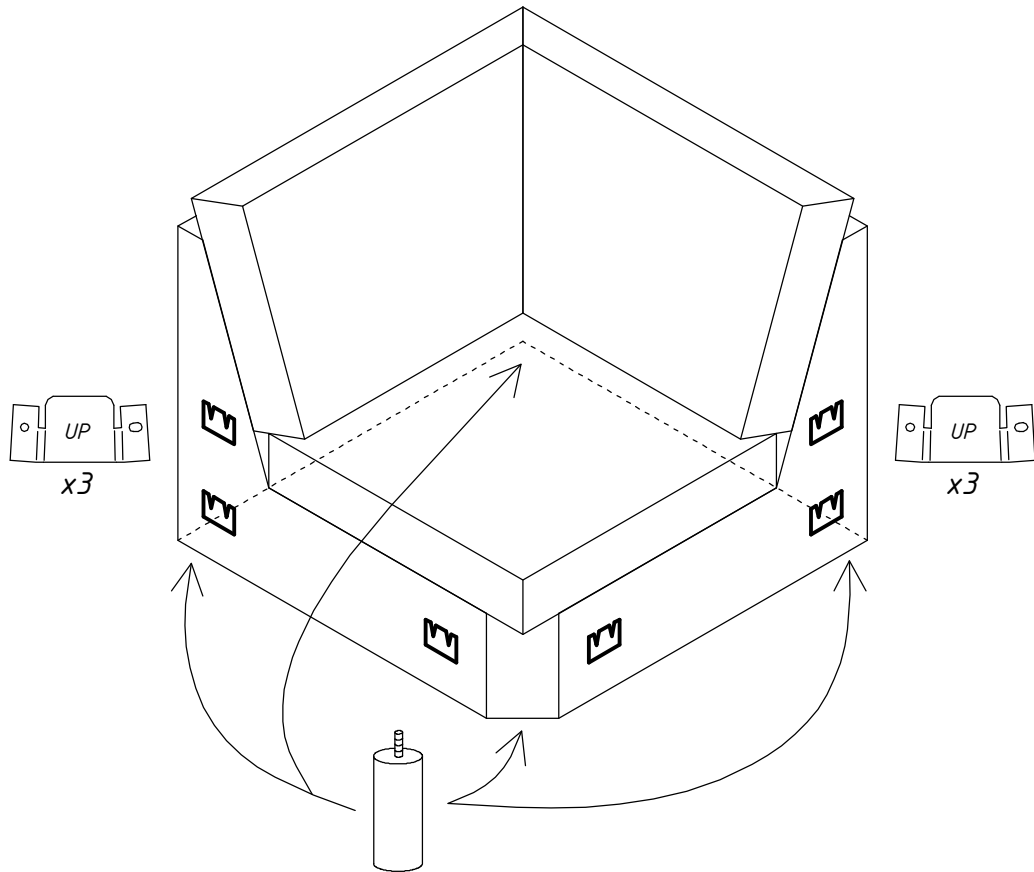


2nd BV







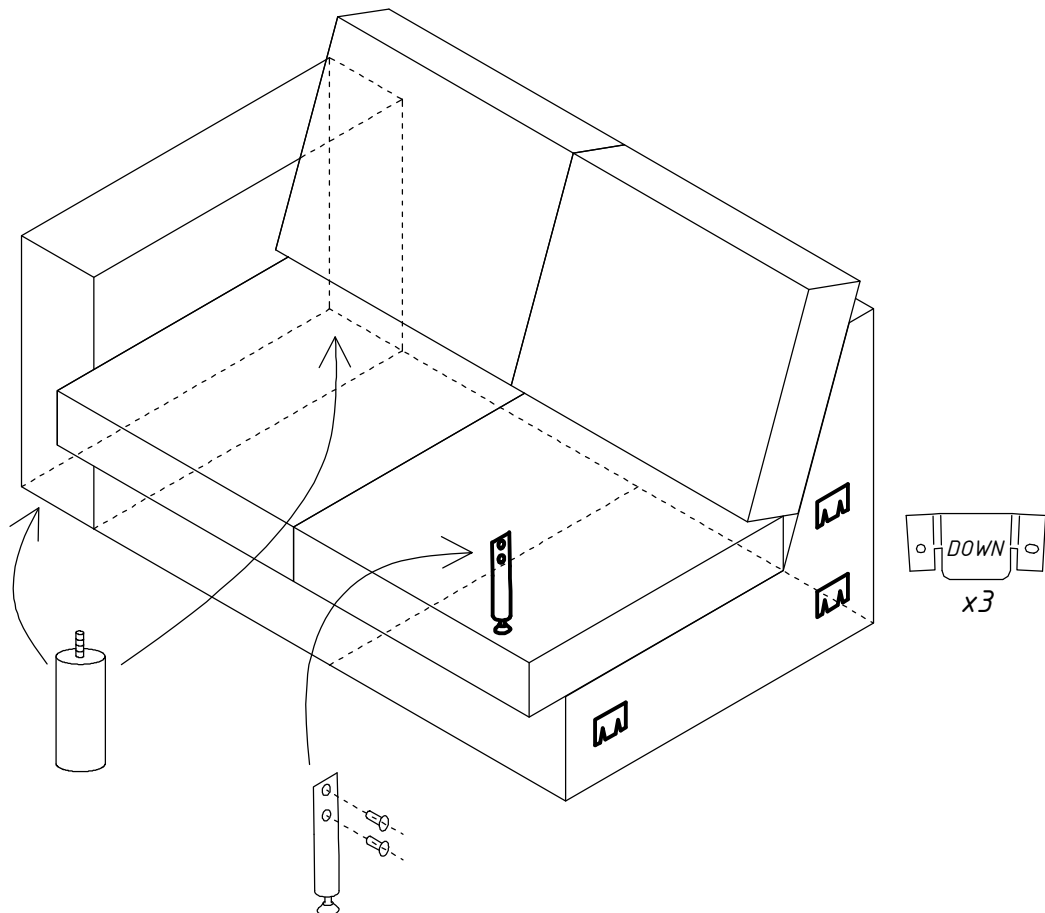


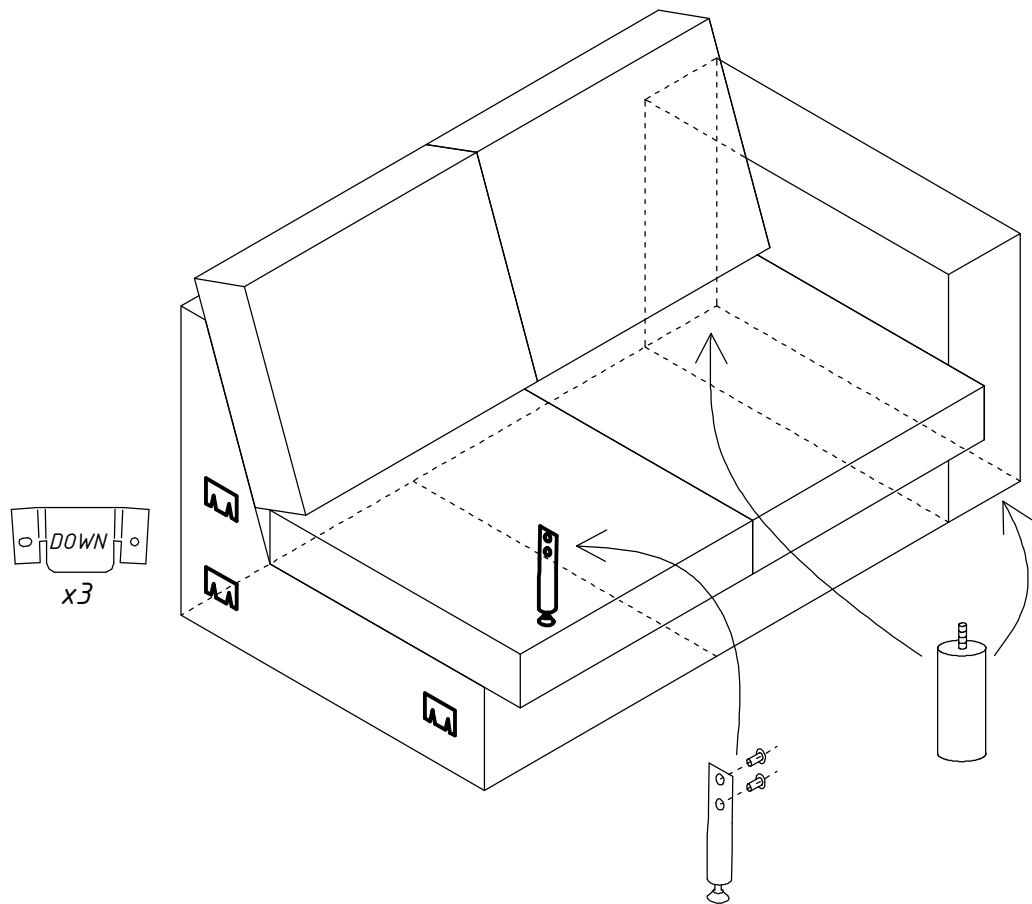

Assembly instruction SCANDIA
BV-HJXH

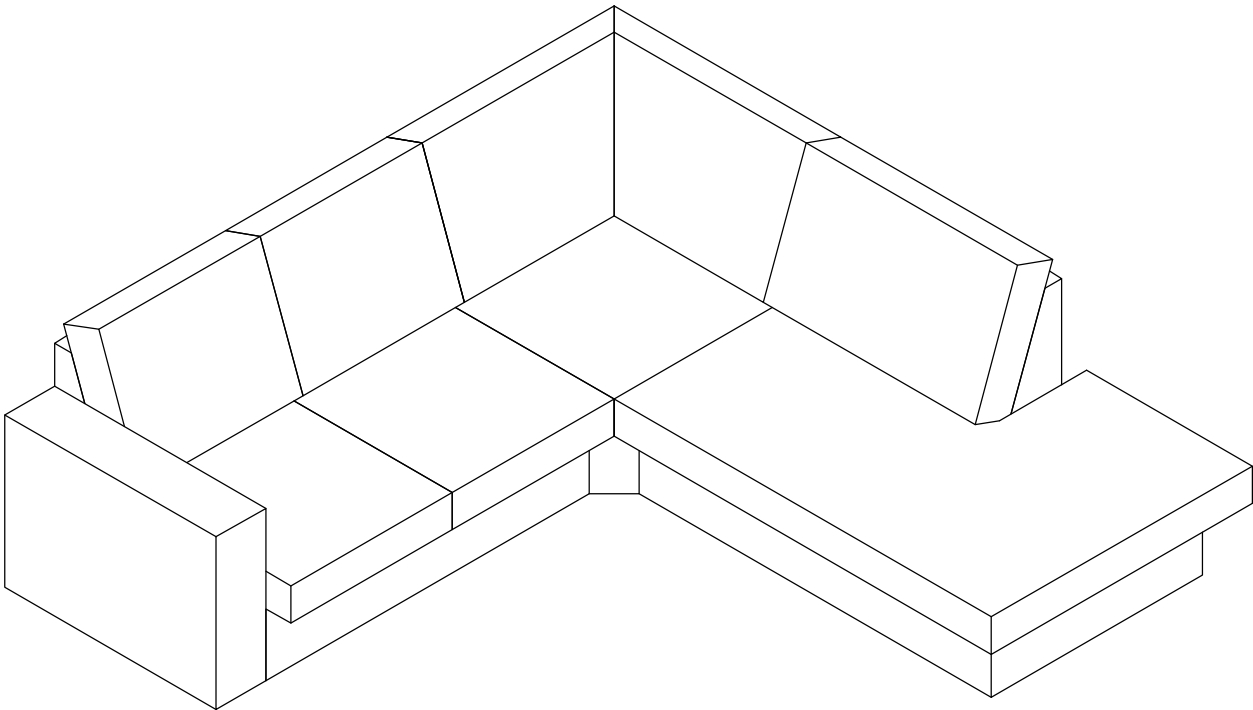


Module	Leg	Support leg
BV / BH	x 2	x 1
HJXH / XVHJ	x 5	-

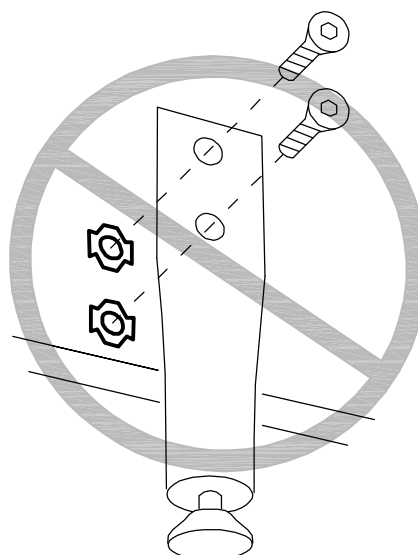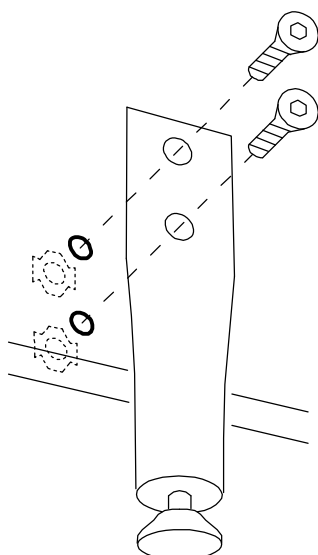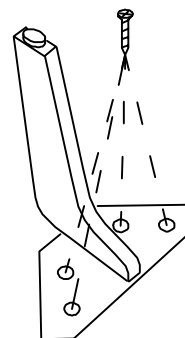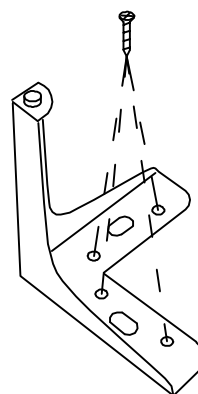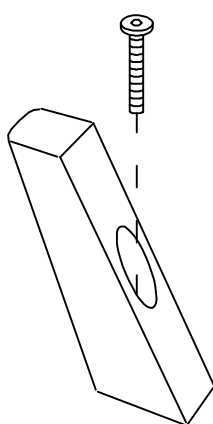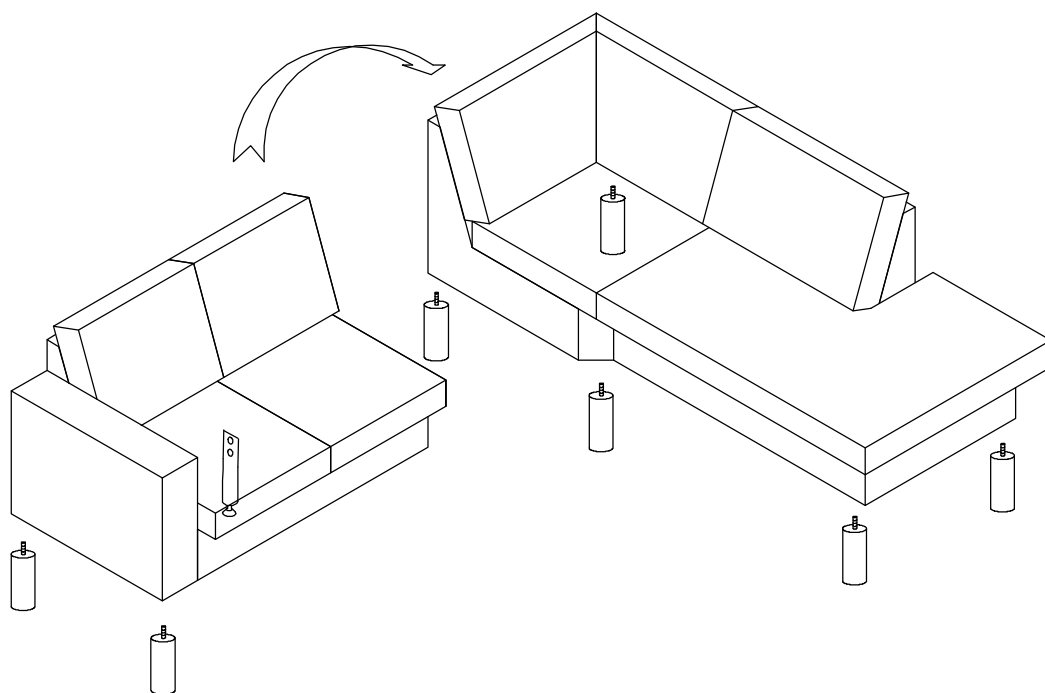


1st HJXH

3

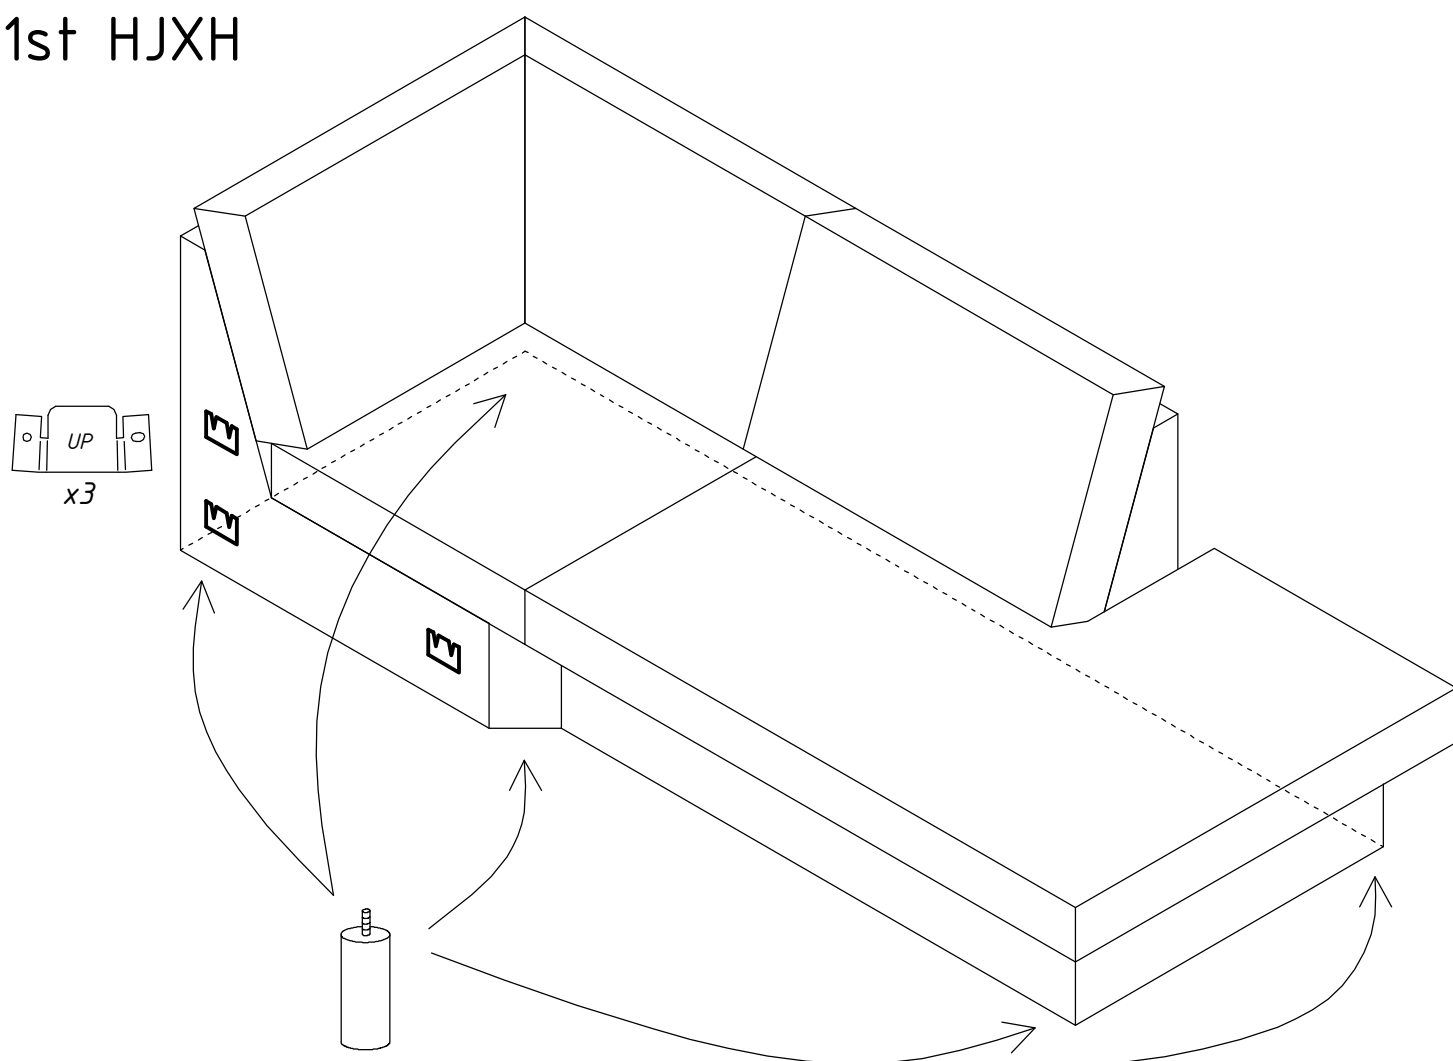


2nd BV

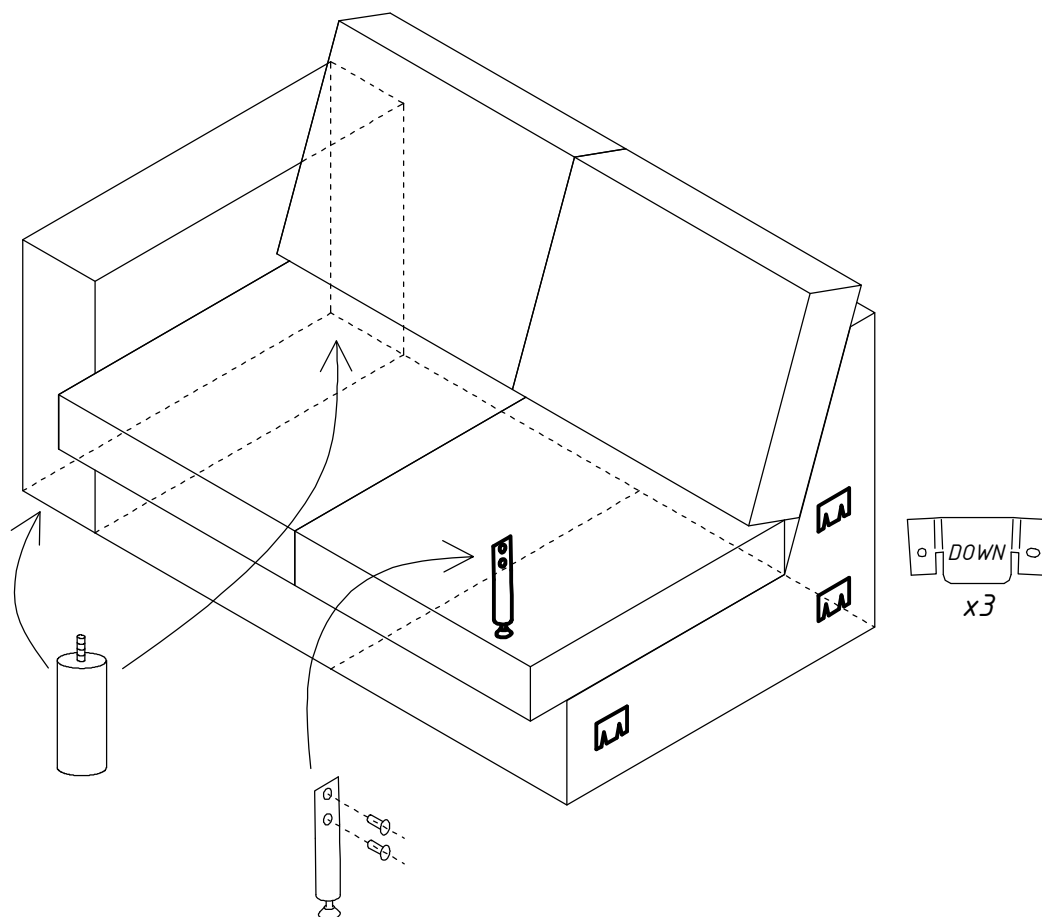








Assembly instruction SCANDIA



BV-HJ-XH


1

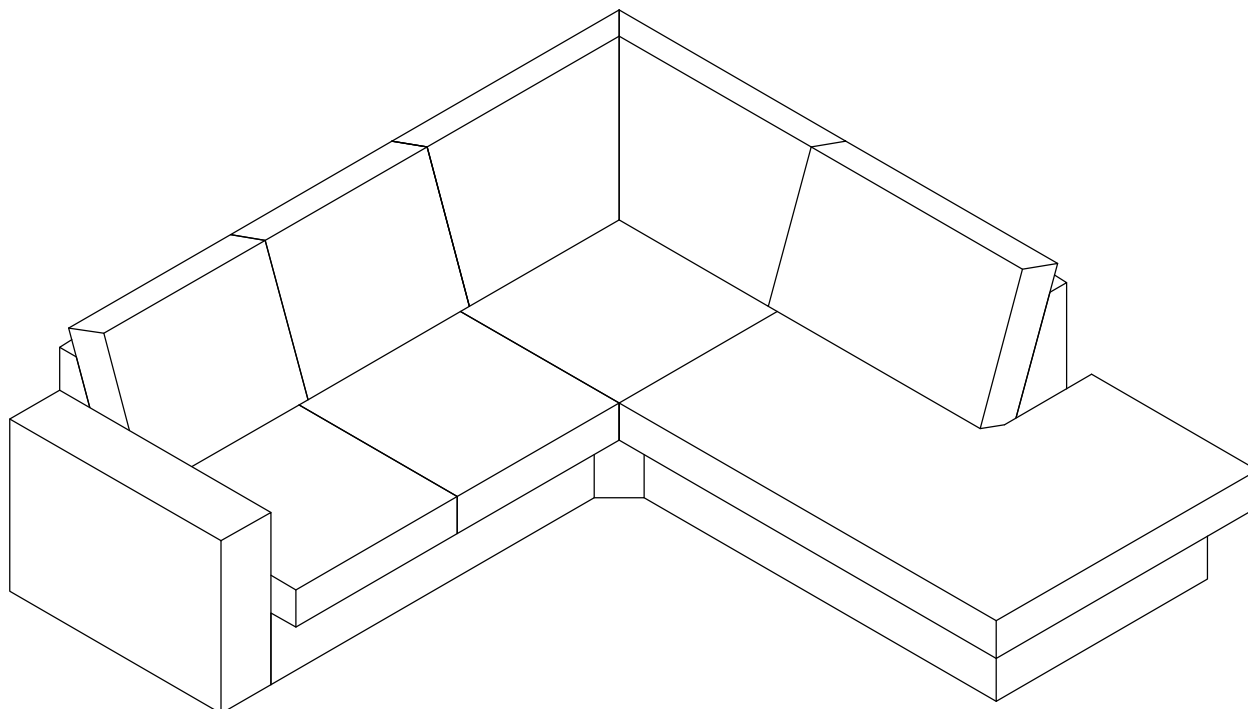


Module	Leg	Support leg
BV / BH	x 2	x 1
HJ	x 4	-
XH / XV	x 2	-

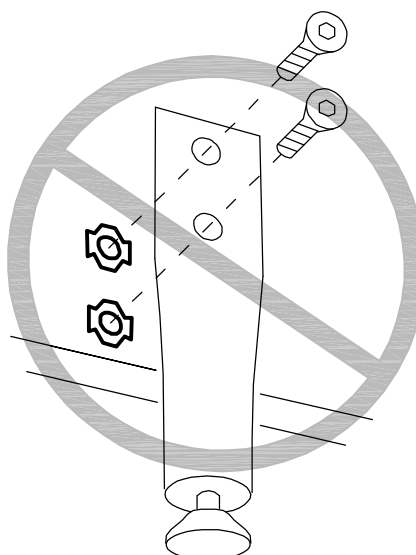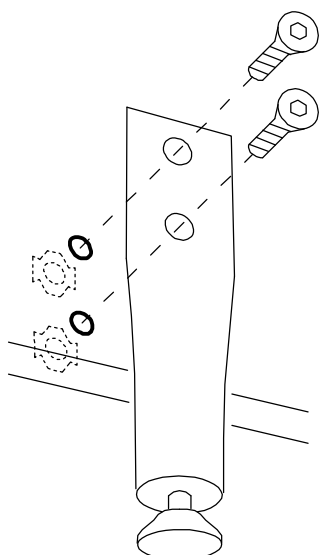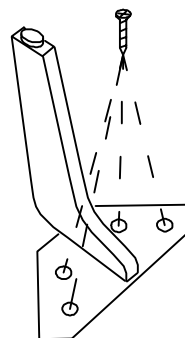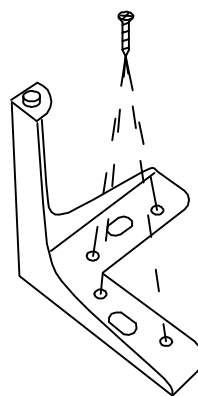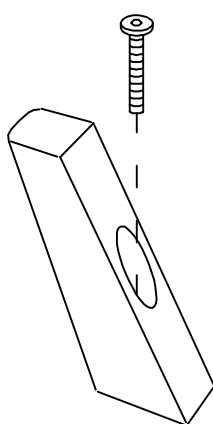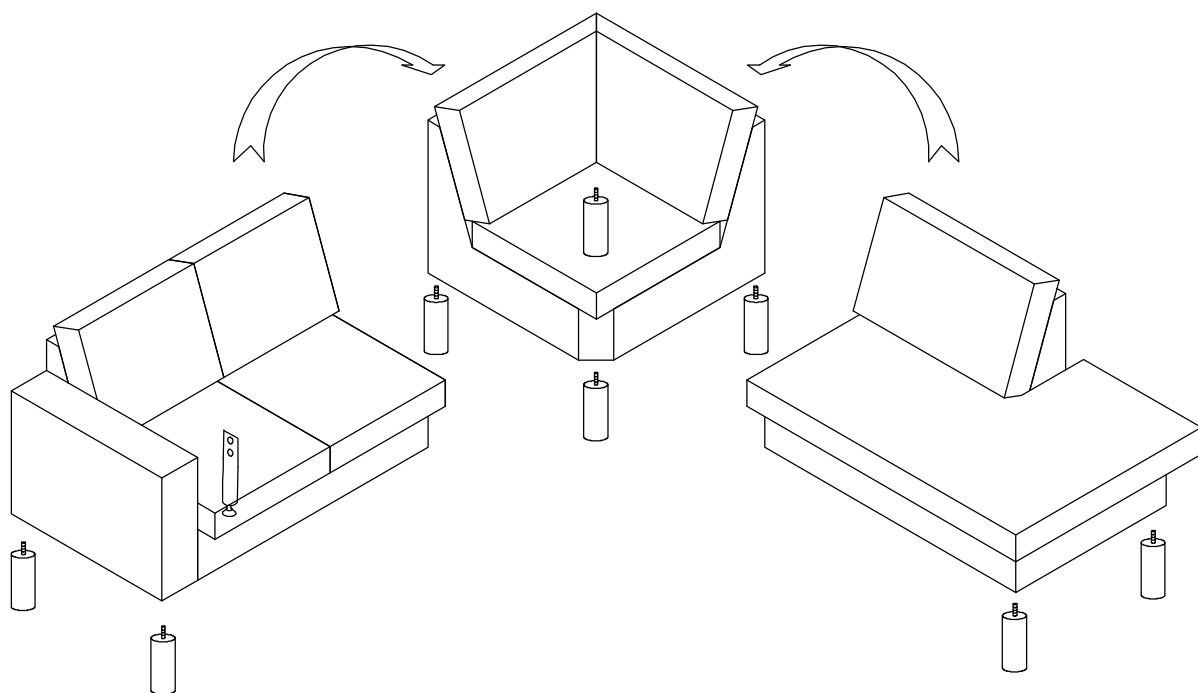





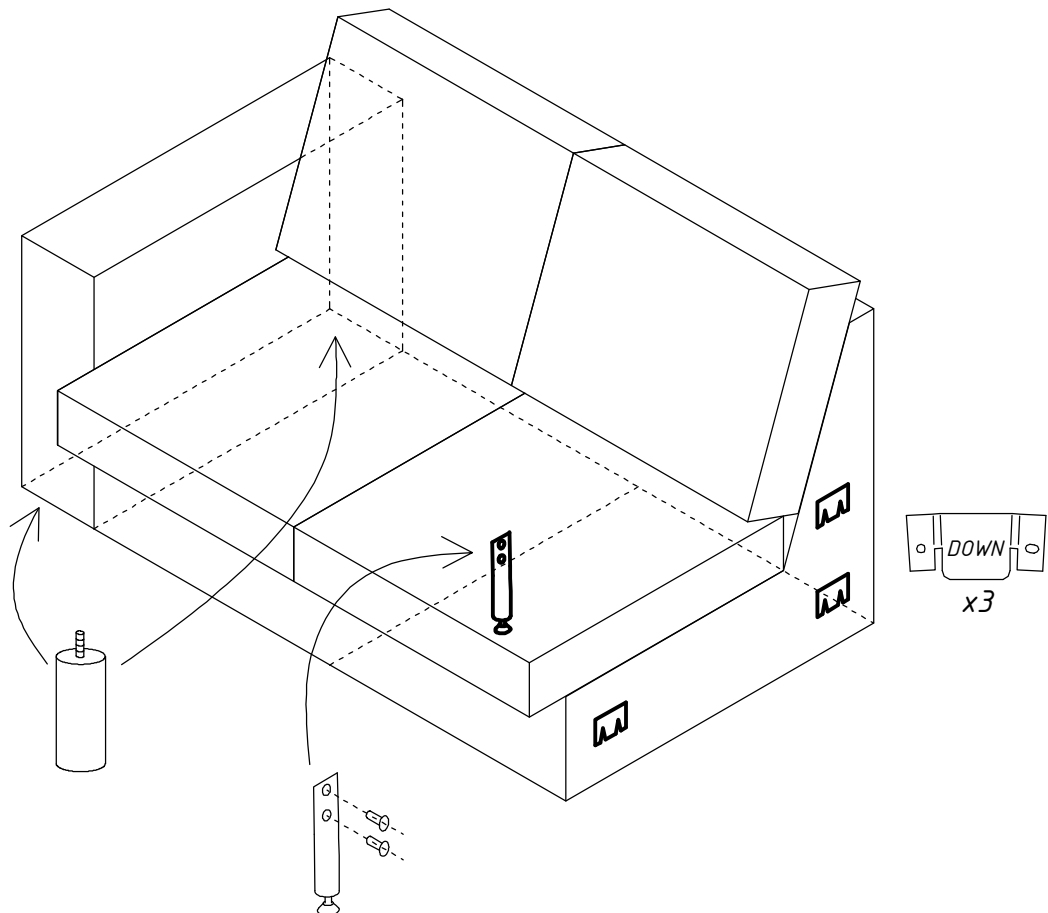
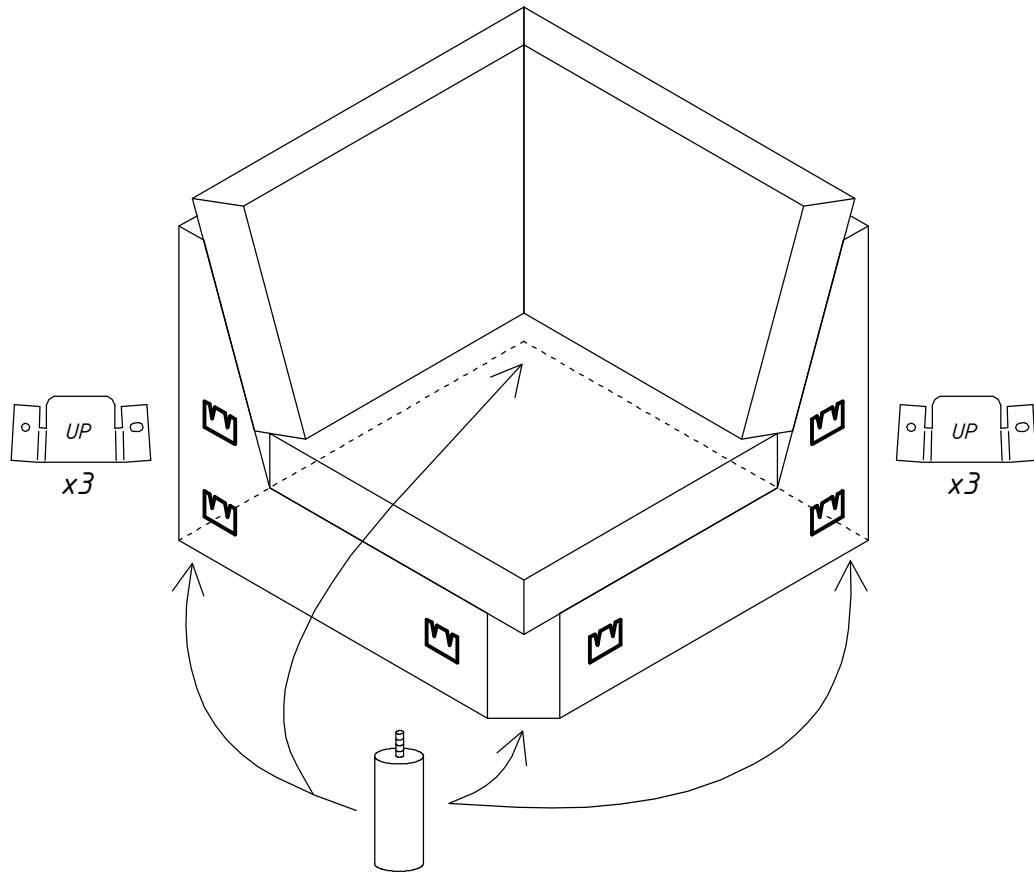


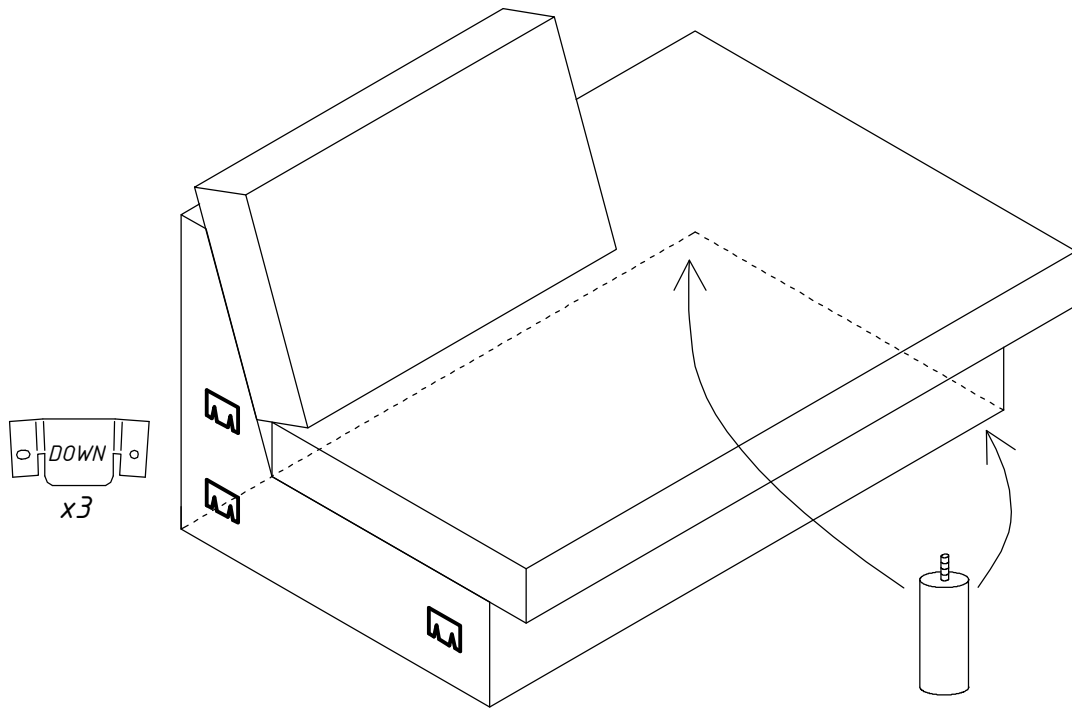

Assembly instruction SCANDIA
BV-UH

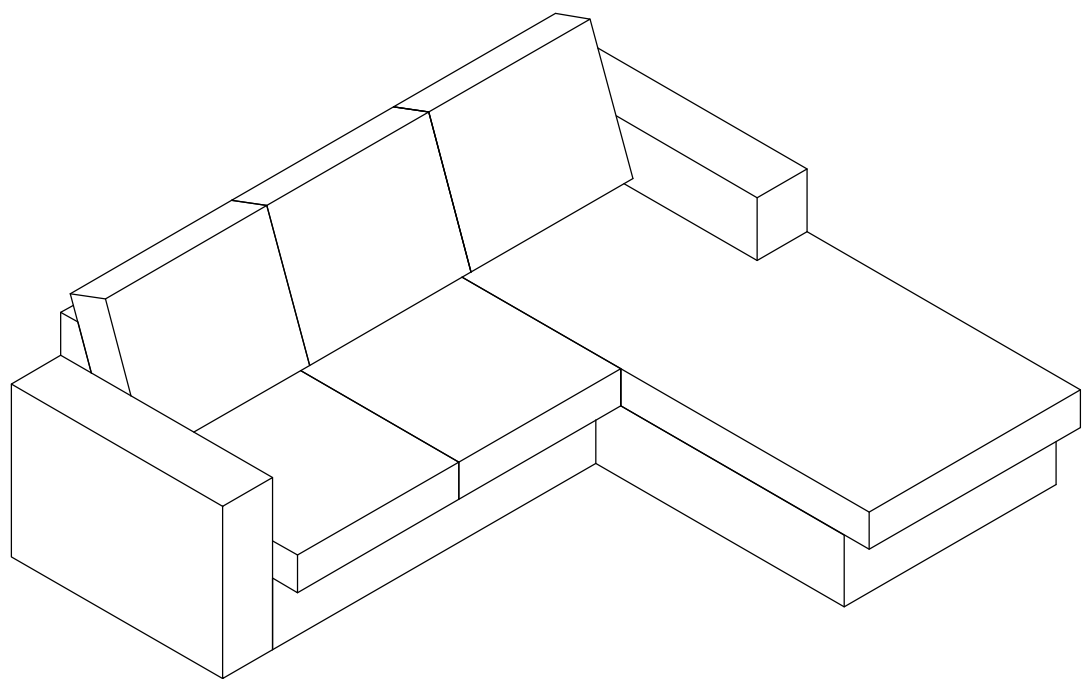


Module	Leg	Support leg
BV / BH	x 2	x 1
UH / UV	x 3	x 2

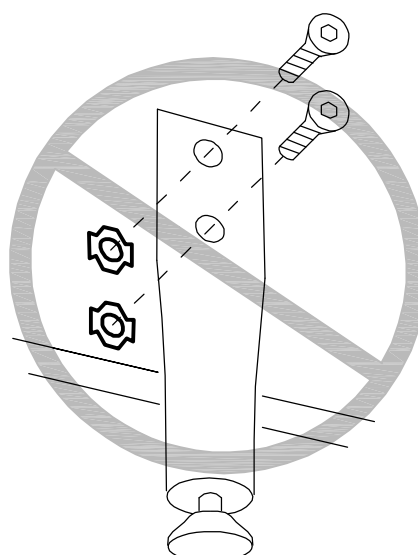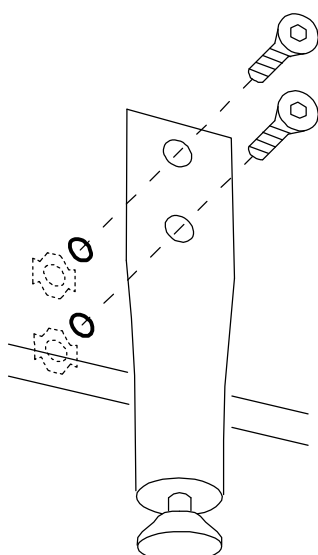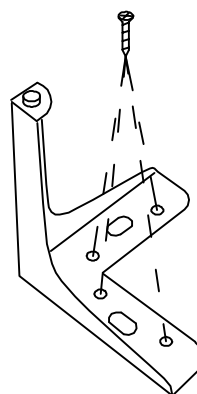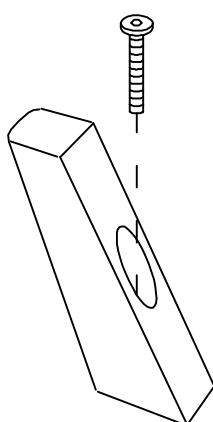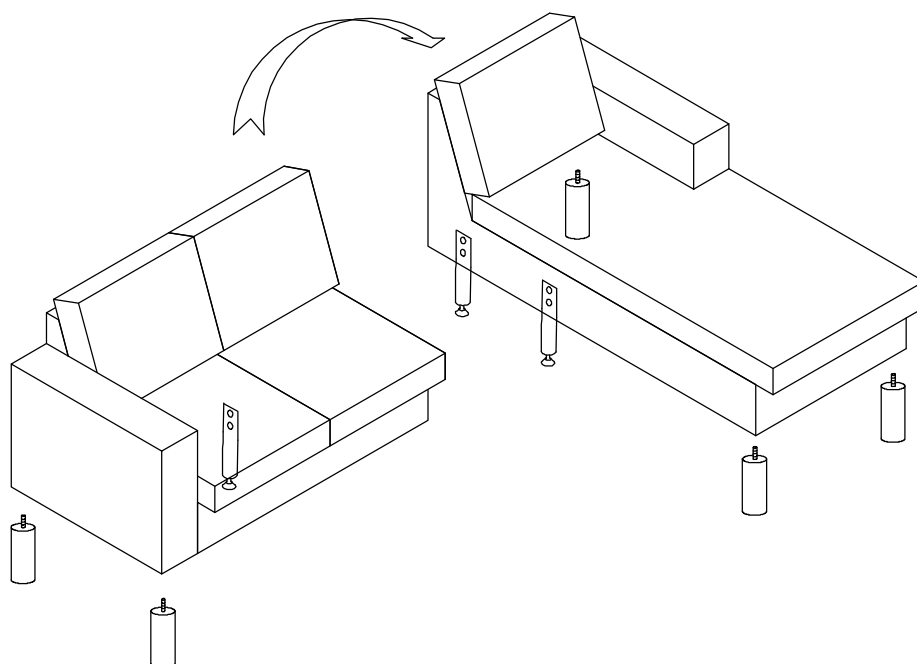

1st UH

3




x3





+



= YES

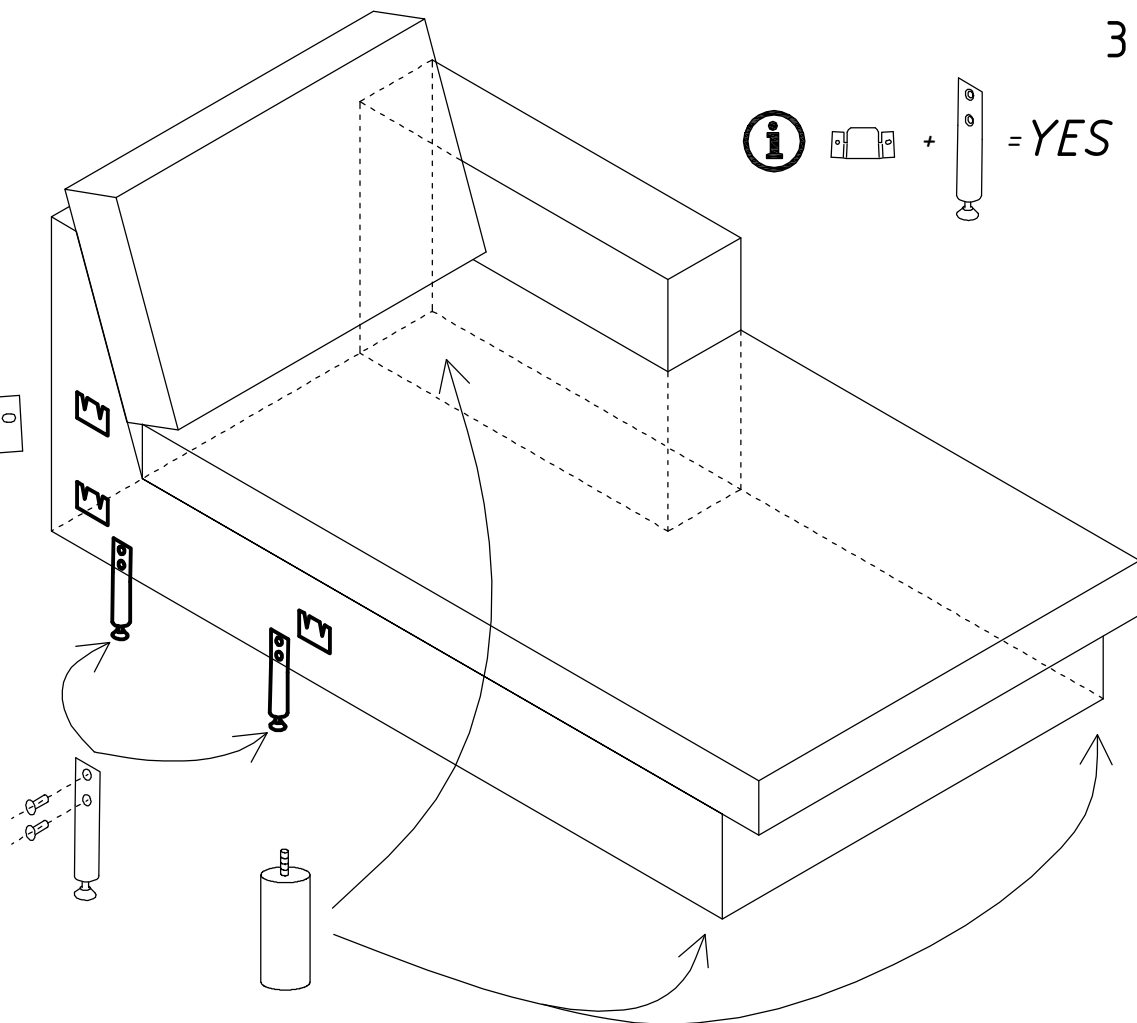

2nd BV

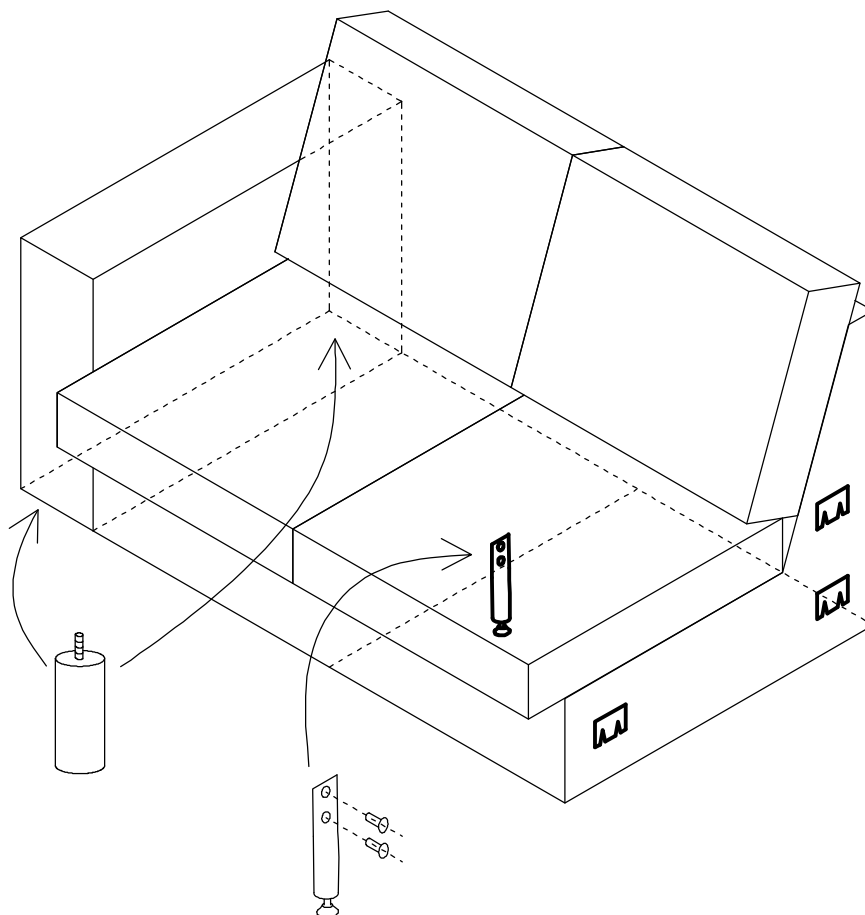


x3







Assembly instruction SCANDIA

CFV-C0-HJXH

1

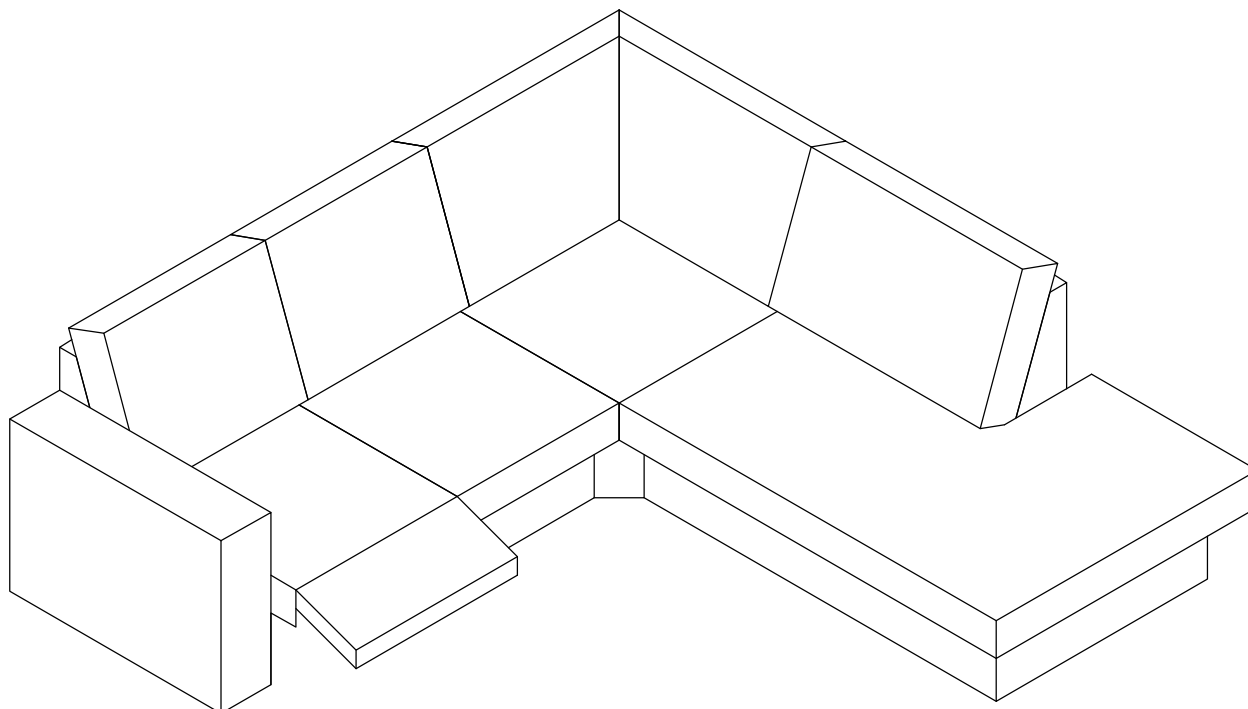


Module	Leg	Support leg
CFV / CFH	x 2	x 1 (arm 15-20cm)
CFV / CFH	x 2	x 0 (arm 10cm)
C0	-	x 2
HJXH / XVHJ	x 5	-

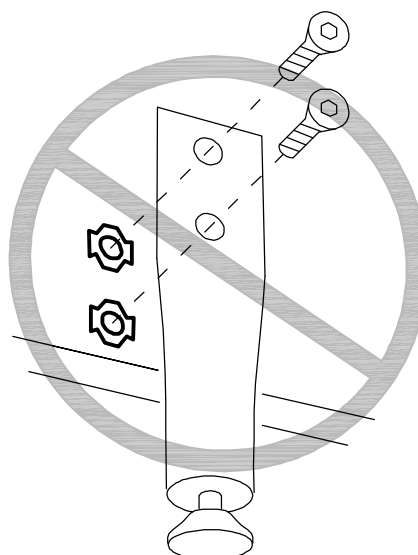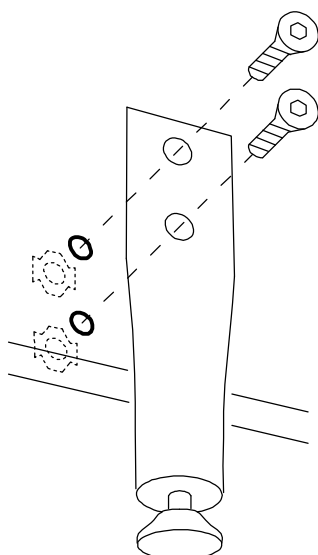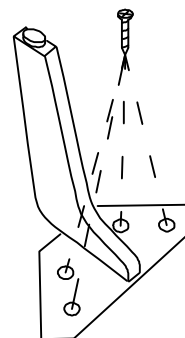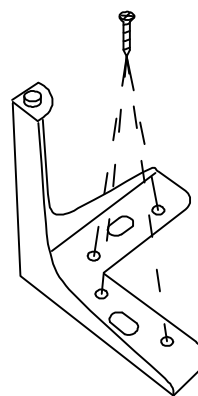
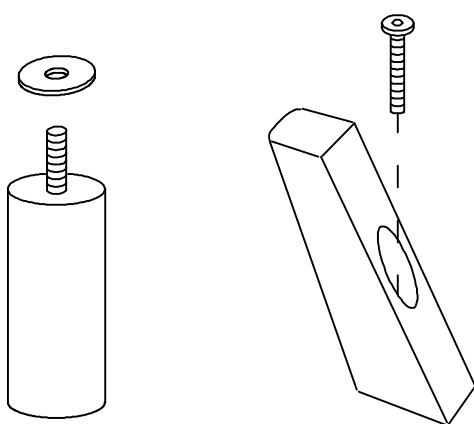
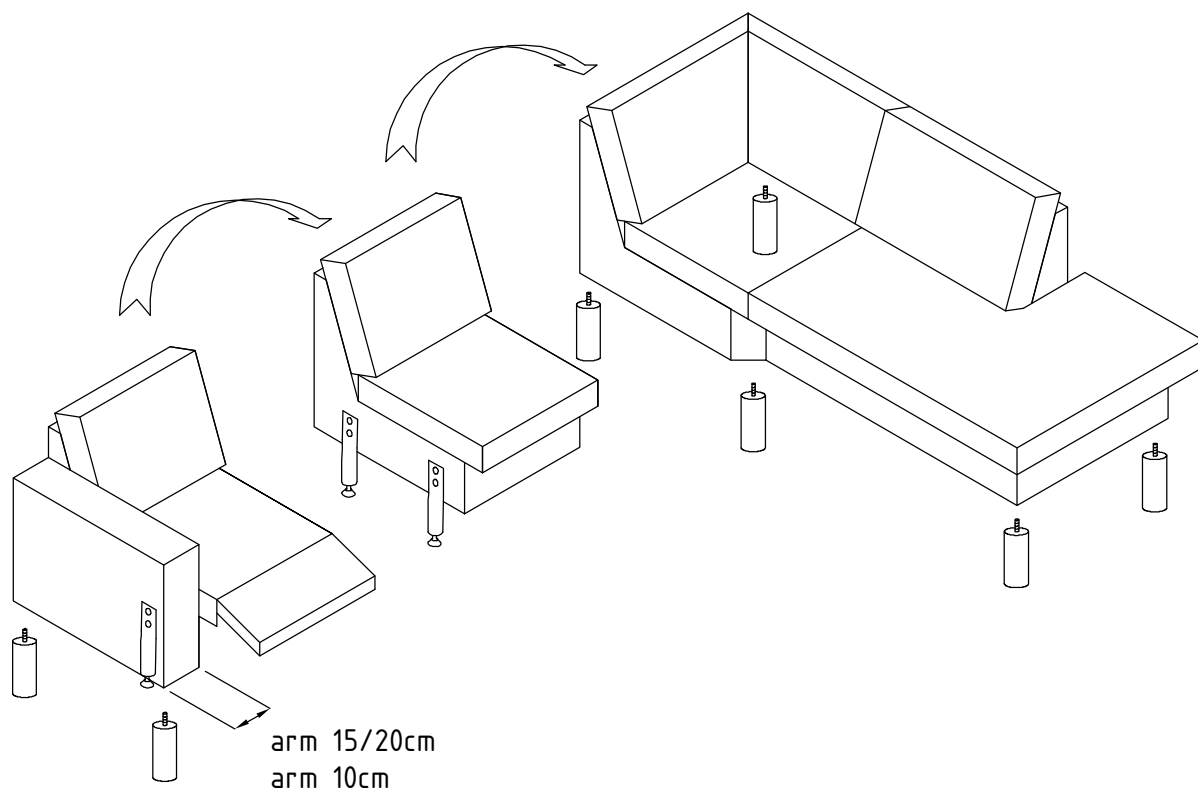



1st HJXH

3

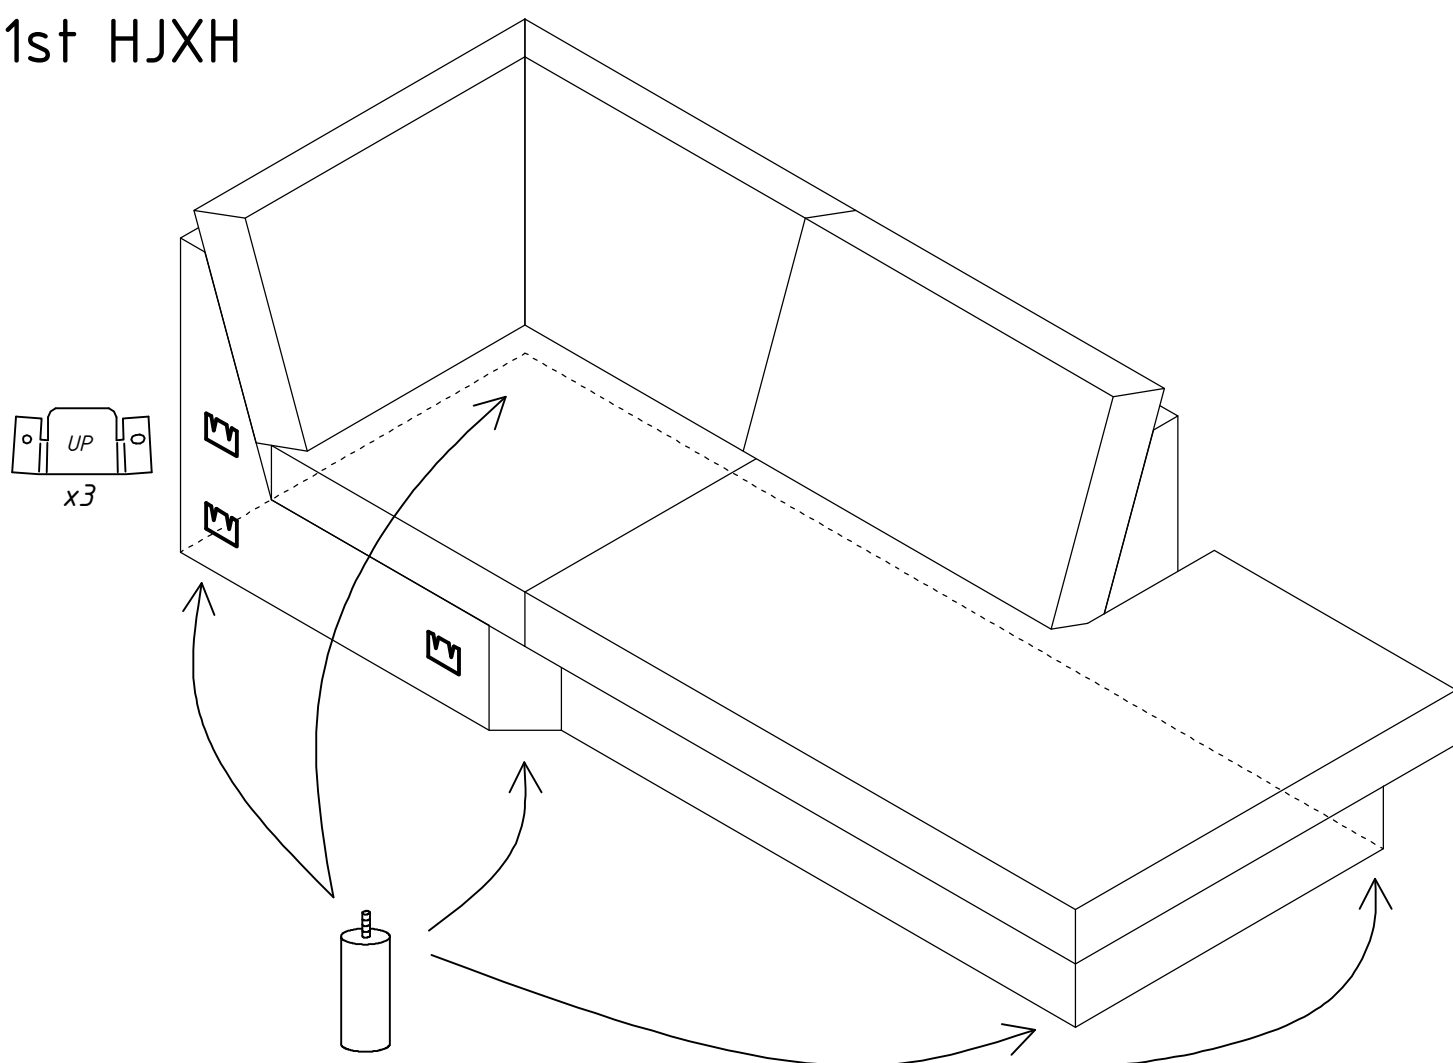

2nd C0

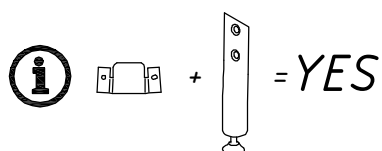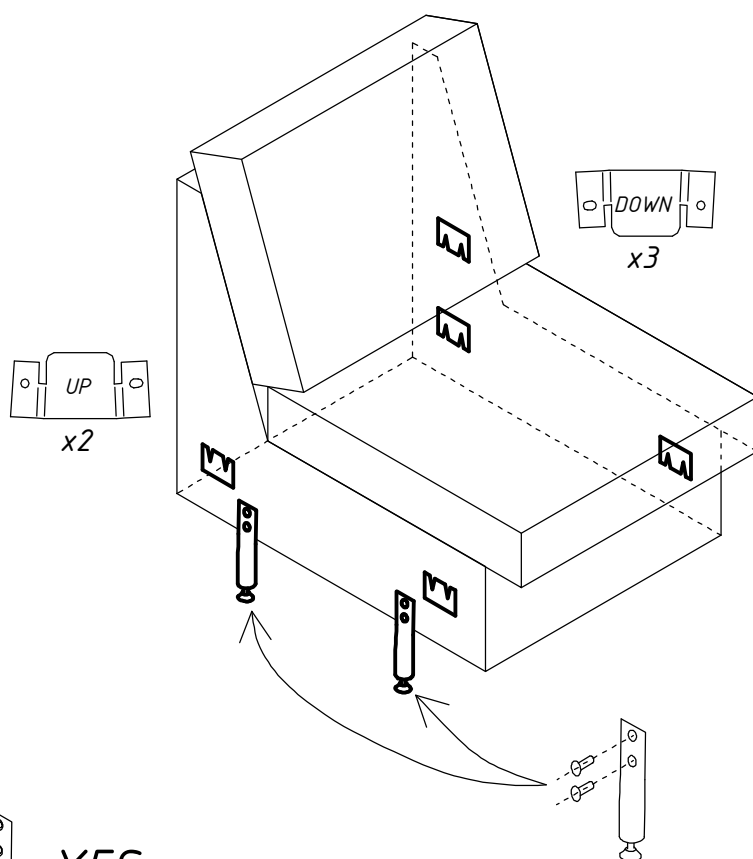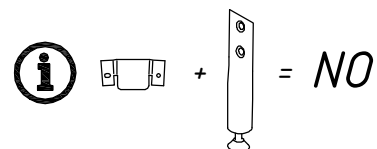


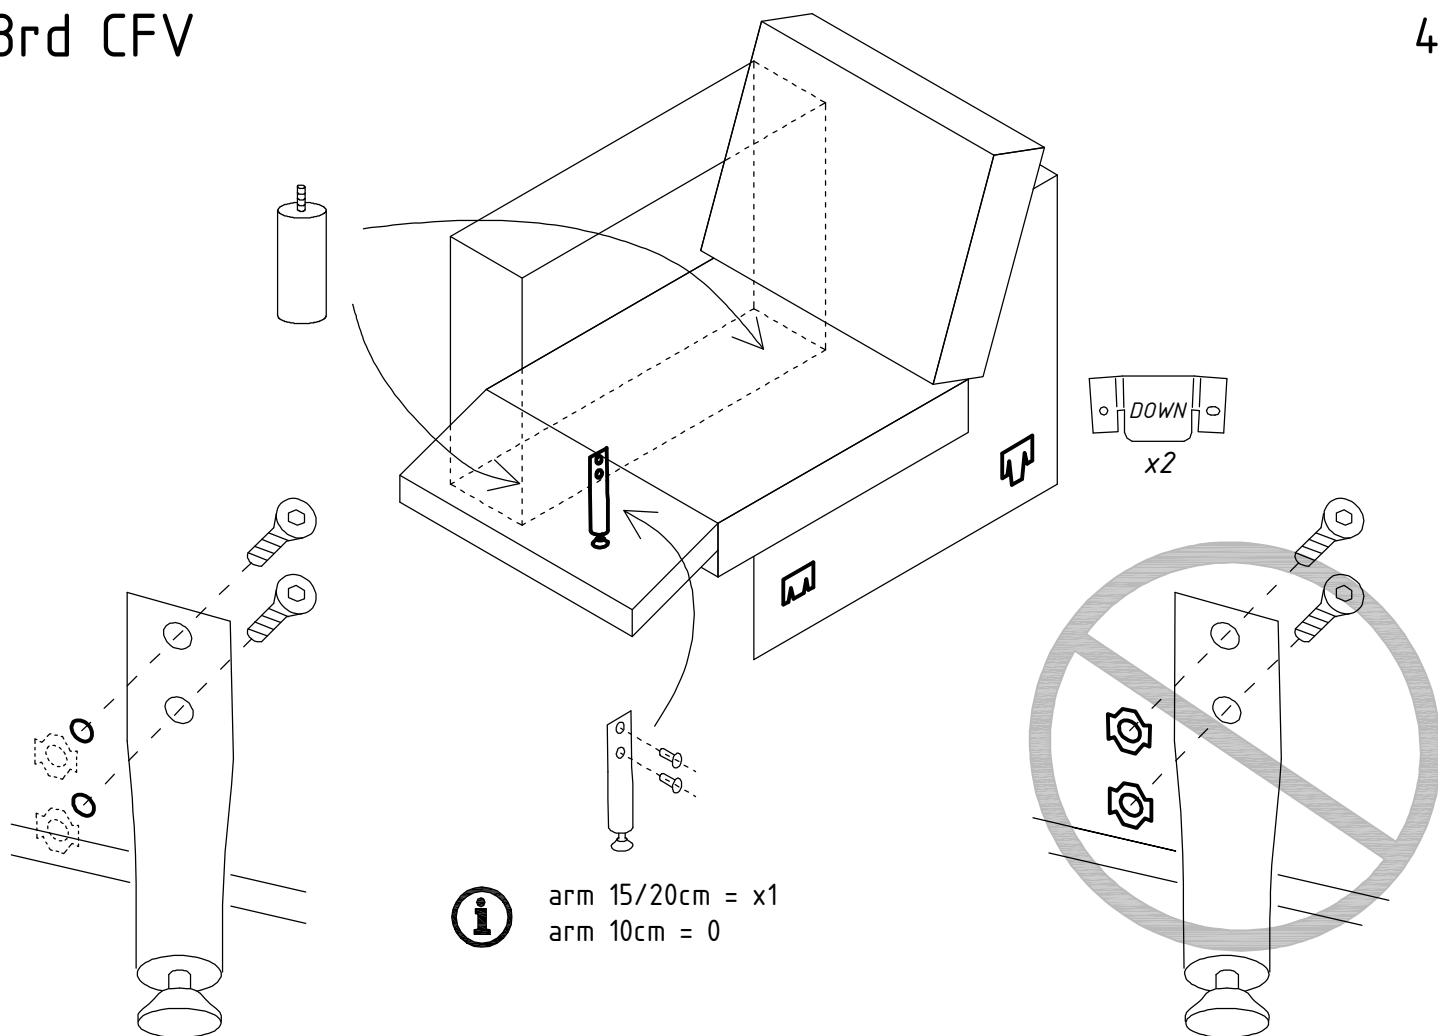








Assembly instruction SCANDIA

CFV-C0-HJ-XH

1

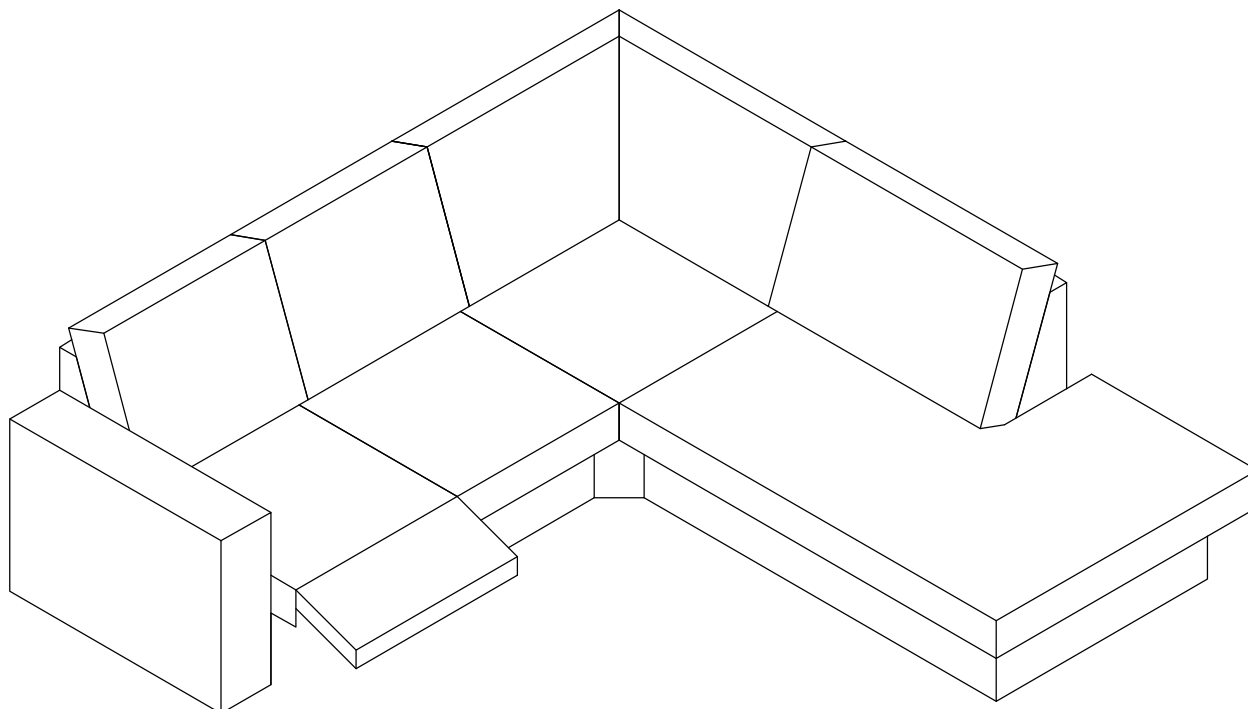


Module	Leg	Support leg
CFV / CFH	x 2	x 1 (arm 15-20cm)
CFV / CFH	x 2	x 0 (arm 10cm)
C0	-	x 2
HJ	x 4	-
XH / XV	x 2	-

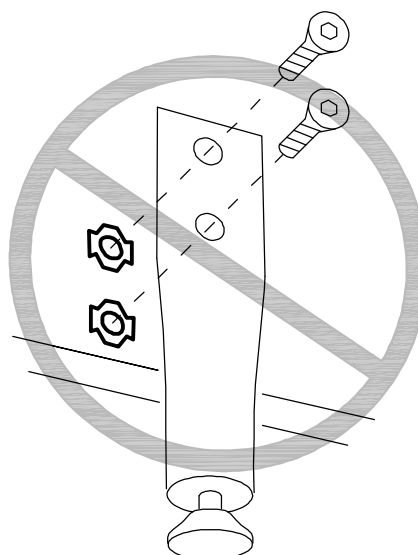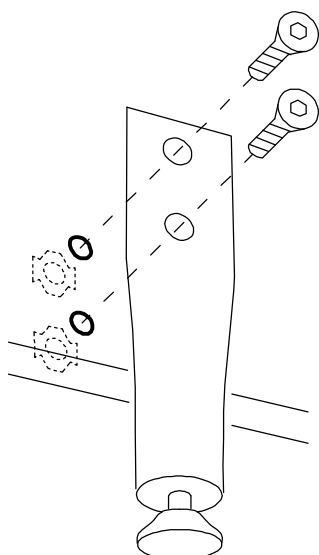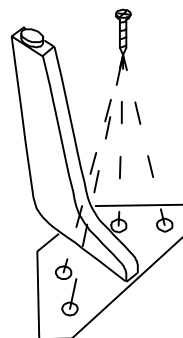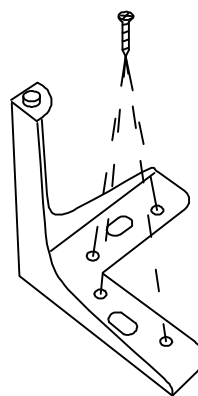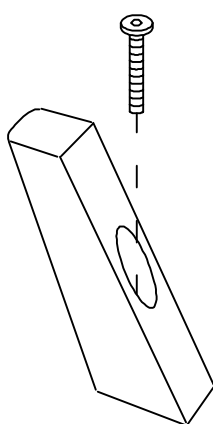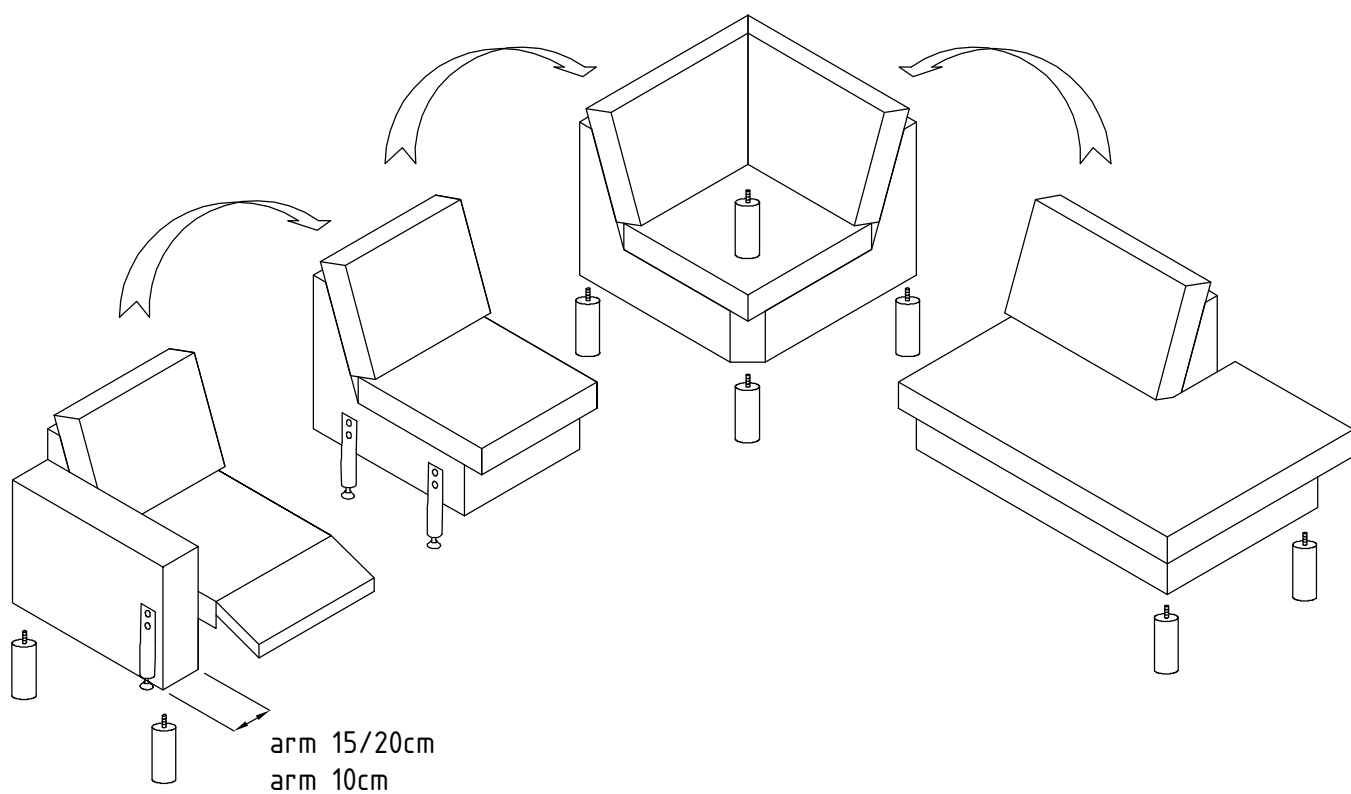


1st HJ




3

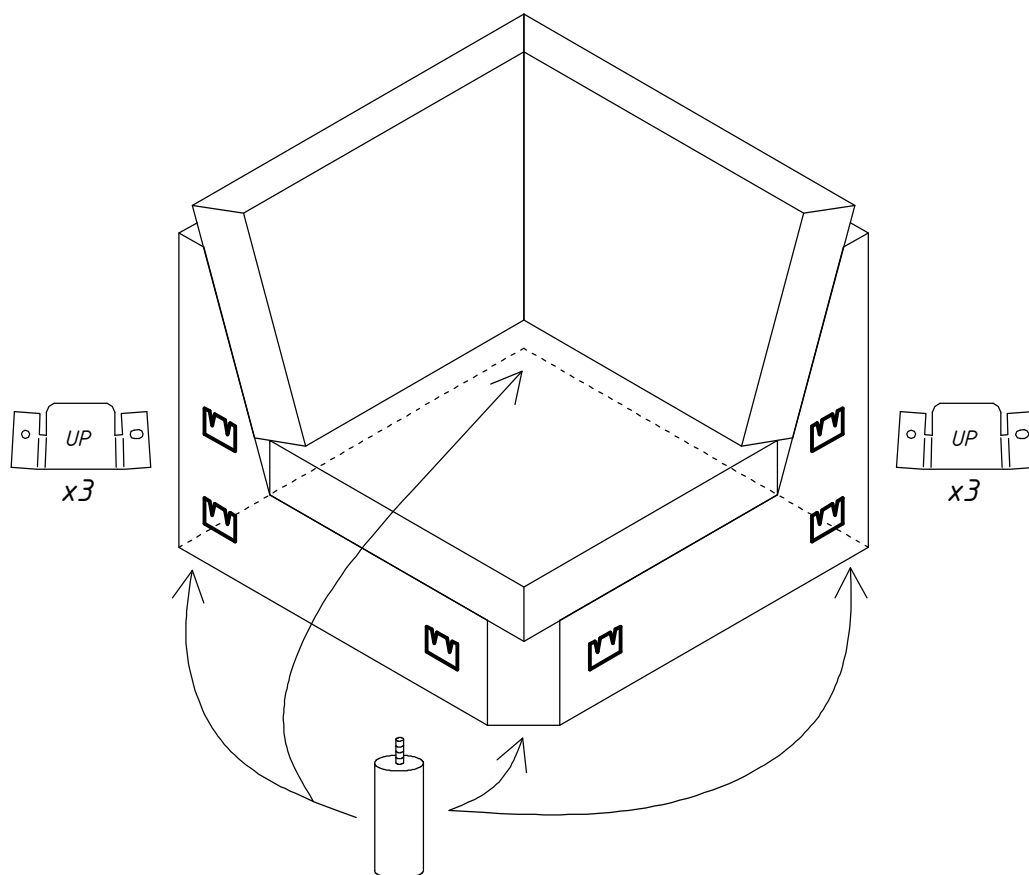


2nd XH

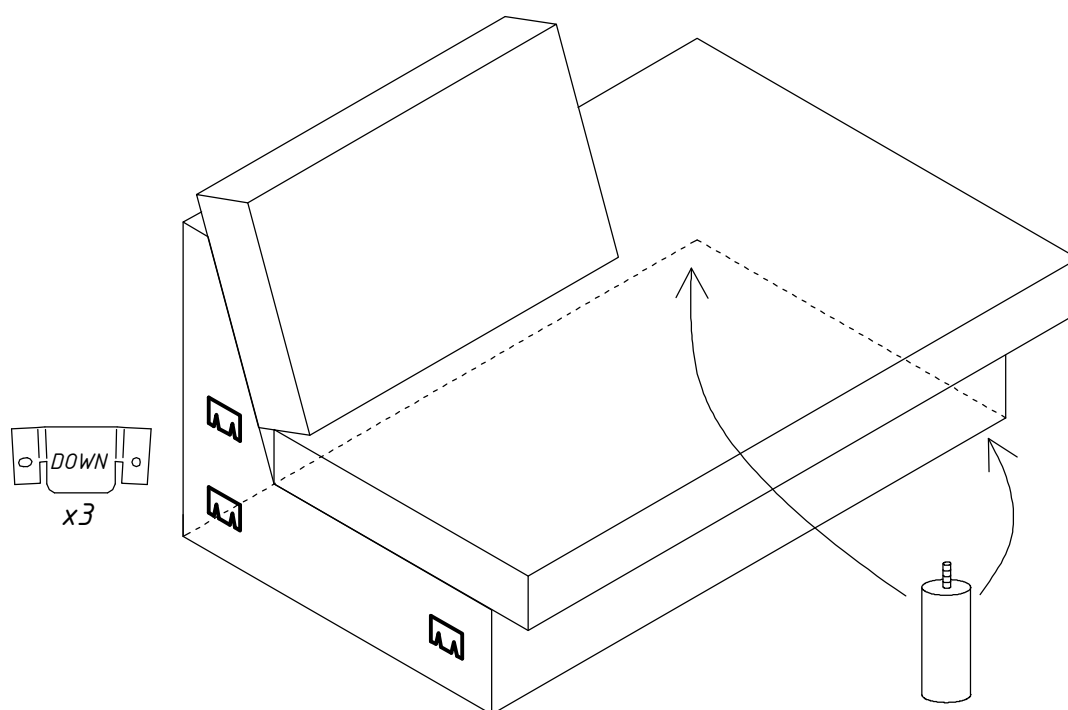

3rd C0

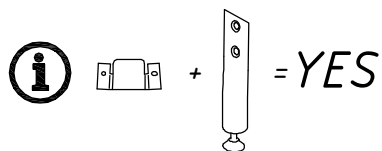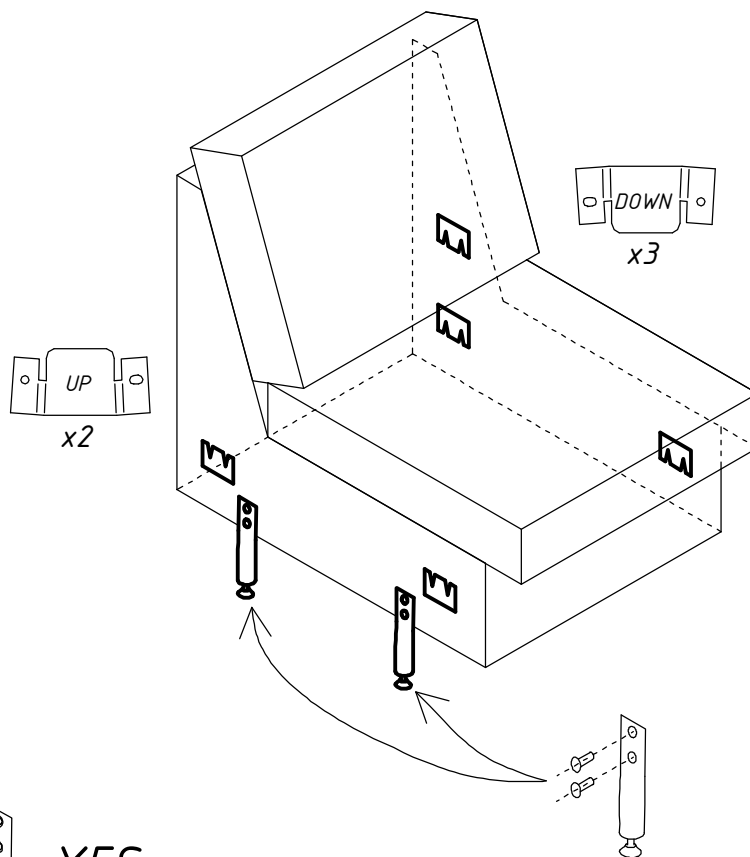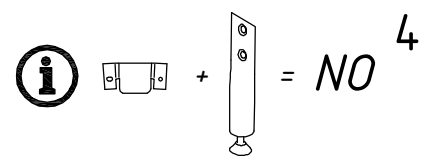


4th CFV

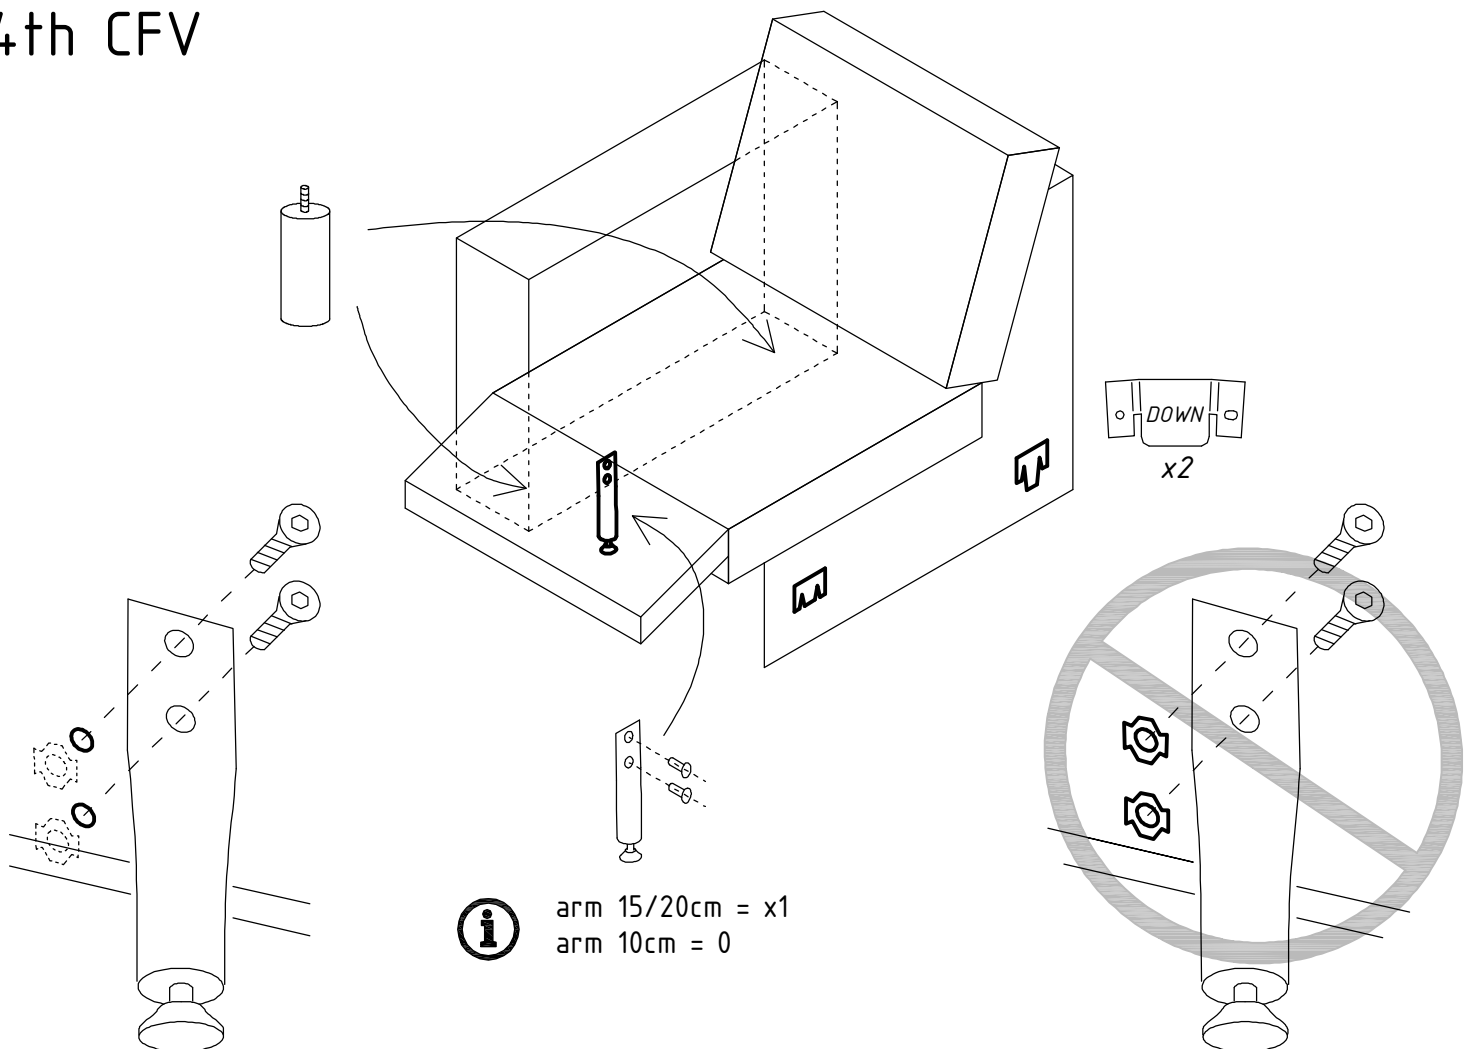









Assembly instruction SCANDIA

CFV-CFH

1





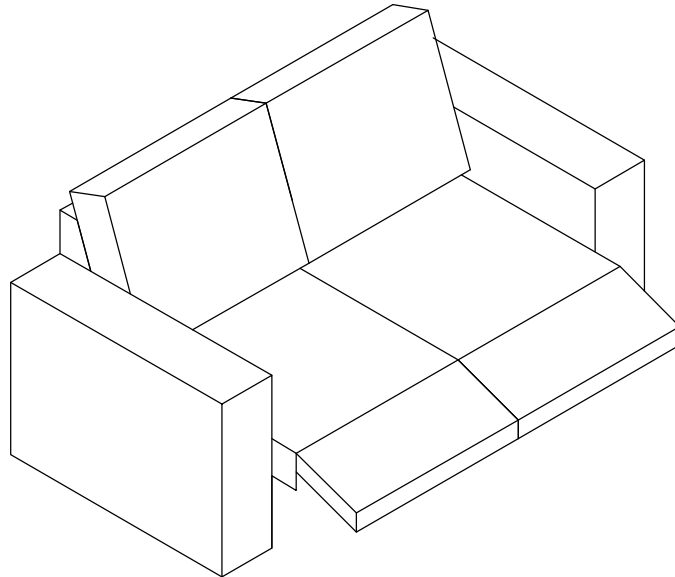


Module	Leg	Support leg
CFV (arm 15-20cm)	x 2	x 1
CFH (arm 15-20cm)	x 2	x 3
CFV (arm 10cm)	x 2	-
CFH (arm 10cm)	x 2	x 2

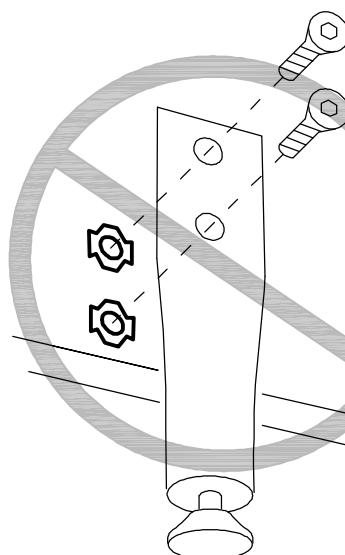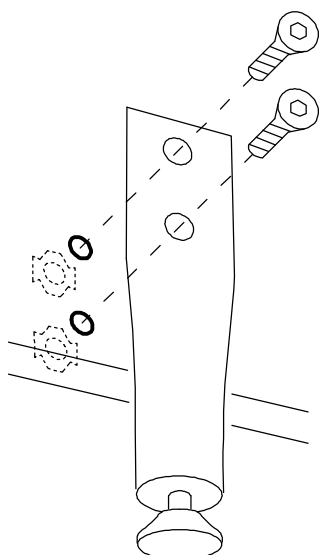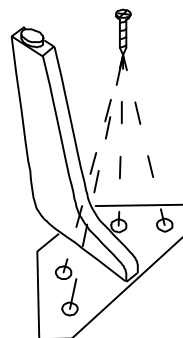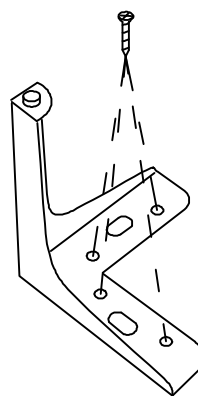
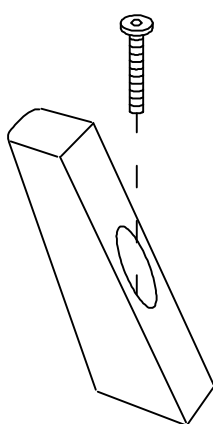

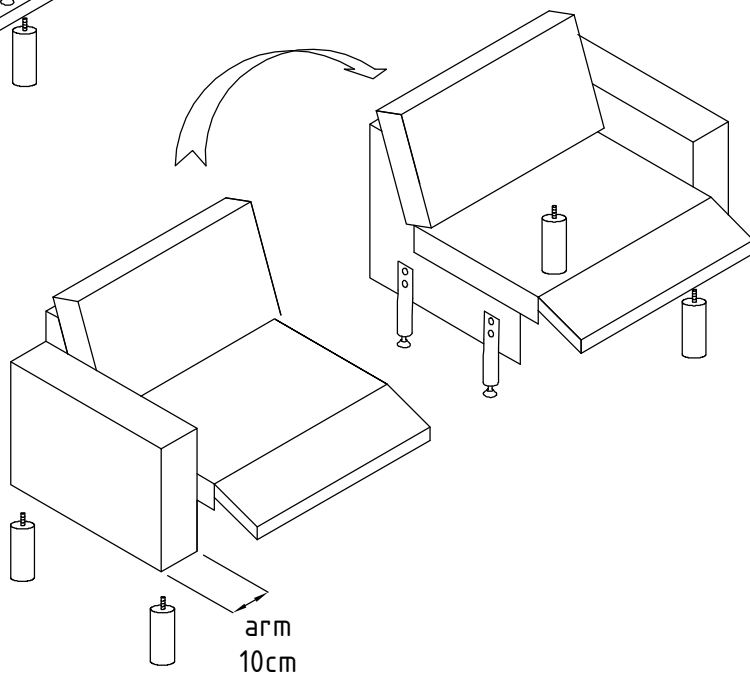
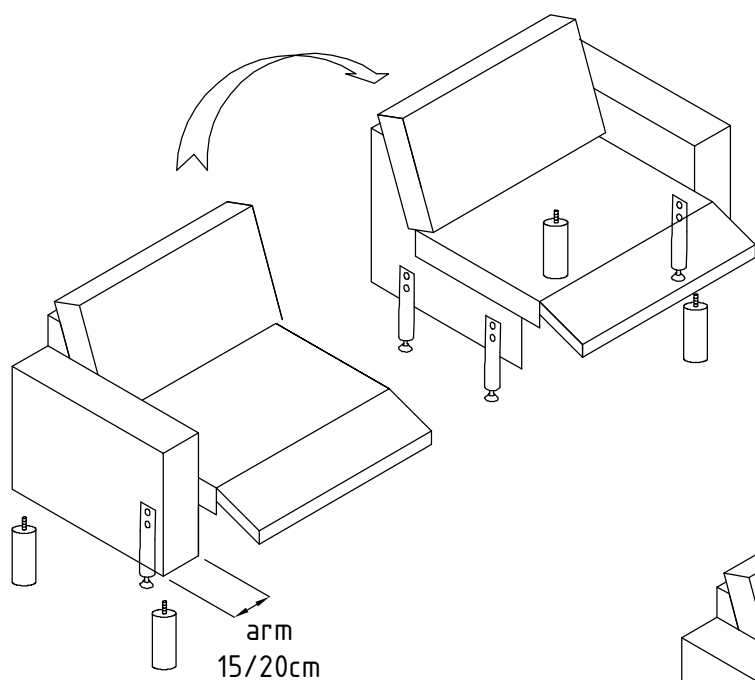


1st CFH

3

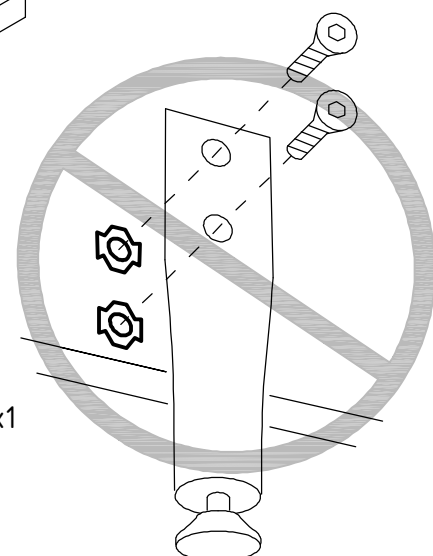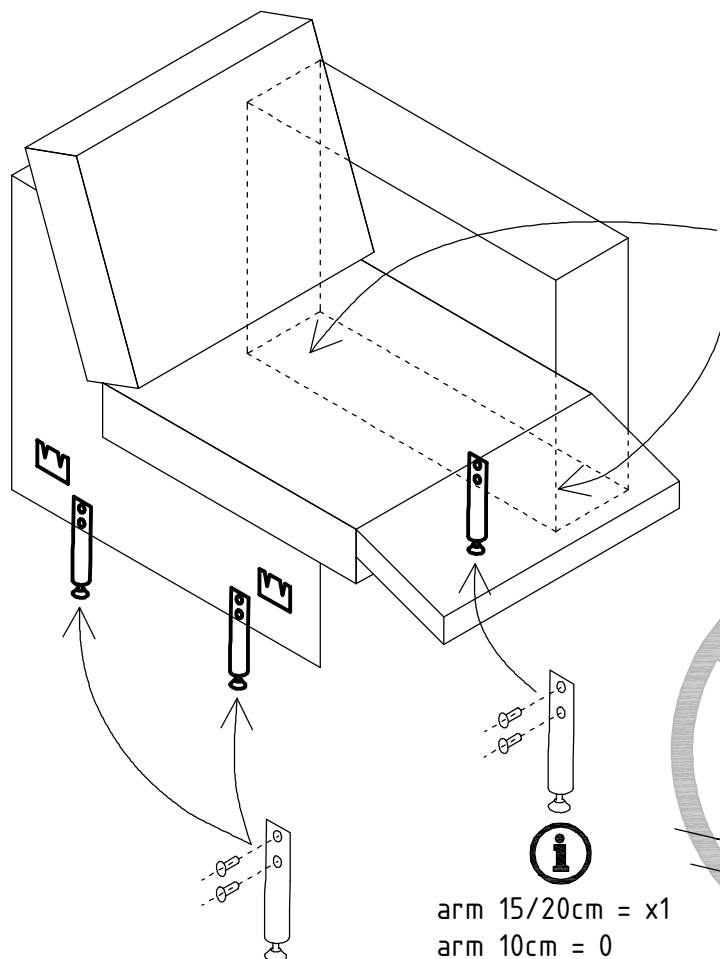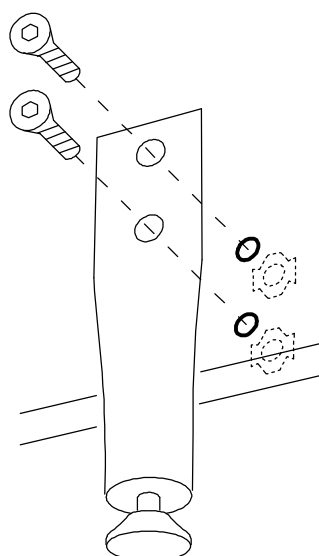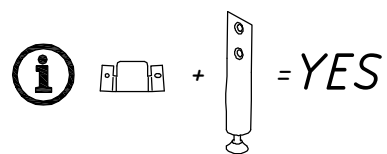


2nd CFV

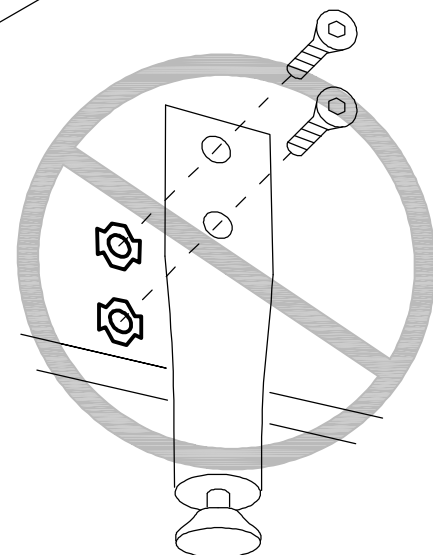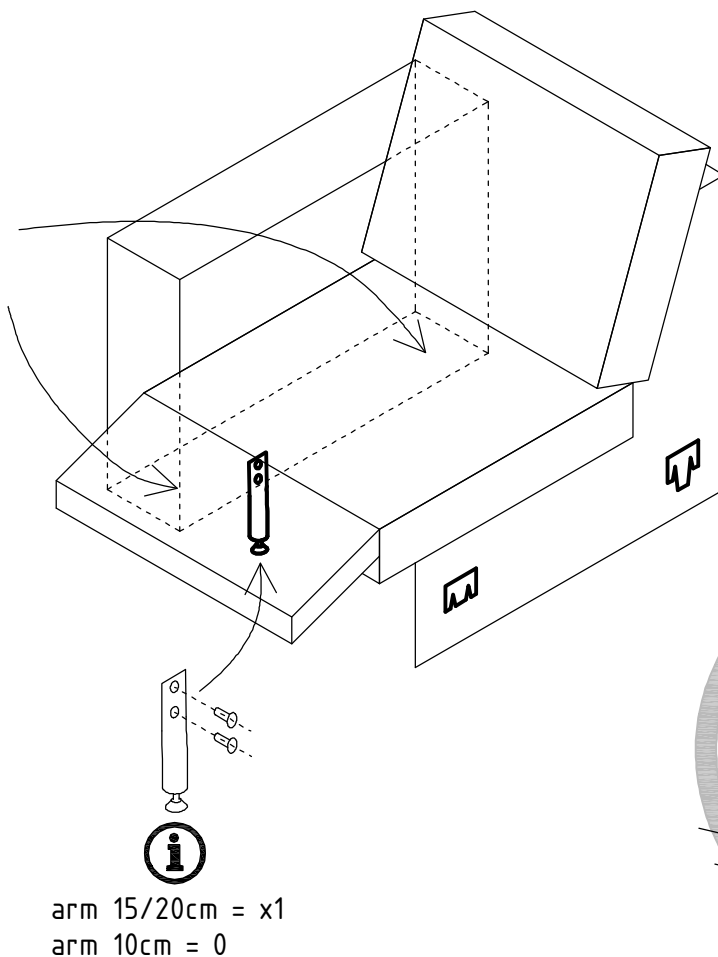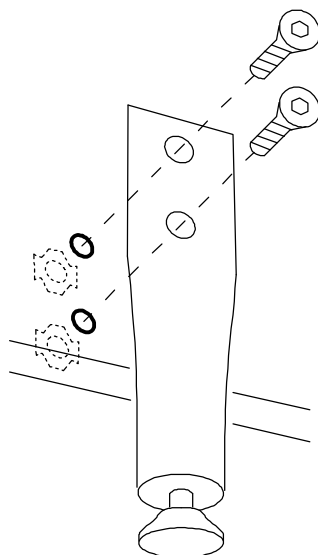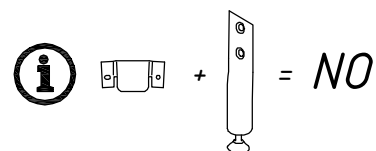

Assembly instruction SCANDIA

CFV-CO-UOH



1

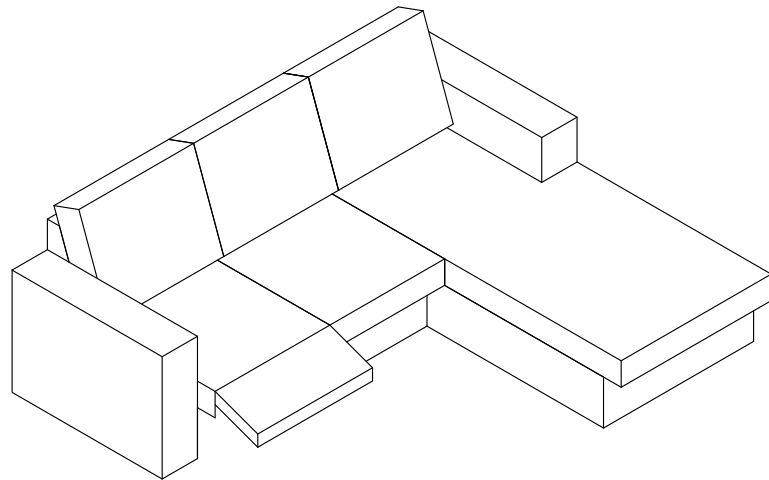

Module	Leg	Support leg
CFV / CFH	x 2 x 1	(arm 15–20cm)
CFV / CFH	x 2 x 0	(arm 10cm)
CO	—	x 2
UH / UV	x 3	x 2


CFV-CO-UOH-190109-TS

2

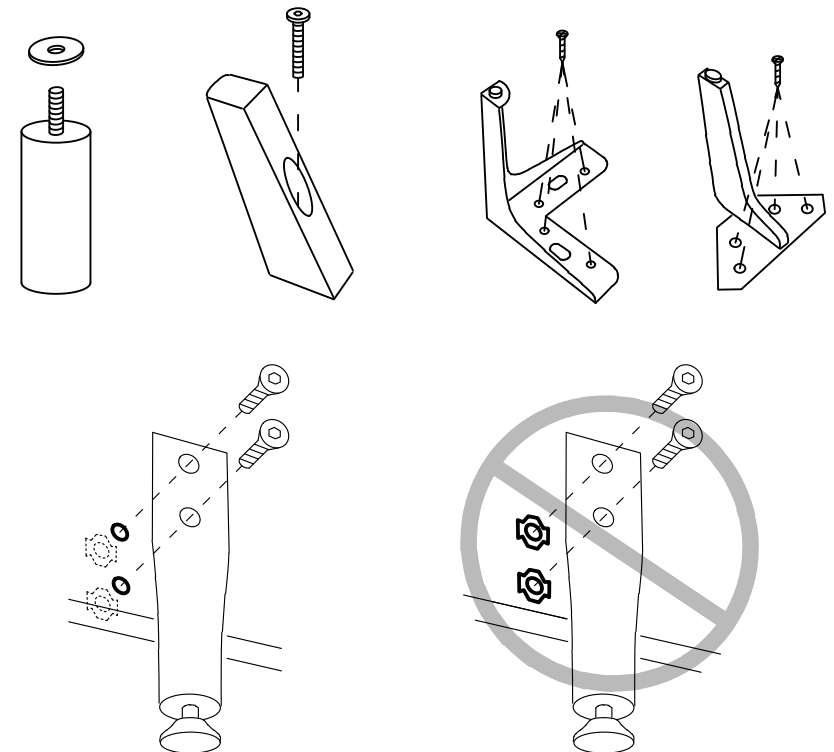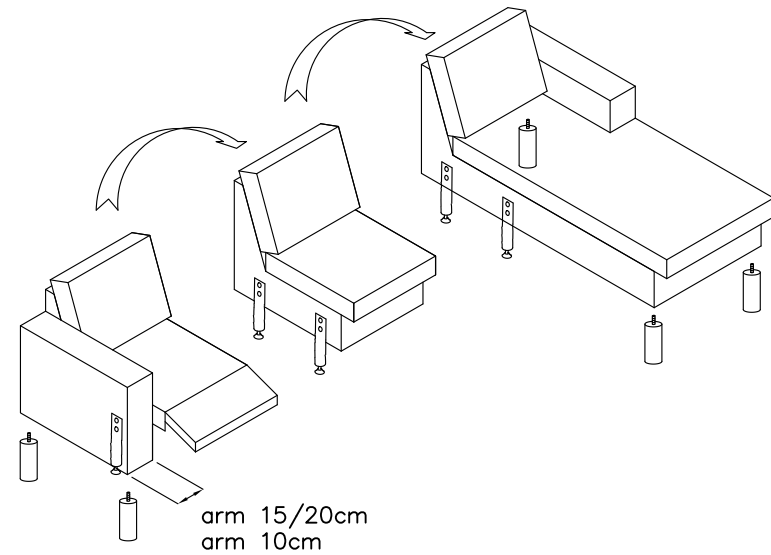


1st UH

3

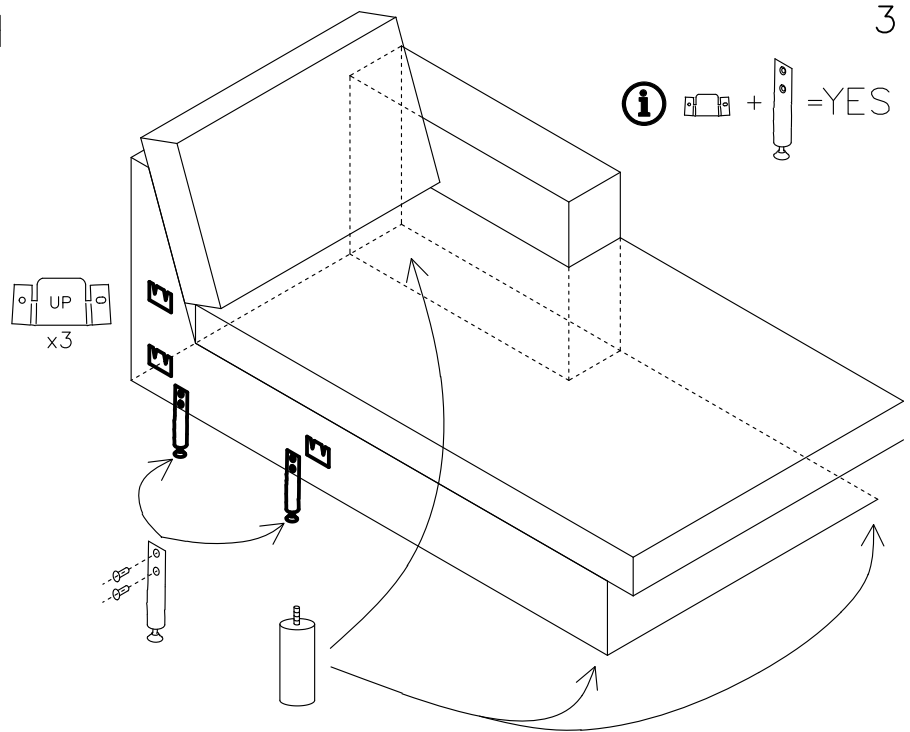


3rd CFV

4

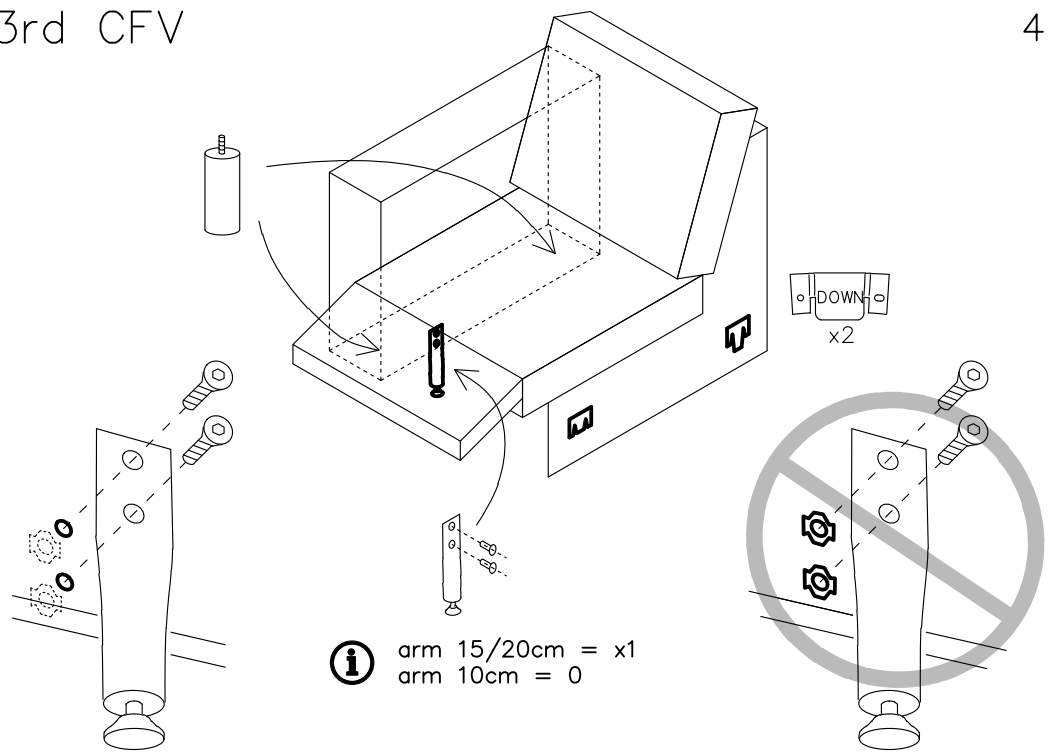

2nd C0

$\text{UP} + \text{DOWN} = \text{NO}$





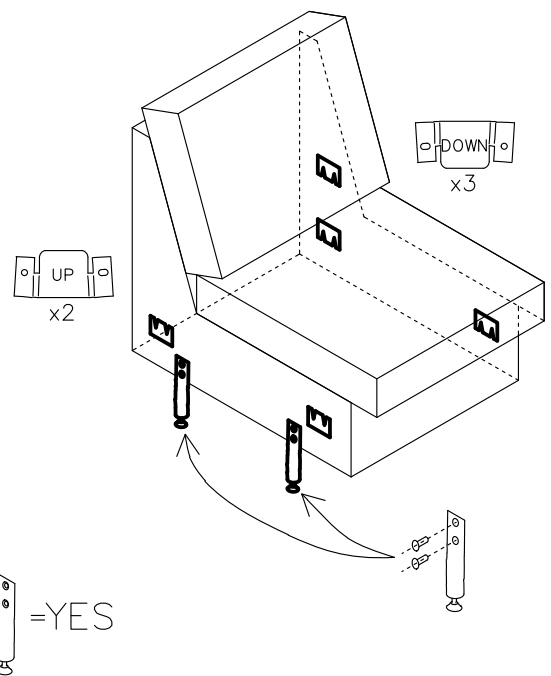


$\text{UP} + \text{DOWN} = \text{YES}$

Assembly instruction SCANDIA




1

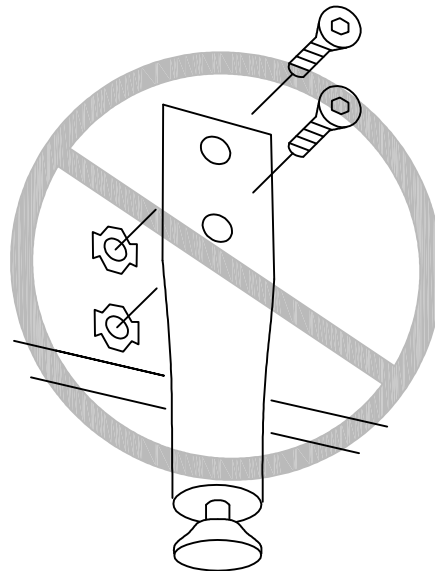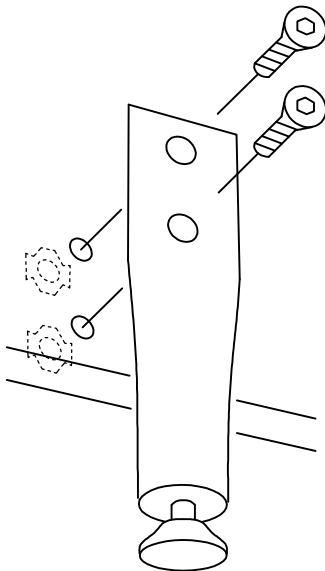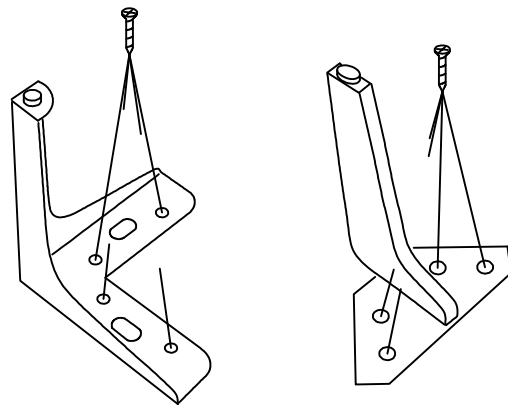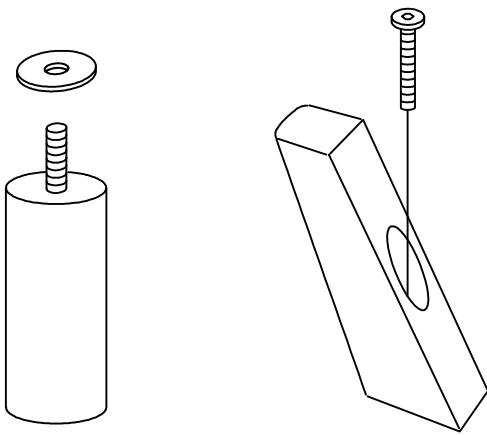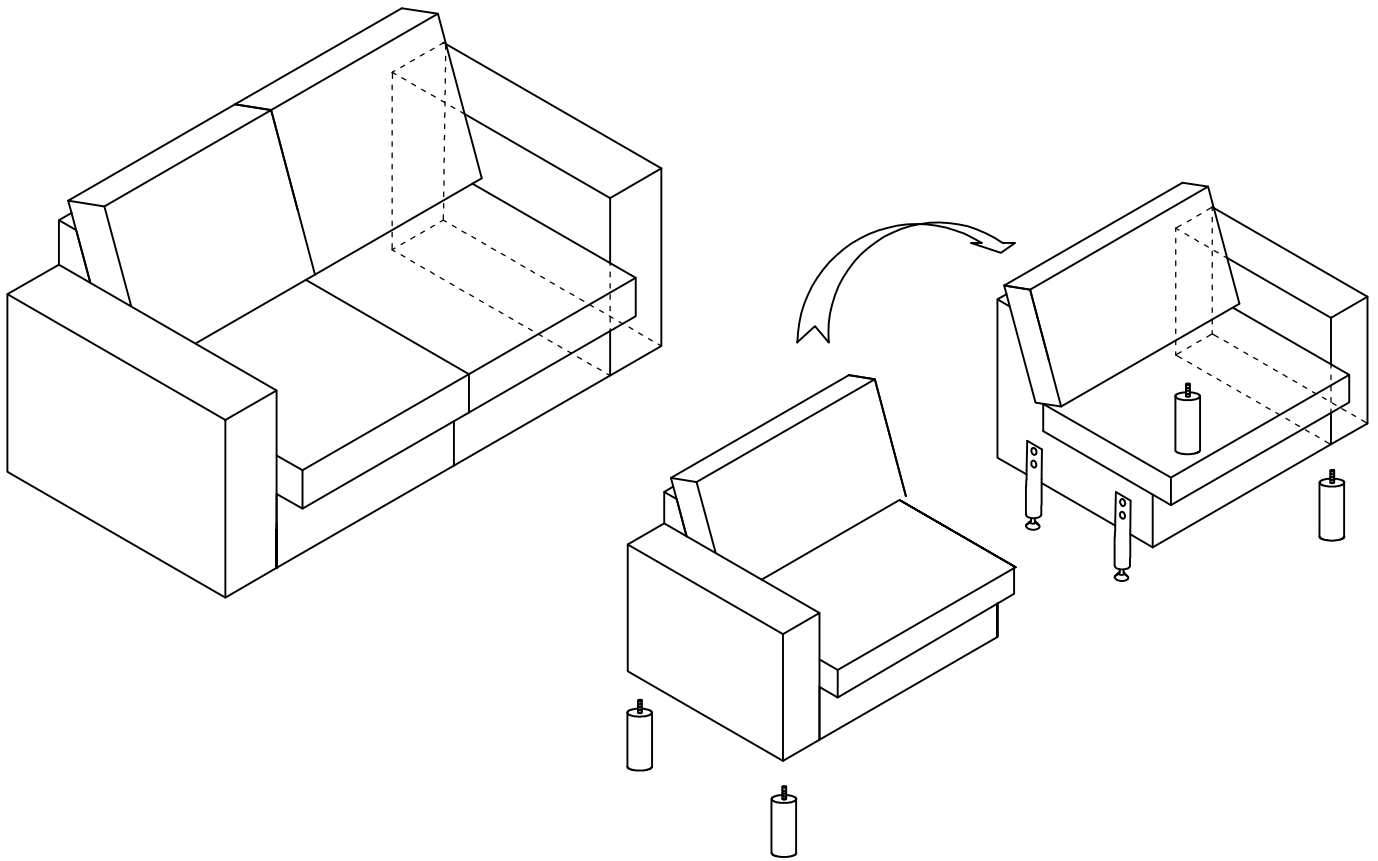
CV + CH







1st CH




2


  +  = YES

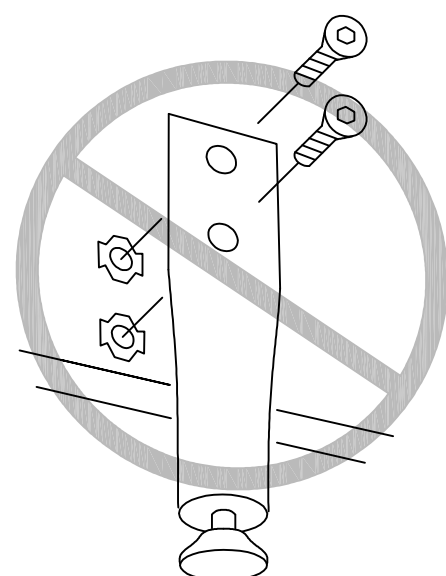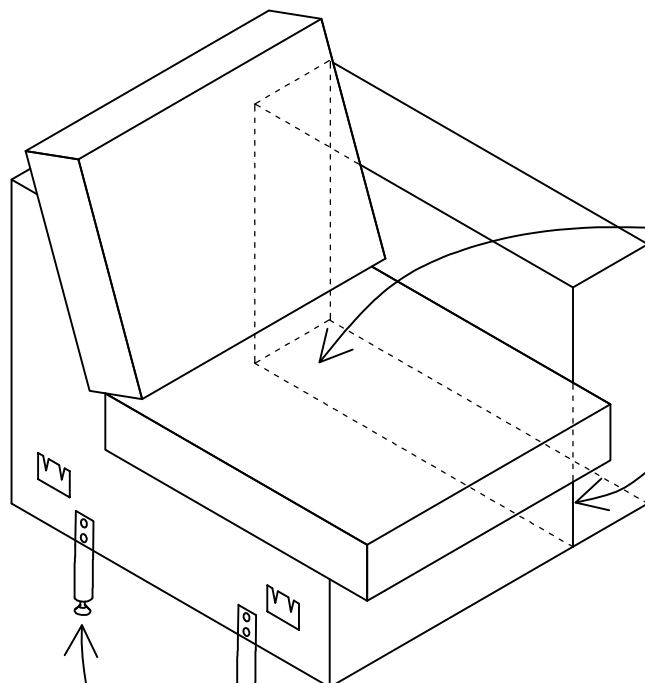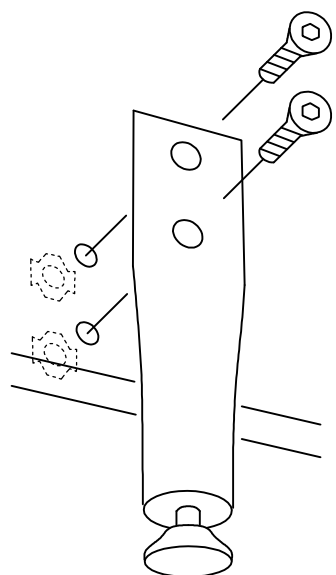
 UP
x2



2nd CV

  +  = NO

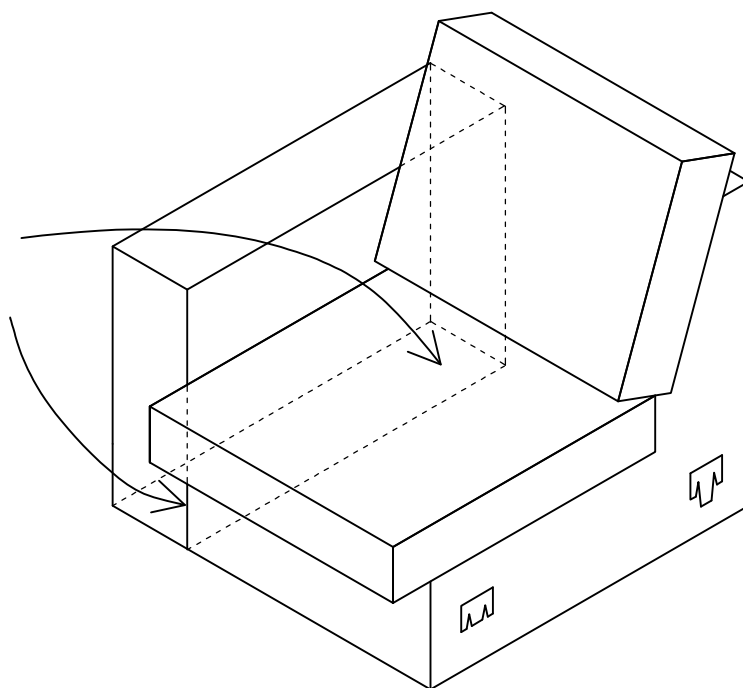


 DOWN
x2








Assembly instruction SCANDIA



UV-B0-HJ-BH

1

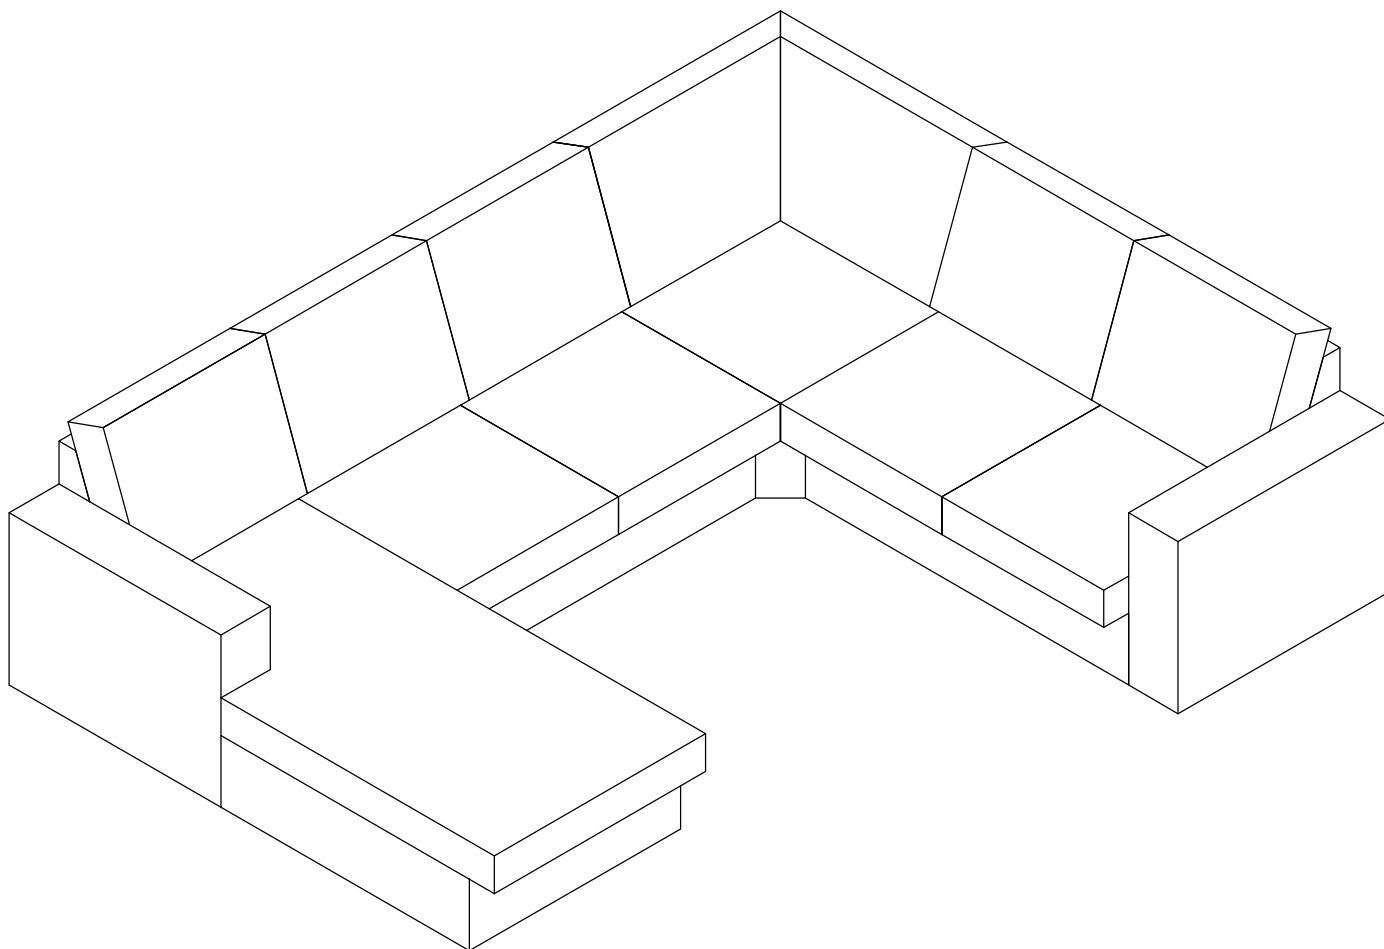

Module	Leg	Support leg
UV / UH	x 3	-
B0	-	x3
HJ	x 4	-
BH	x 2	x 1

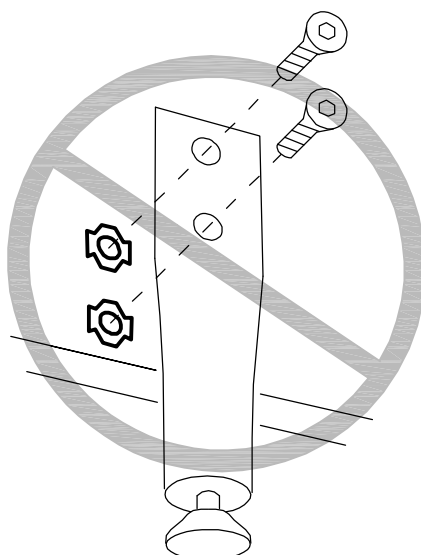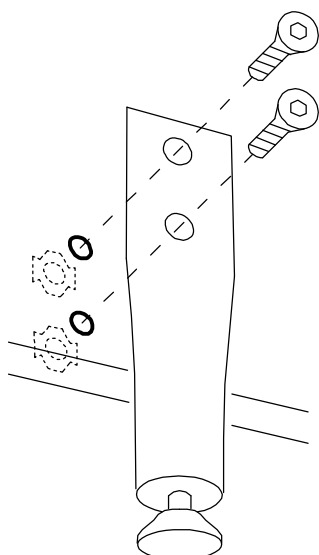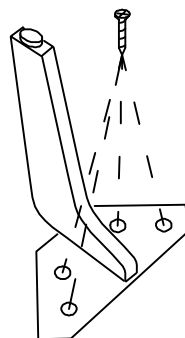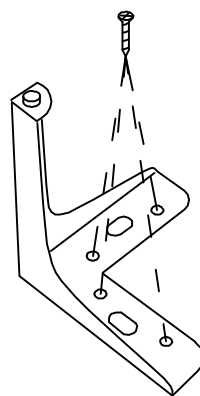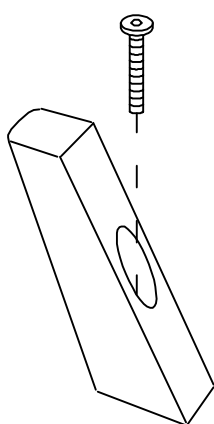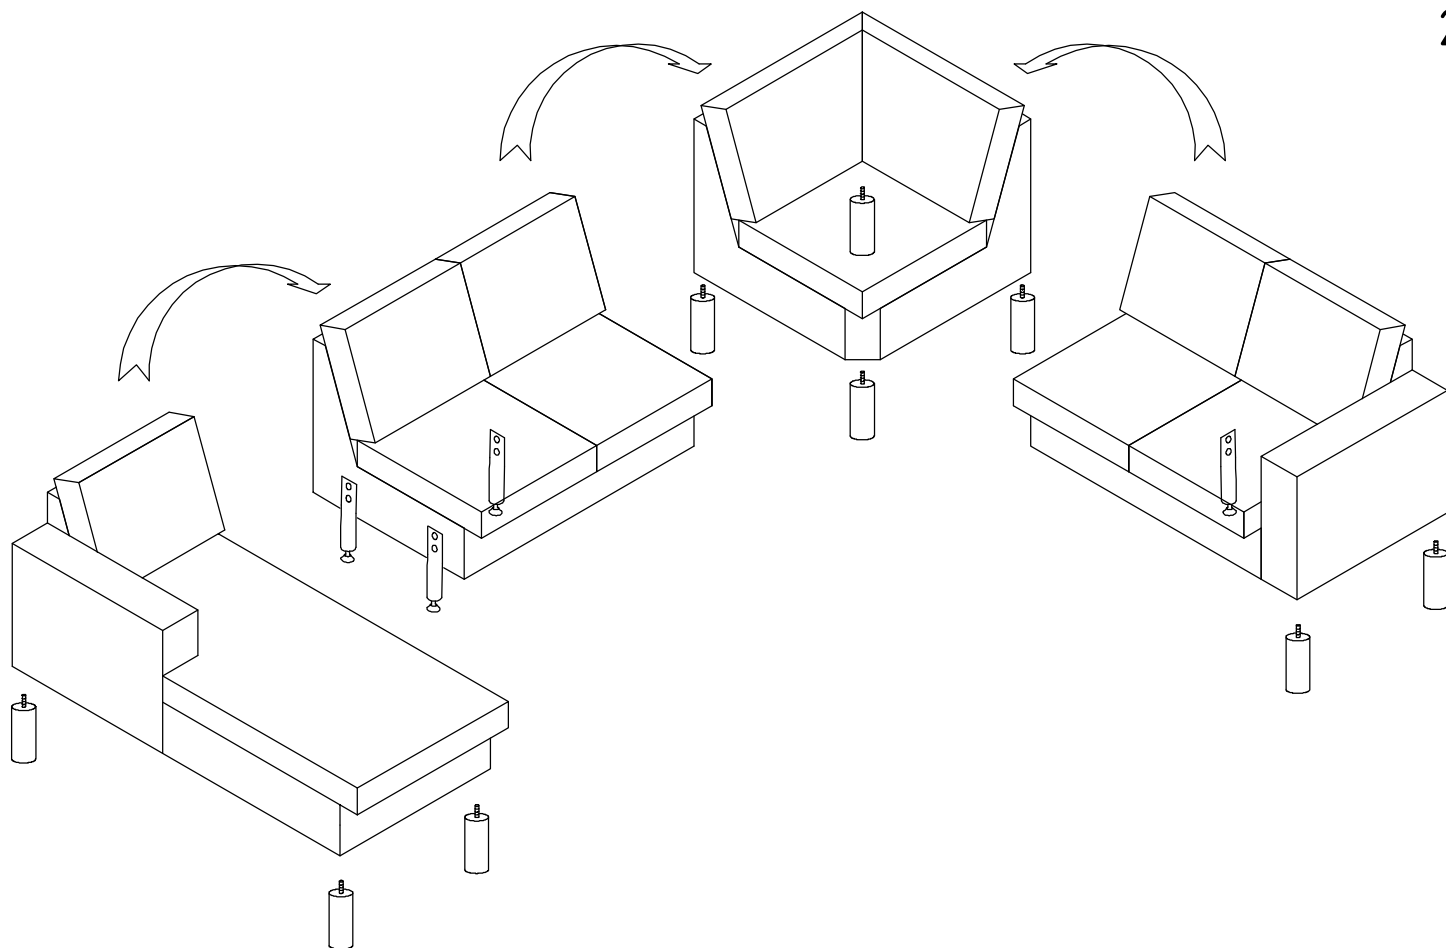

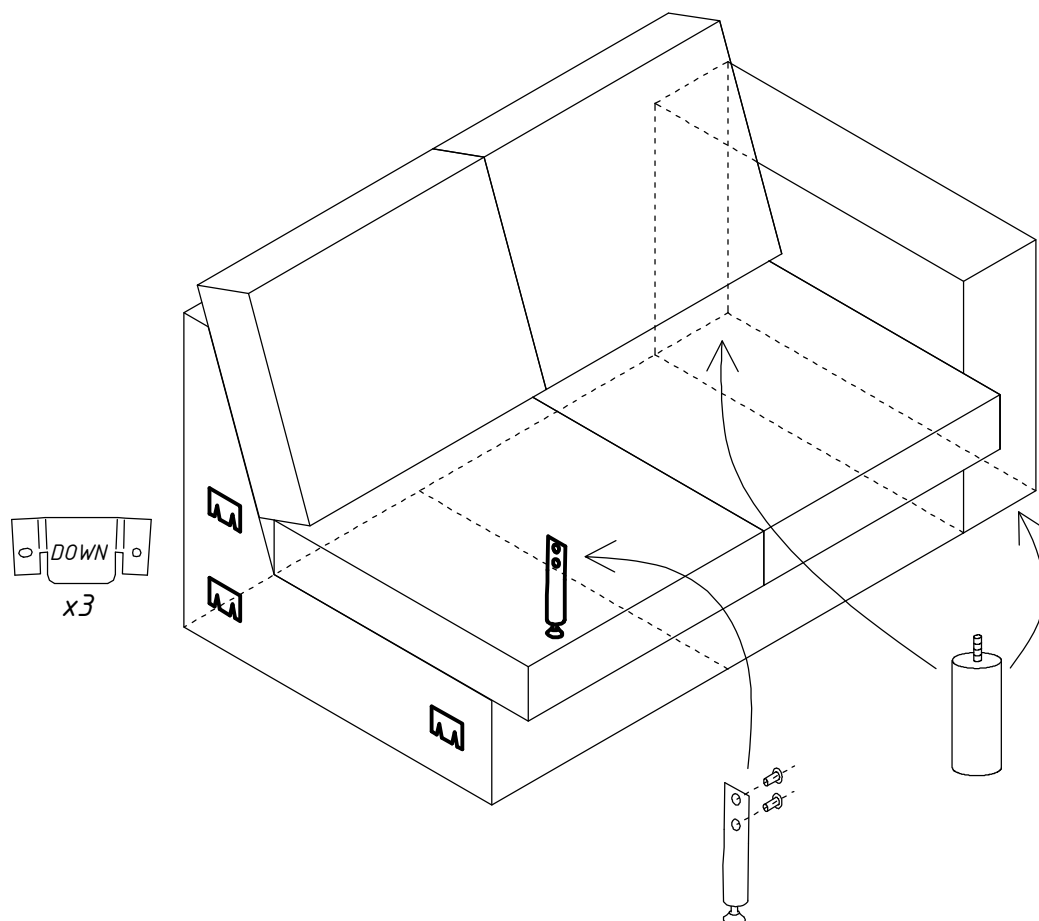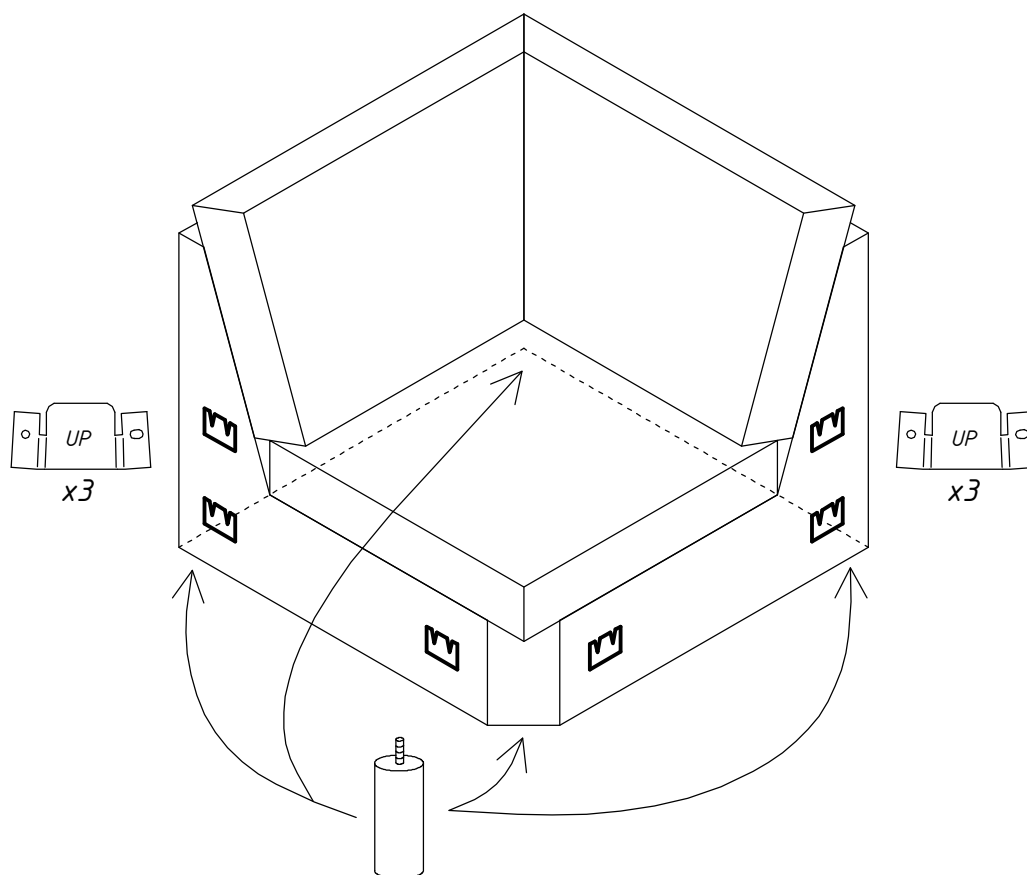




3rd B0



+



= NO⁴

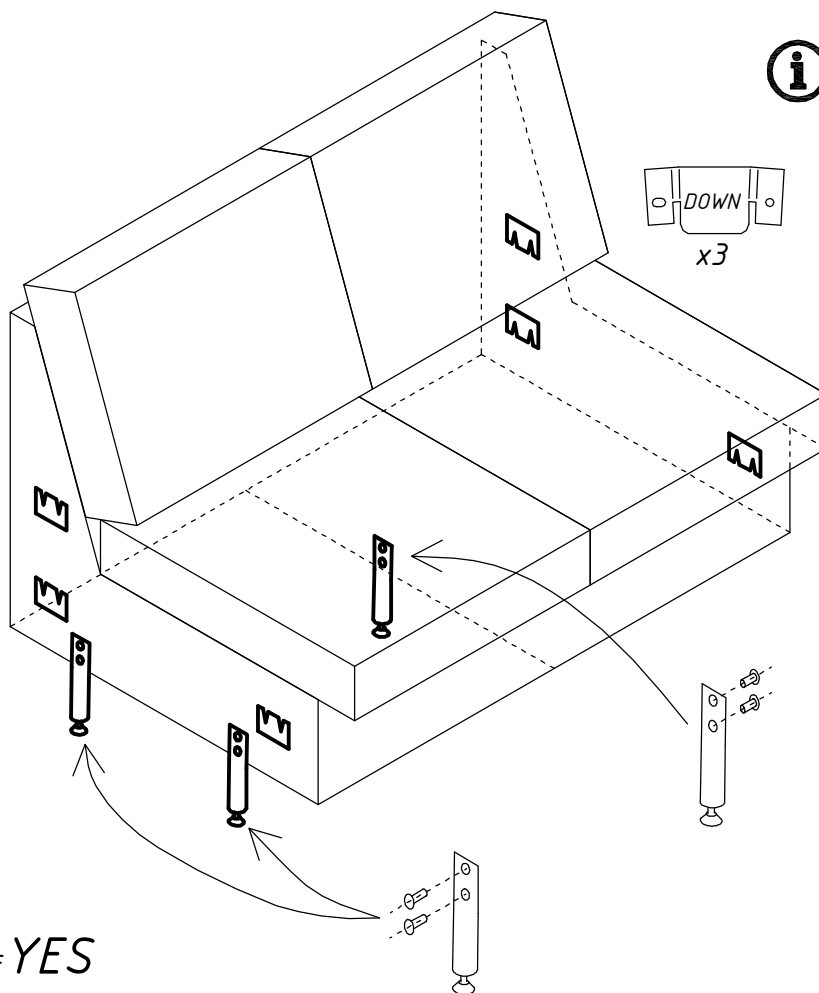



+



= YES


4th UV

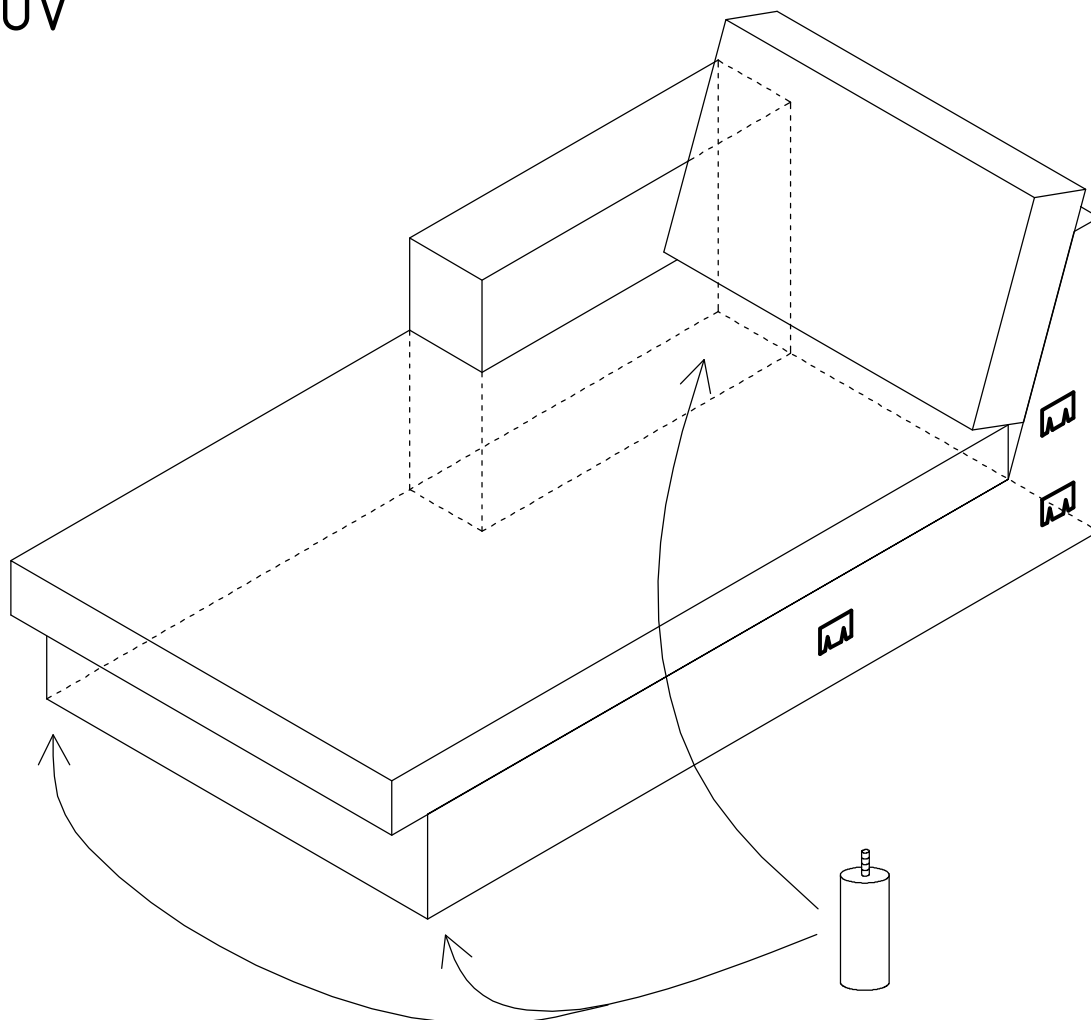








Assembly instruction SCANDIA

UV-B0-HJXH

1

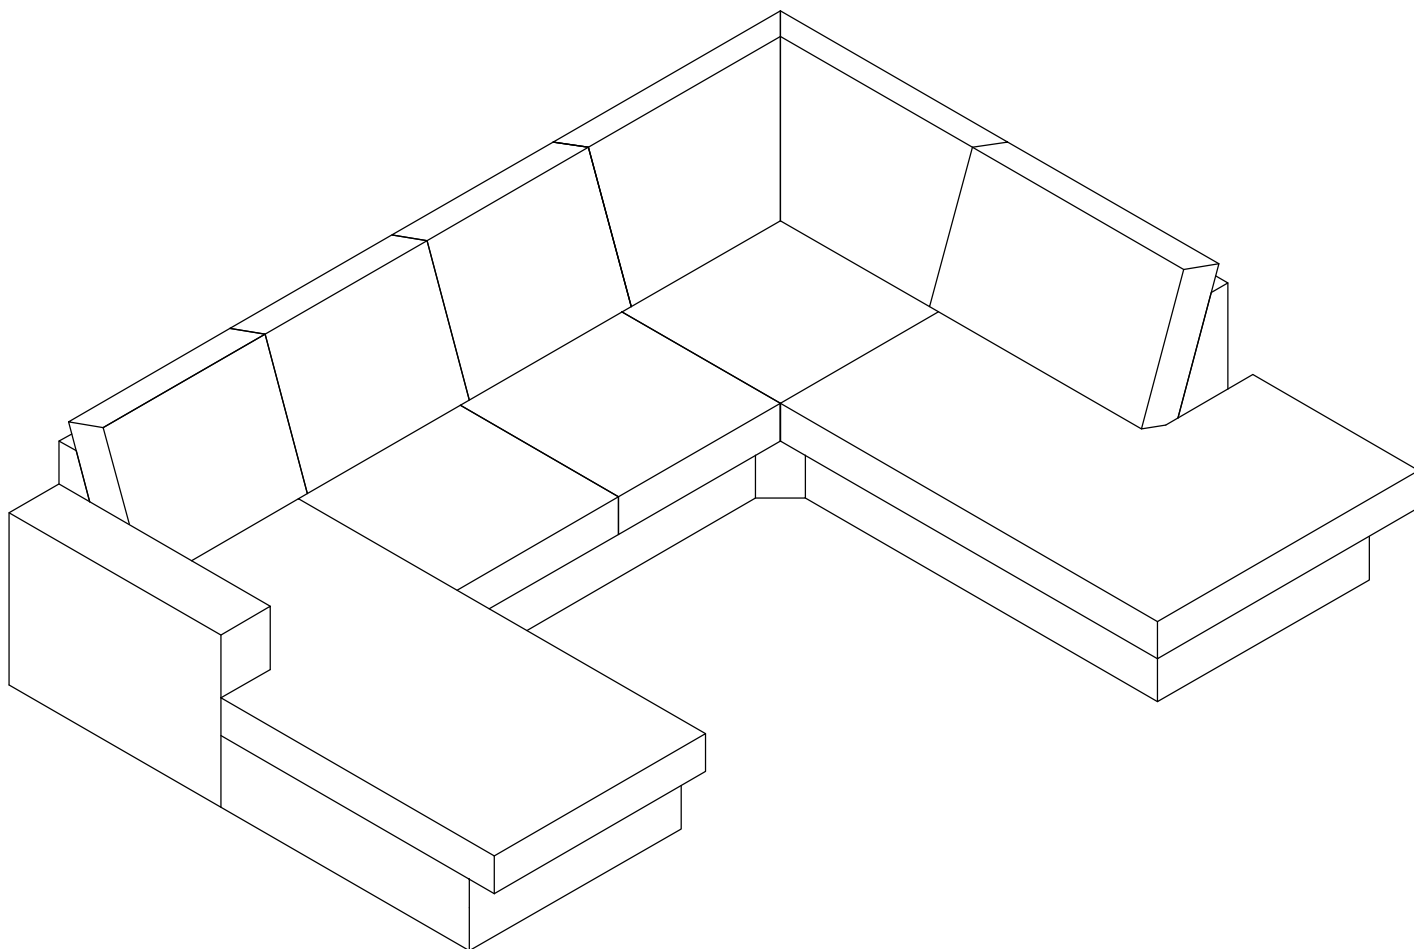


Module	Leg	Support leg
UV / UH	x 3	-
B0	-	x3
HJXH / XVHJ	x 5	-

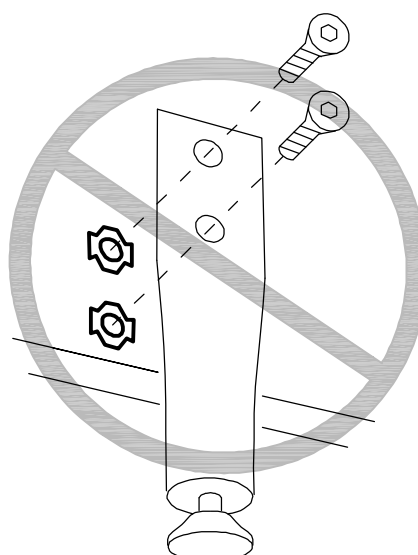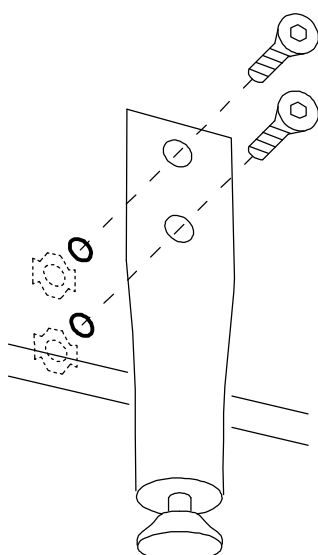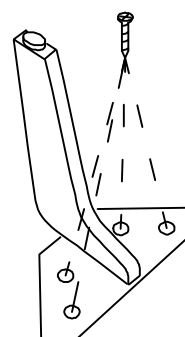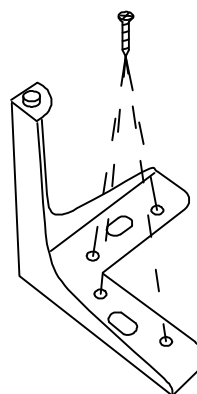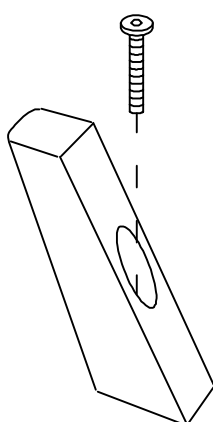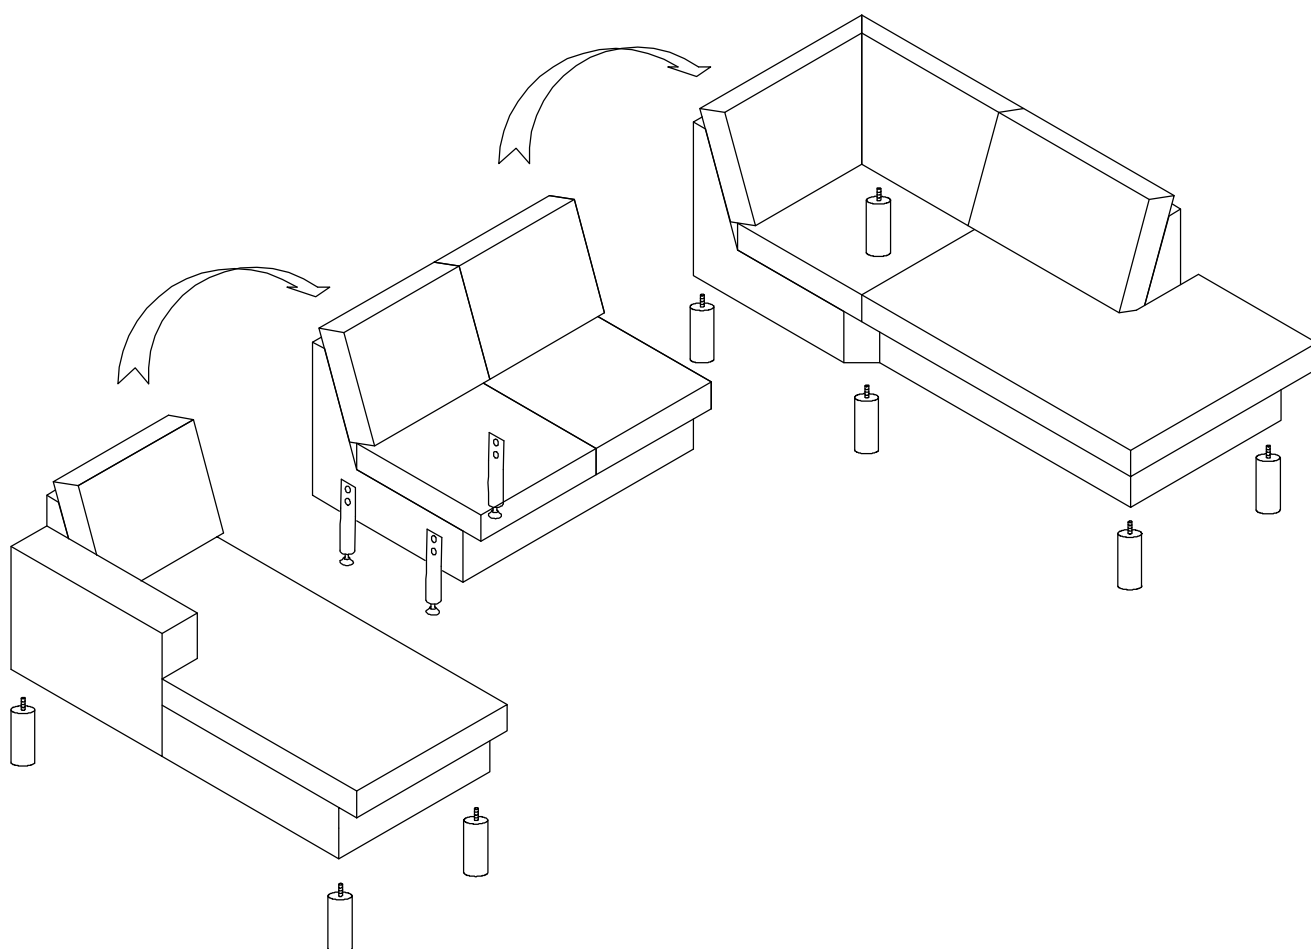



1st HJXH

3

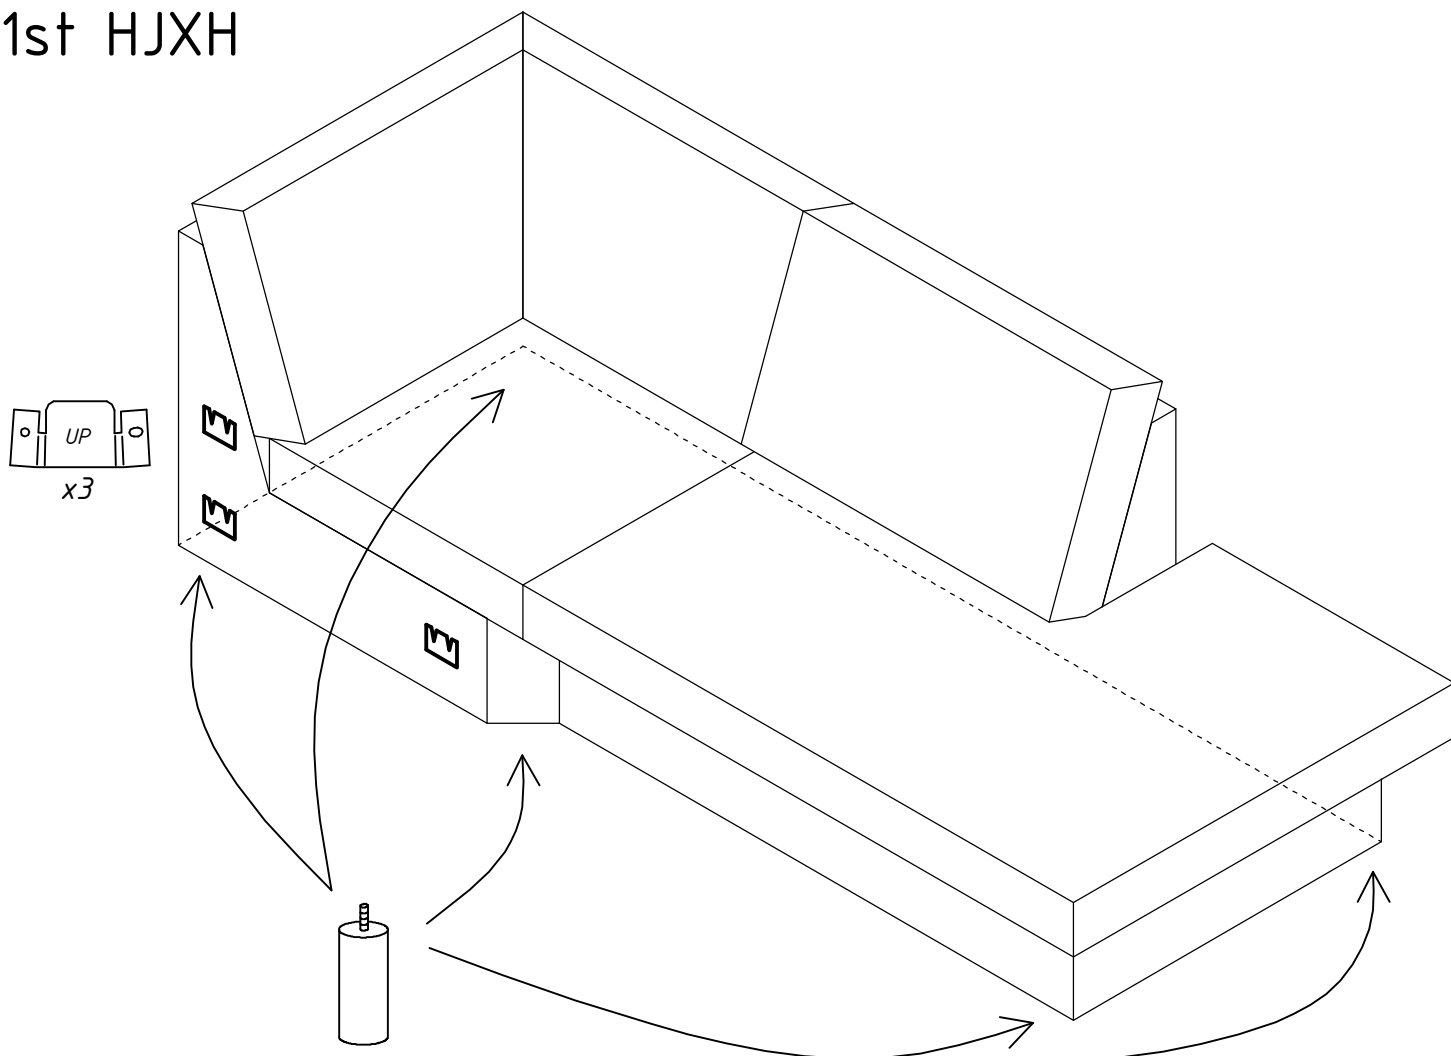

2nd B0

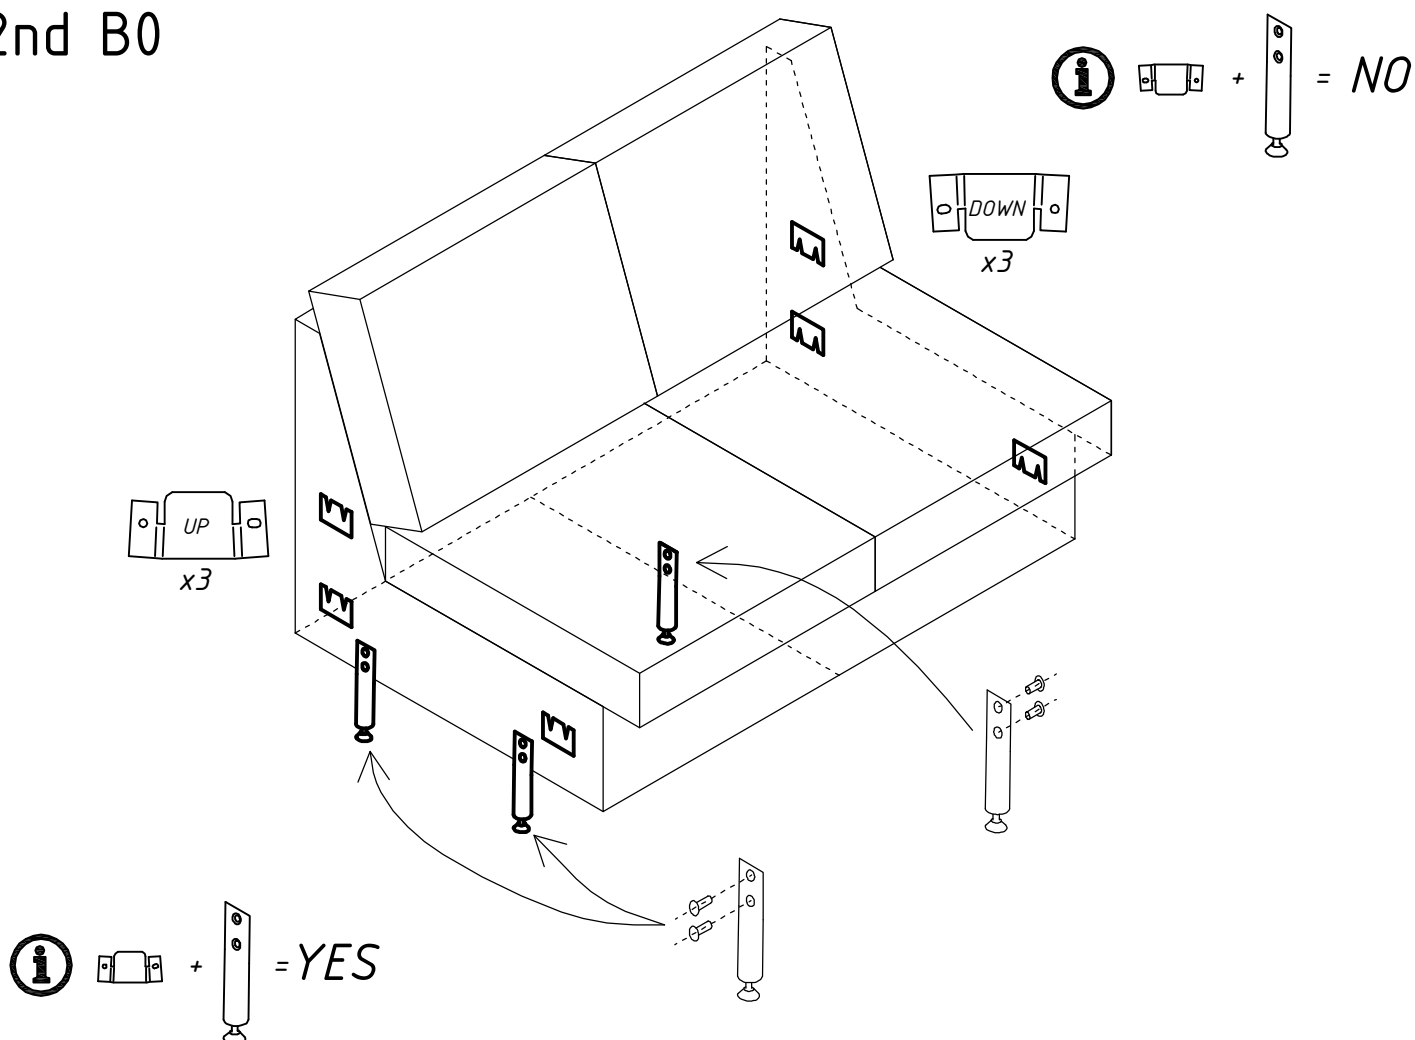


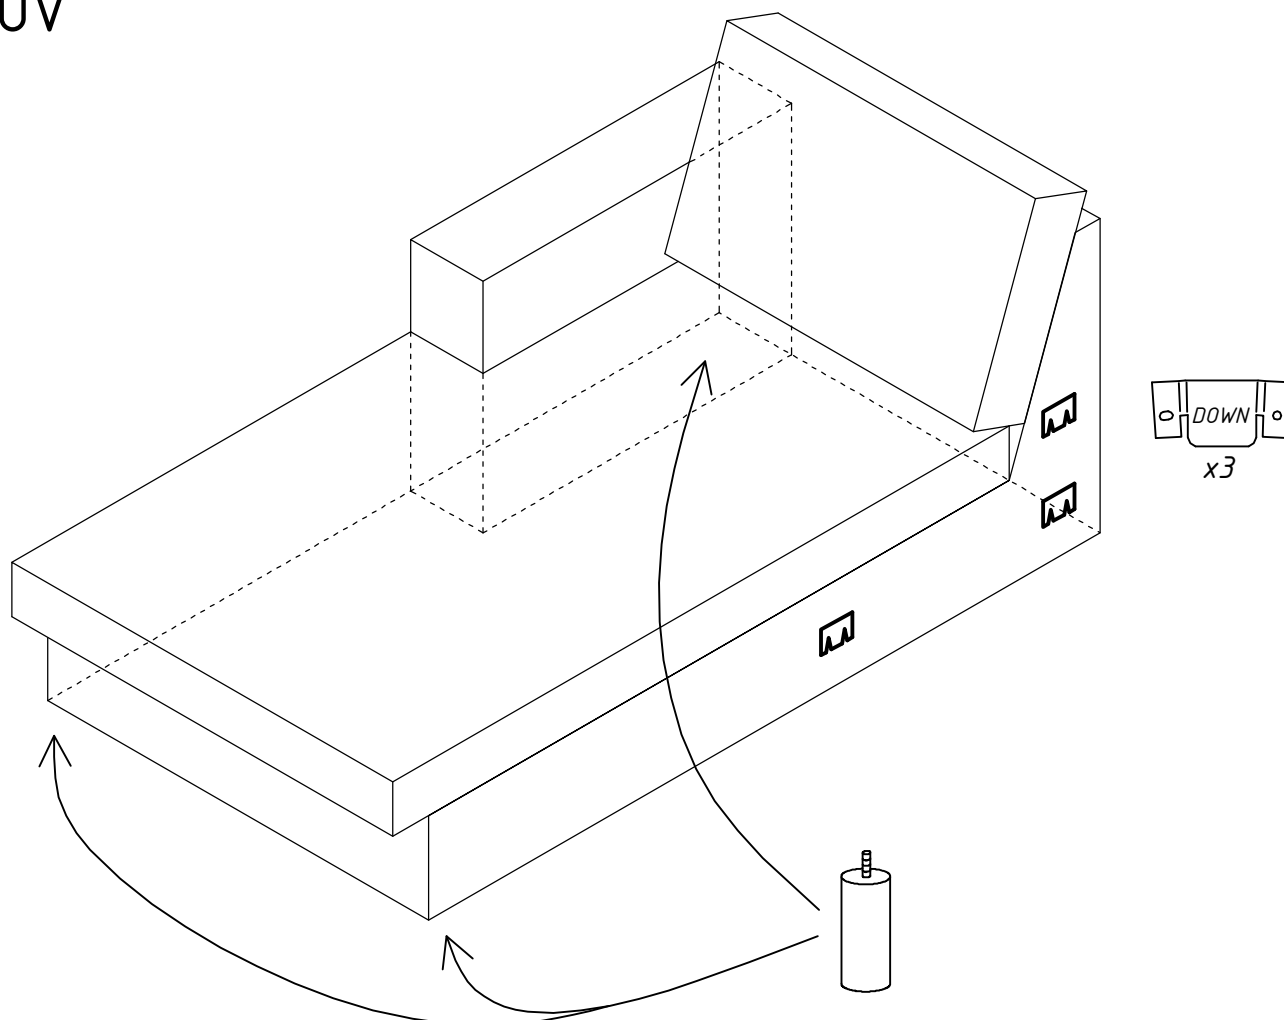








Assembly instruction SCANDIA



UV-B0-HJ-XH

1

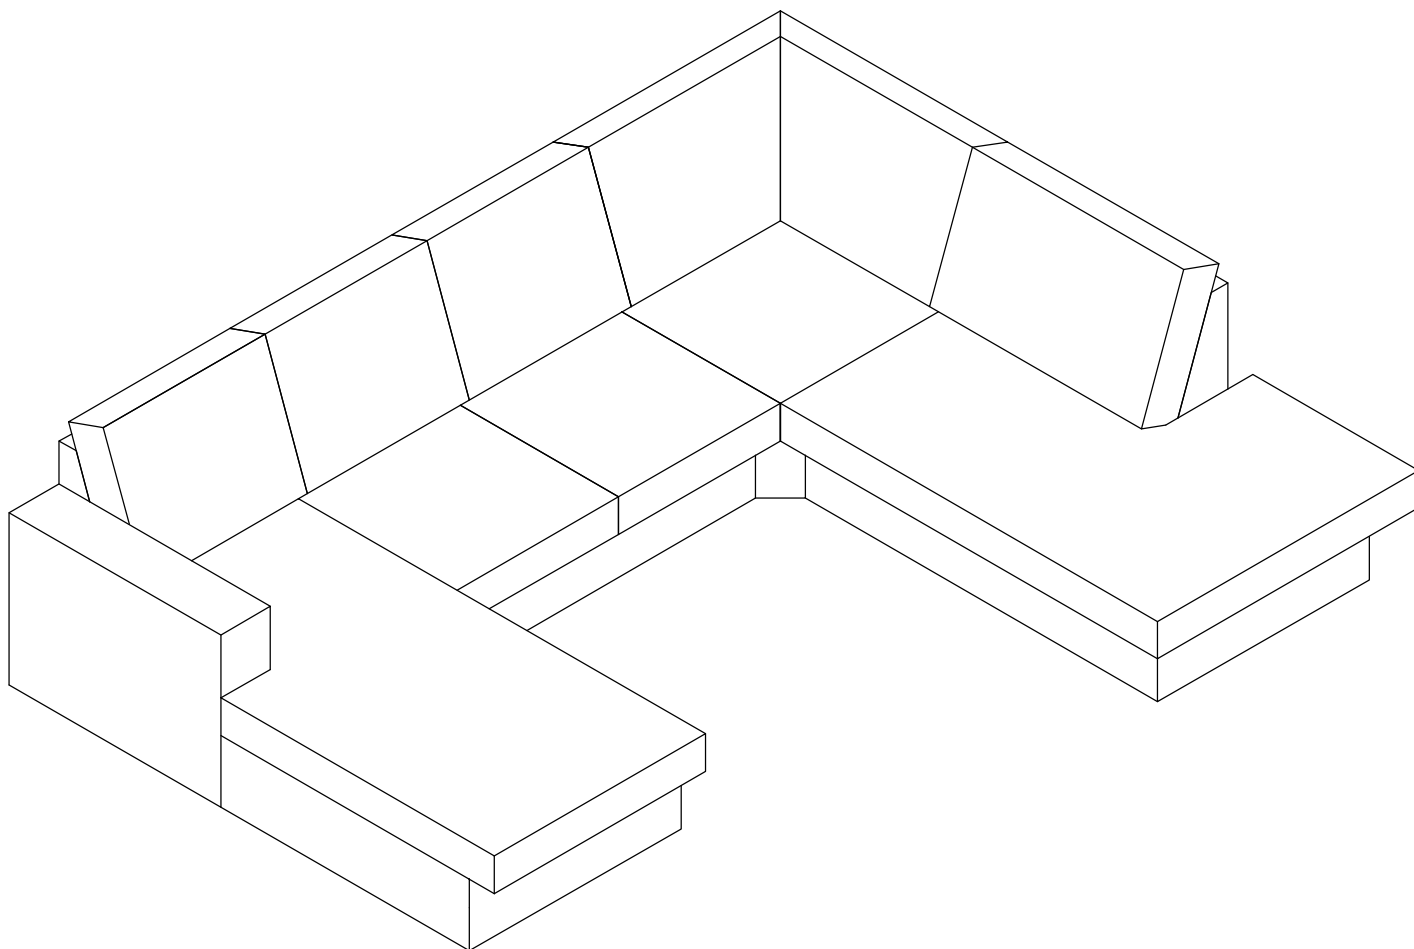

Module	Leg	Support leg
UV / UH	x 3	-
B0	-	x3
HJ	x 4	-
XH	x 2	-

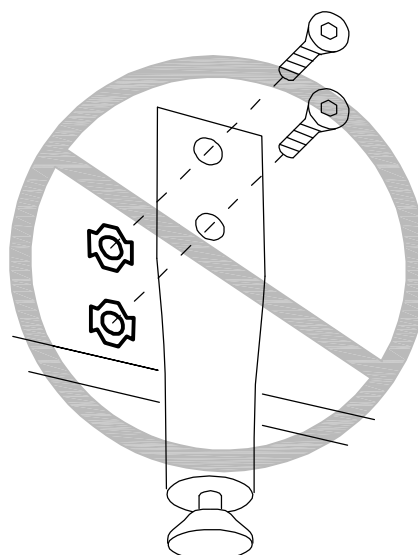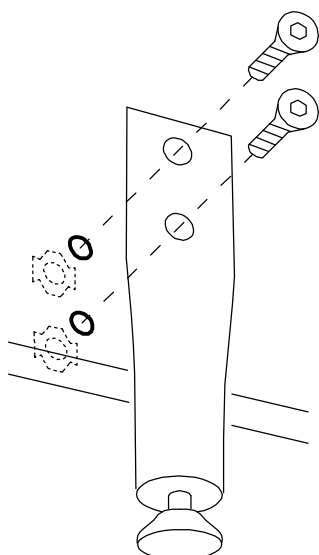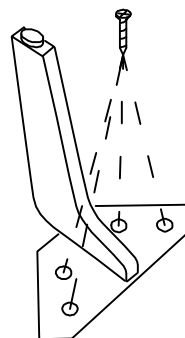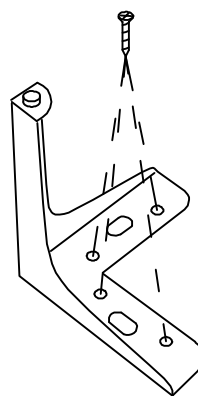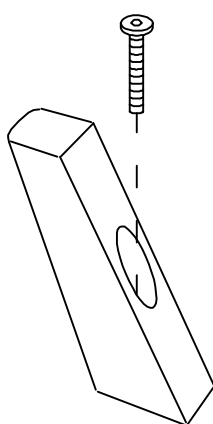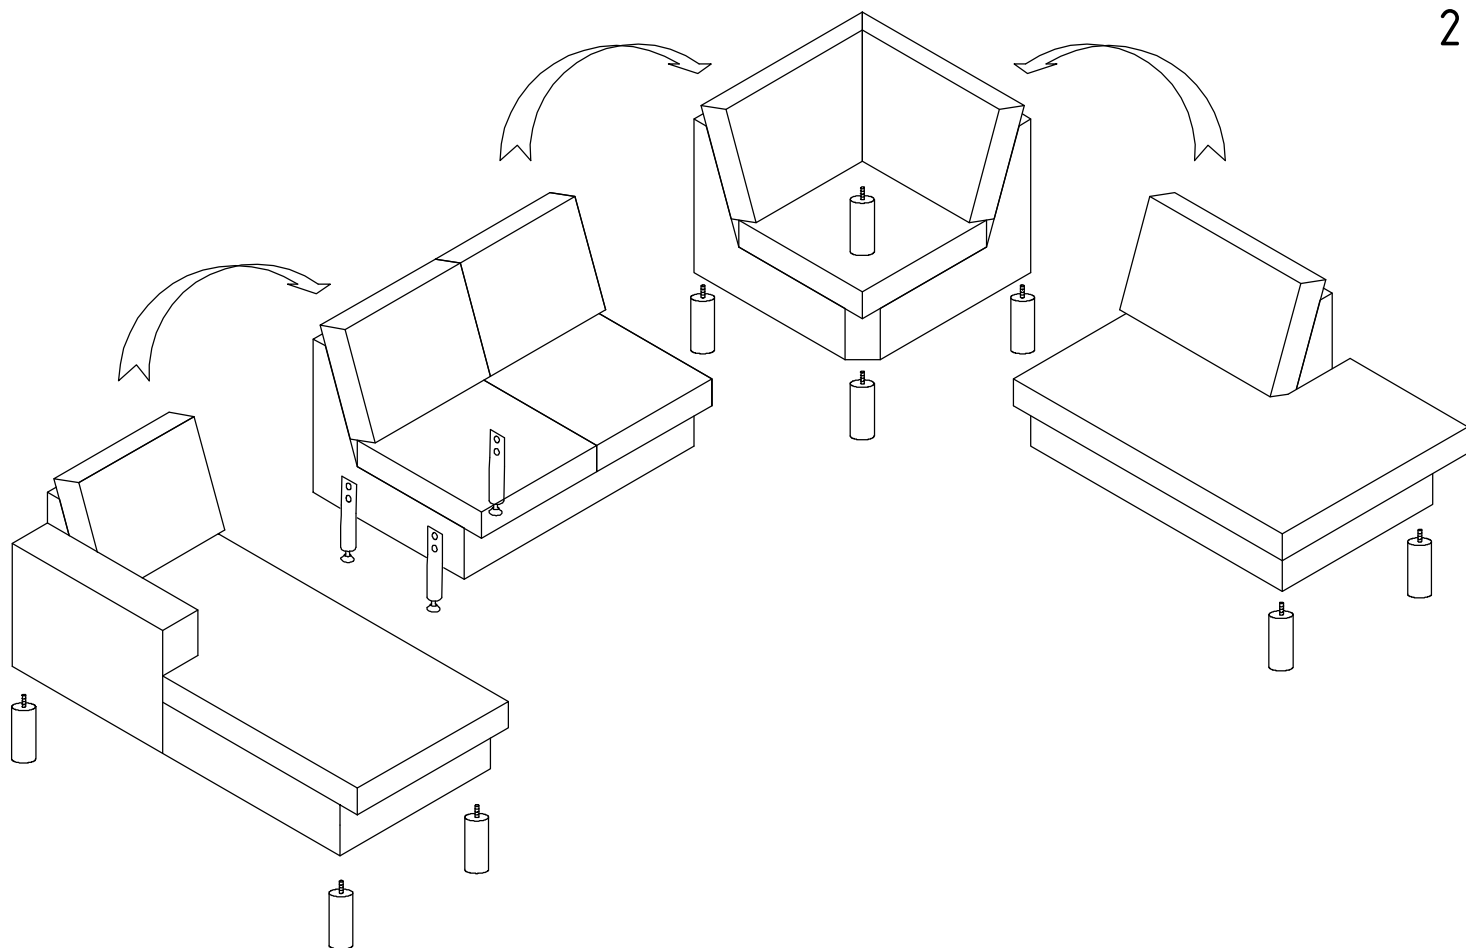

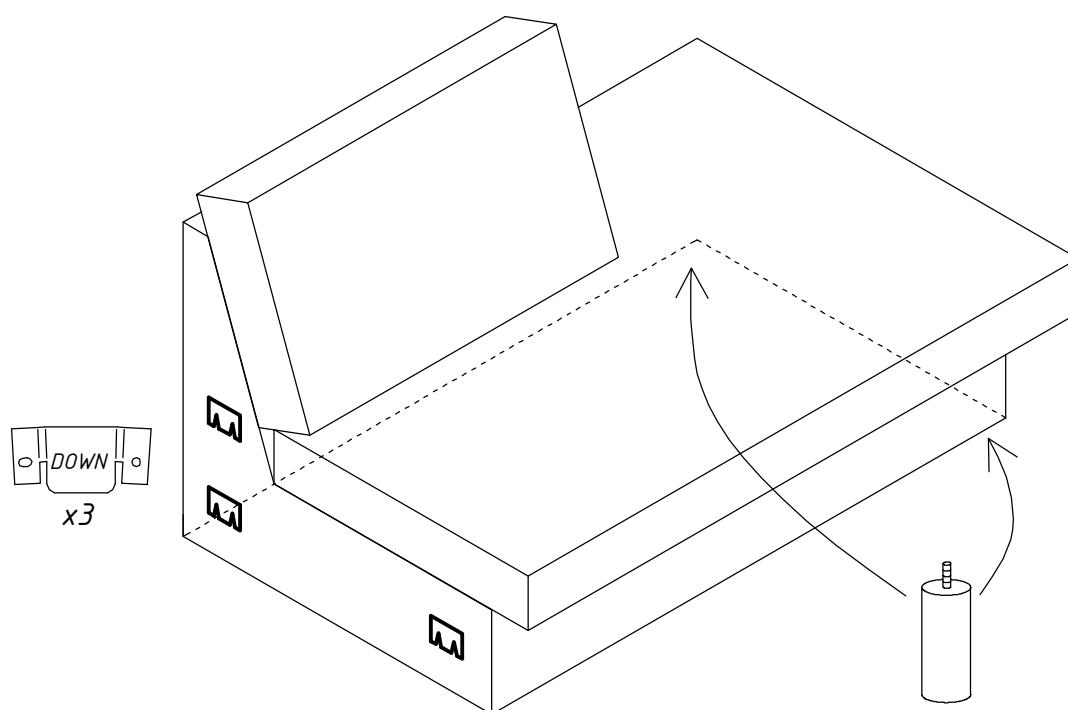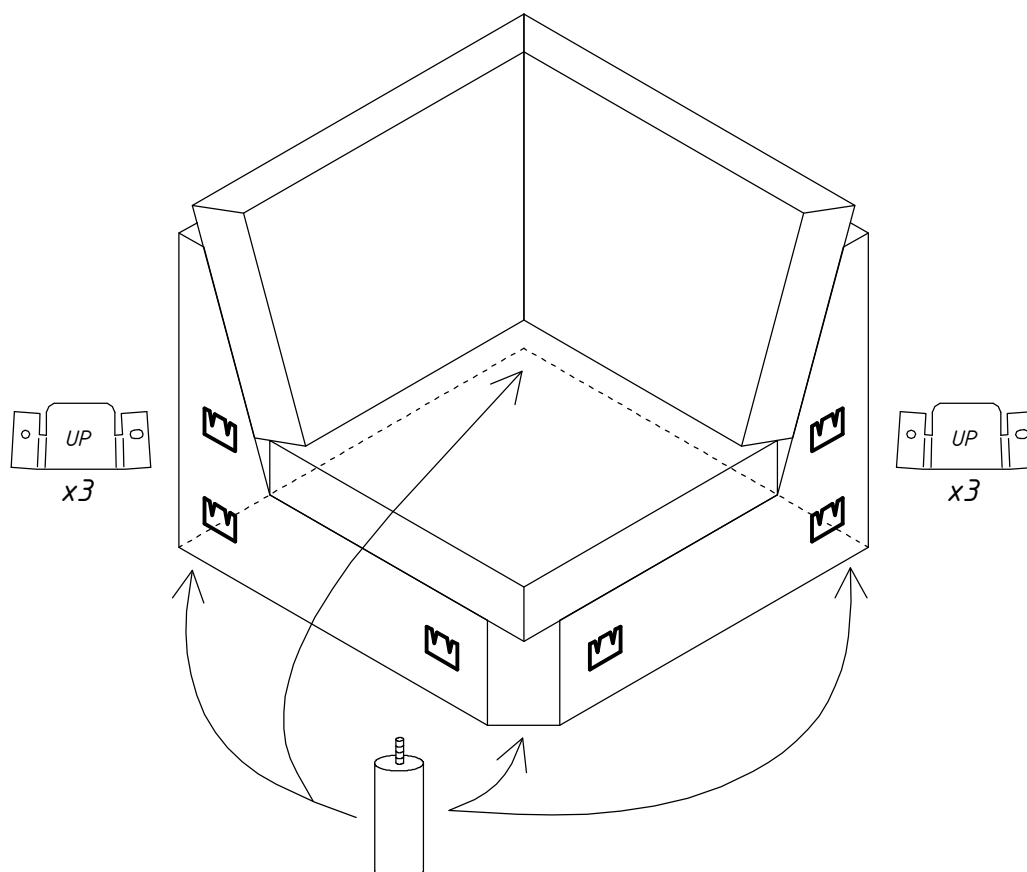




3rd B0



+



= NO⁴

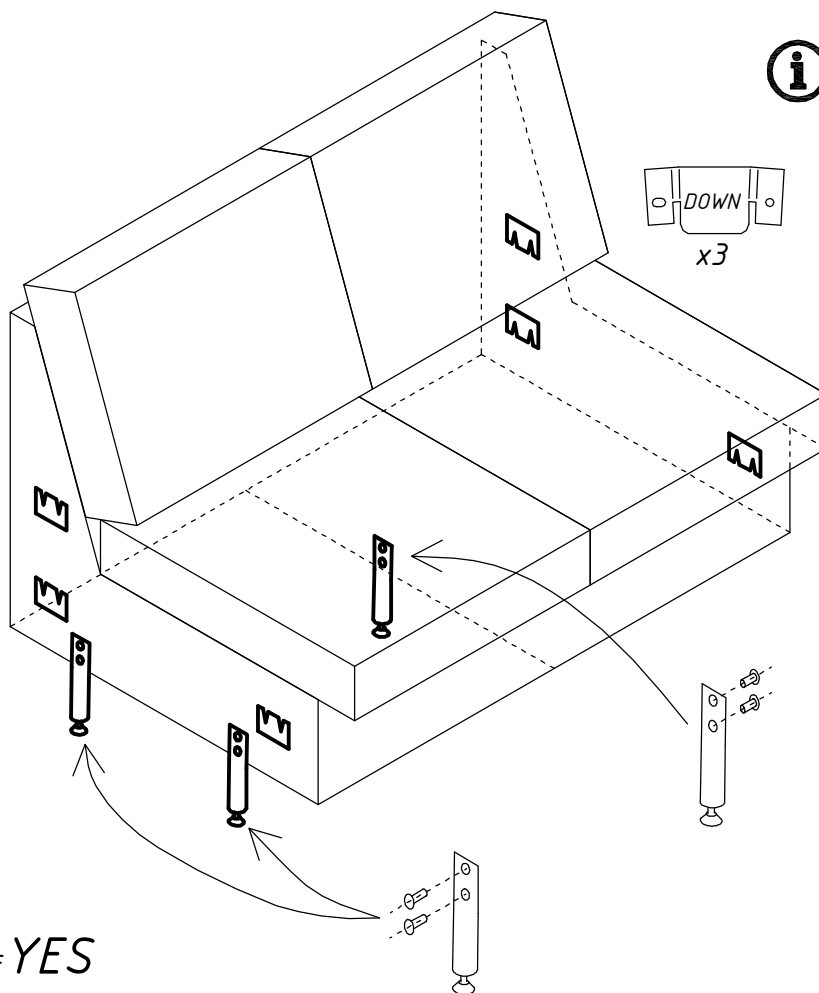

+



= YES

4th UV

