


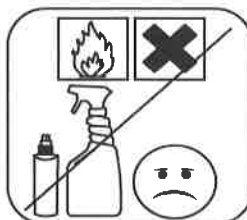
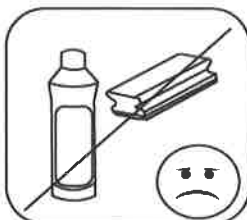
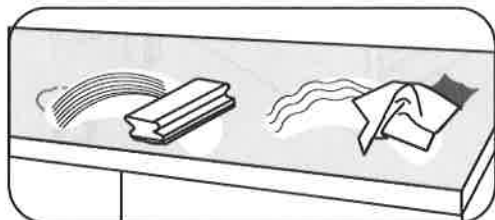
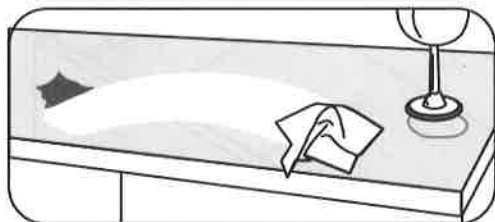
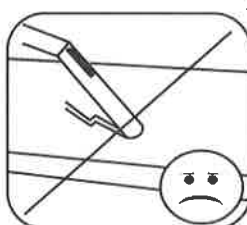
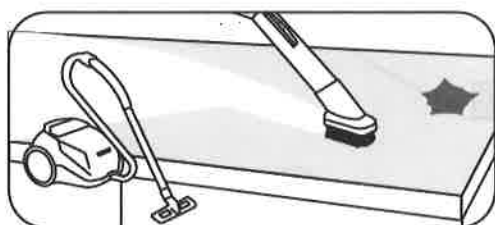
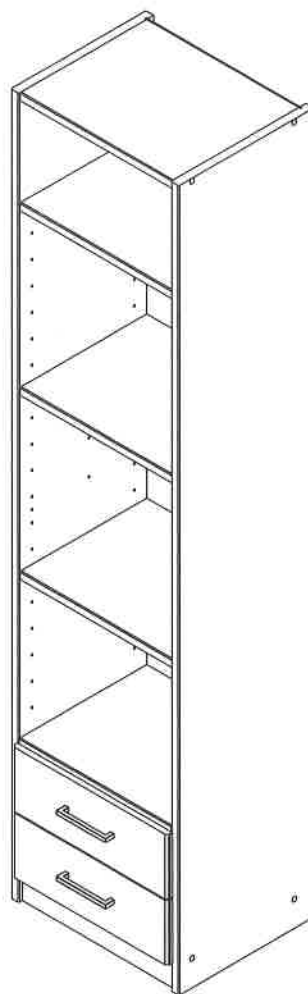
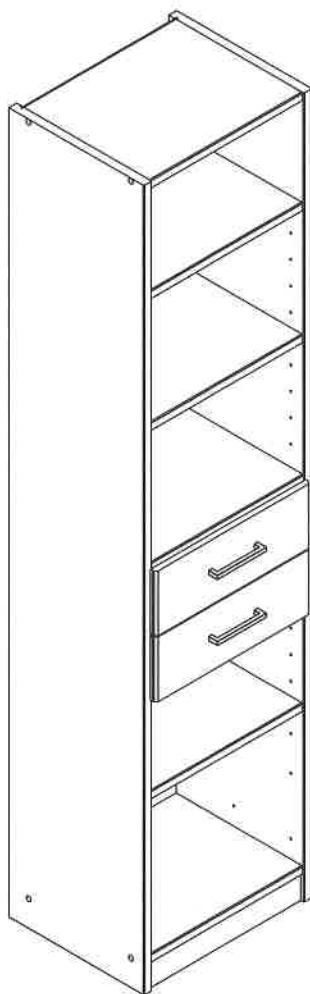





MONTAGEANLEITUNG
INSTRUCTIONS DE MONTAGE
ASSEMBLY INSTRUCTIONS
MONTAGEAANWIJZING

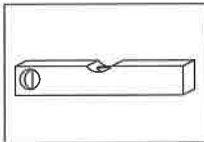


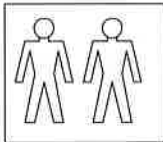


102	8		
111	2		
122	2		
181	12		
190	8		Ø8 x 30 mm
193	4		Ø5 x 40 mm
204	2		
215	4		
220	4		
304	8		Ø6 x 10 mm
320	8		Ø6 x 50 mm
370	1		Ø4 x 15 mm
371	1		Ø6 x 60 mm
377	4		Ø4 x 25 mm
408	4		M4 x 9 mm
503	2	A+B	
511	2	C	
603	8		Ø 1,2 x 20 mm
741	1		Ø8 x 51 mm
742	1		

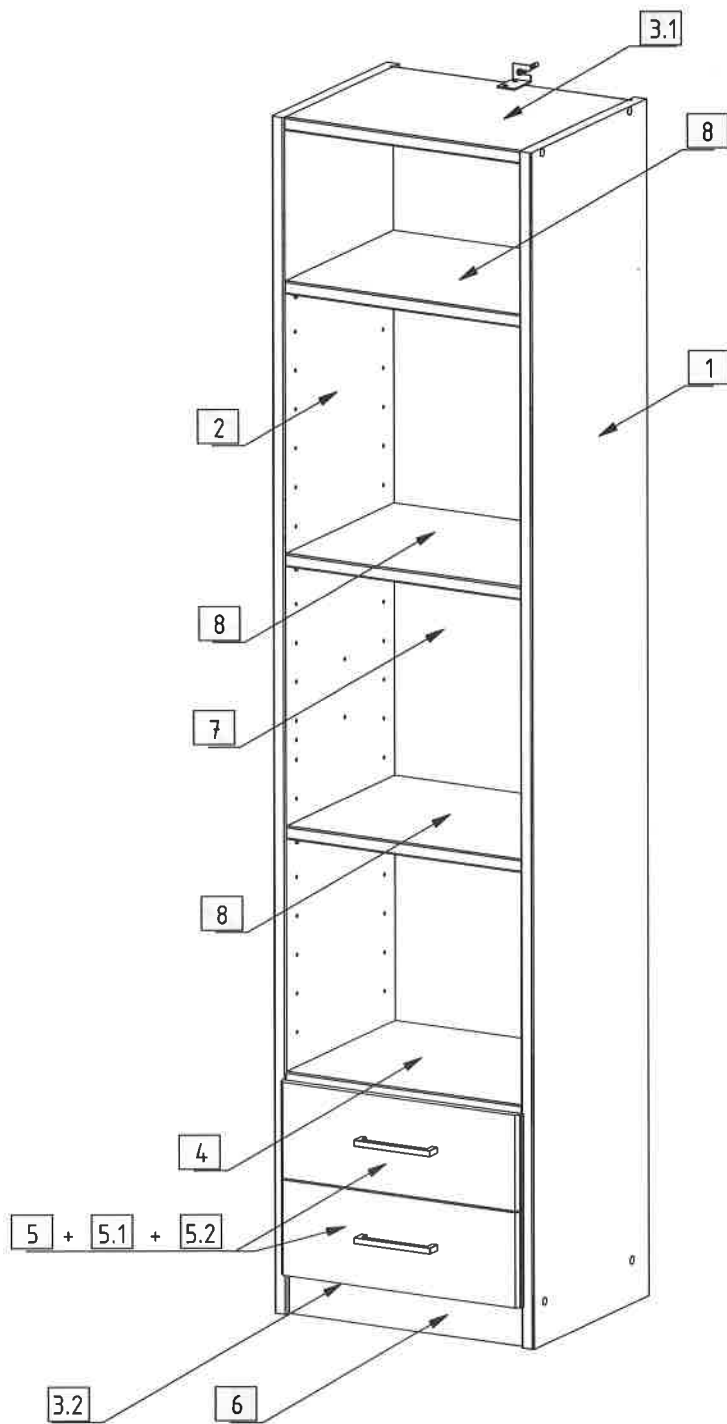

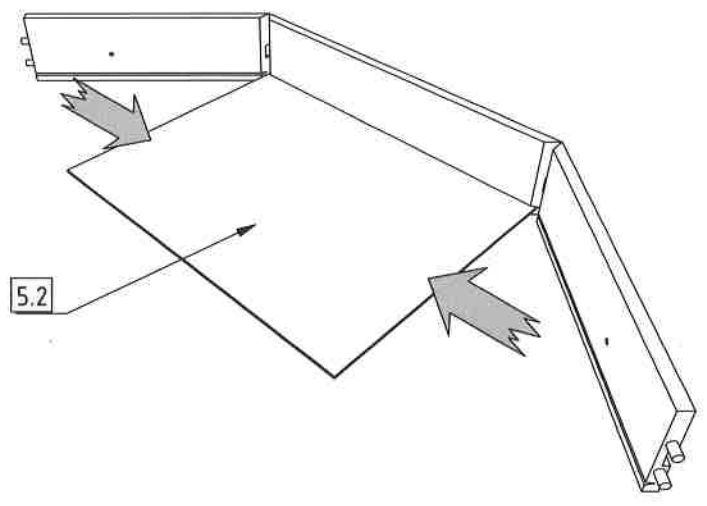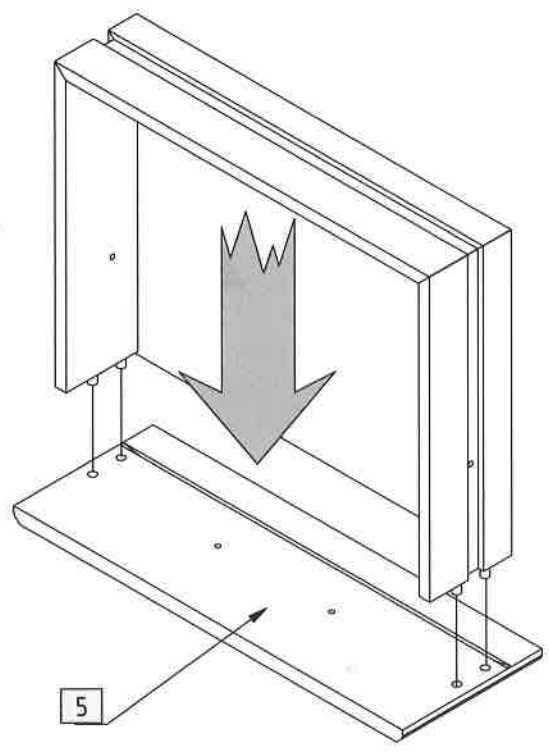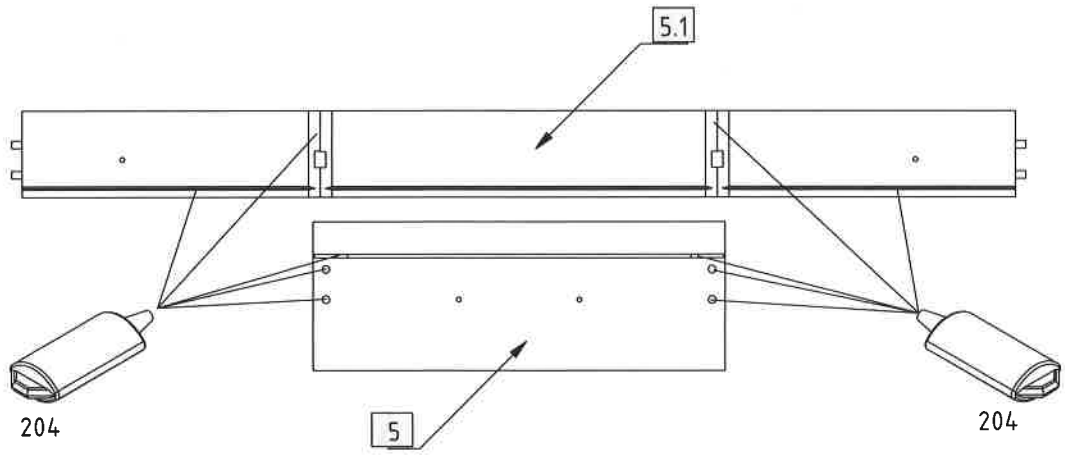


A


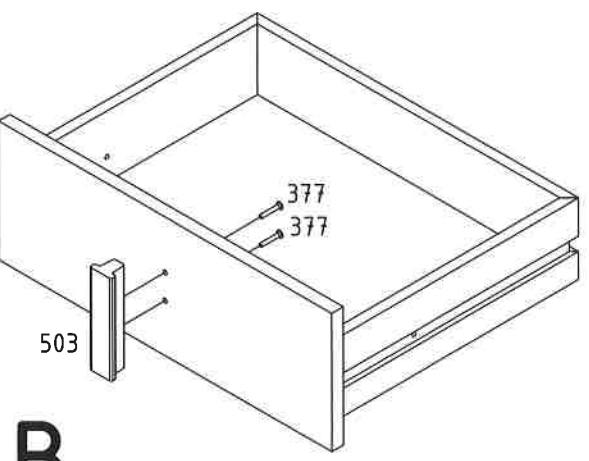
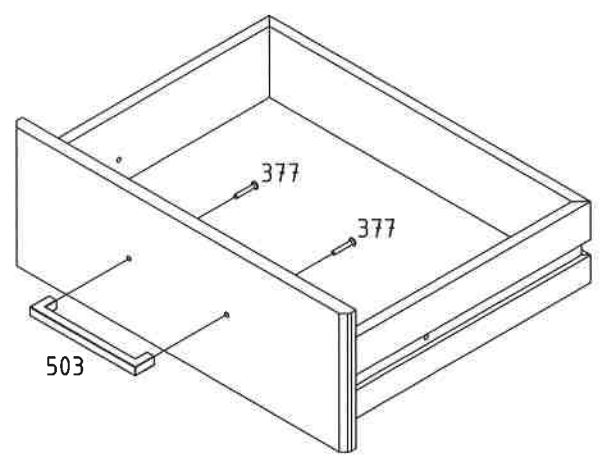



B



C


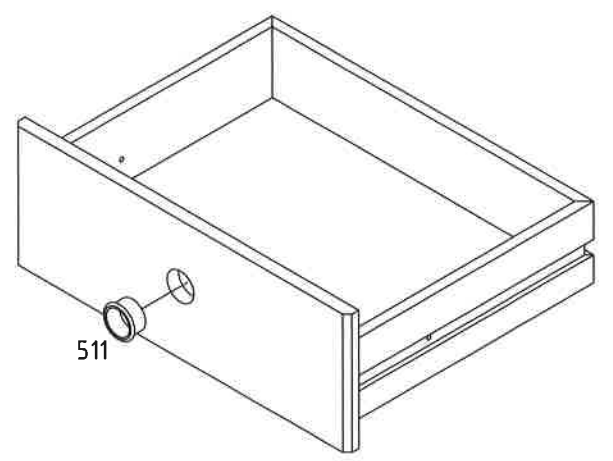




511

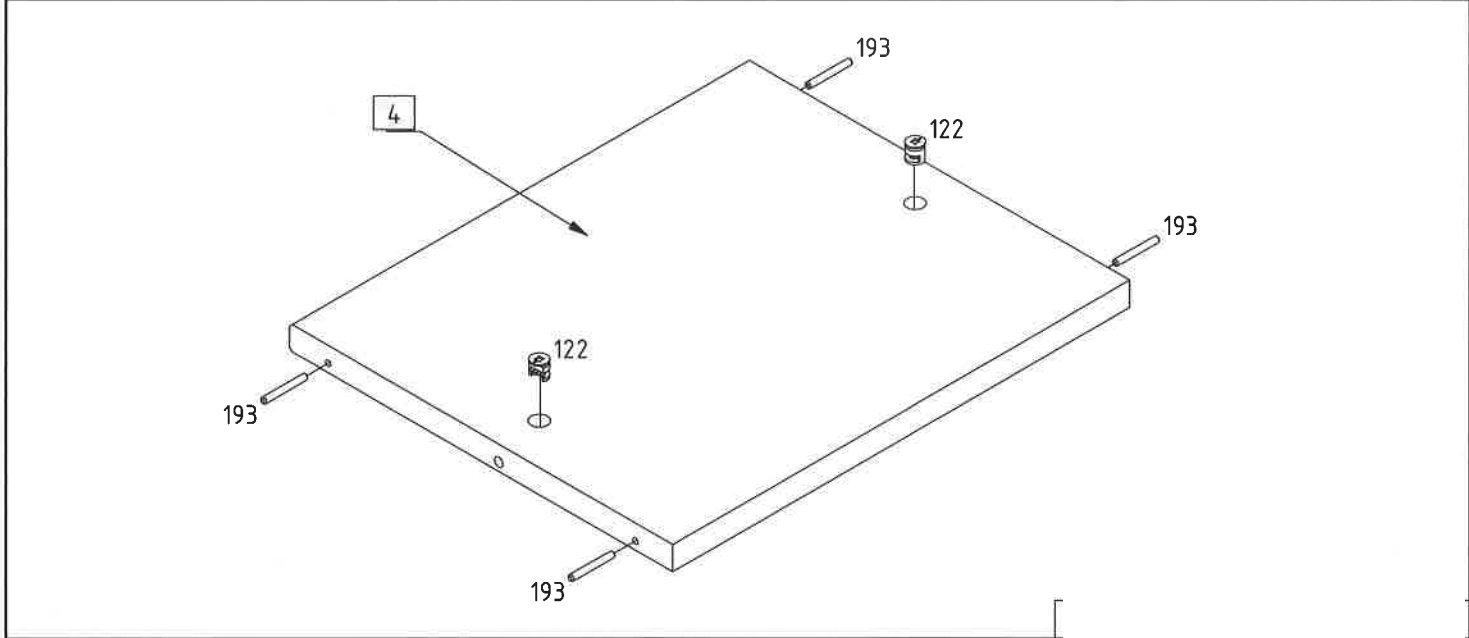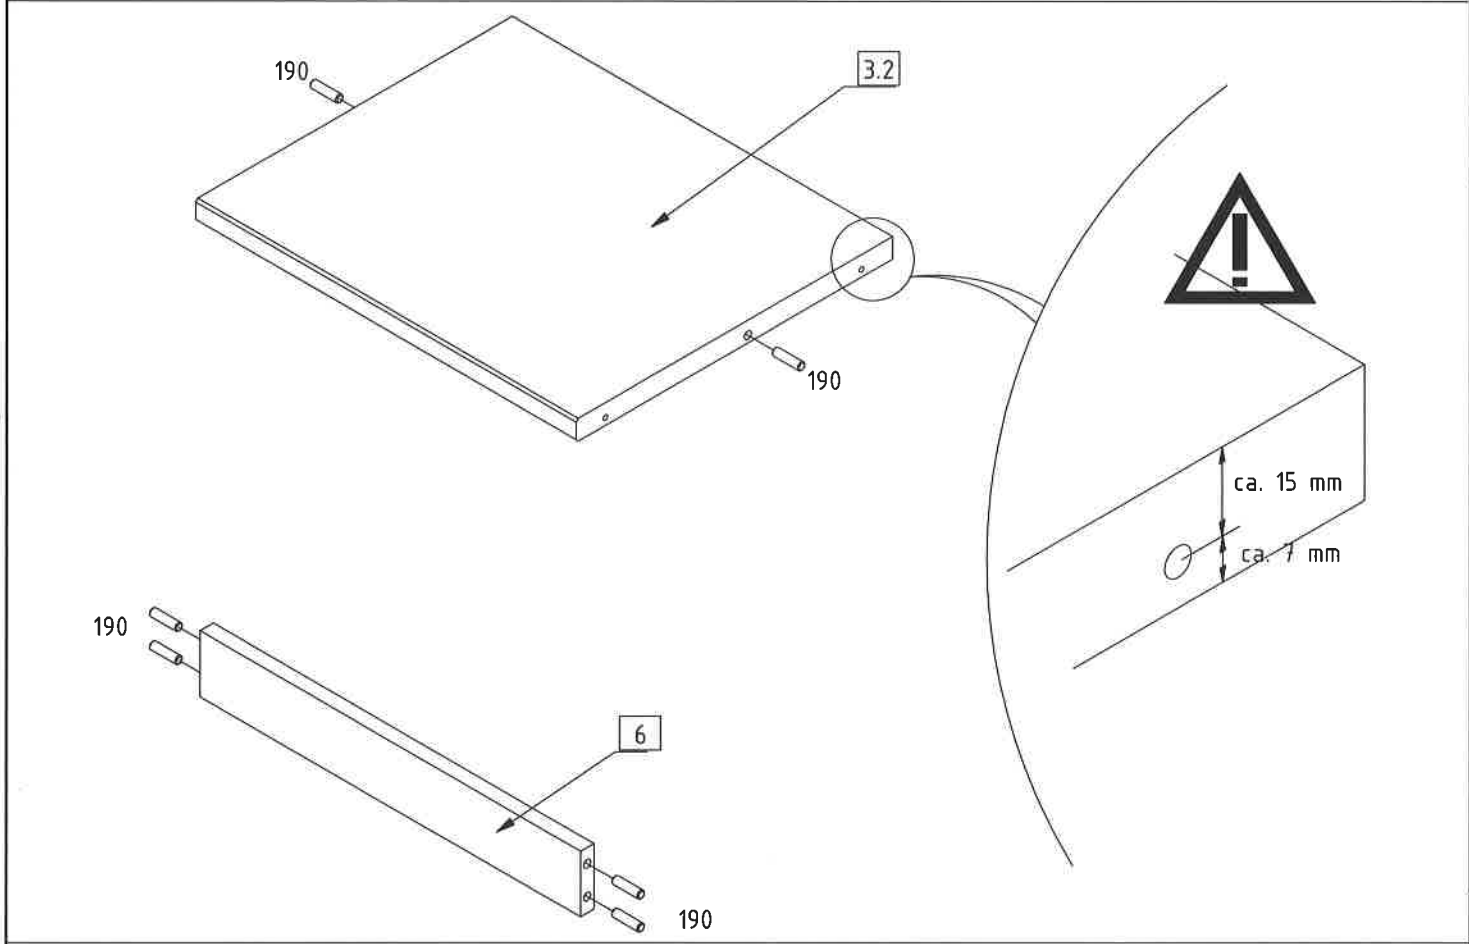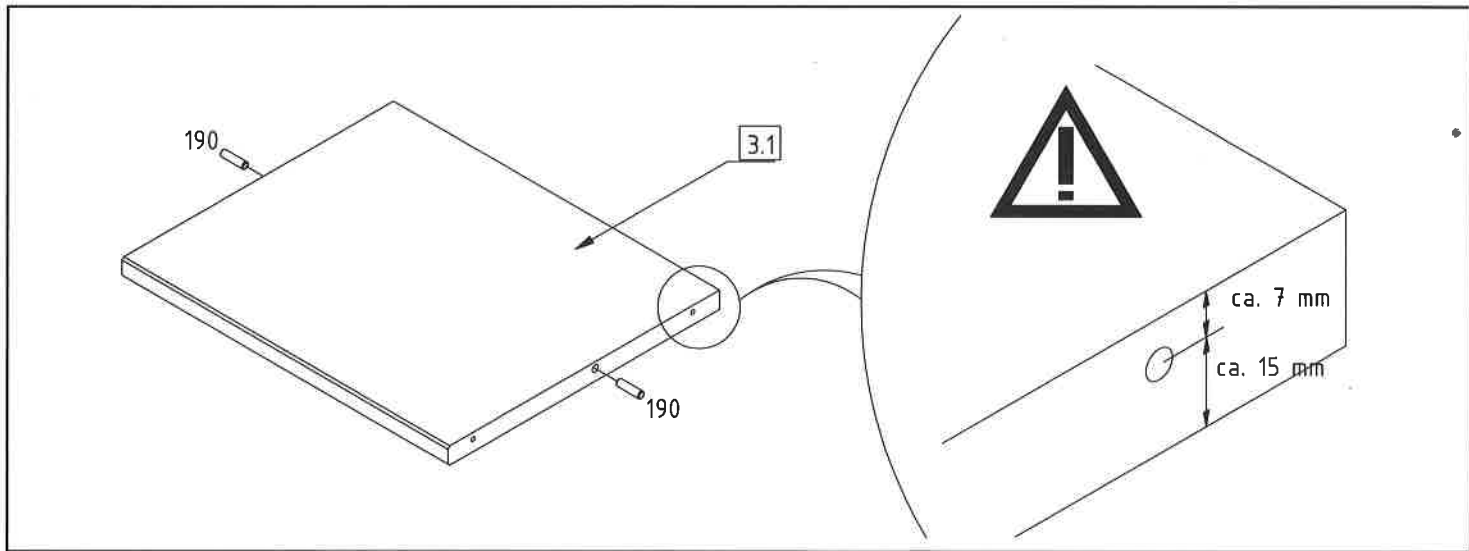


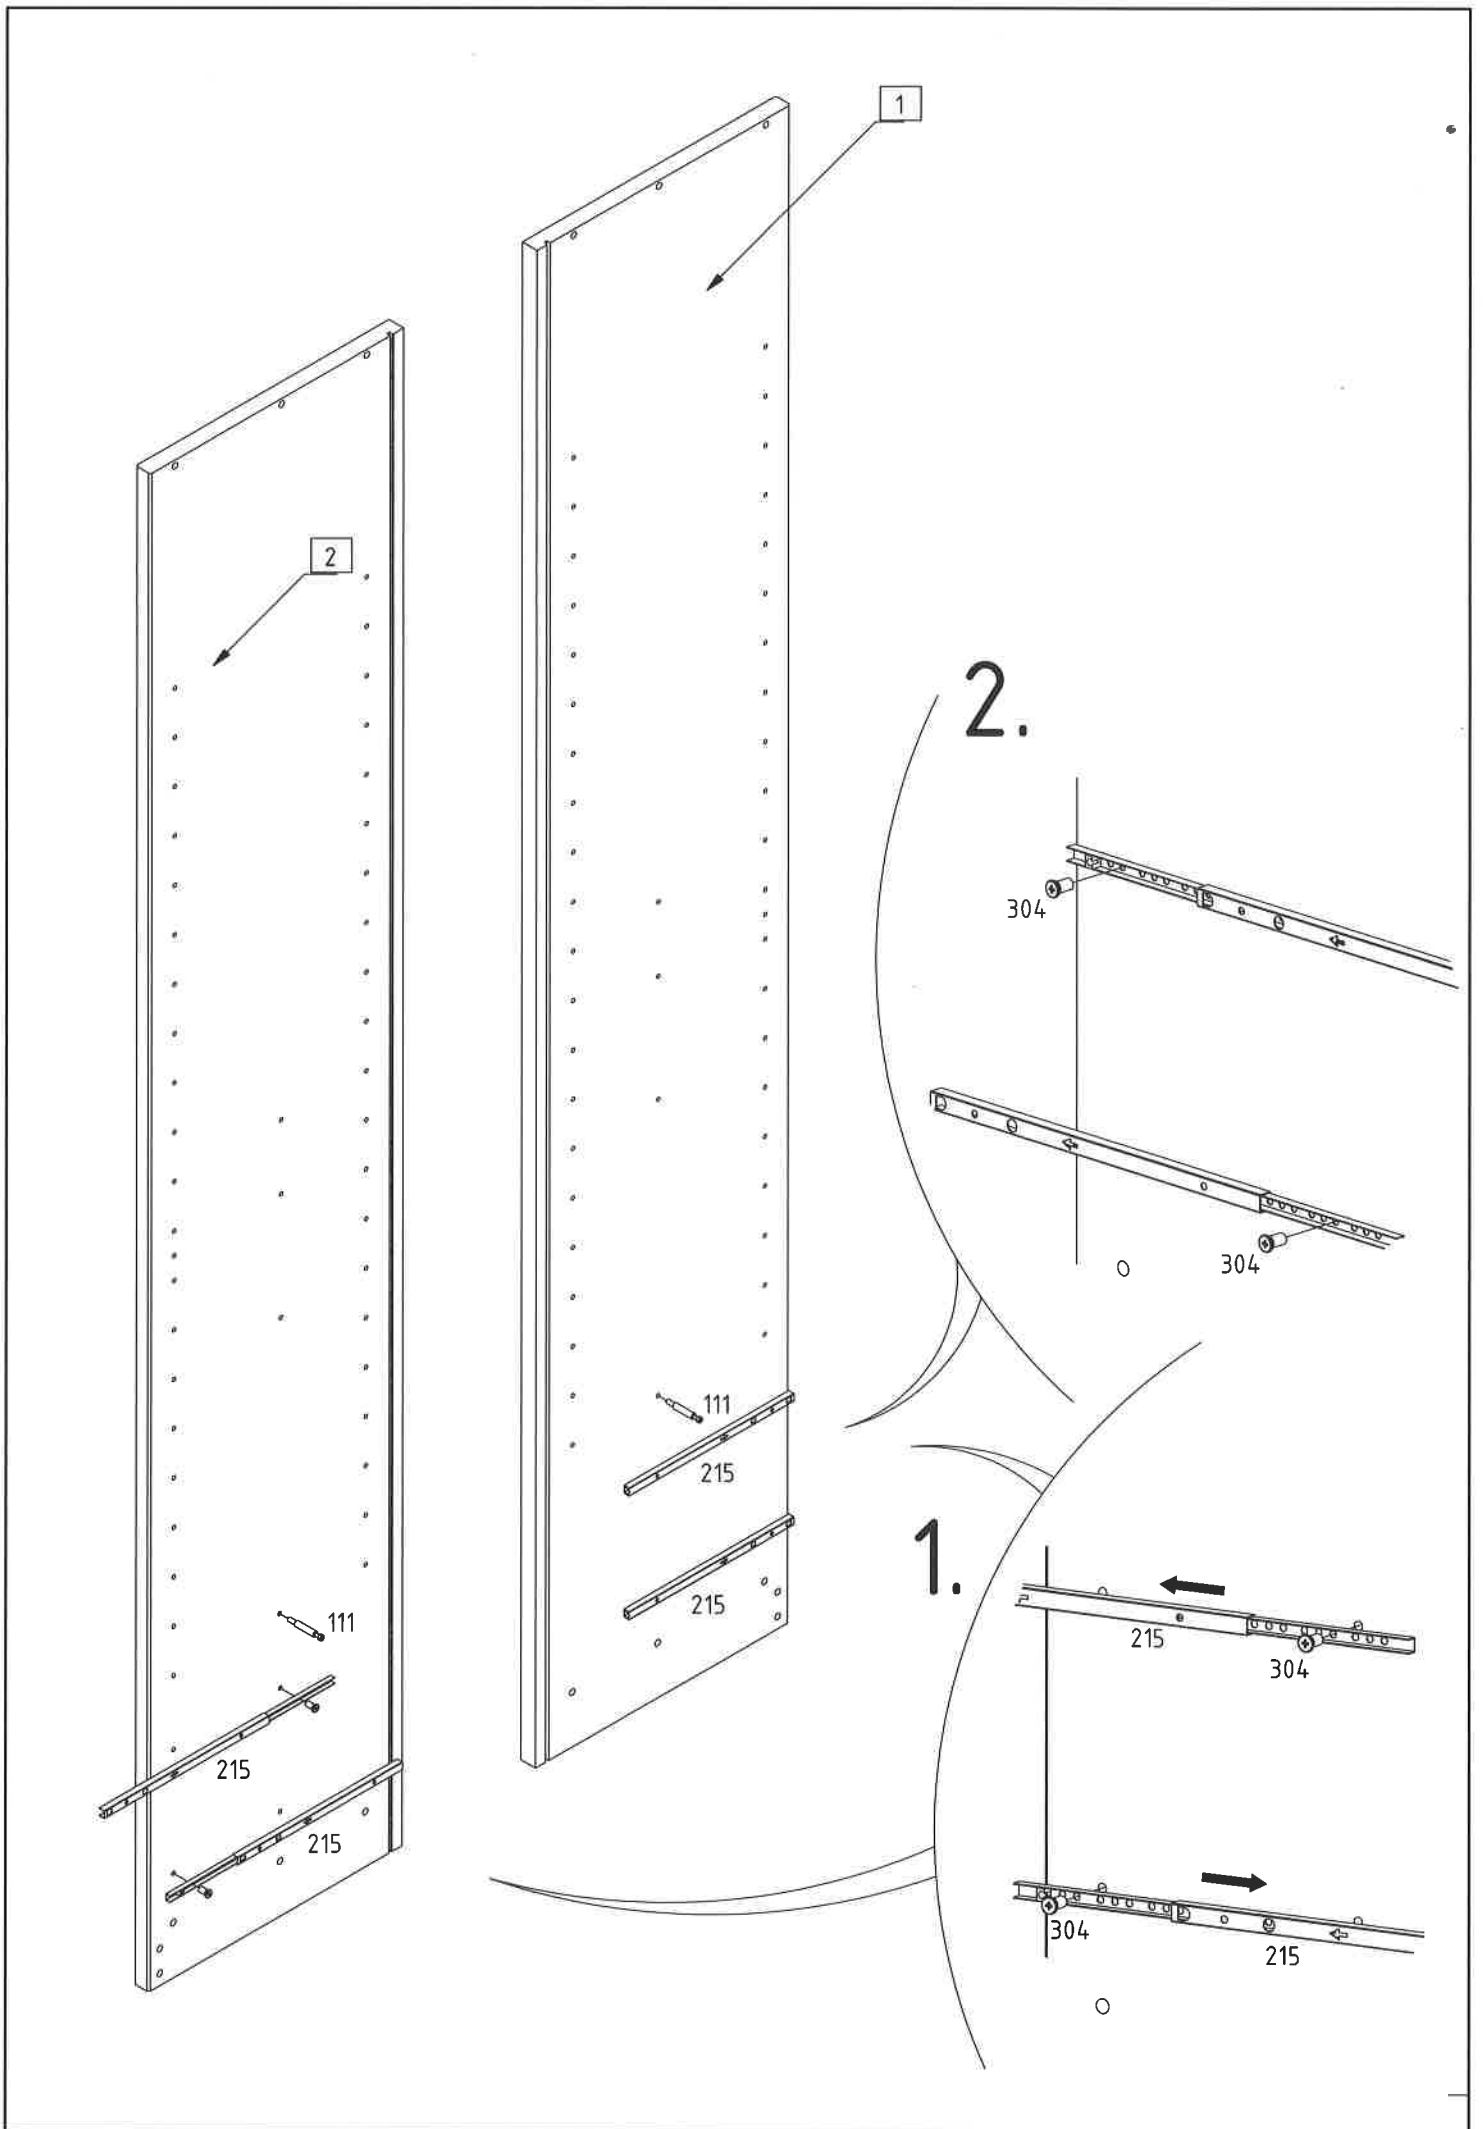

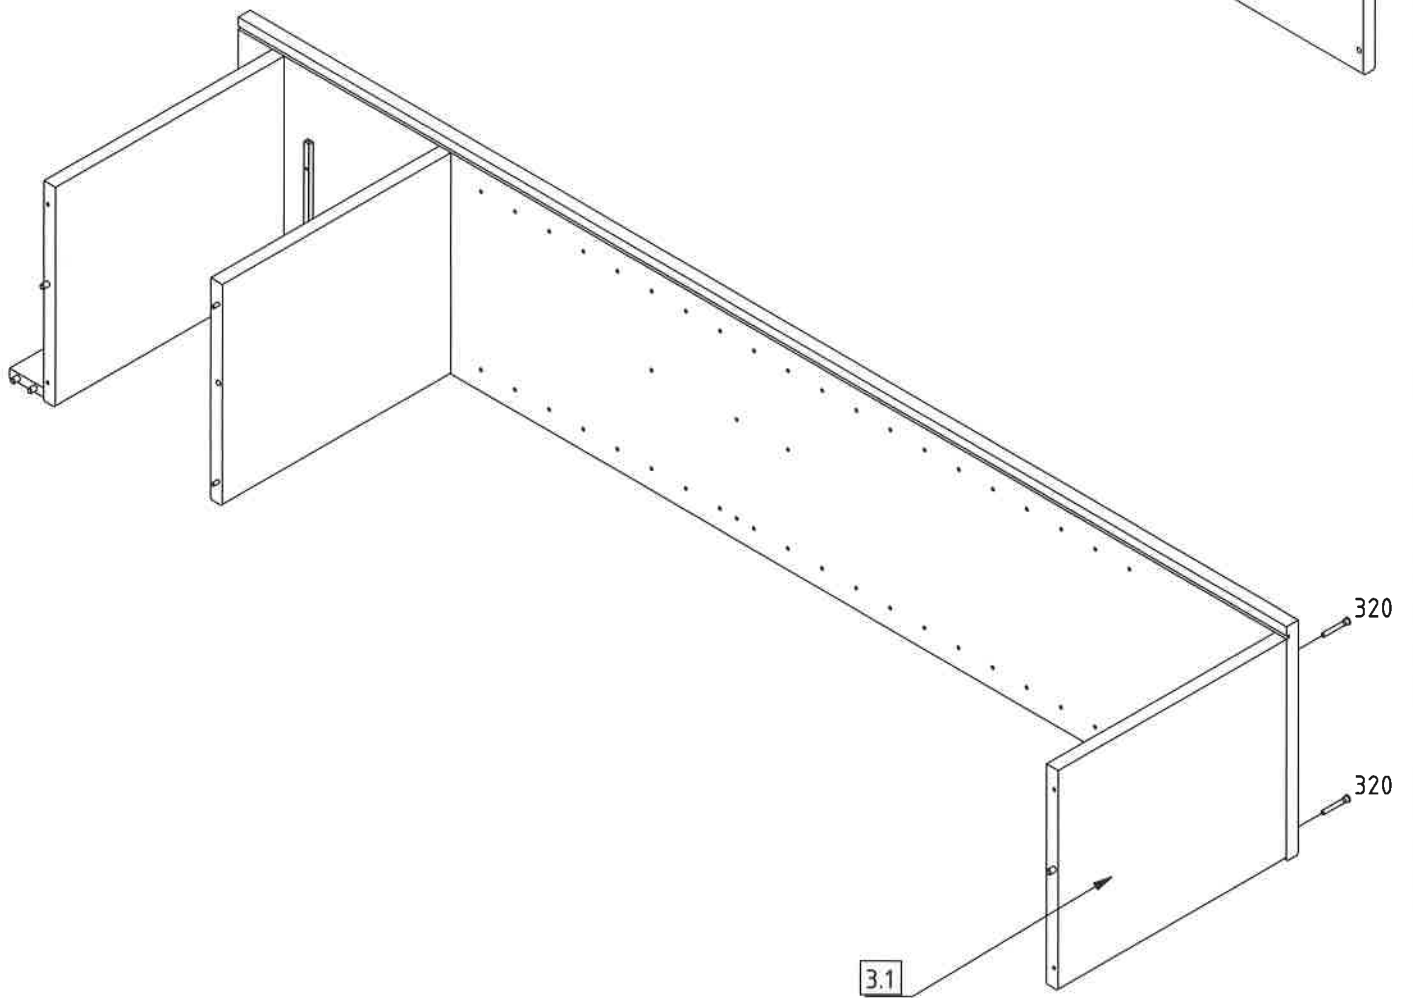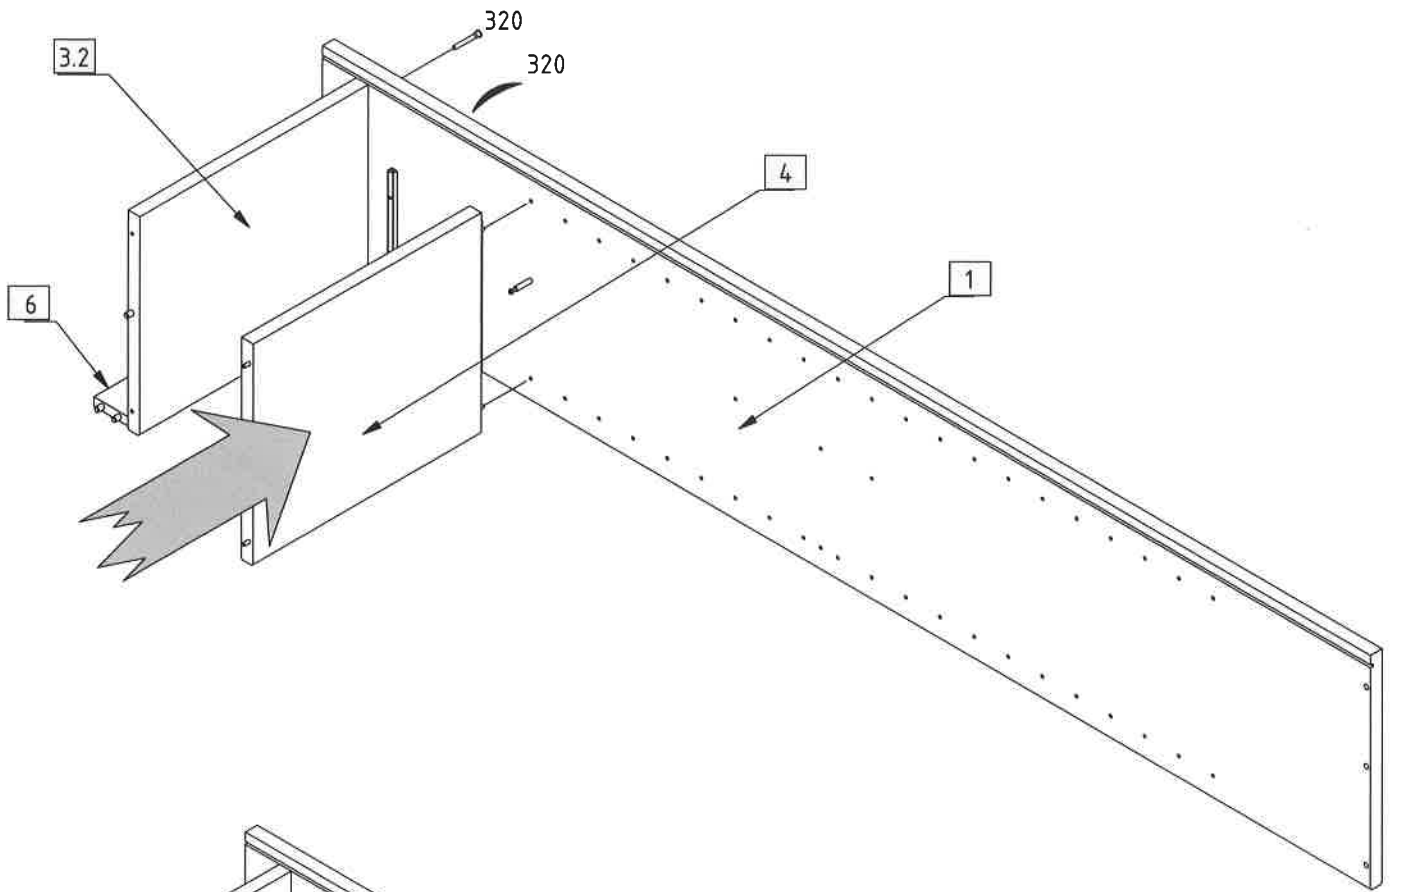


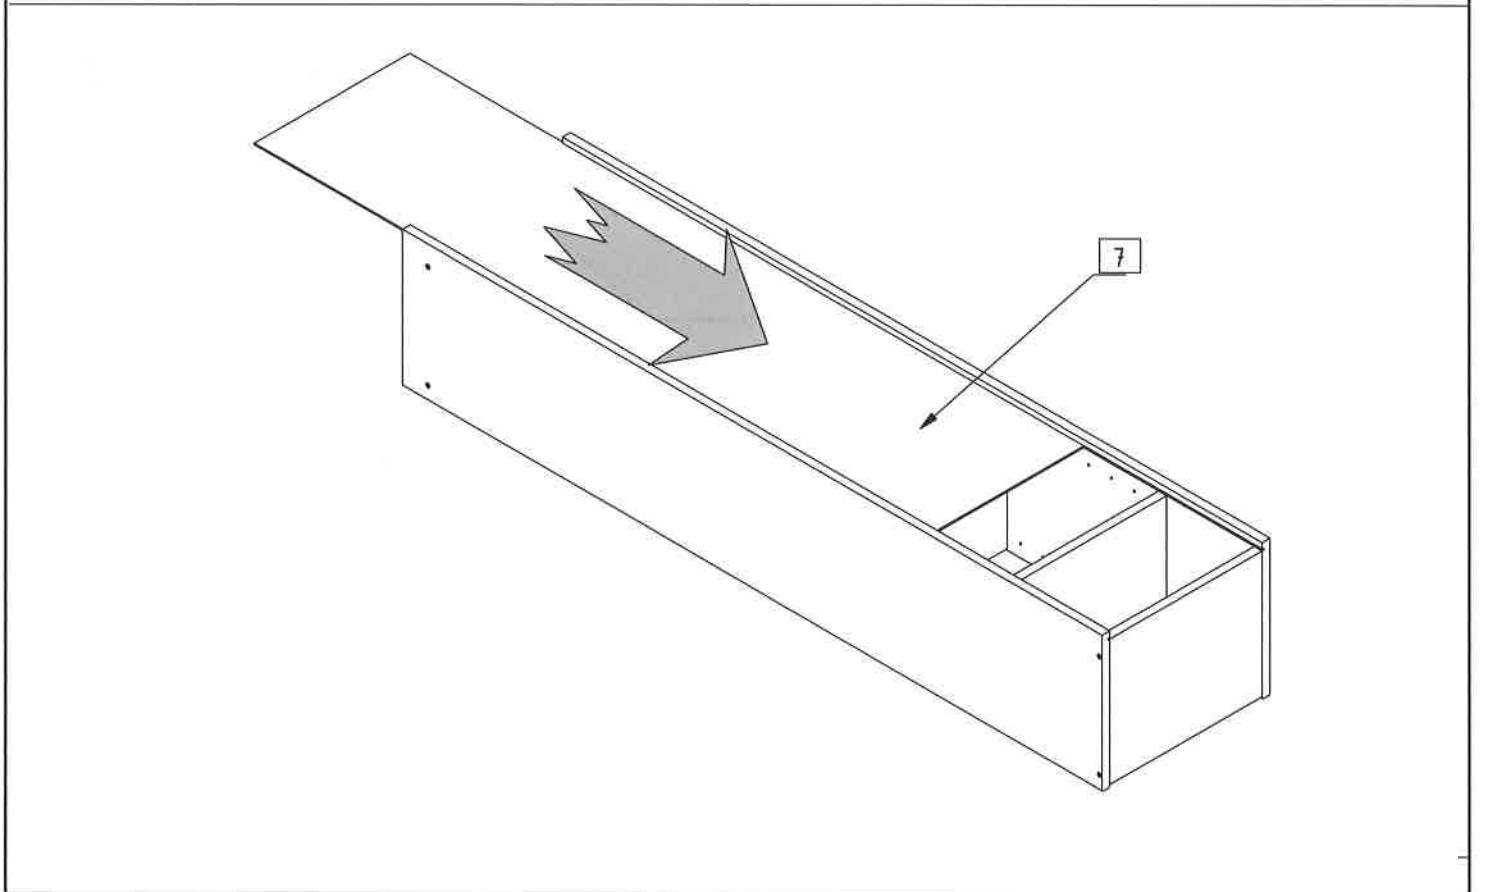
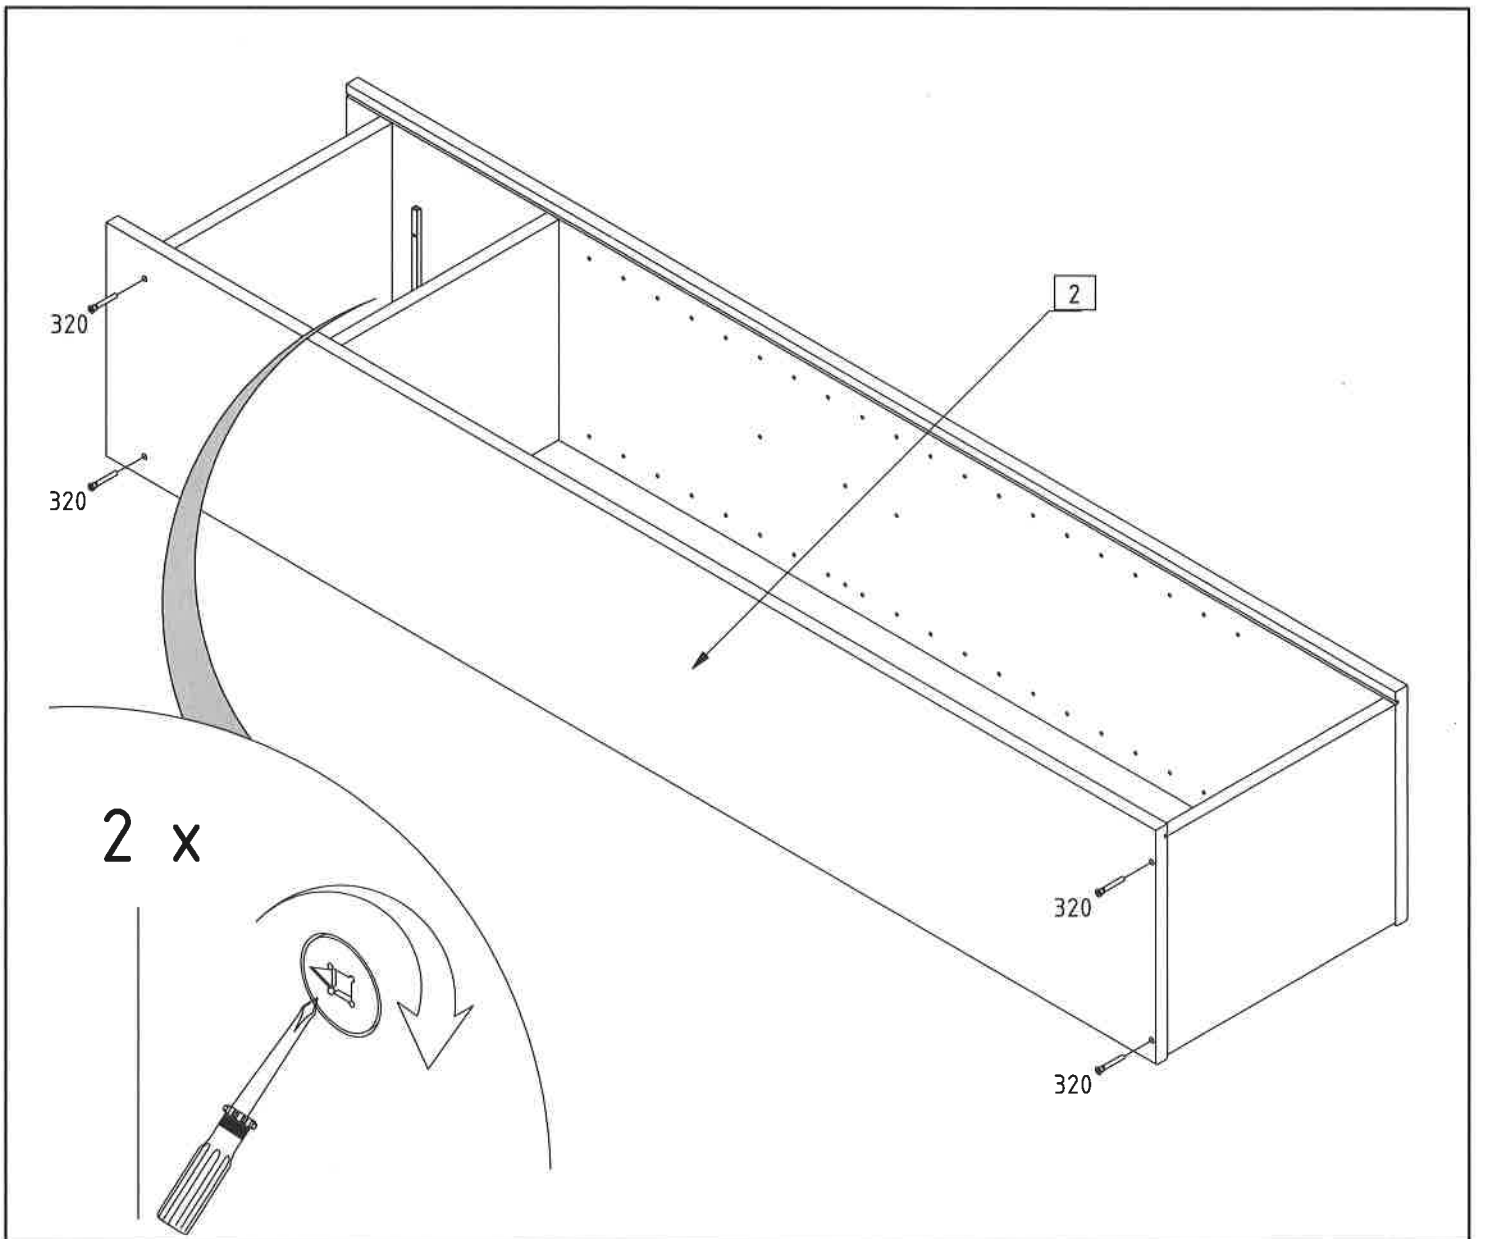


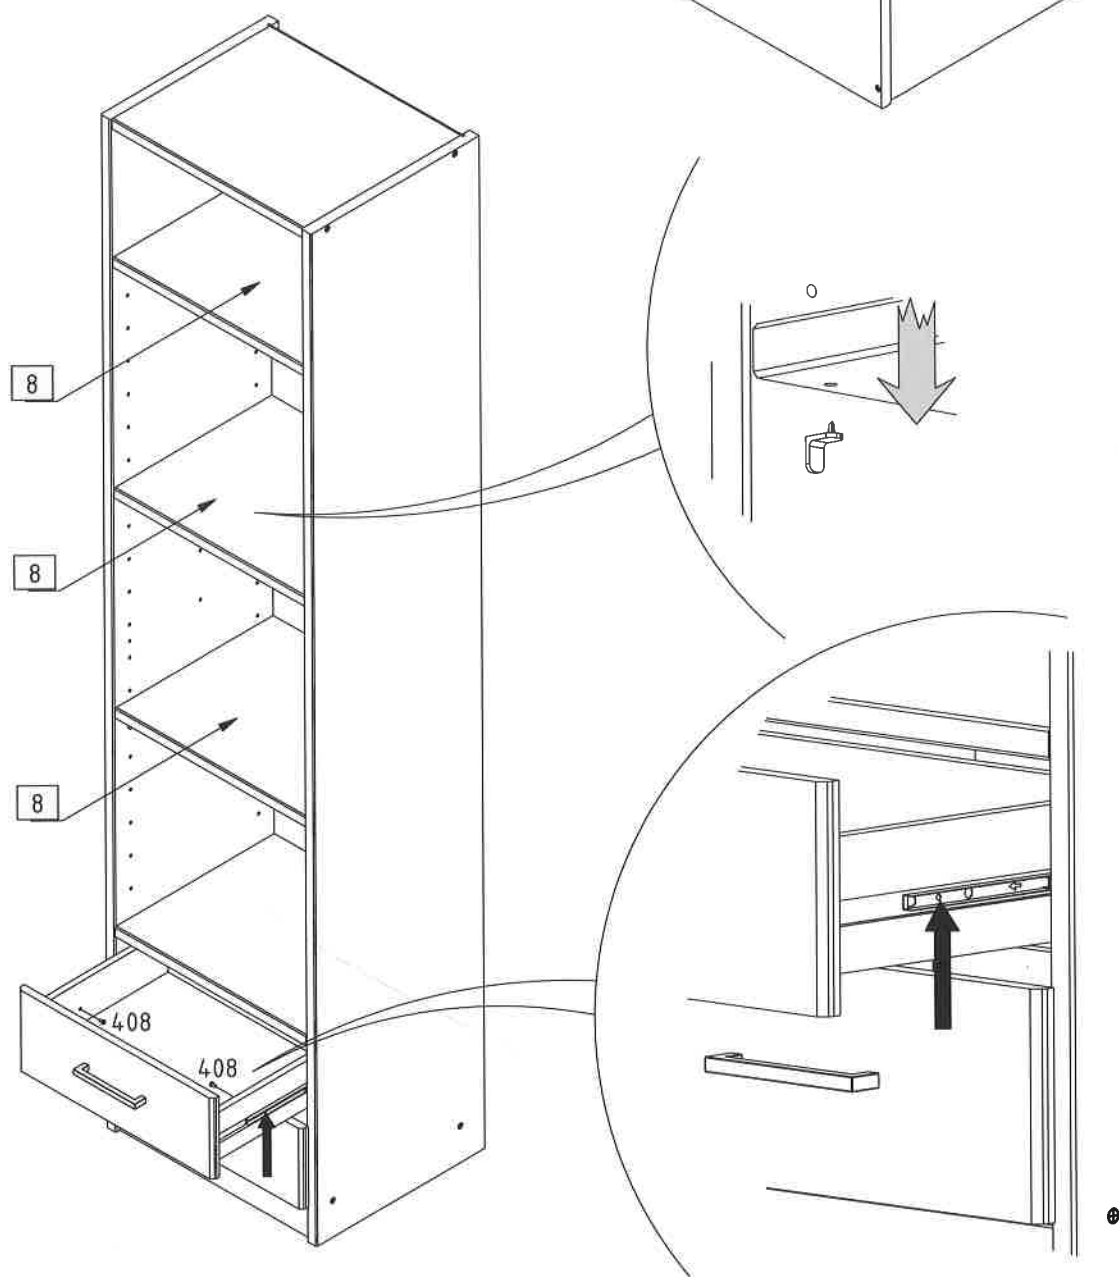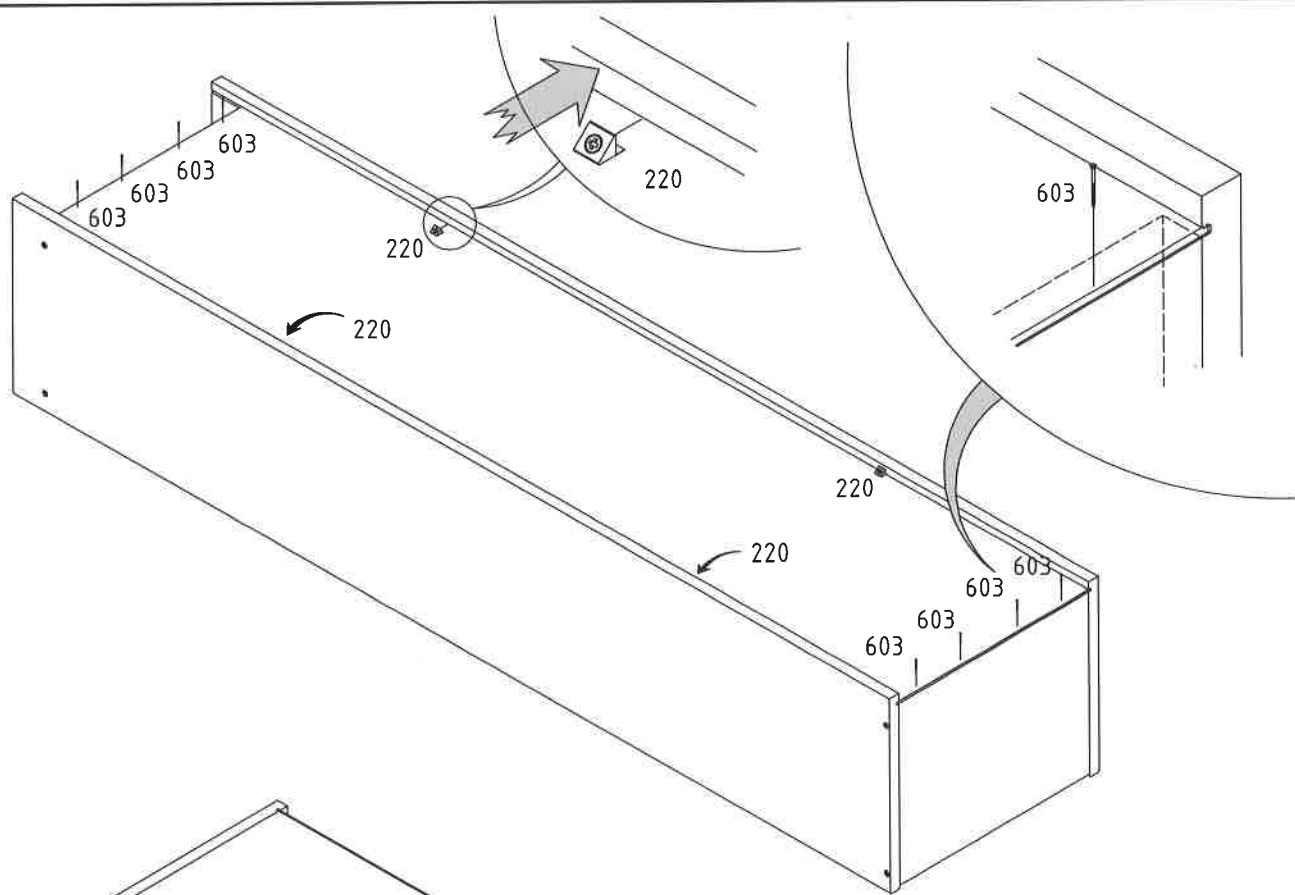

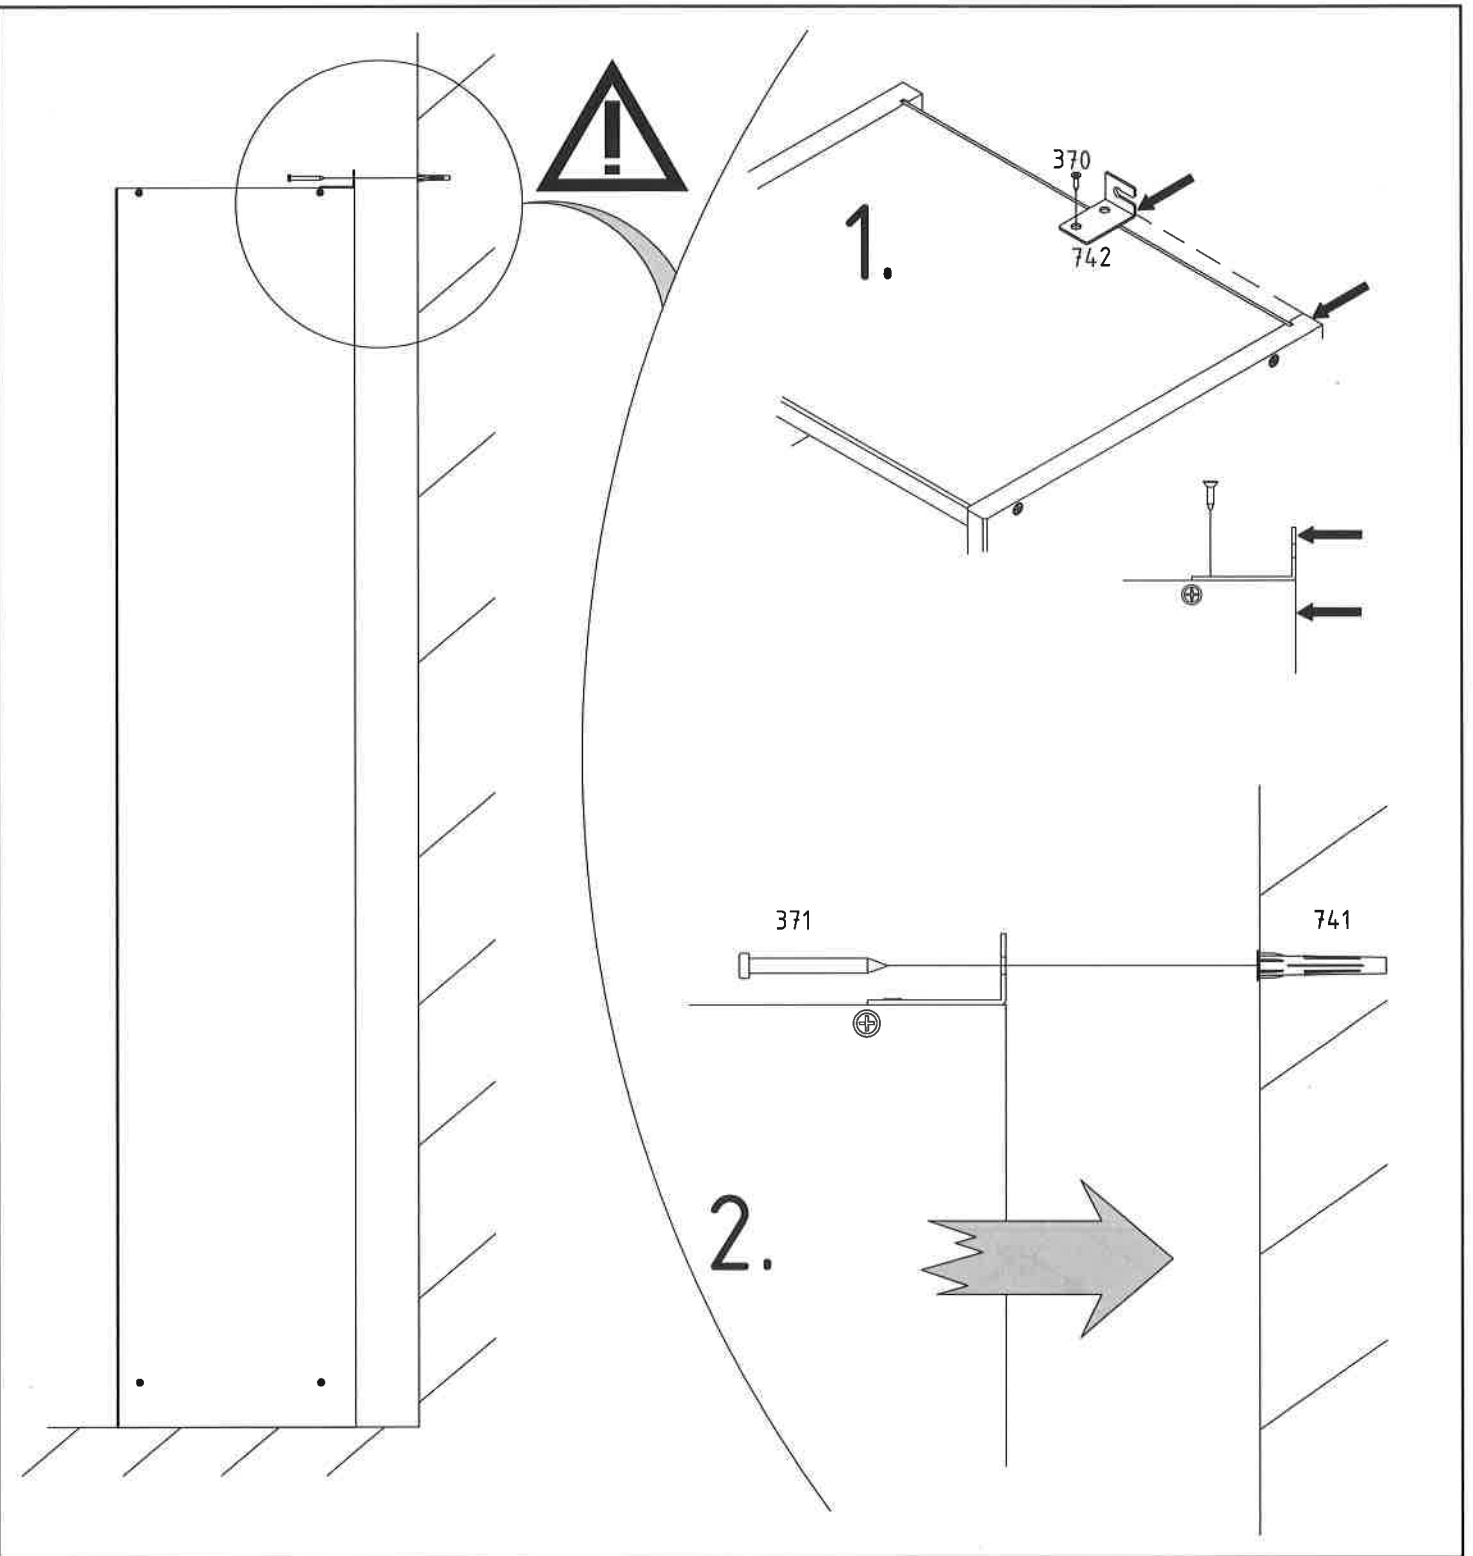





8 x

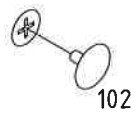

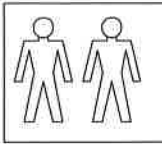
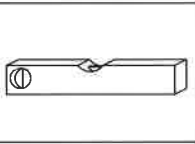


102	8	
111	2	
122	2	
181	12	
190	8	$\varnothing 8 \times 30 \text{ mm}$
193	4	$\varnothing 5 \times 40 \text{ mm}$
204	2	
215	4	
220	4	
304	8	$\varnothing 6 \times 10 \text{ mm}$
320	8	$\varnothing 6 \times 50 \text{ mm}$
370	1	$\varnothing 4 \times 15 \text{ mm}$
371	1	$\varnothing 6 \times 60 \text{ mm}$
377	4	$\varnothing 4 \times 25 \text{ mm}$
408	4	M4 x 9 mm
503	2	A+B
511	2	C
603	8	$\varnothing 1,2 \times 20 \text{ mm}$
741	1	$\varnothing 8 \times 51 \text{ mm}$
742	1	

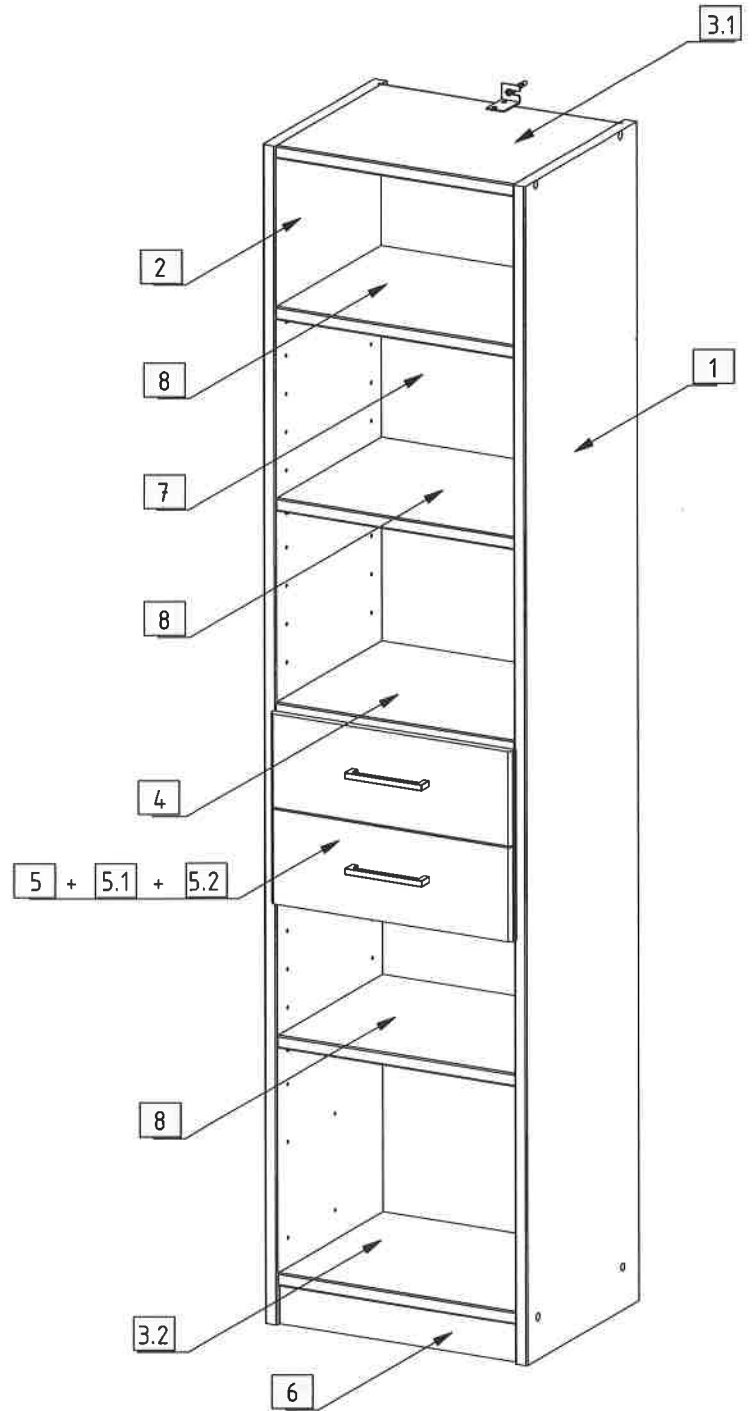


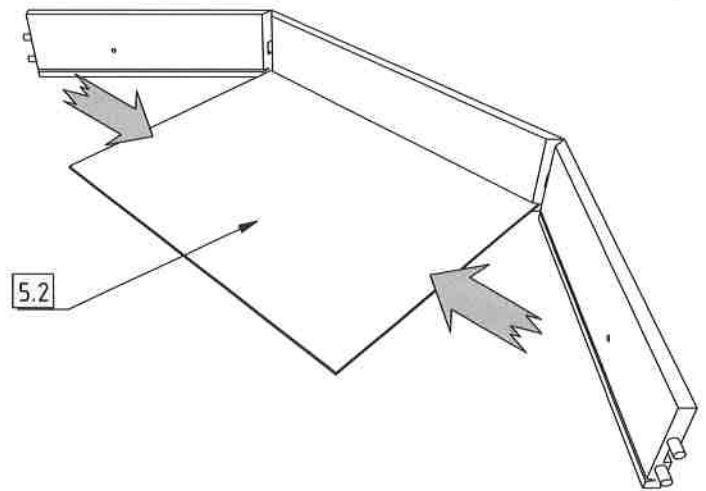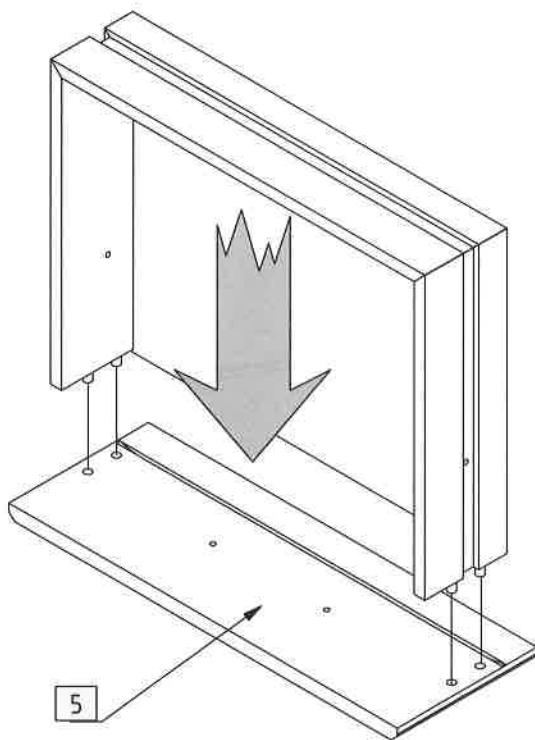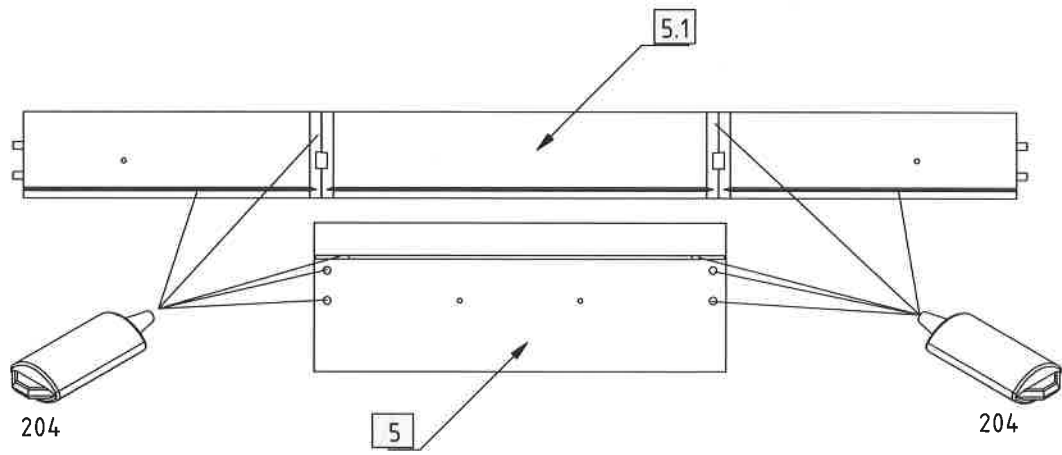




A

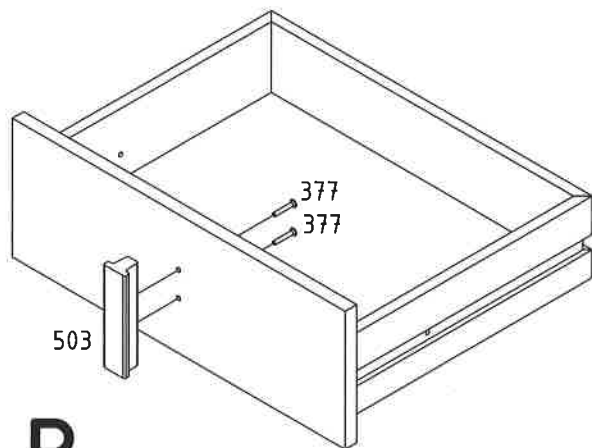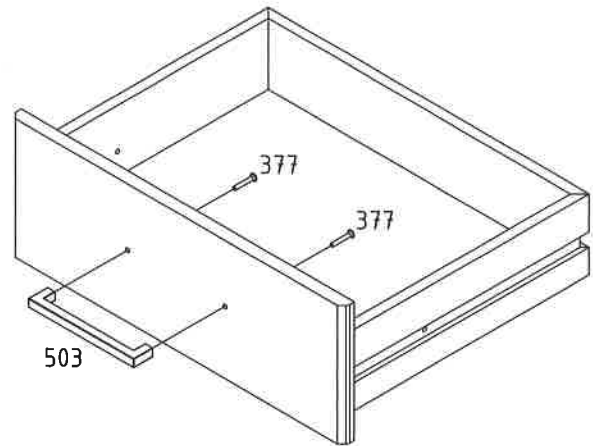


B

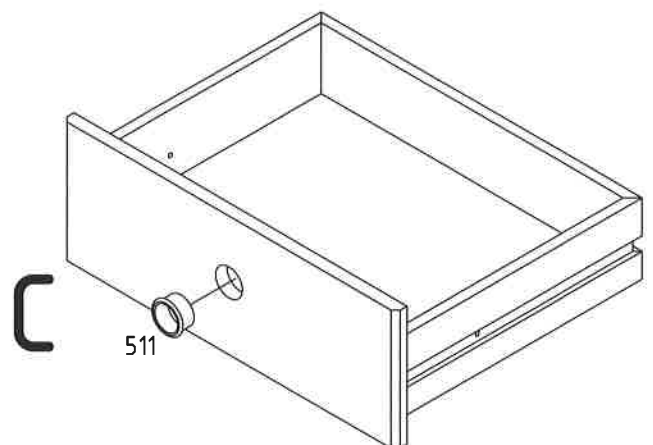




C

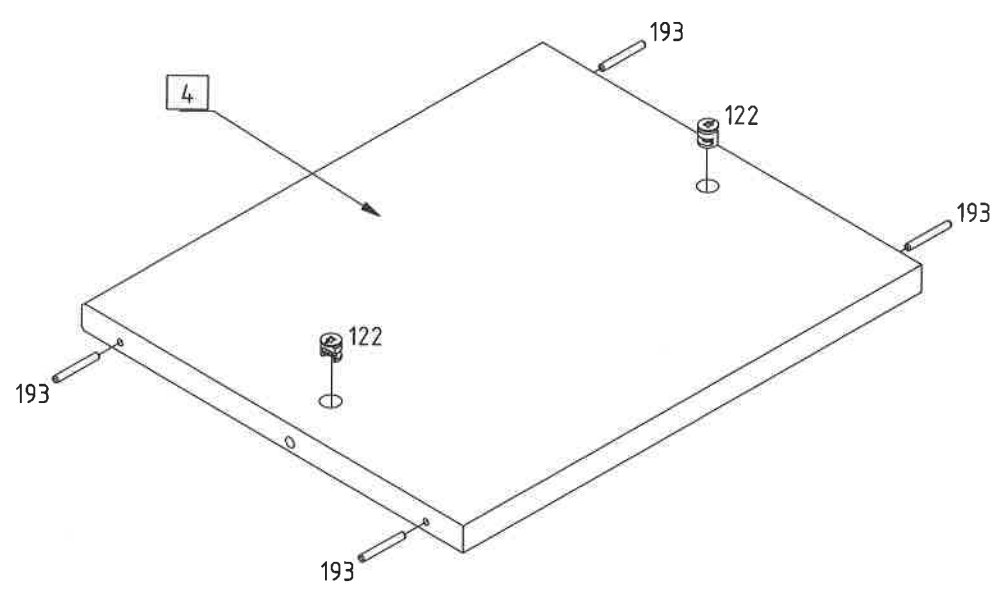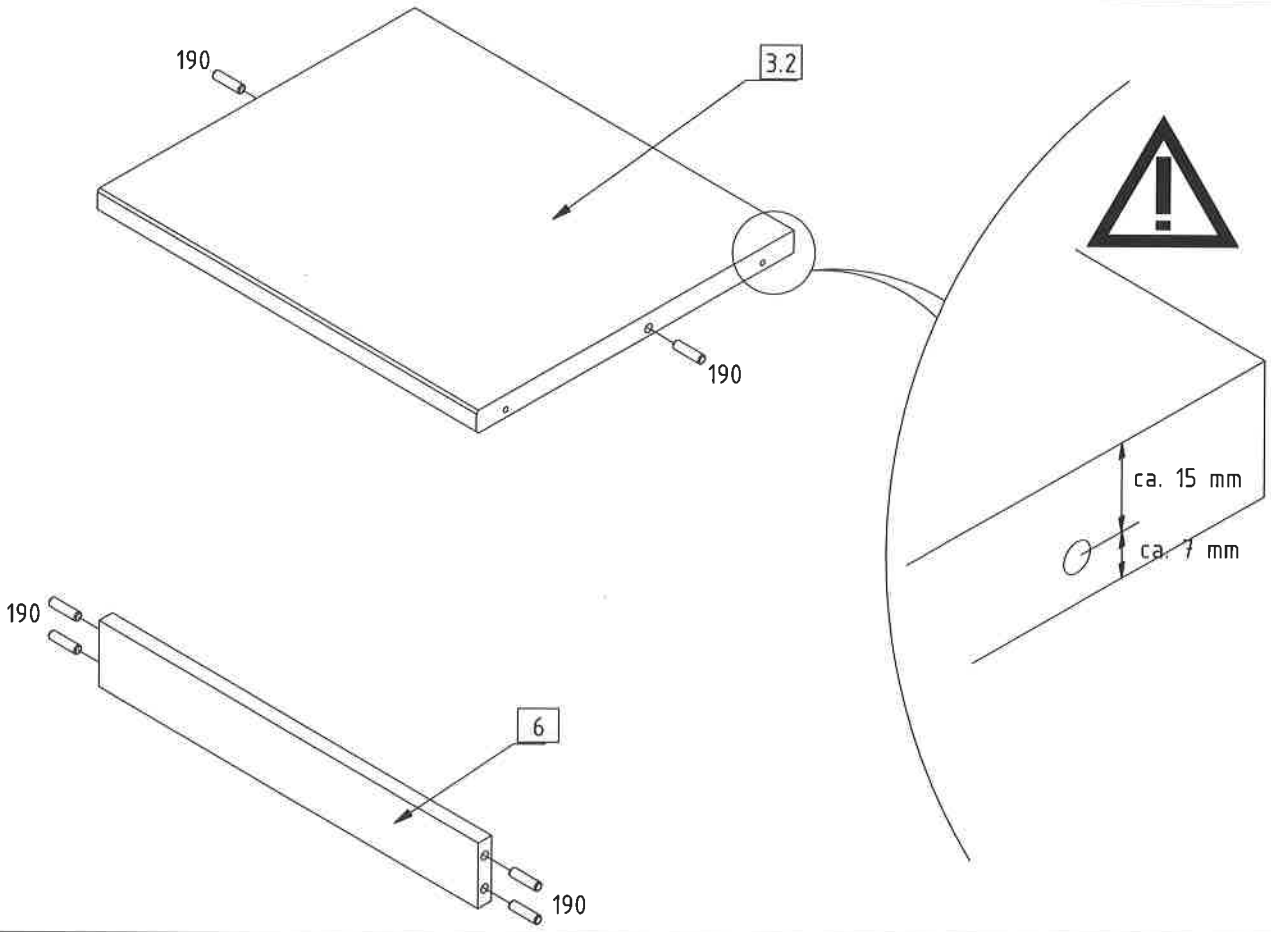
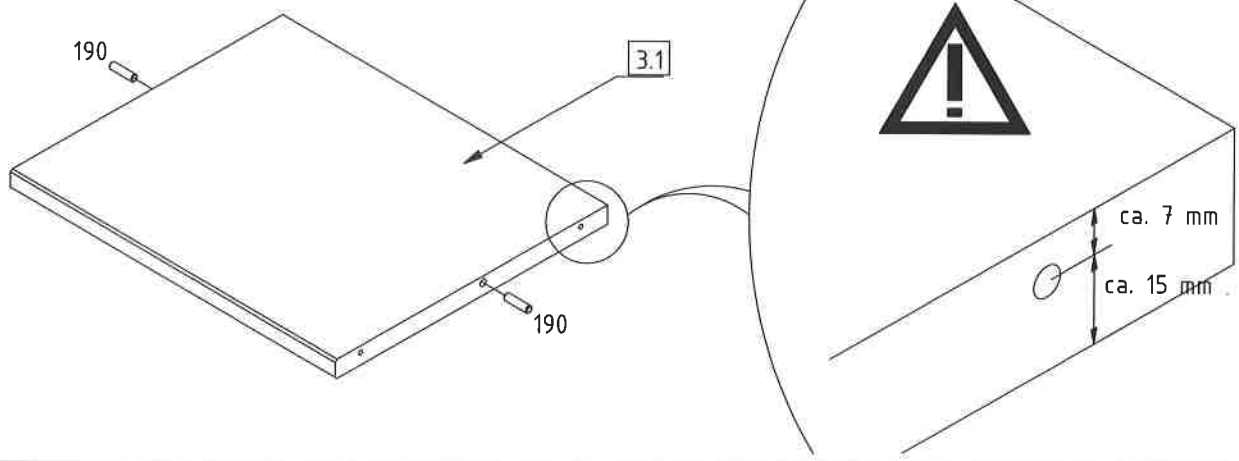





2

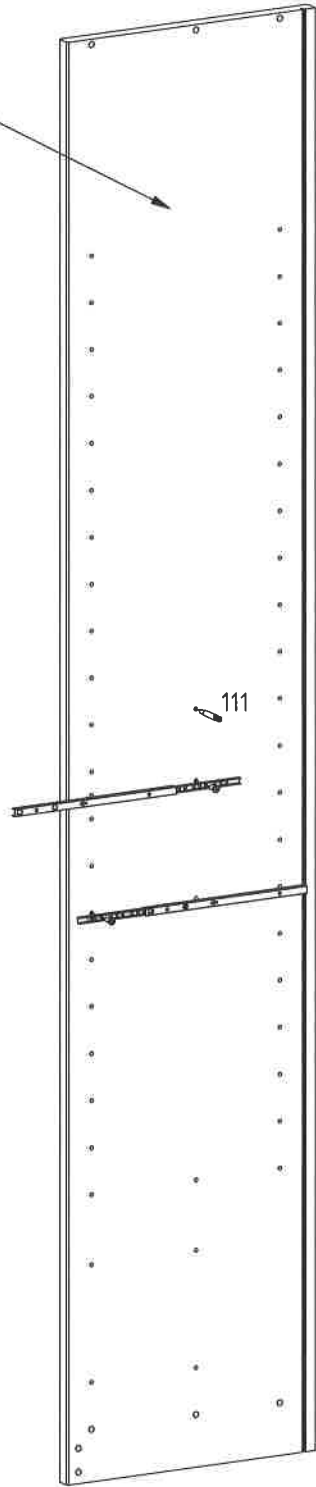



1

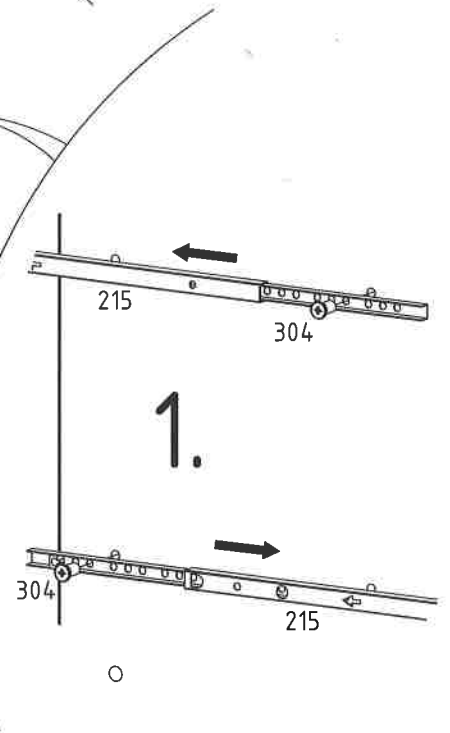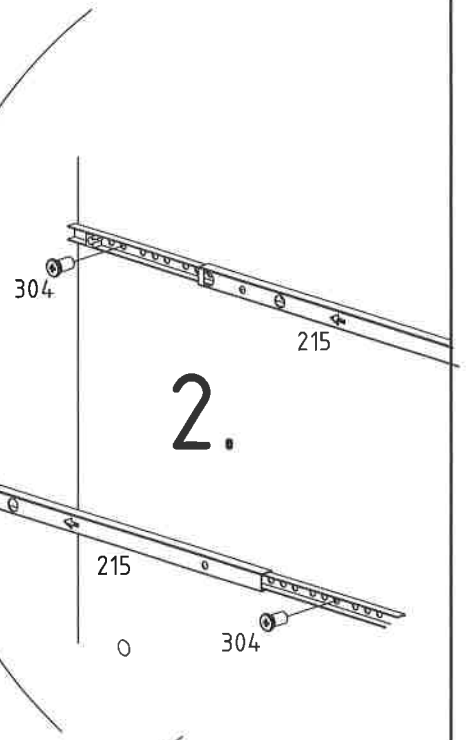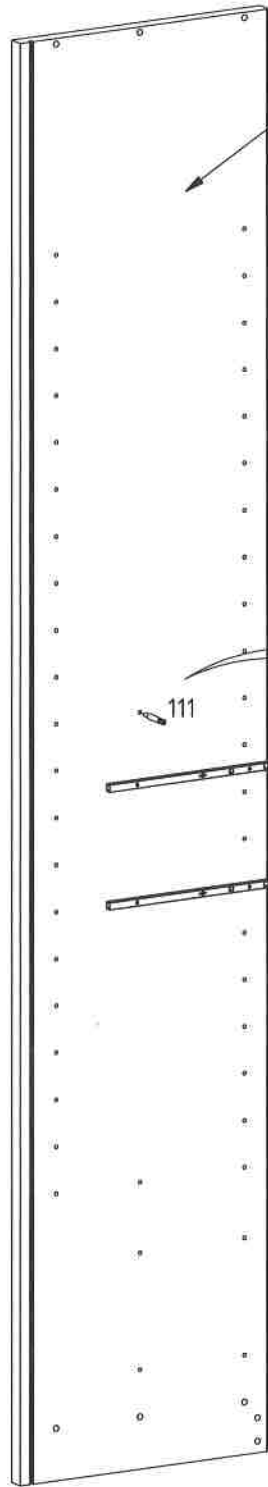

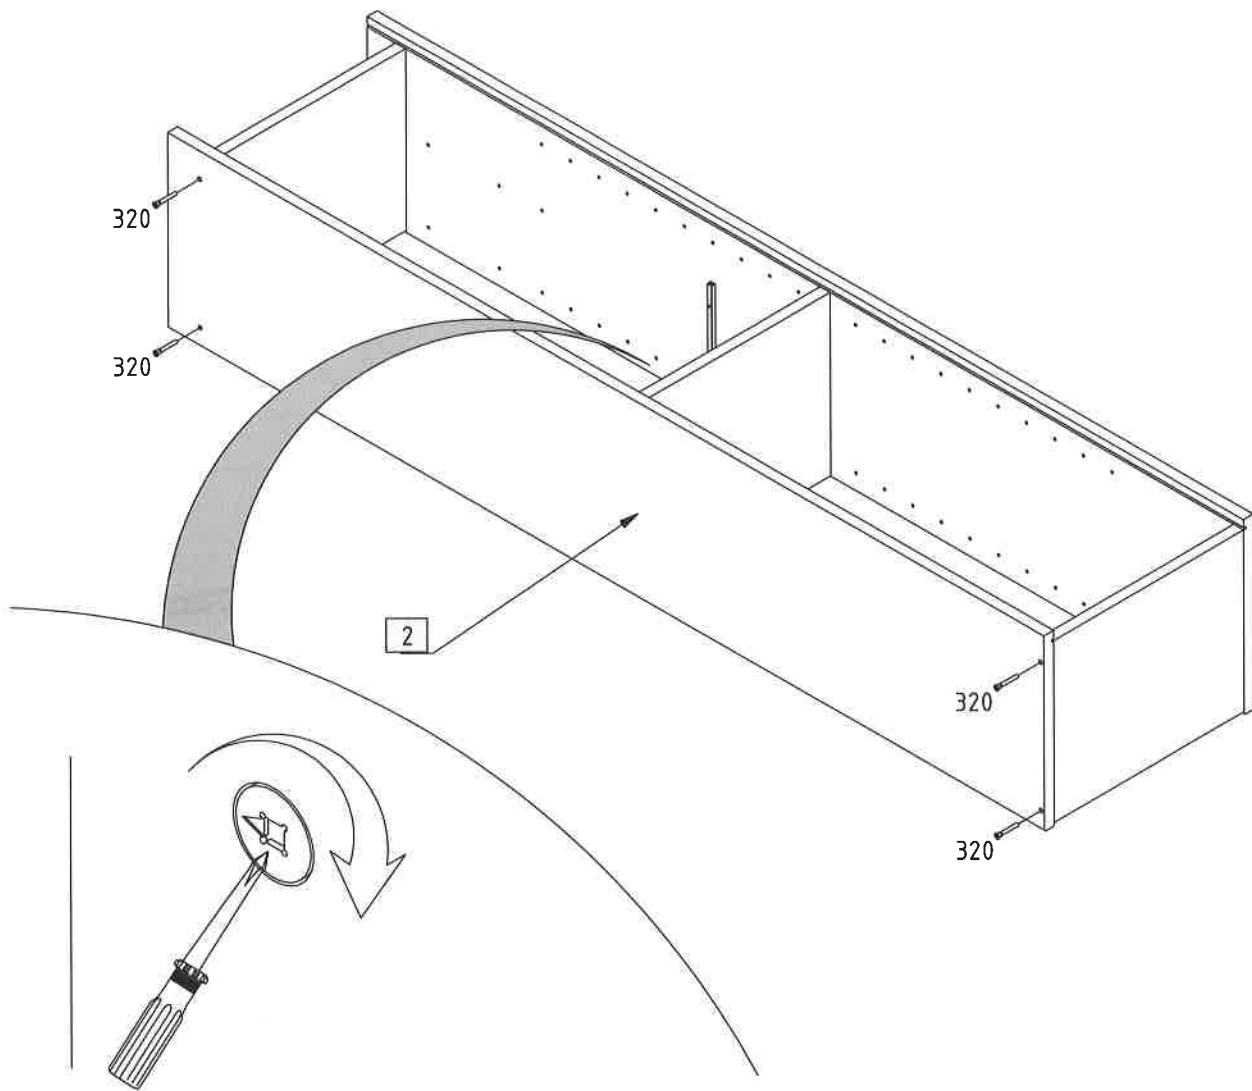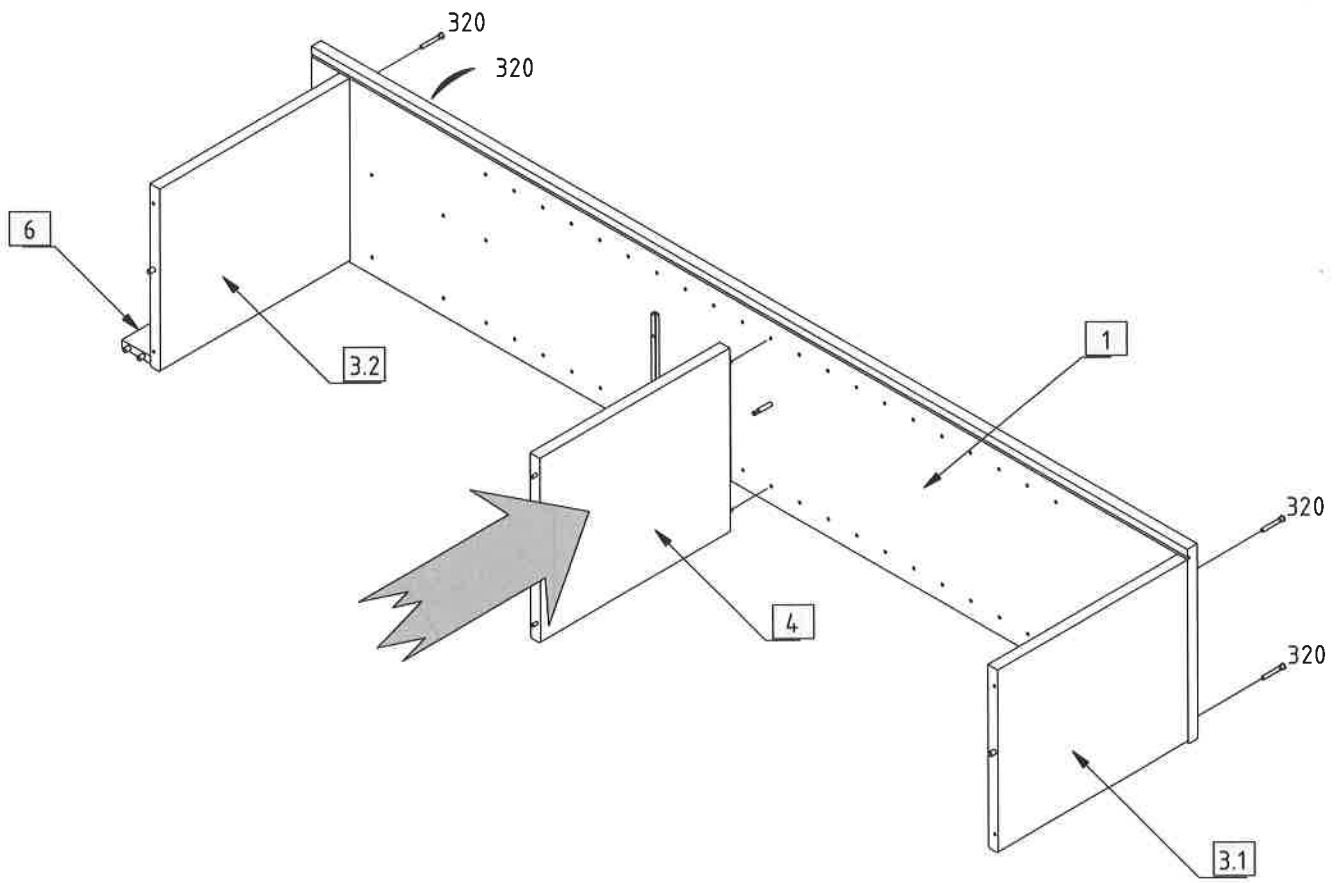

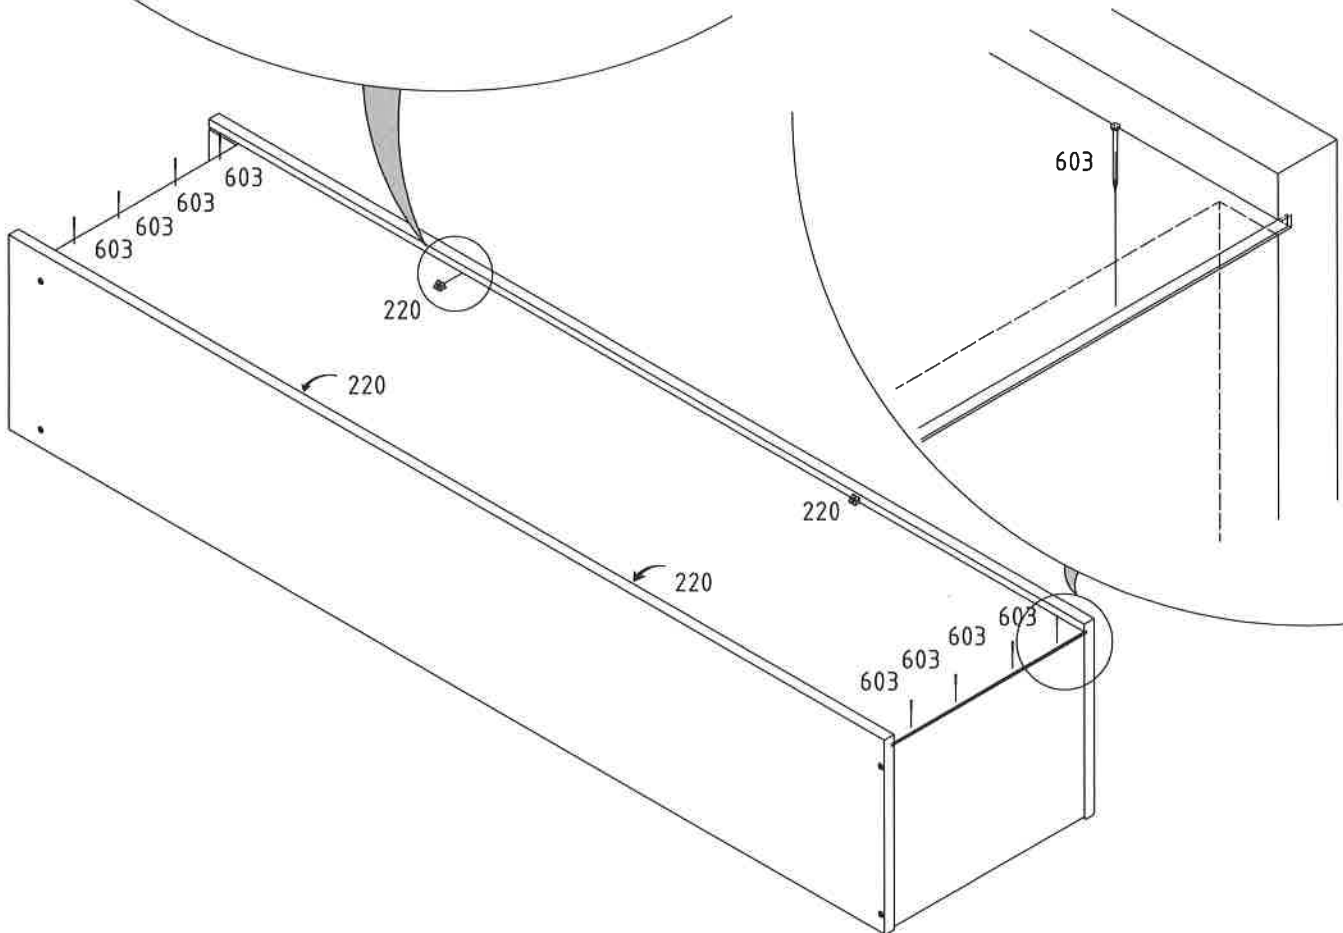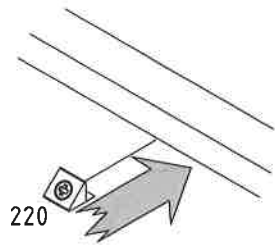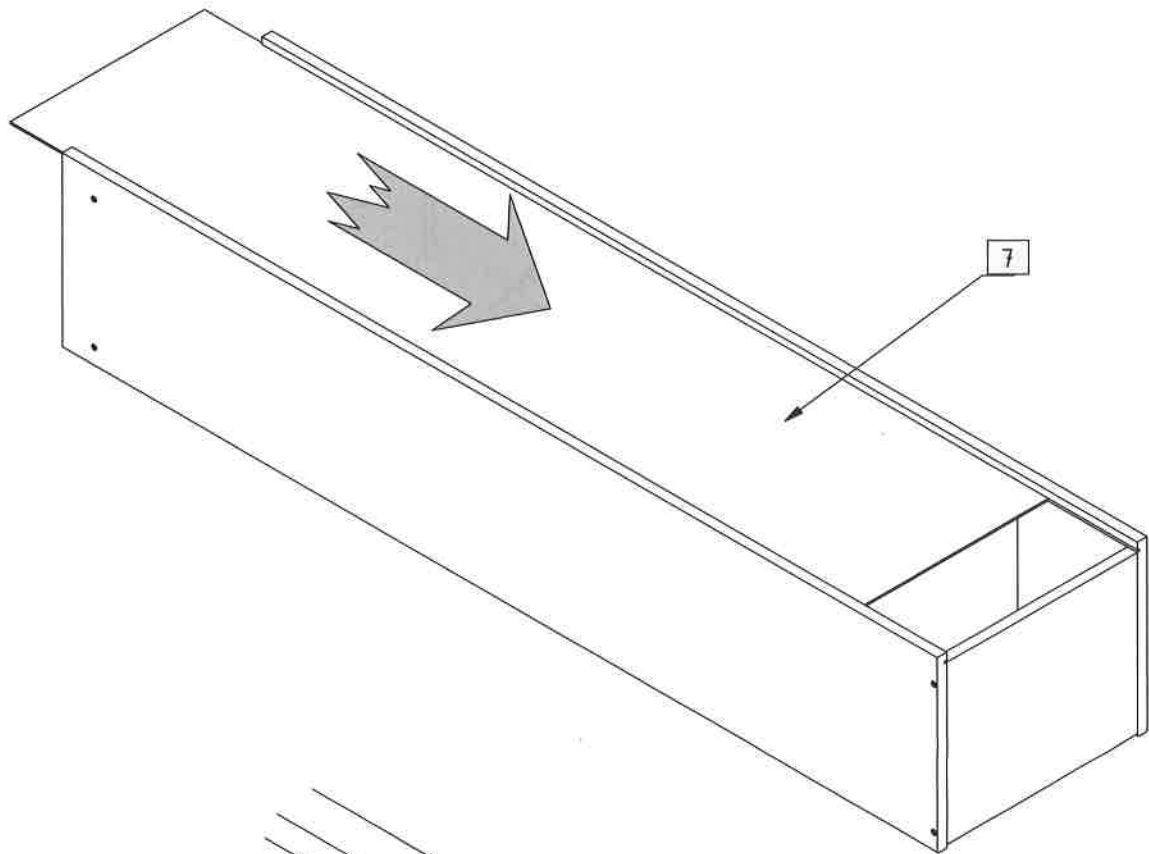

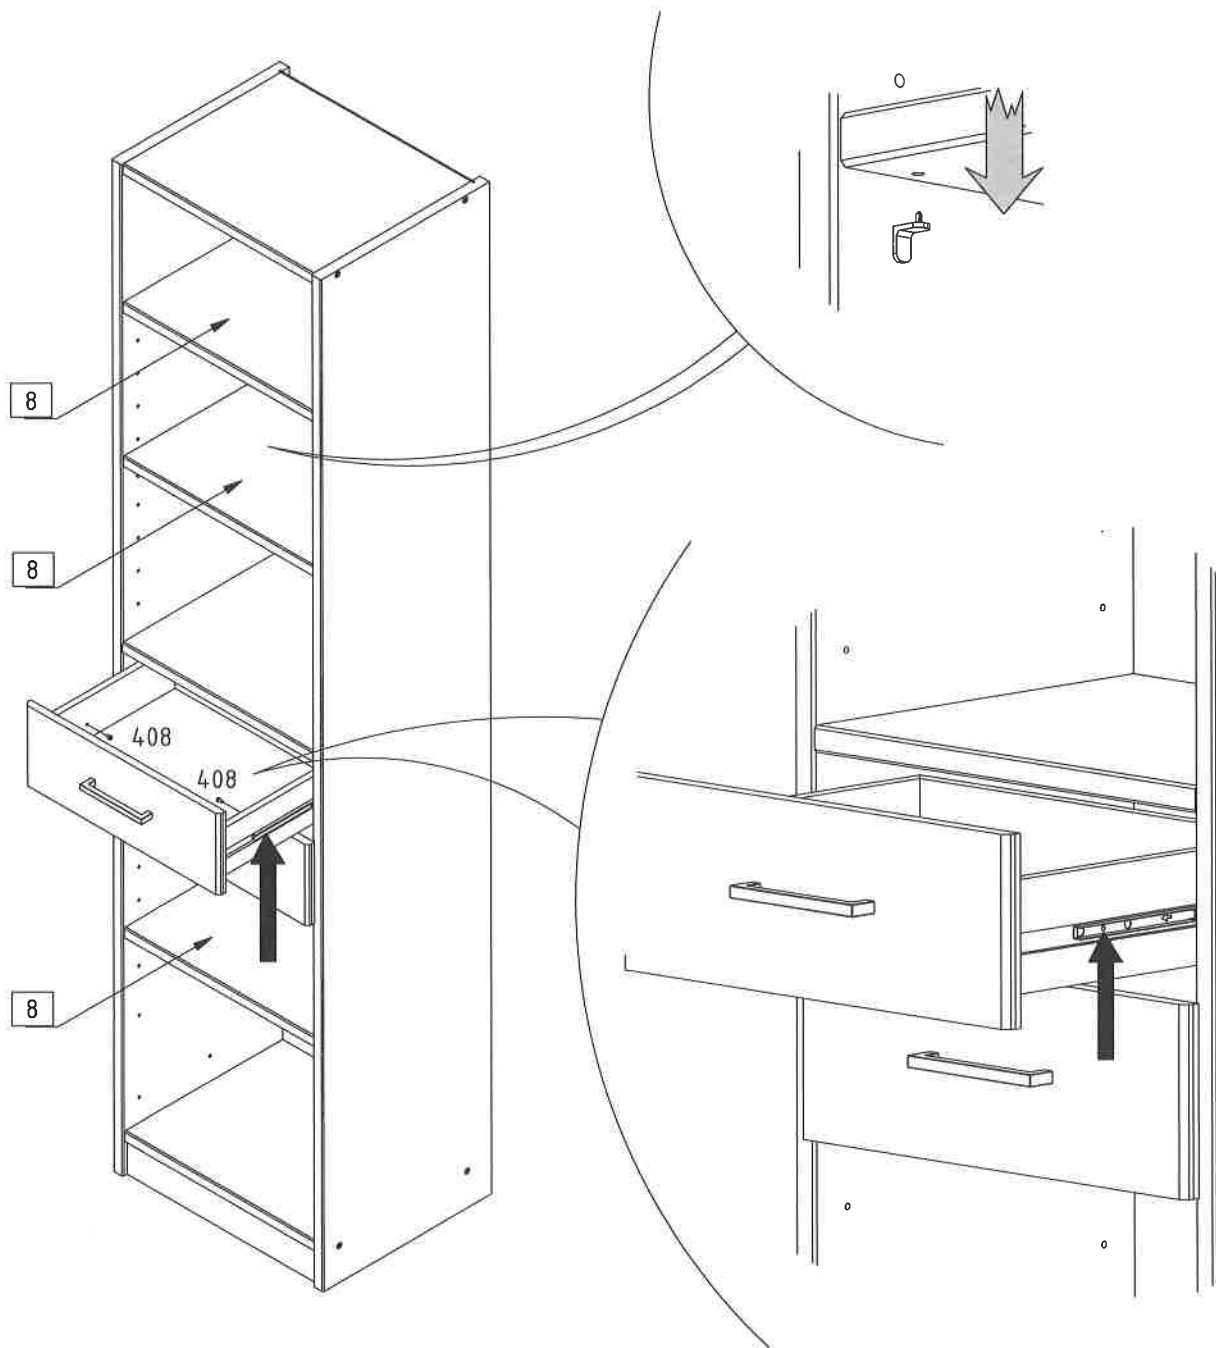

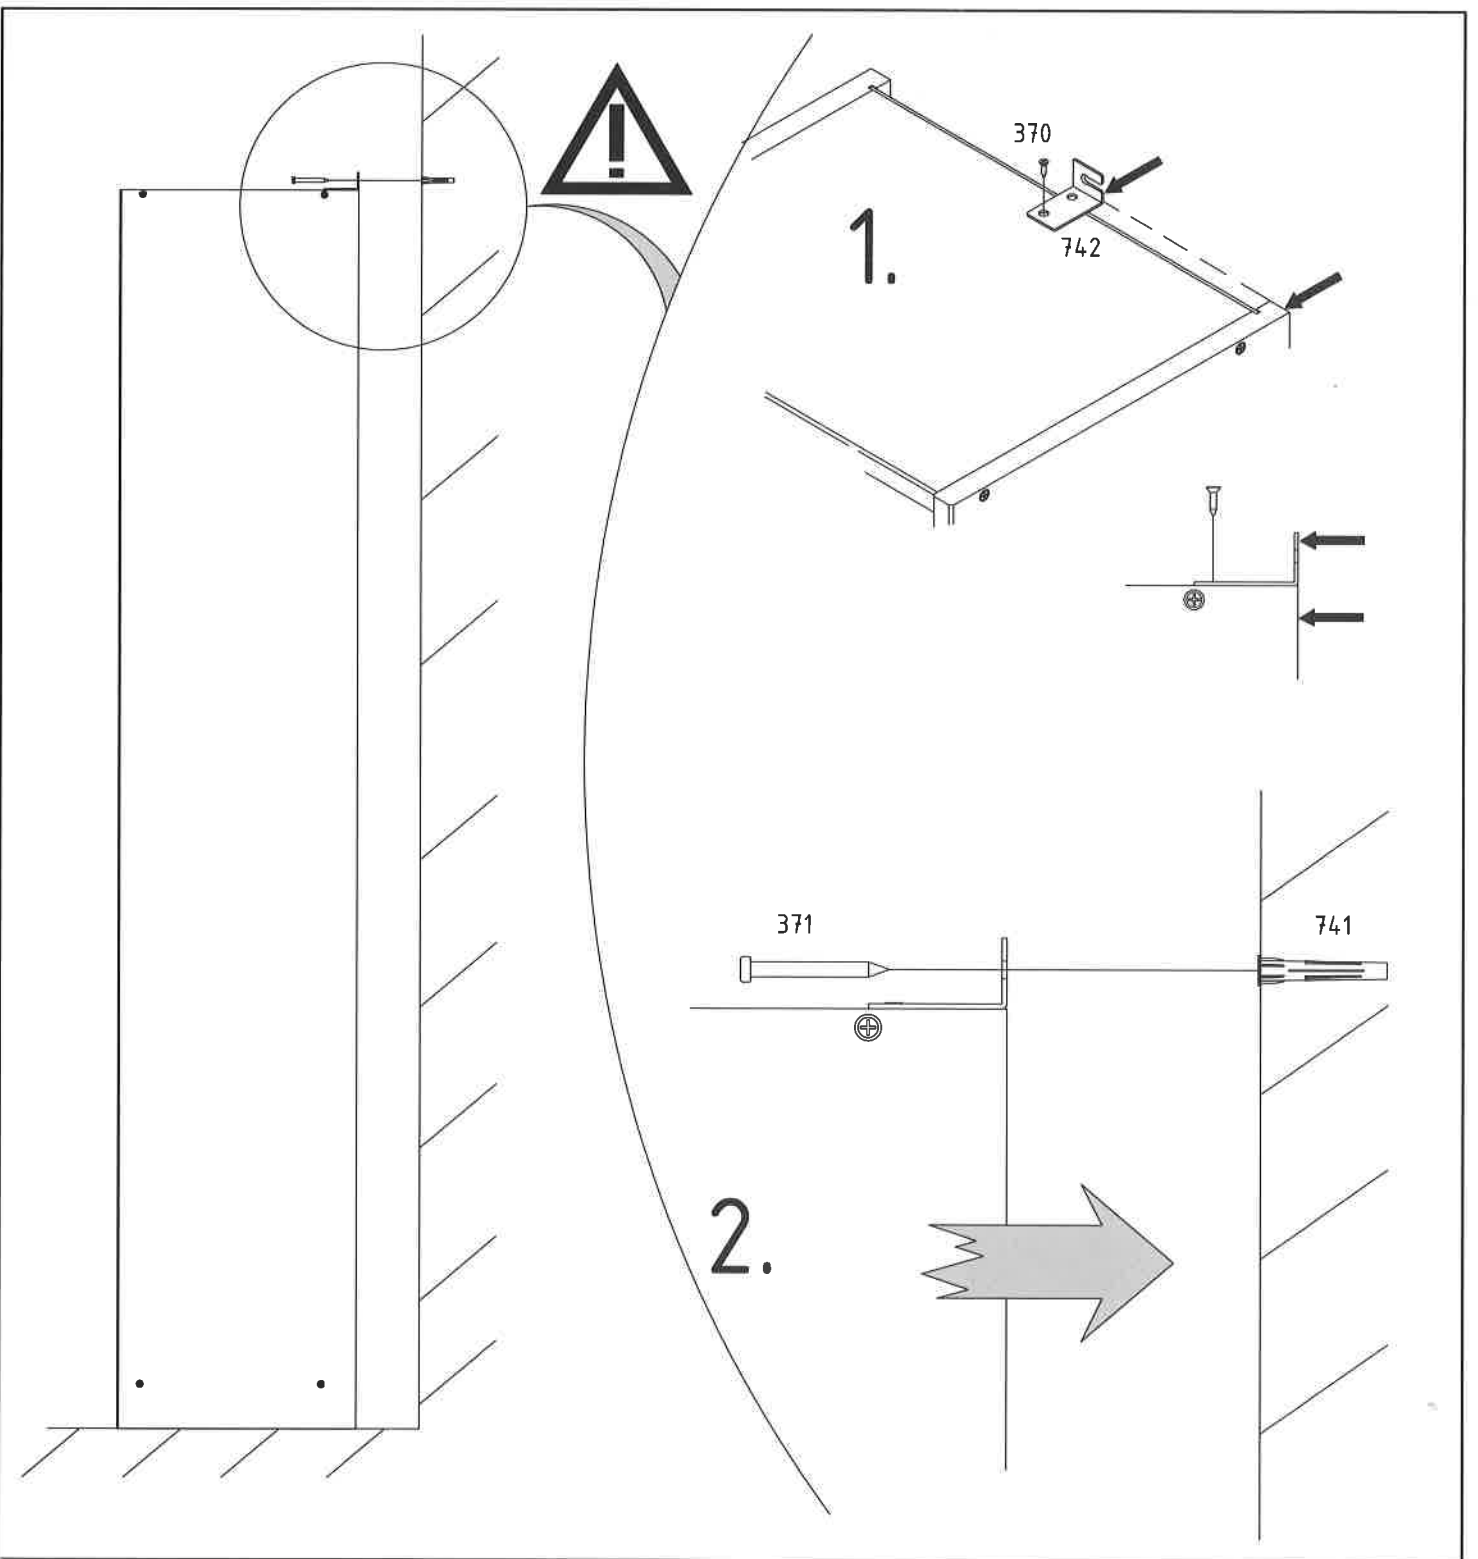

8 x

