




Montageinstructies Noma

In dit bestand vindt u de instructies voor alle verkrijgbare elementen. U vindt hieronder een overzicht:

- 3.5Sofa (split): blz 2
- 3.5PL (split): blz 3
- 3.5PR (split): blz 4
- 3.5PL.ST (split): blz 5
- 3.5PR.ST (split): blz 6
- 3, 2.5-Sofa: blz 7
- 3-, 2.5-PL: blz 8
- 3-, 2.5-PR: blz 9
- 3-, 2.5-AL: blz 10
- 3-, 2.5-ST.Sofa: blz 11
- 3-, 2.5-ST.PL: blz 12
- 3-, 2.5-ST.PR: blz 13
- 1.5Chair: blz 14
- 1.5PL: blz 15
- 1.5PR: blz 16
- 1.5maxPL.ST: blz 17
- 1.5maxPR.ST: blz 18
- C: blz 19
- DL: blz 20
- DR: blz 21
- DUL: blz 22
- DUR: blz 23
- 1.5AL en 0-stool 105x90 (= poef): blz 24
- OTL: blz 25
- OTR: blz 26

Noma

FOOT ASSEMBLY INSTRUCTION

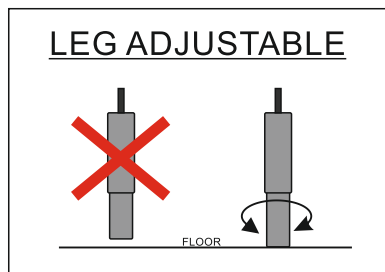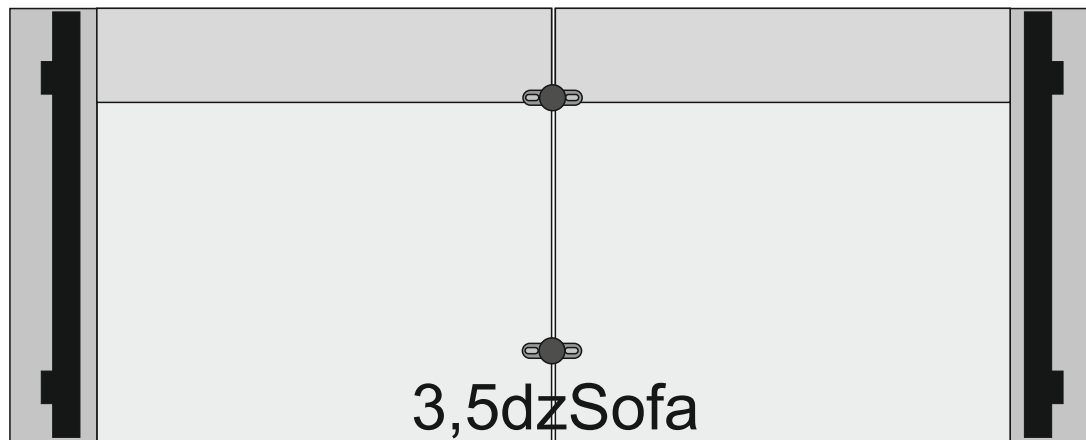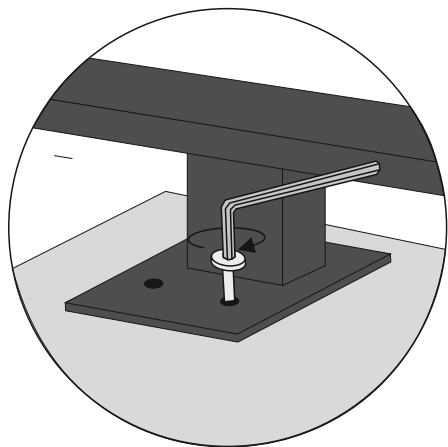

2x - IMP-1717 L-970






2x Suburban H-170



12x - 8x35

Noma

FOOT ASSEMBLY INSTRUCTION

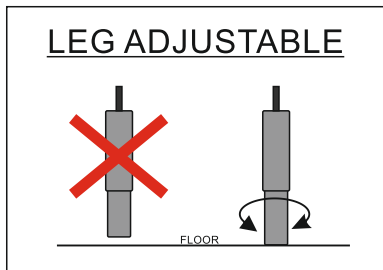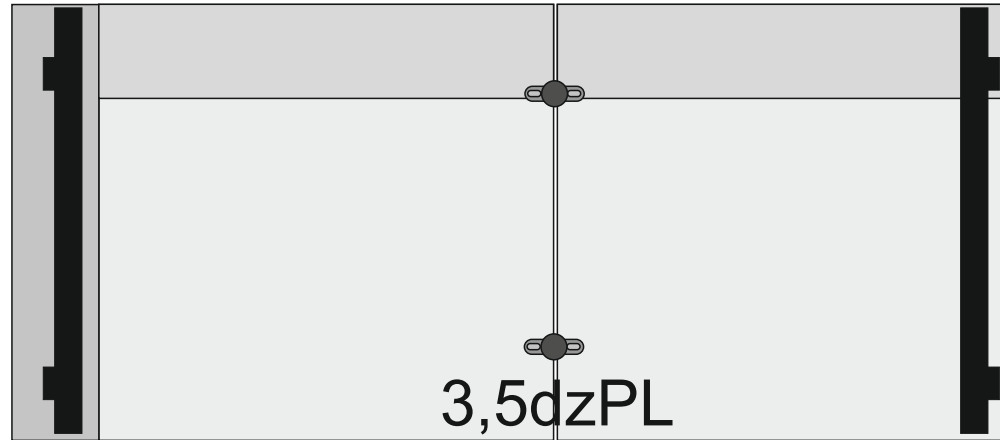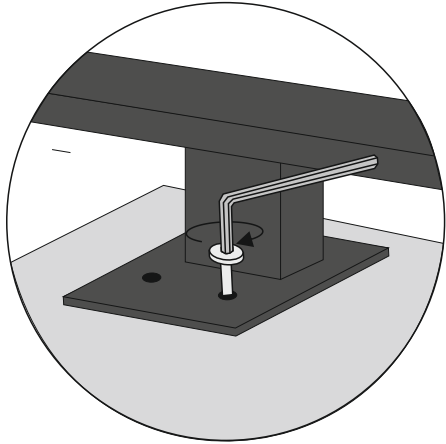

2x - IMP-1717 L-970






2x Suburban H-170



12x - 8x35

Noma

FOOT ASSEMBLY INSTRUCTION

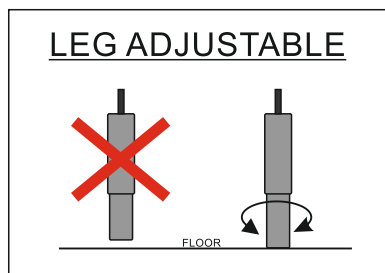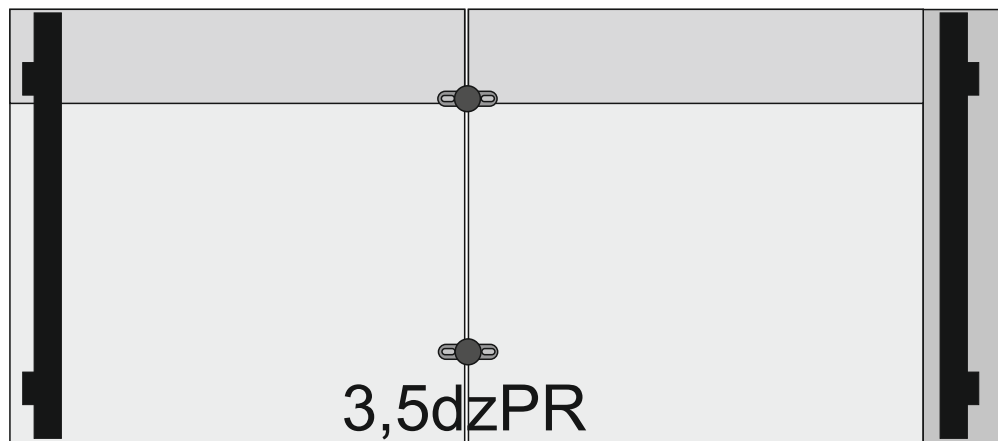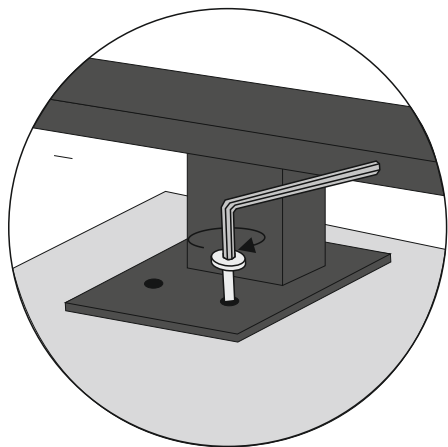

2x - IMP-1717 L-970






2x Suburban H-170



12x - 8x35

Noma

FOOT ASSEMBLY INSTRUCTION

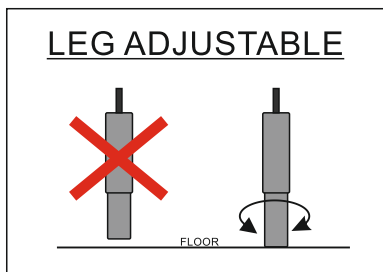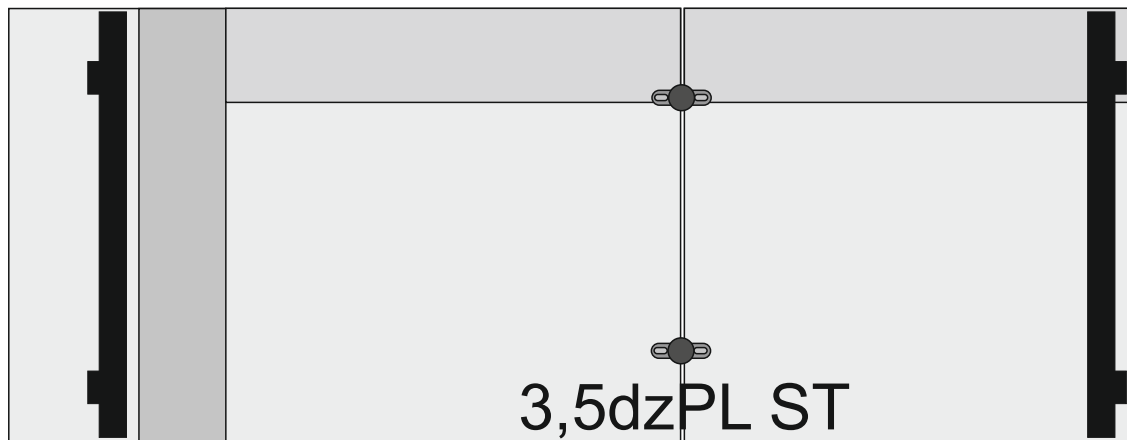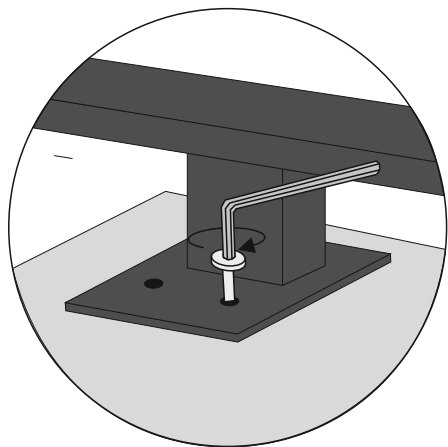

2x - IMP-1717 L-970






2x Suburban H-170



12x - 8x35

Noma

FOOT ASSEMBLY INSTRUCTION

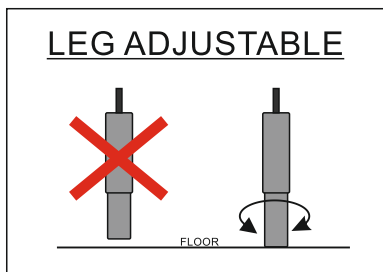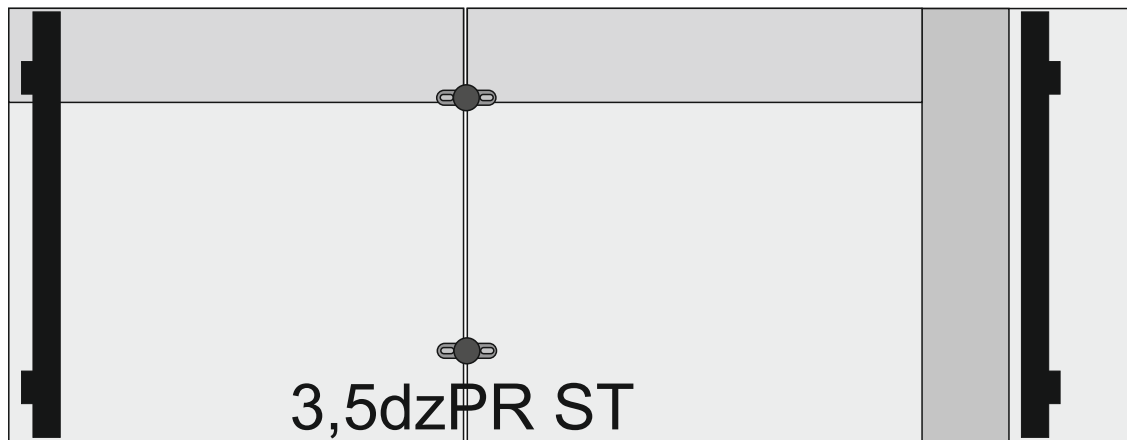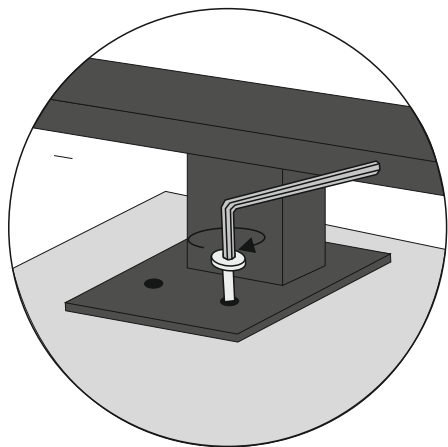

2x - IMP-1717 L-970






2x Suburban H-170



12x - 8x35

Noma

FOOT ASSEMBLY INSTRUCTION

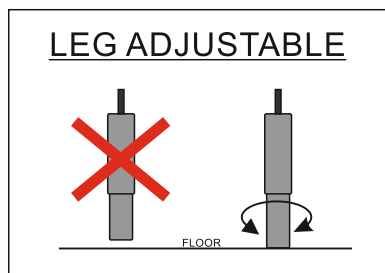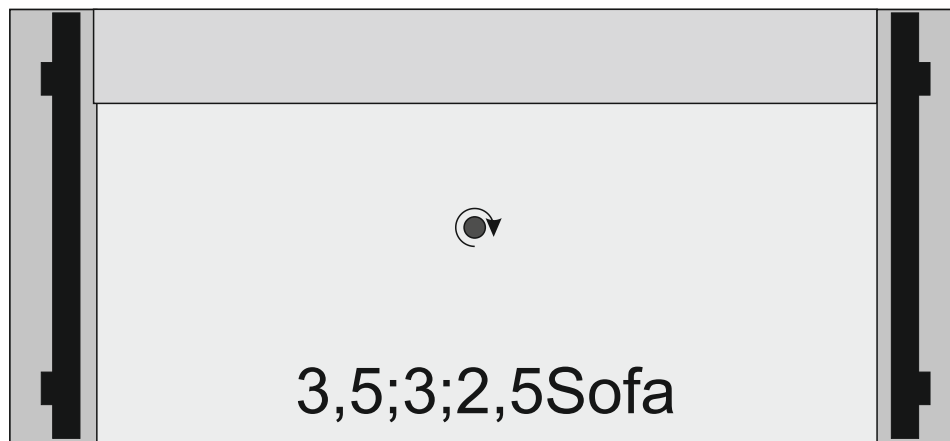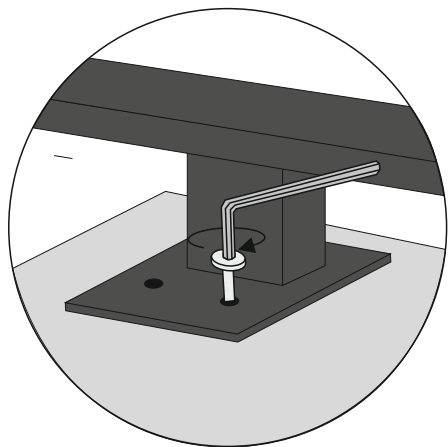

2x - IMP-1717 L-970






1x - IMP-1218



8x - 8x35

Noma

FOOT ASSEMBLY INSTRUCTION

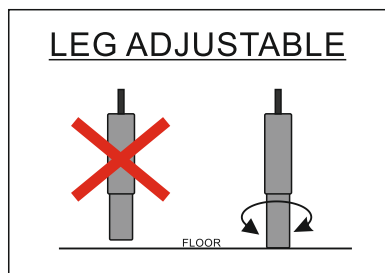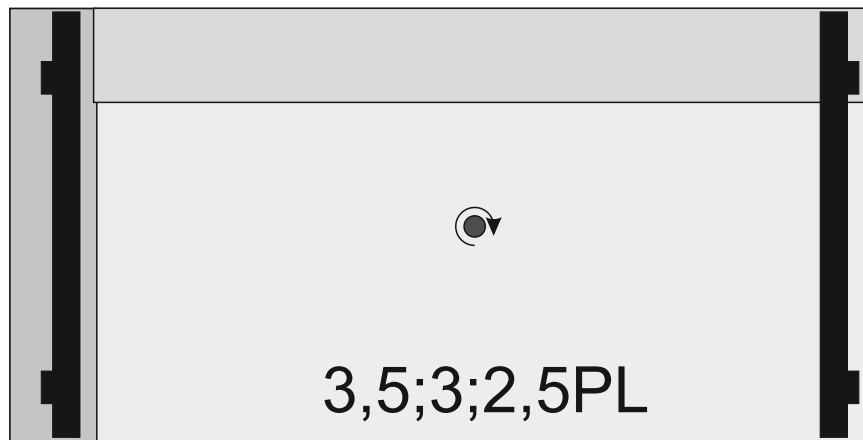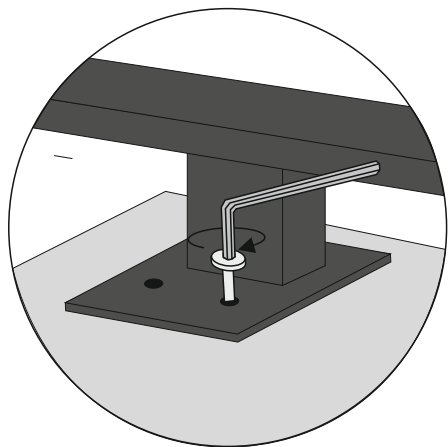

2x - IMP-1717 L-970






1x - IMP-1218



8x - 8x35

Noma

FOOT ASSEMBLY INSTRUCTION

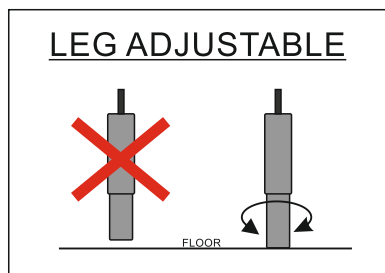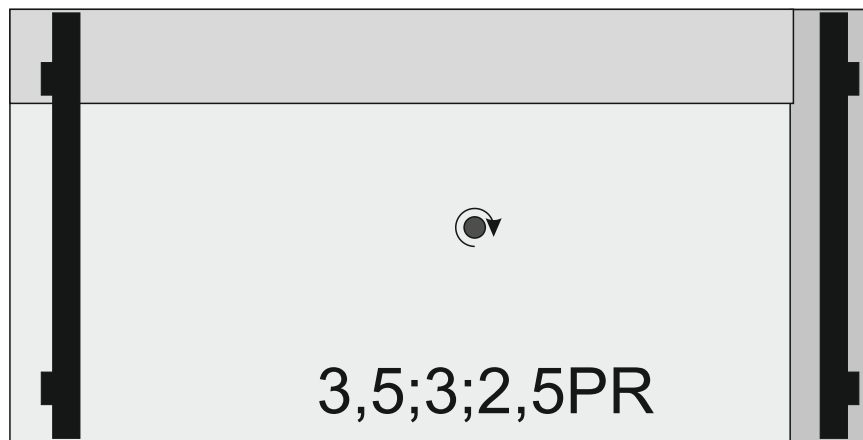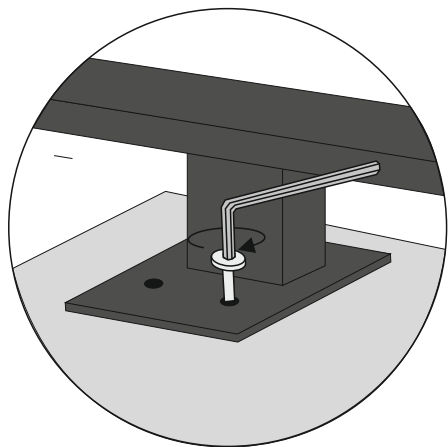

2x - IMP-1717 L-970






1x - IMP-1218



8x - 8x35

Noma

FOOT ASSEMBLY INSTRUCTION

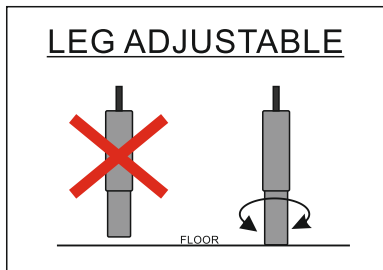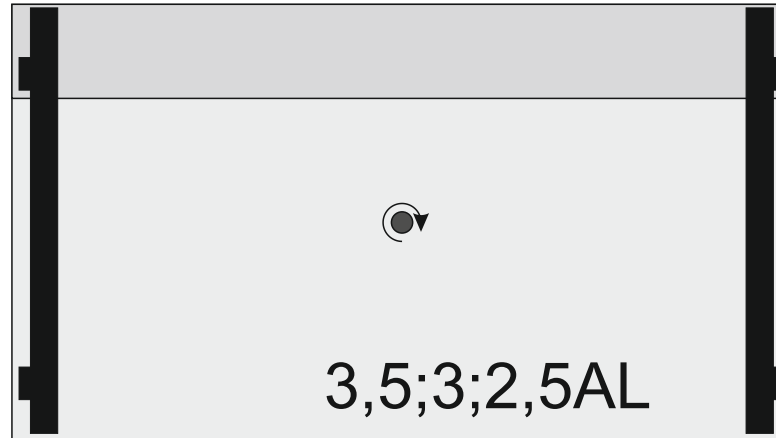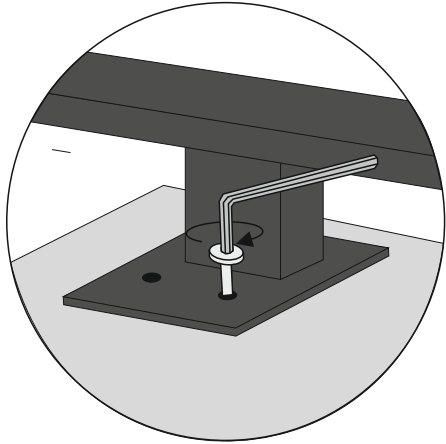

2x - IMP-1717 L-970






1x - IMP-1218



8x - 8x35

Noma

FOOT ASSEMBLY INSTRUCTION

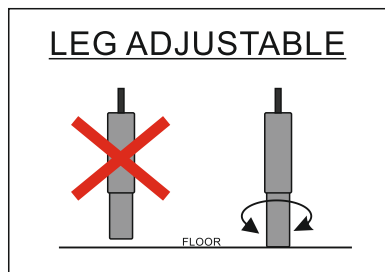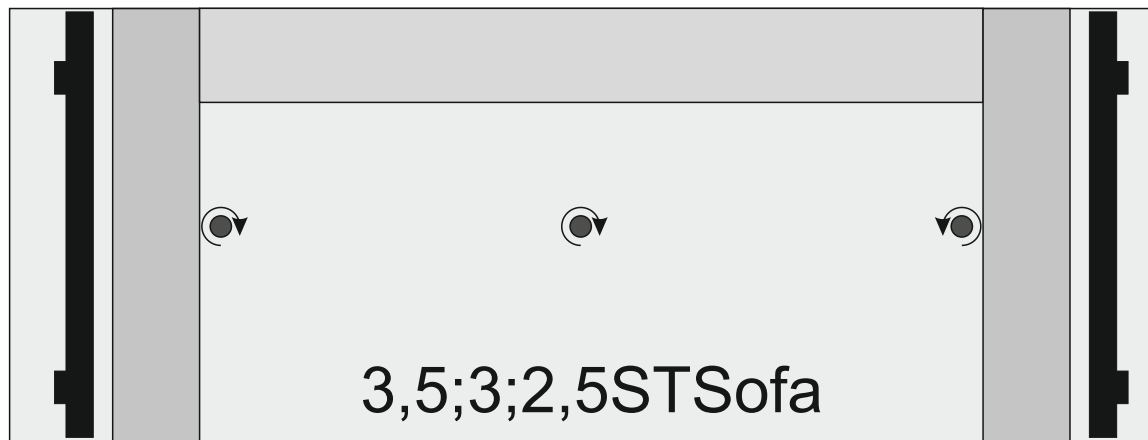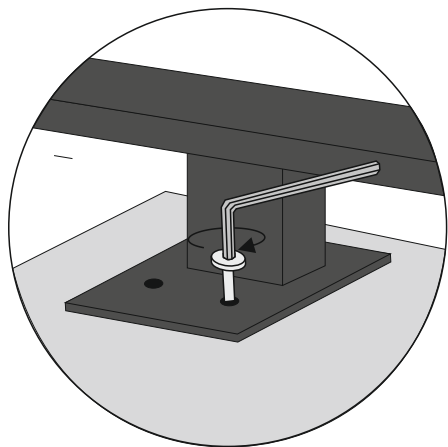

2x - IMP-1717 L-970






3x - IMP-1218



8x - 8x35

Noma

FOOT ASSEMBLY INSTRUCTION

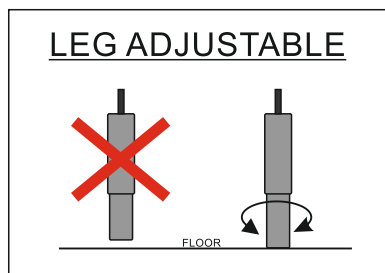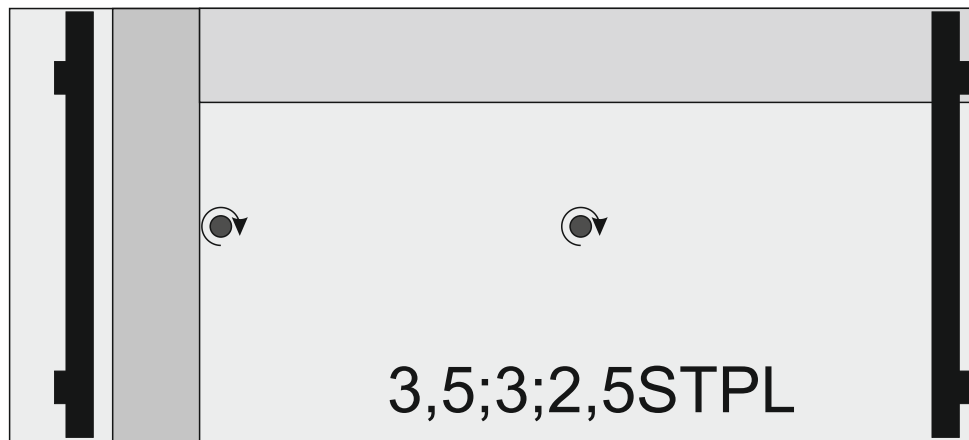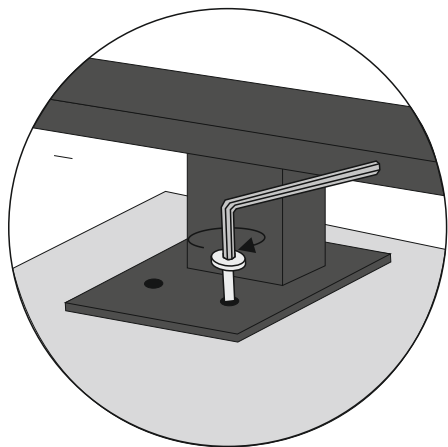

2x - IMP-1717 L-970






2x - IMP-1218



8x - 8x35

Noma

FOOT ASSEMBLY INSTRUCTION

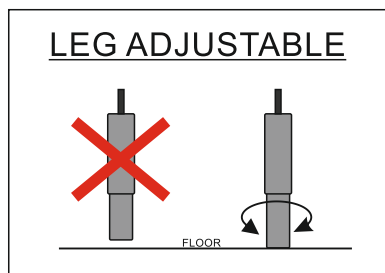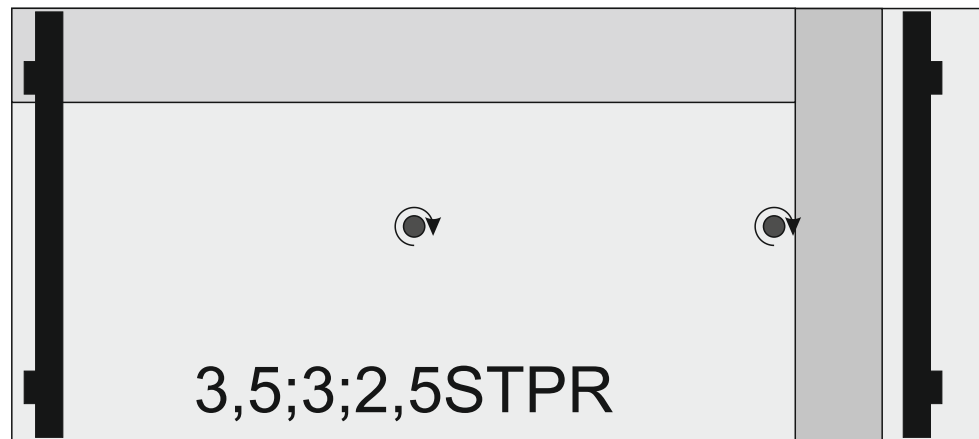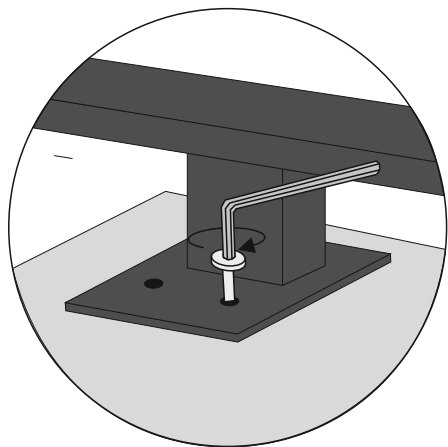

2x - IMP-1717 L-970





2x - IMP-1218



8x - 8x35

Noma

FOOT ASSEMBLY INSTRUCTION

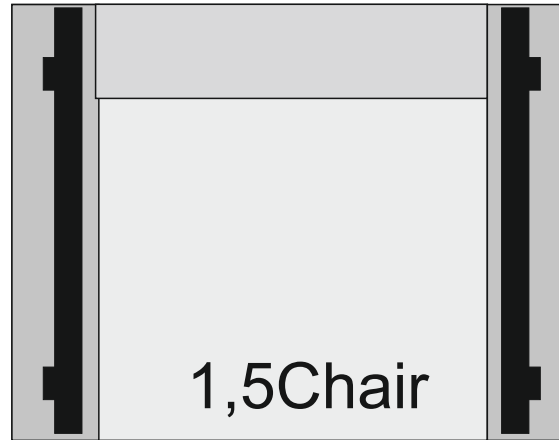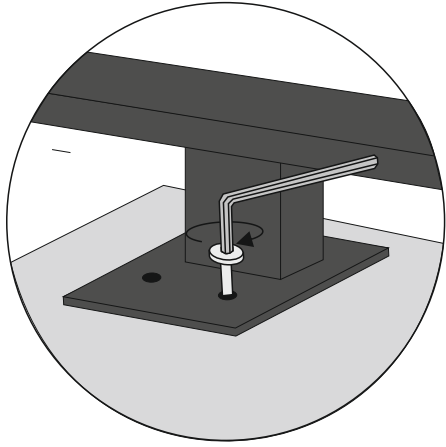



2x - IMP-1717 L-970



8x - 8x35

Noma

FOOT ASSEMBLY INSTRUCTION

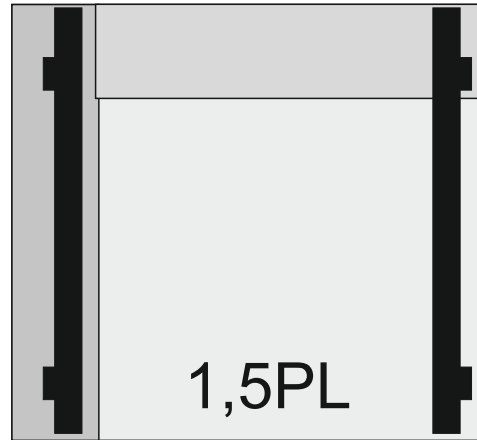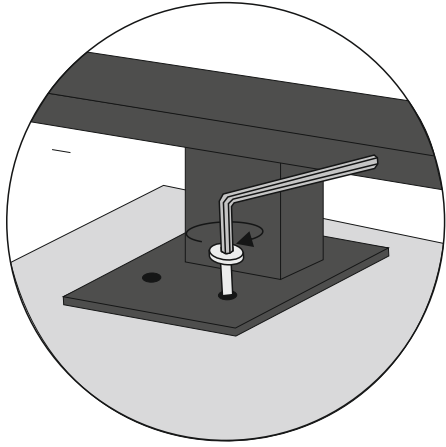



2x - IMP-1717 L-970



8x - 8x35

Noma

FOOT ASSEMBLY INSTRUCTION

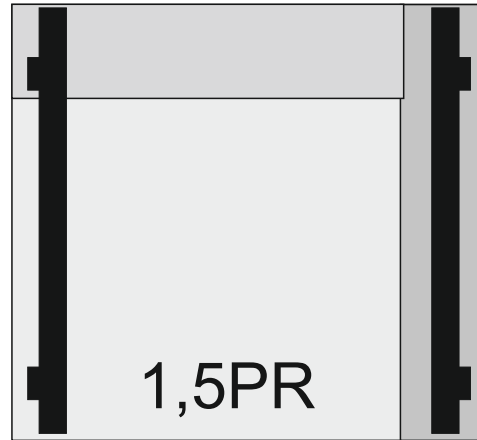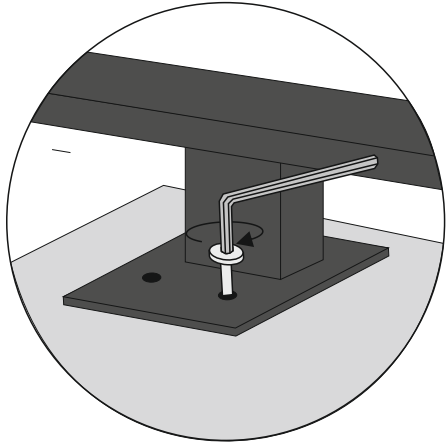



2x - IMP-1717 L-970



8x - 8x35

Noma

FOOT ASSEMBLY INSTRUCTION

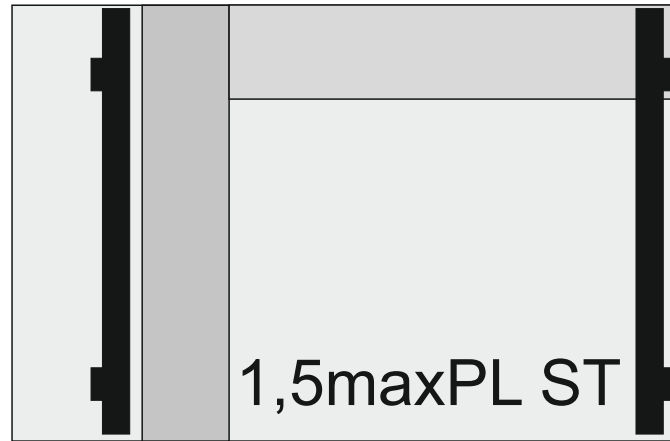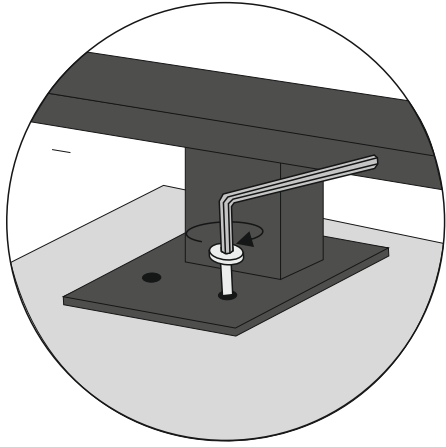



2x - IMP-1717 L-970



12x - 8x35

Noma

FOOT ASSEMBLY INSTRUCTION

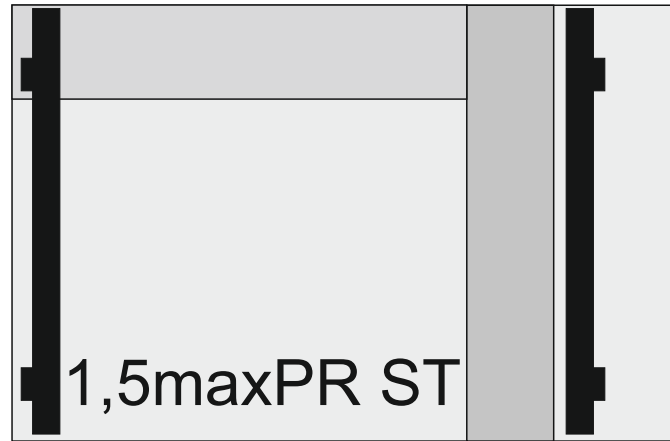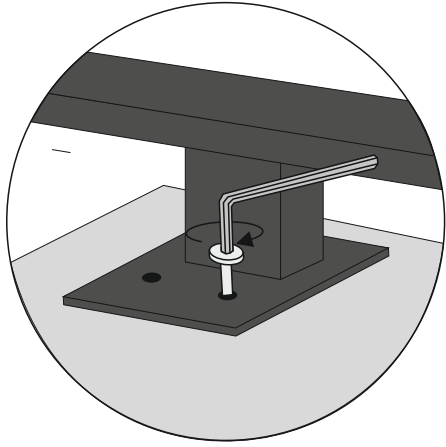




2x - IMP-1717 L-970



12x - 8x35

Noma

FOOT ASSEMBLY INSTRUCTION

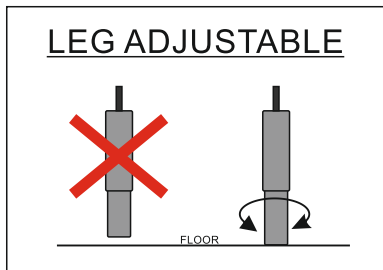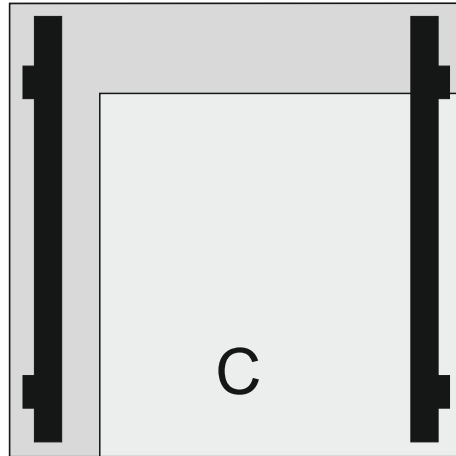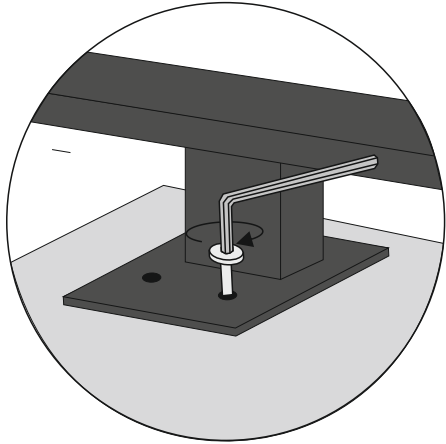



2x - IMP-1717 L-970








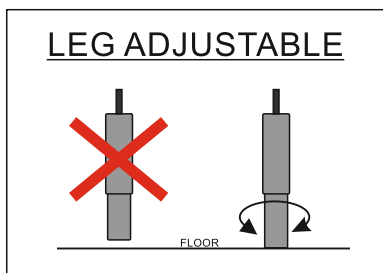
8x - 8x35

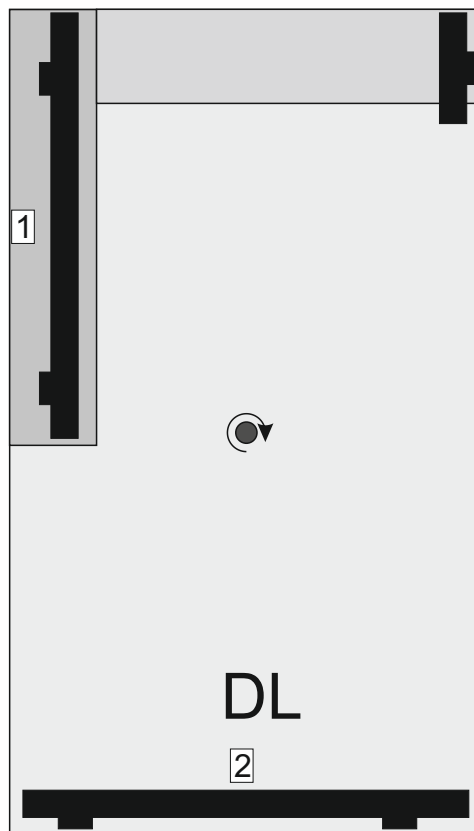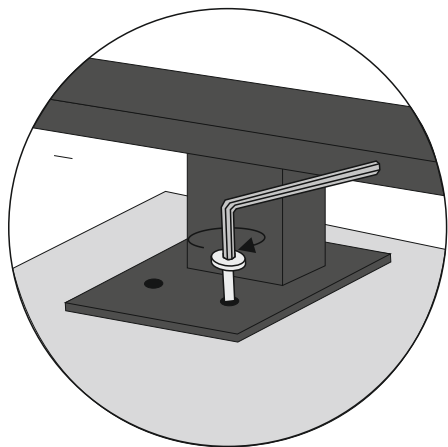Noma

FOOT ASSEMBLY INSTRUCTION











-  1x - IMP-1717 L-210
-  1x - IMP-1717 L-970
-  1x - IMP-1717 L-1180
-  1x - IMP-1218
-  10x - 8x35

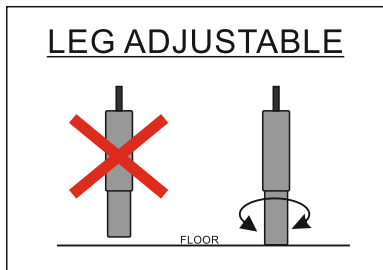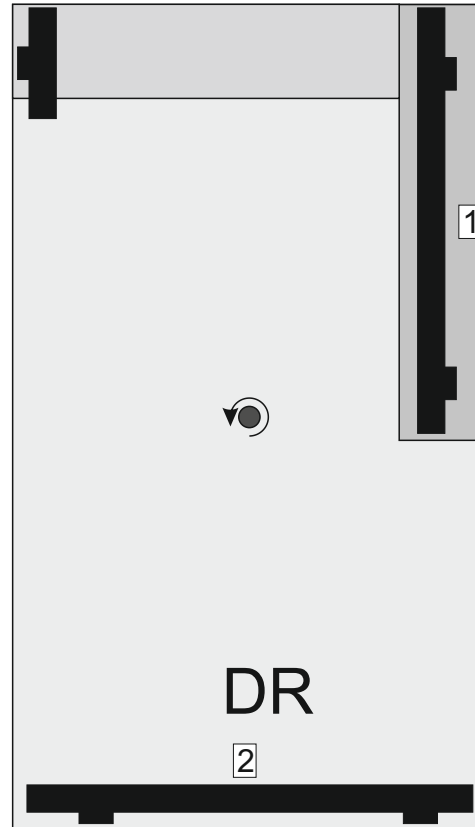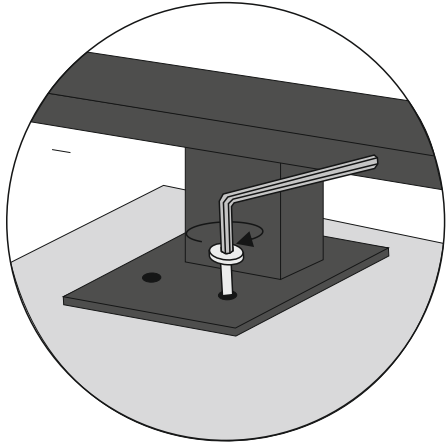

Noma



FOOT ASSEMBLY INSTRUCTION








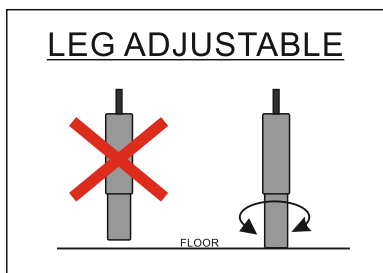
-  1x - IMP-1717 L-210
-  1x - IMP-1717 L-970
-  1x - IMP-1717 L-1180
-  1x - IMP-1218
-  10x - 8x35

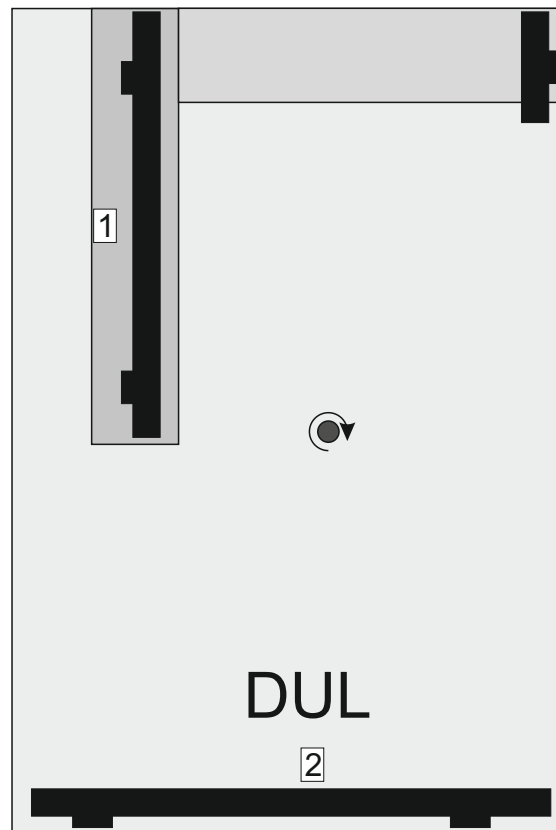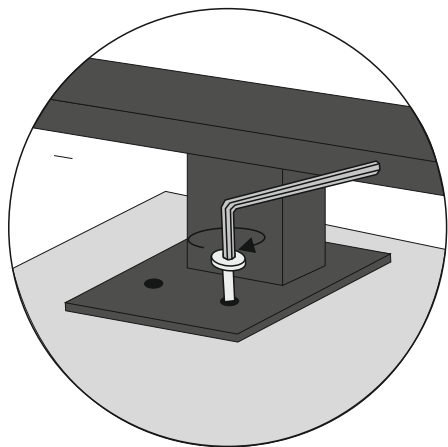Noma

FOOT ASSEMBLY INSTRUCTION










-  1x - IMP-1717 L-210
-  1x - IMP-1717 L-970
-  1x - IMP-1717 L-1370
-  1x - IMP-1218
-  10x - 8x35

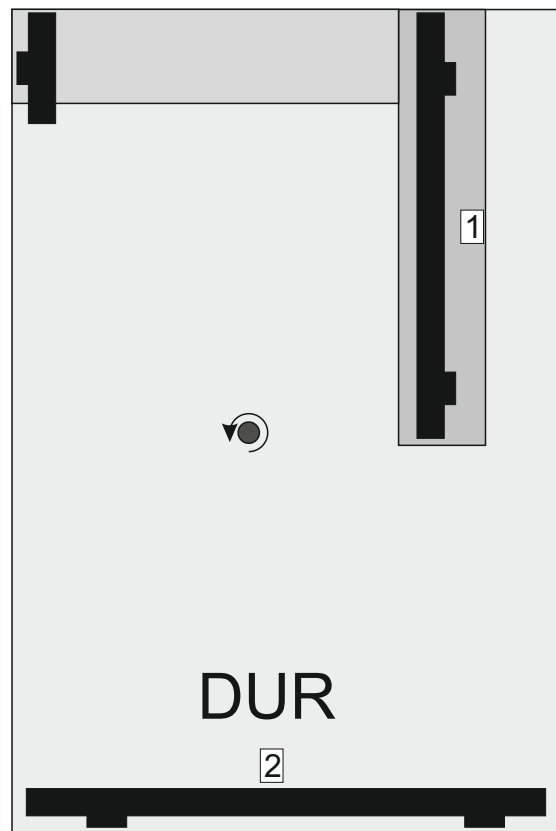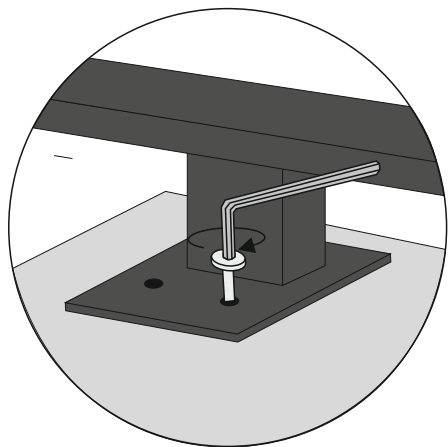


Noma

FOOT ASSEMBLY INSTRUCTION





-  1x - IMP-1717 L-210
-  1x - IMP-1717 L-970
-  1x - IMP-1717 L-1370
-  1x - IMP-1218
-  10x - 8x35

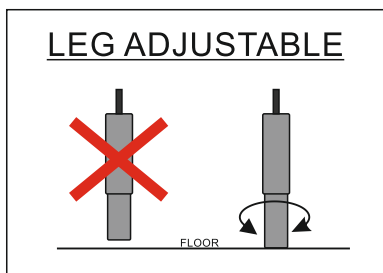

Noma

FOOT ASSEMBLY INSTRUCTION

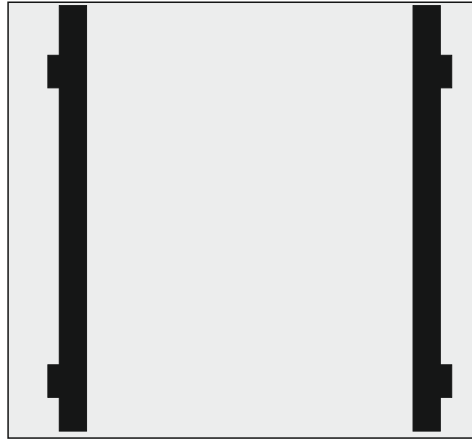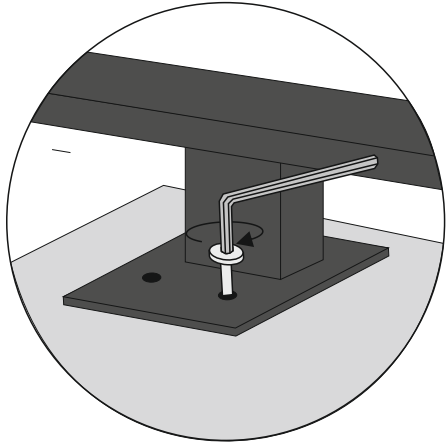



2x - IMP-1717 L-970



8x - 8x35

Noma

FOOT ASSEMBLY INSTRUCTION

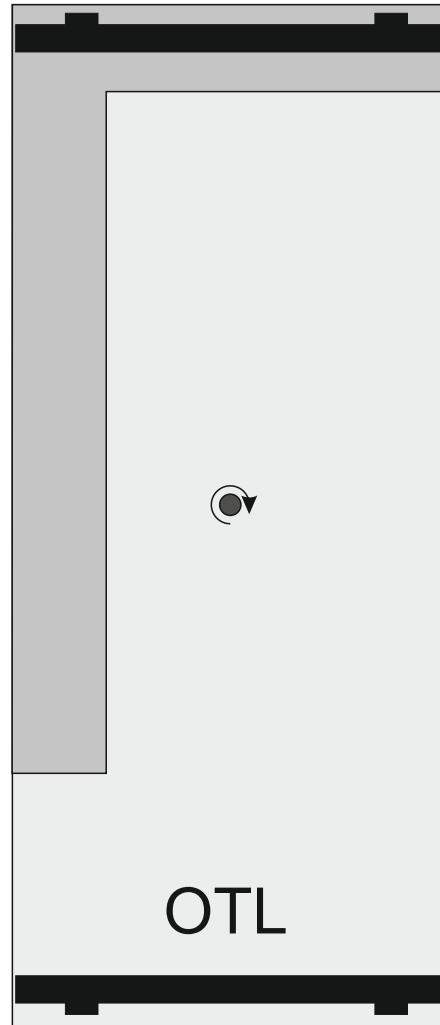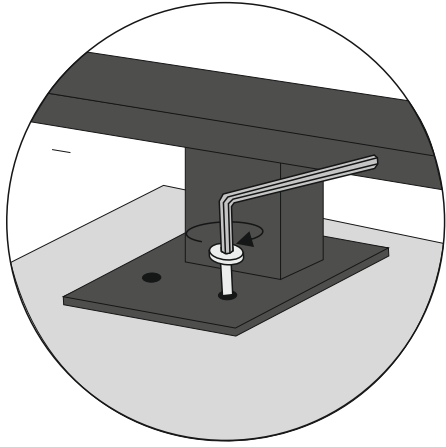

2x - IMP-1717 L-970





1x - IMP-1218



12x - 8x35

Noma

FOOT ASSEMBLY INSTRUCTION

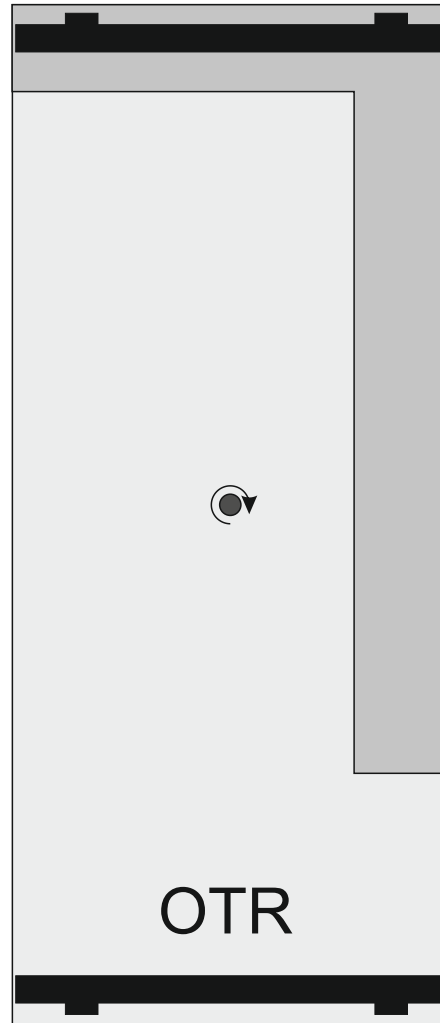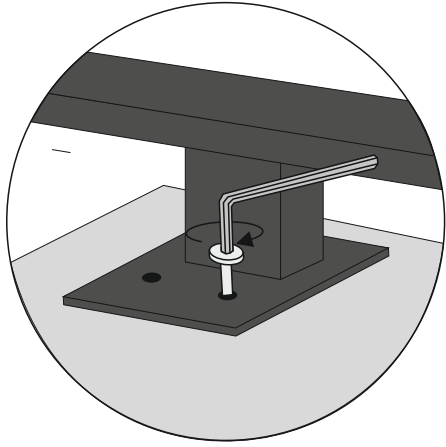

2x - IMP-1717 L-970



1x - IMP-1218



12x - 8x35