



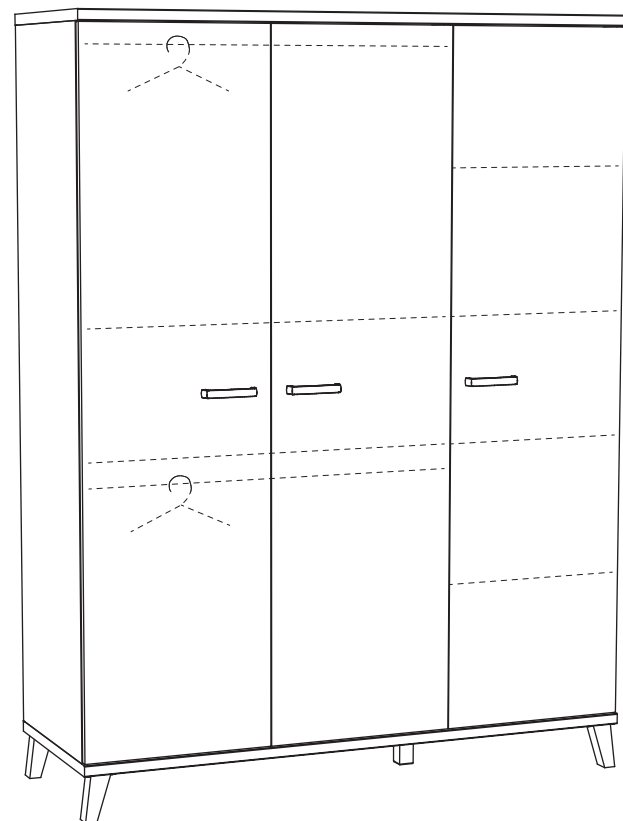



montage instructies
instructions de montage
assembly instructions
montage anleitung

EVY


K3

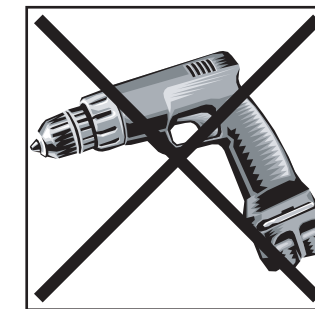

K3 150 x 200 x 53 cm

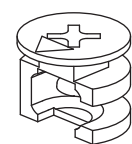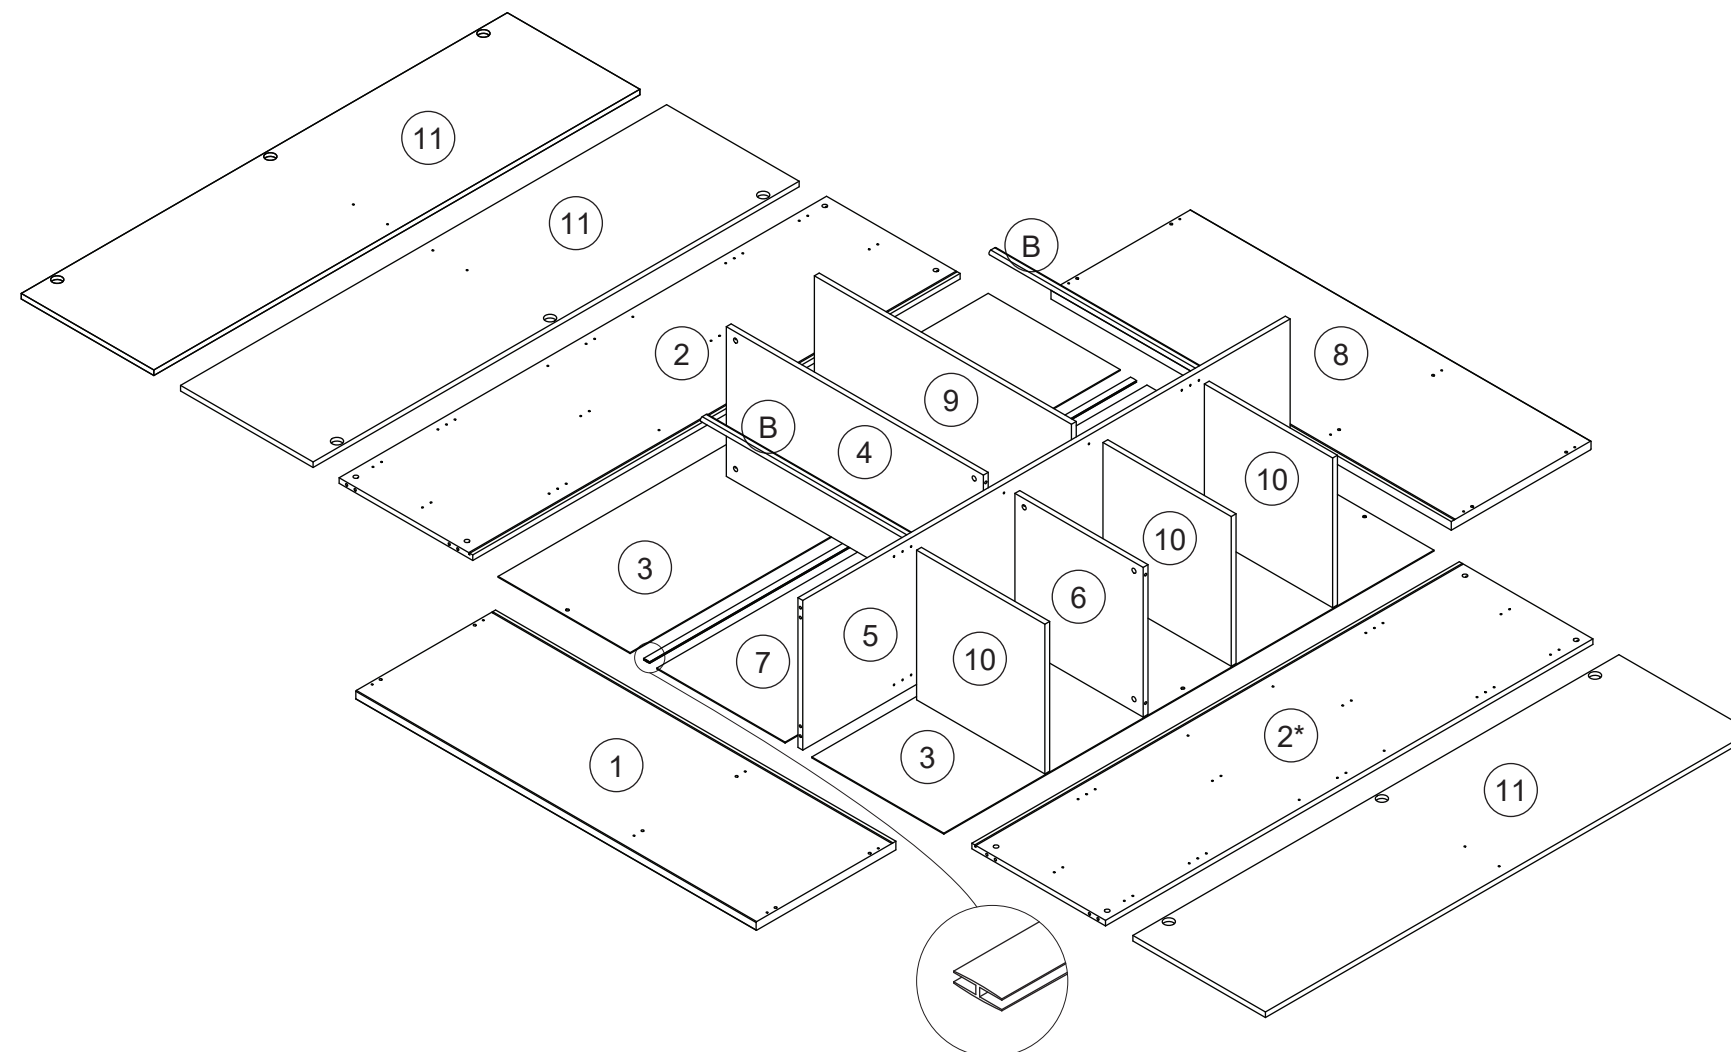

nr 102
x 20

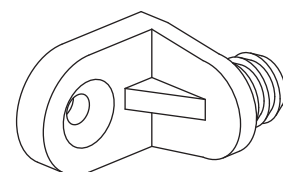


nr 130
x 4




nr 128
x 2



nr 141
x 12

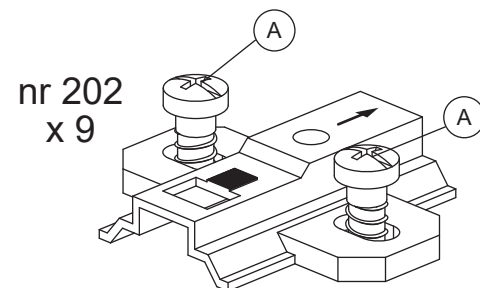


nr 202
x 9

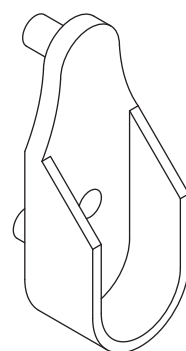


nr 159
x 4



nr 236
x 26




nr 240
x 12




nr 260
x 20



nr 294
x 6

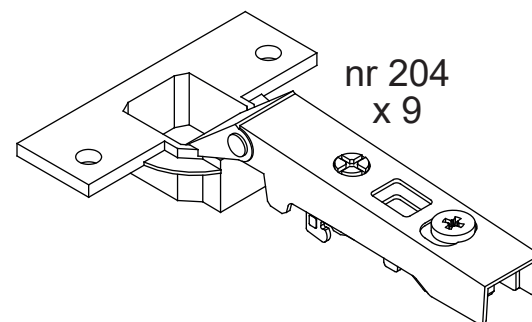

nr 204
x 9

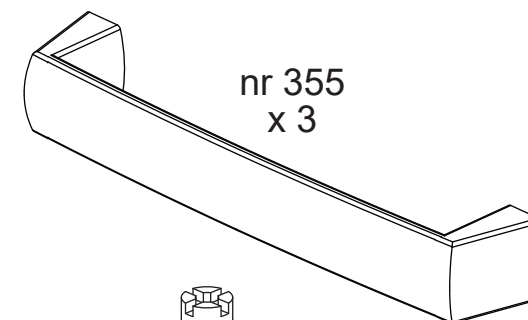


nr 355
x 3




nr 298
x 16















nr 300
x 16

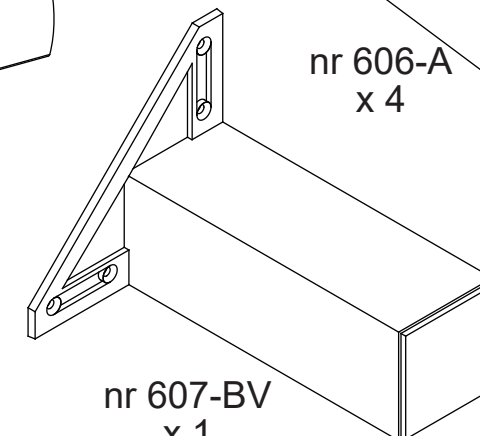

nr 607-BV
x 1

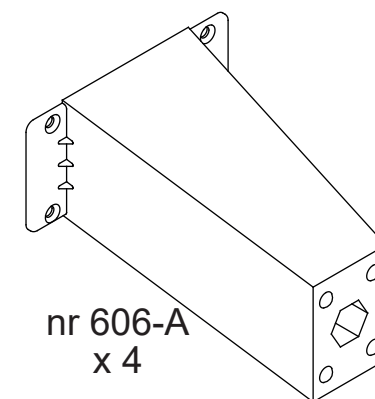

nr 606-A
x 4

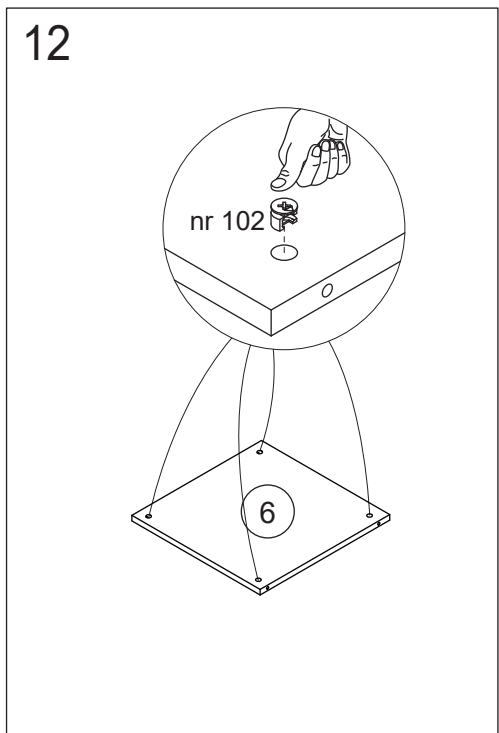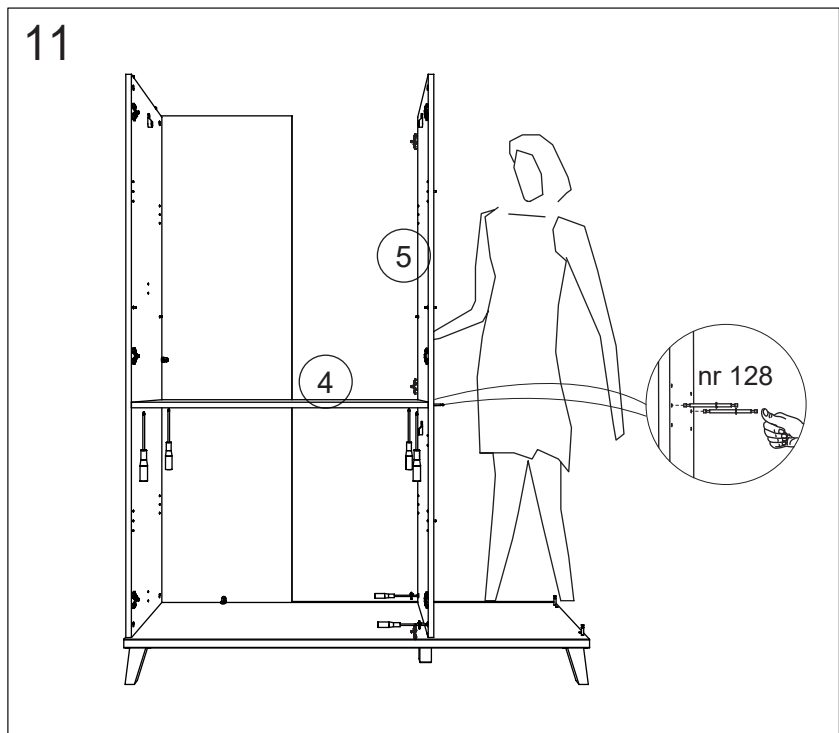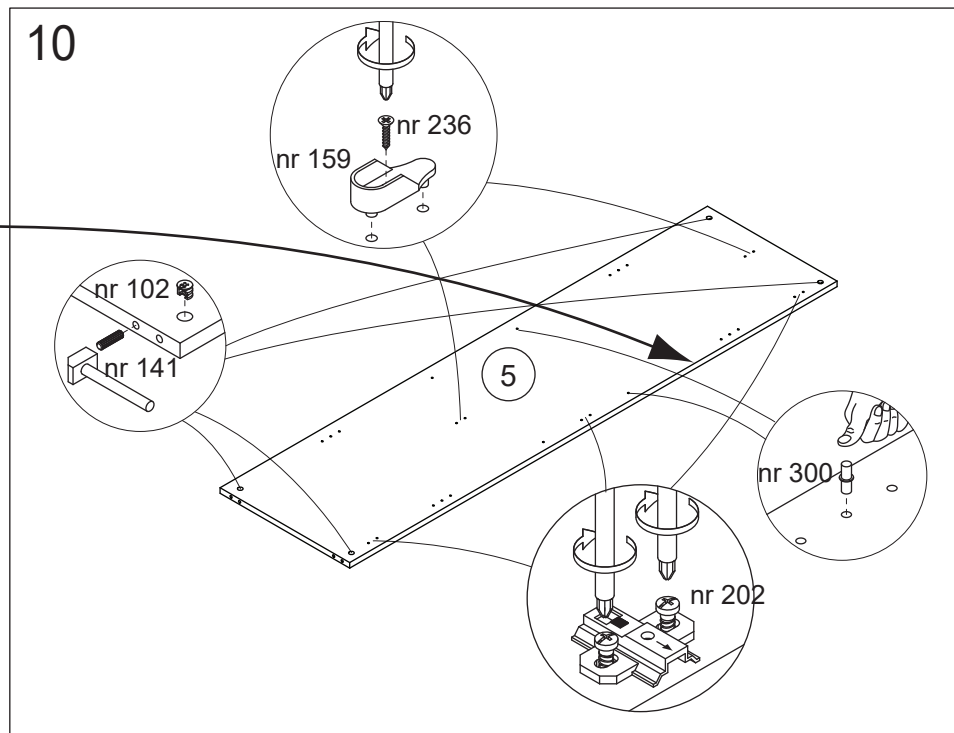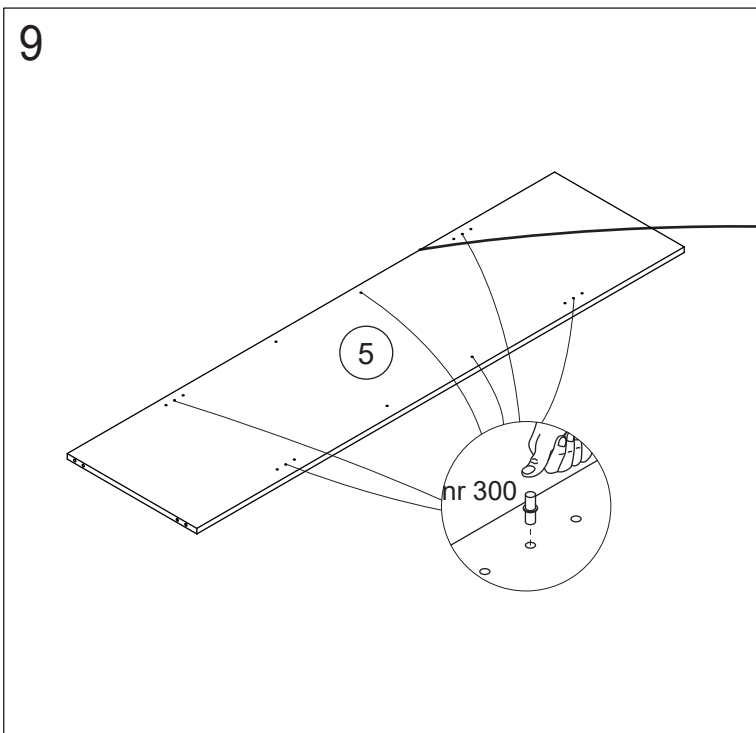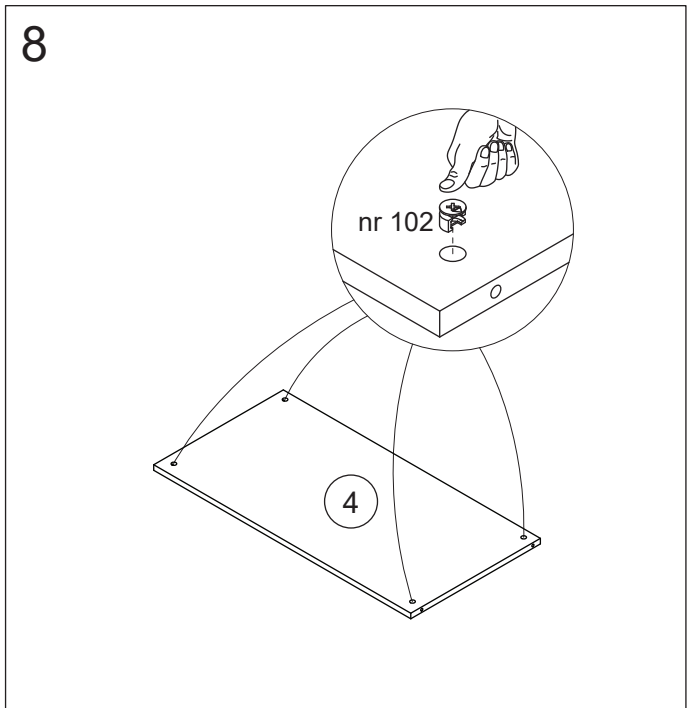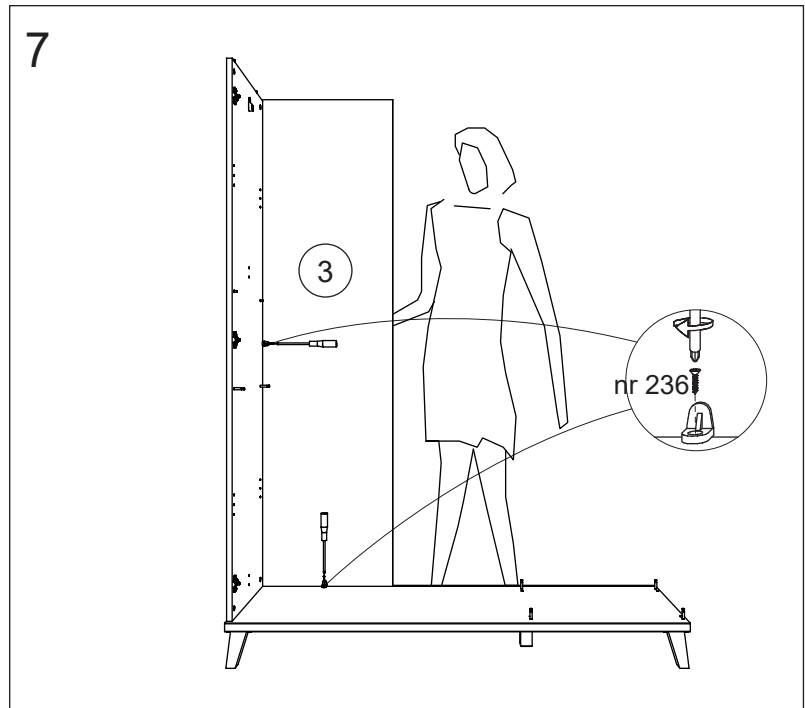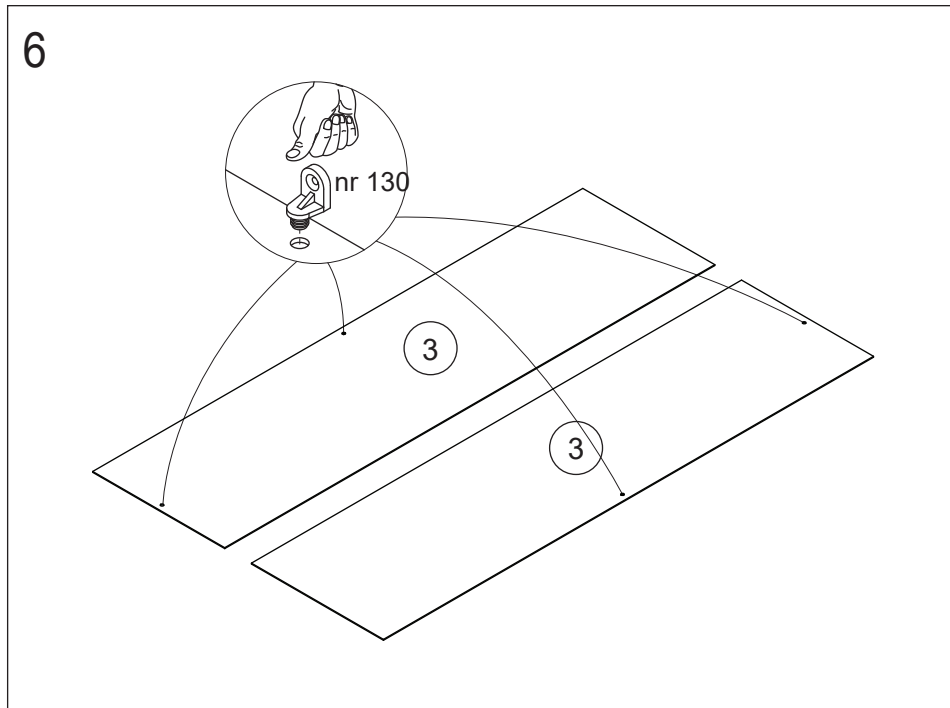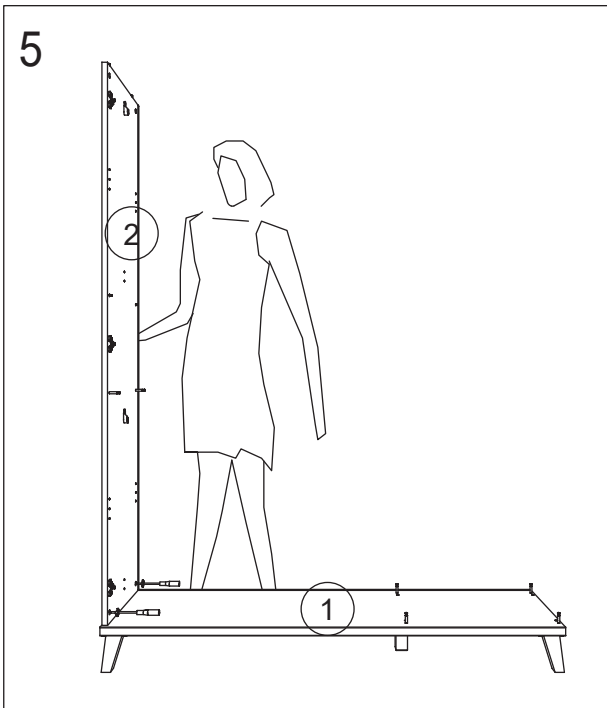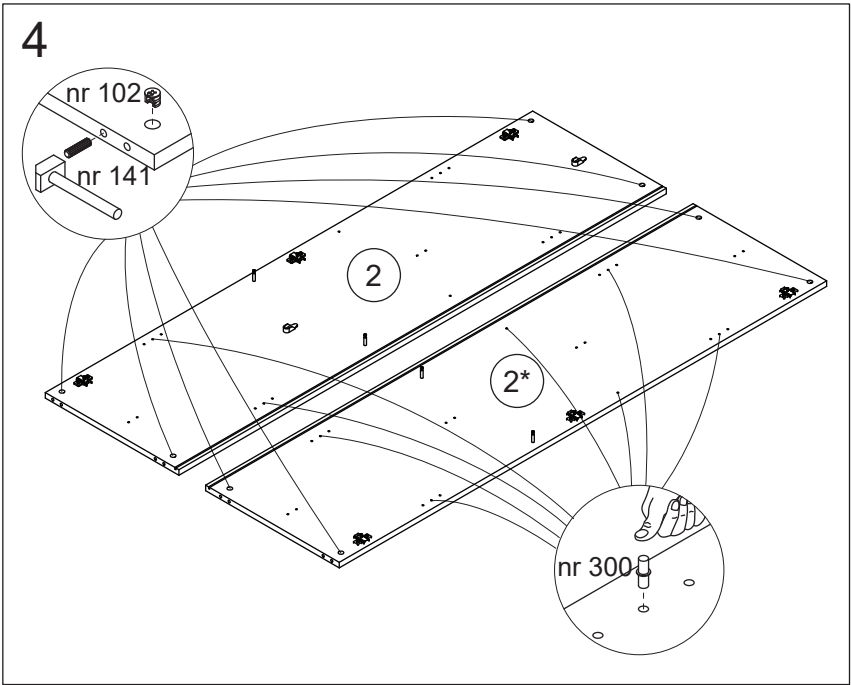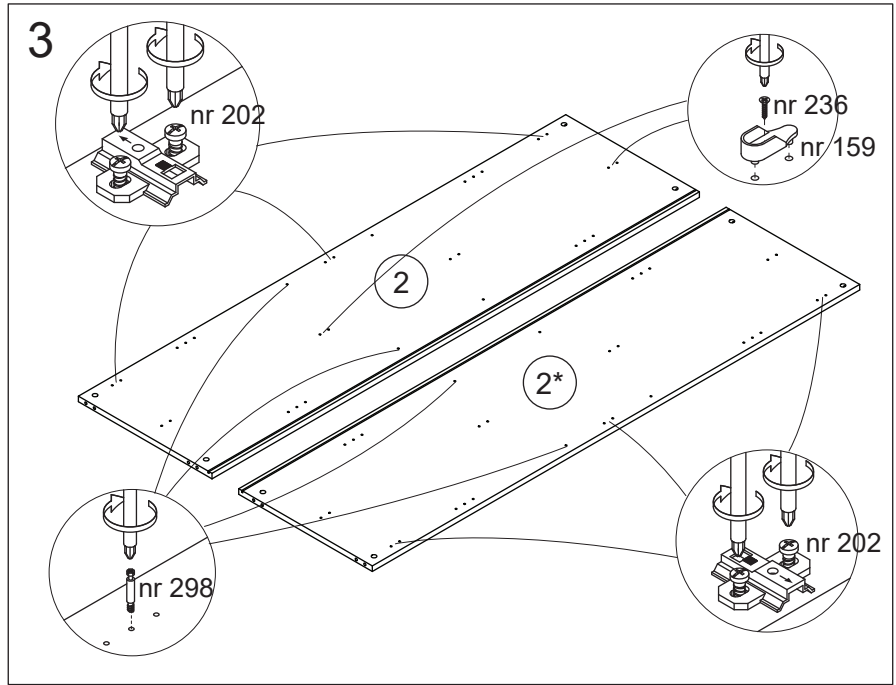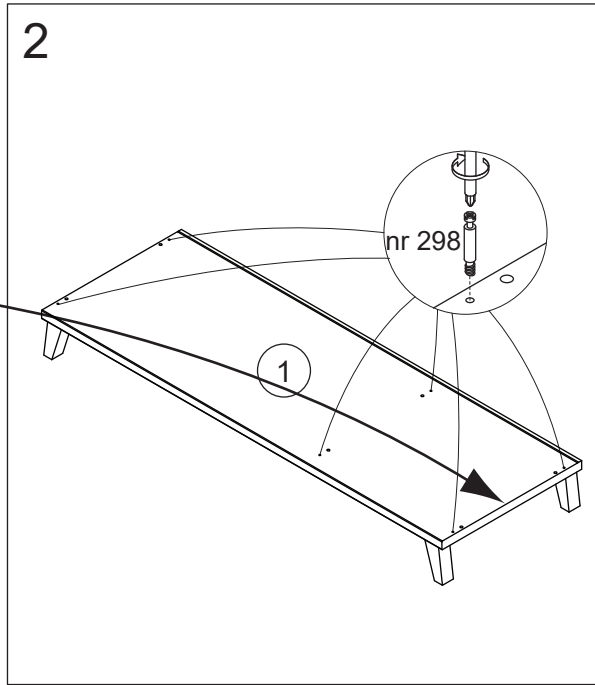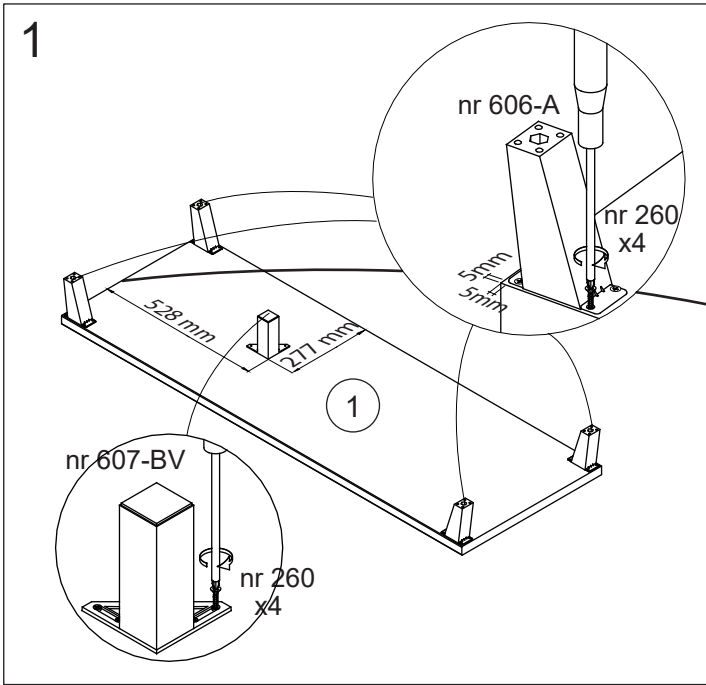

3

nr 236

Diagram 8 shows the back of the cabinet with a hanging rail being attached. A circular callout shows a close-up of a screw (nr 236) being used to secure the rail to the back panel.

Für die richtige Regelung der Türe soll man darauf achten daß der Schrank waagrecht steht, Sie können mit den Schrauben der Scharniere 204 die Türe regeln. Sie können auch die Türe vertikal regeln. Schrauben A entspannen und der Scharnierblock Nr. 202 nach unter oder nach oben verschieben und wieder festschrauben.