
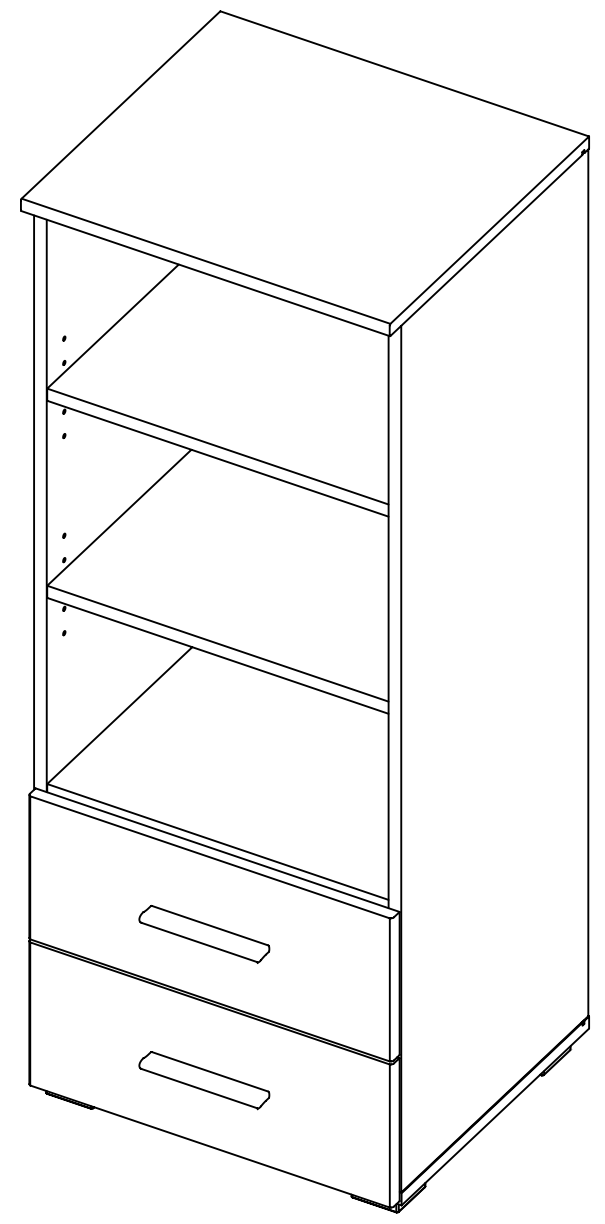
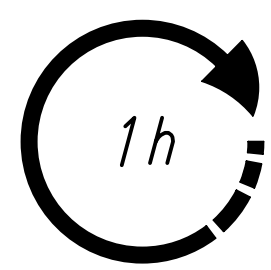
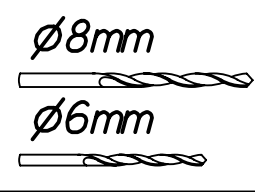
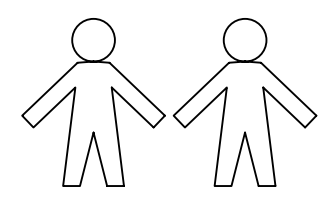
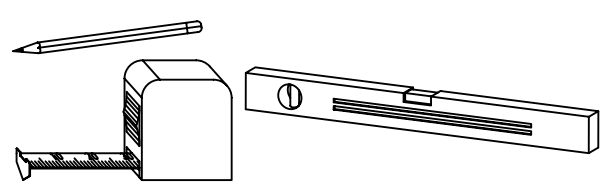





1.

M2135_03







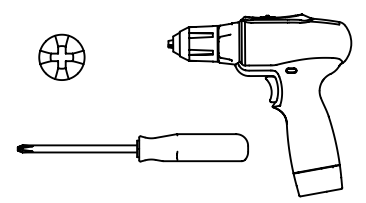


2.


2x

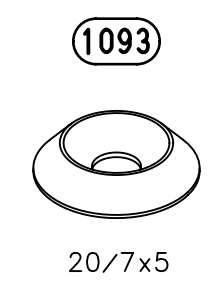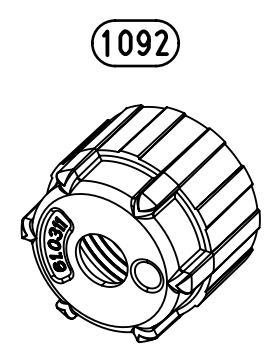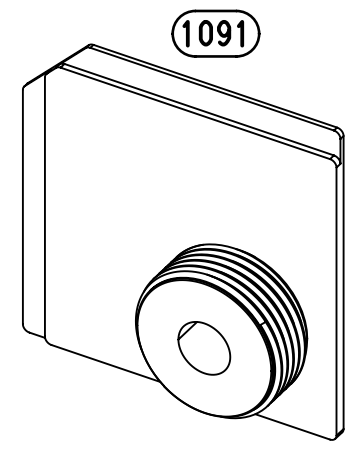




1147

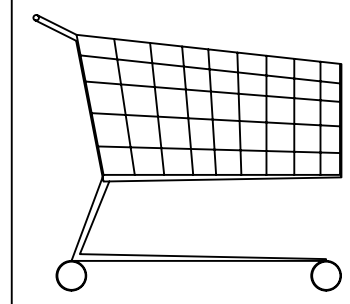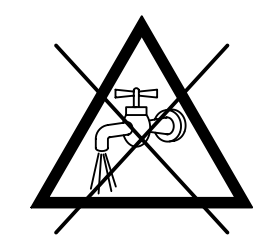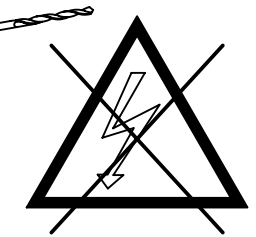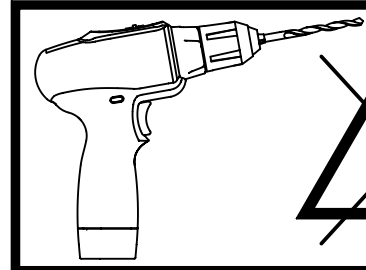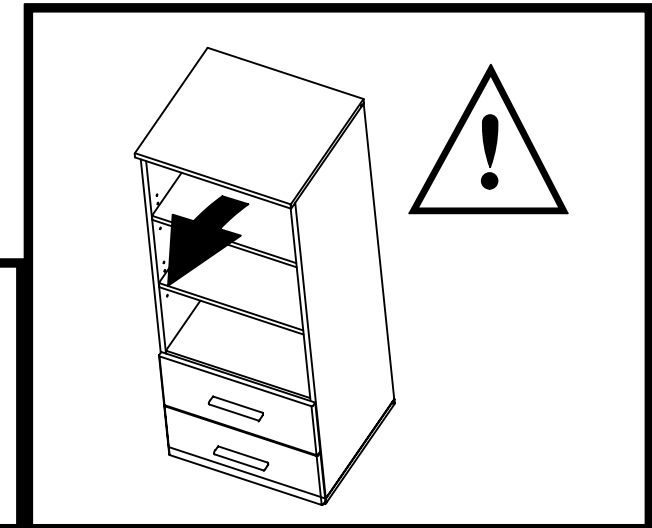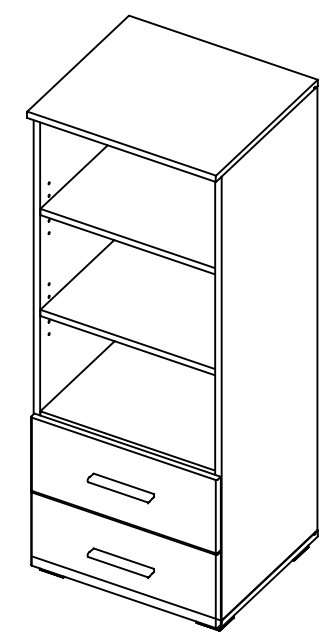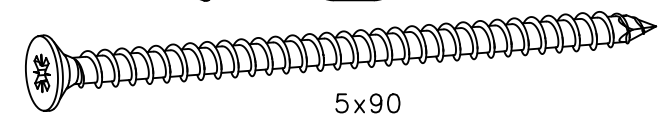


Ø8mm

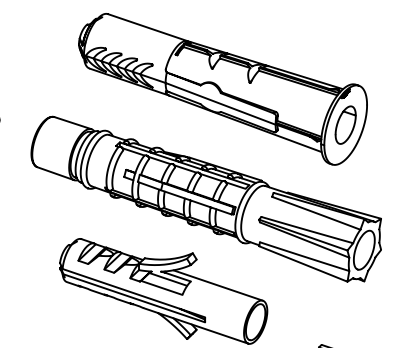


?

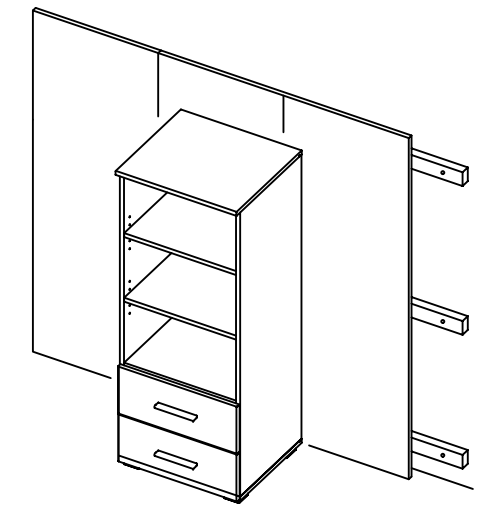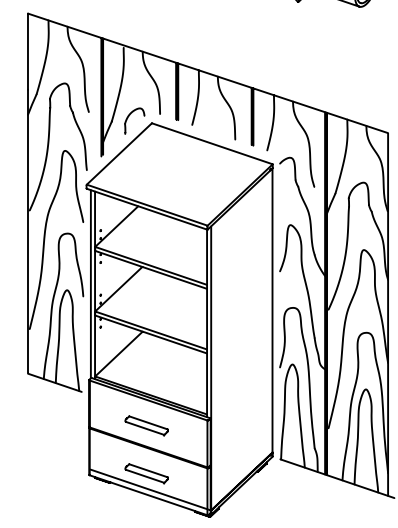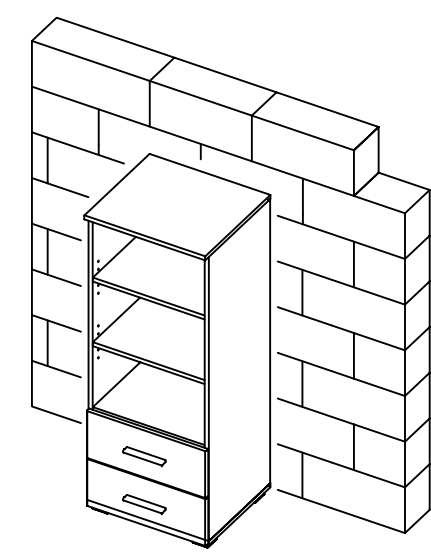

3.

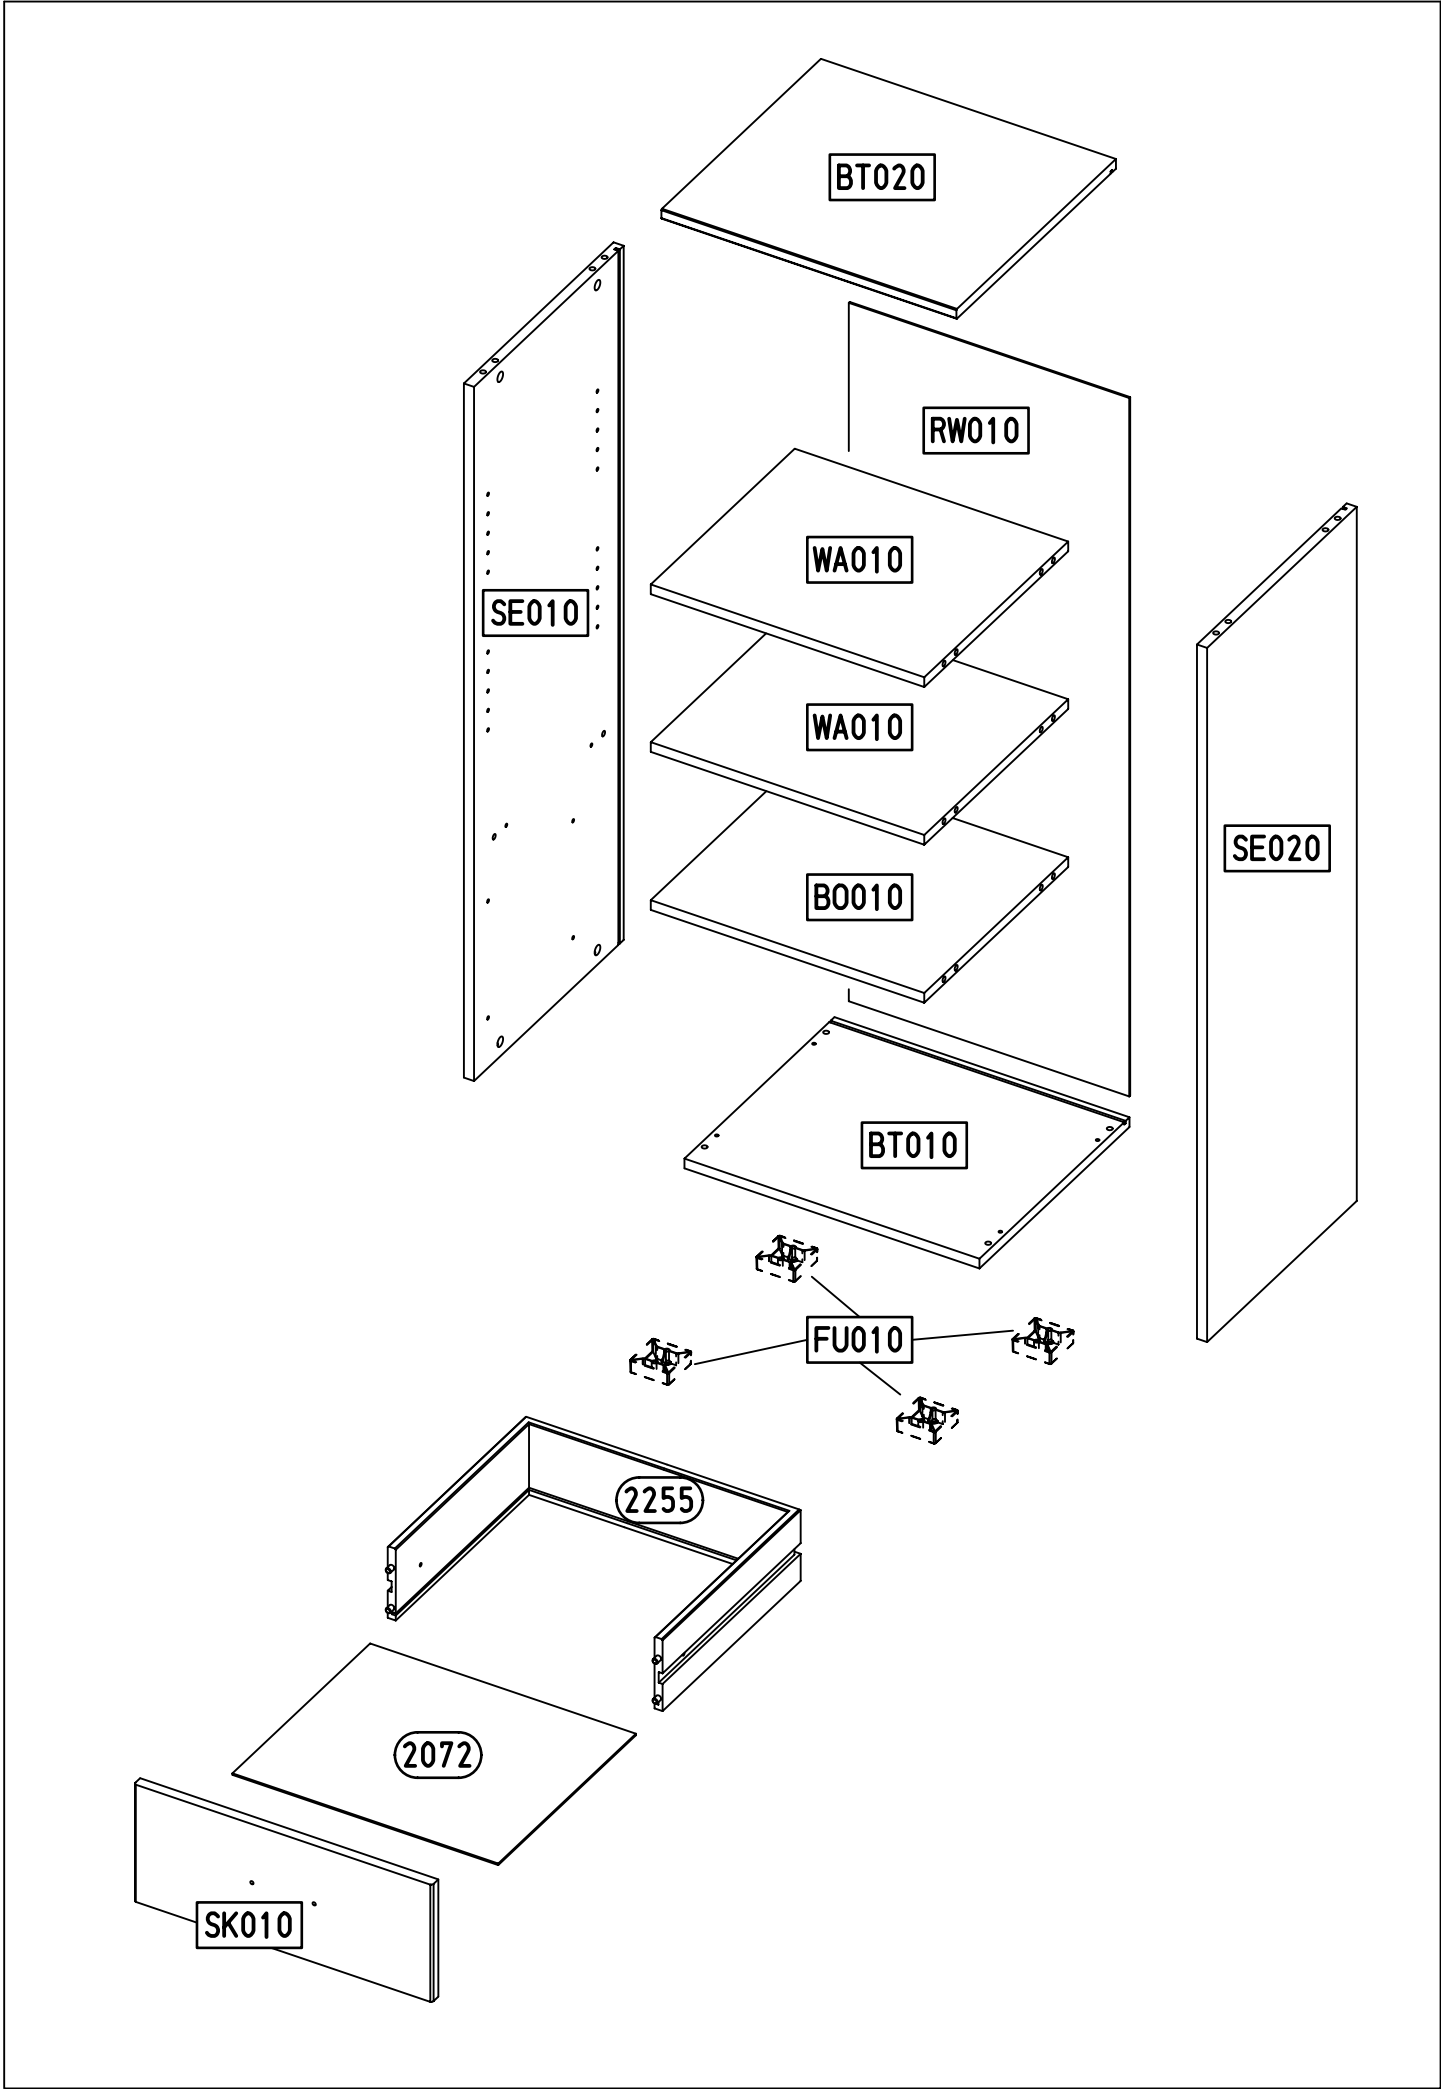




4.

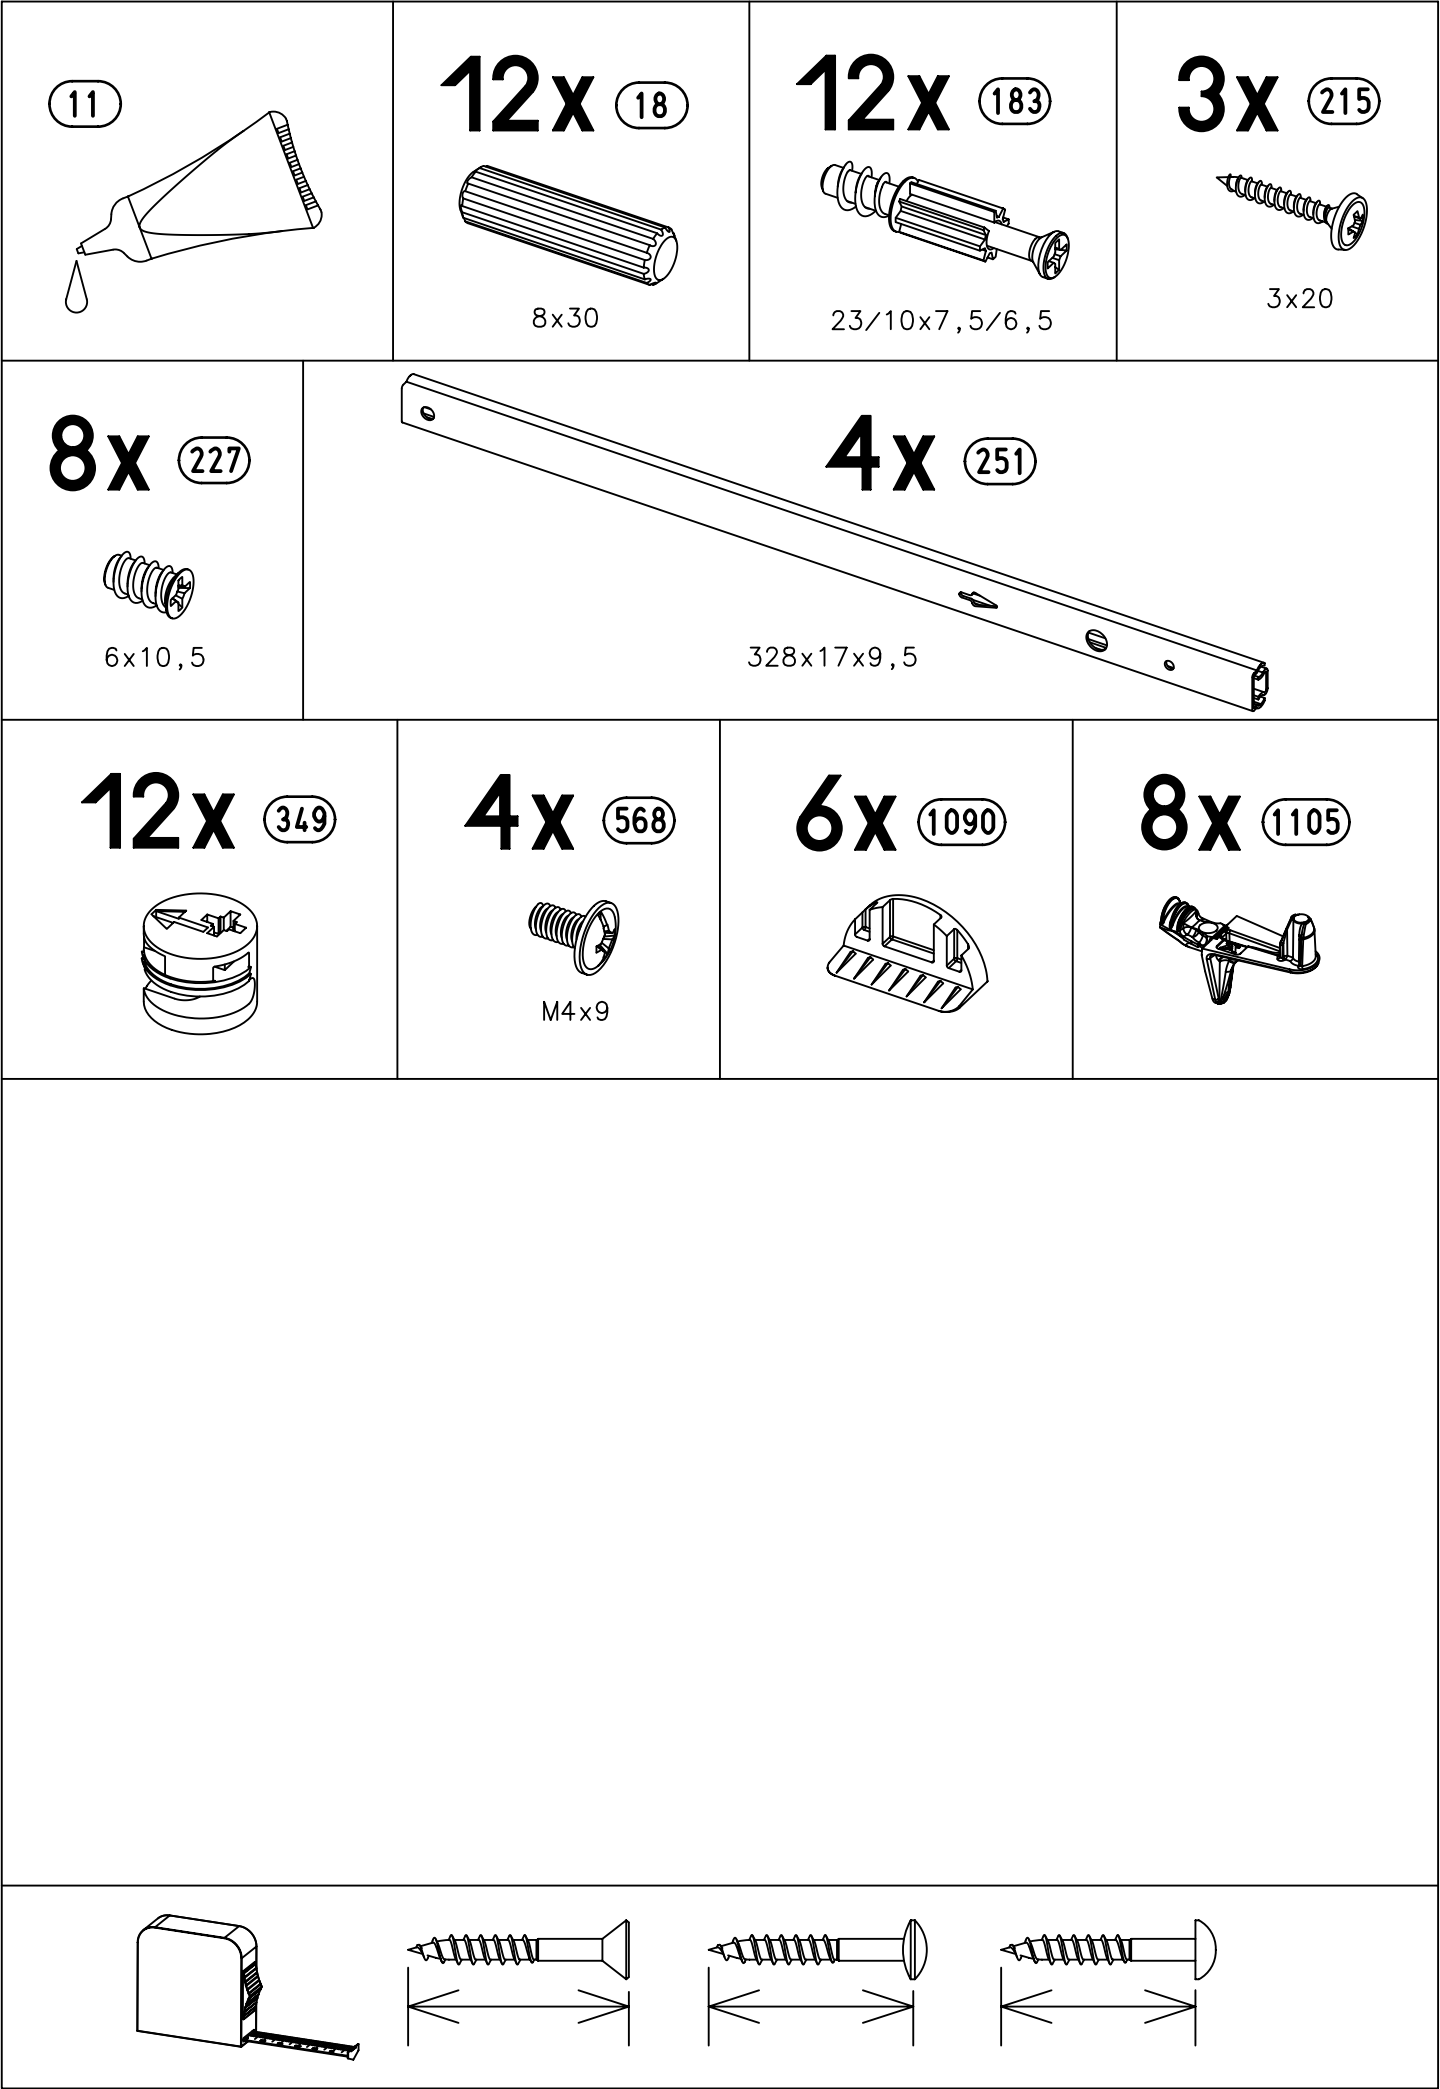

5.

1


11

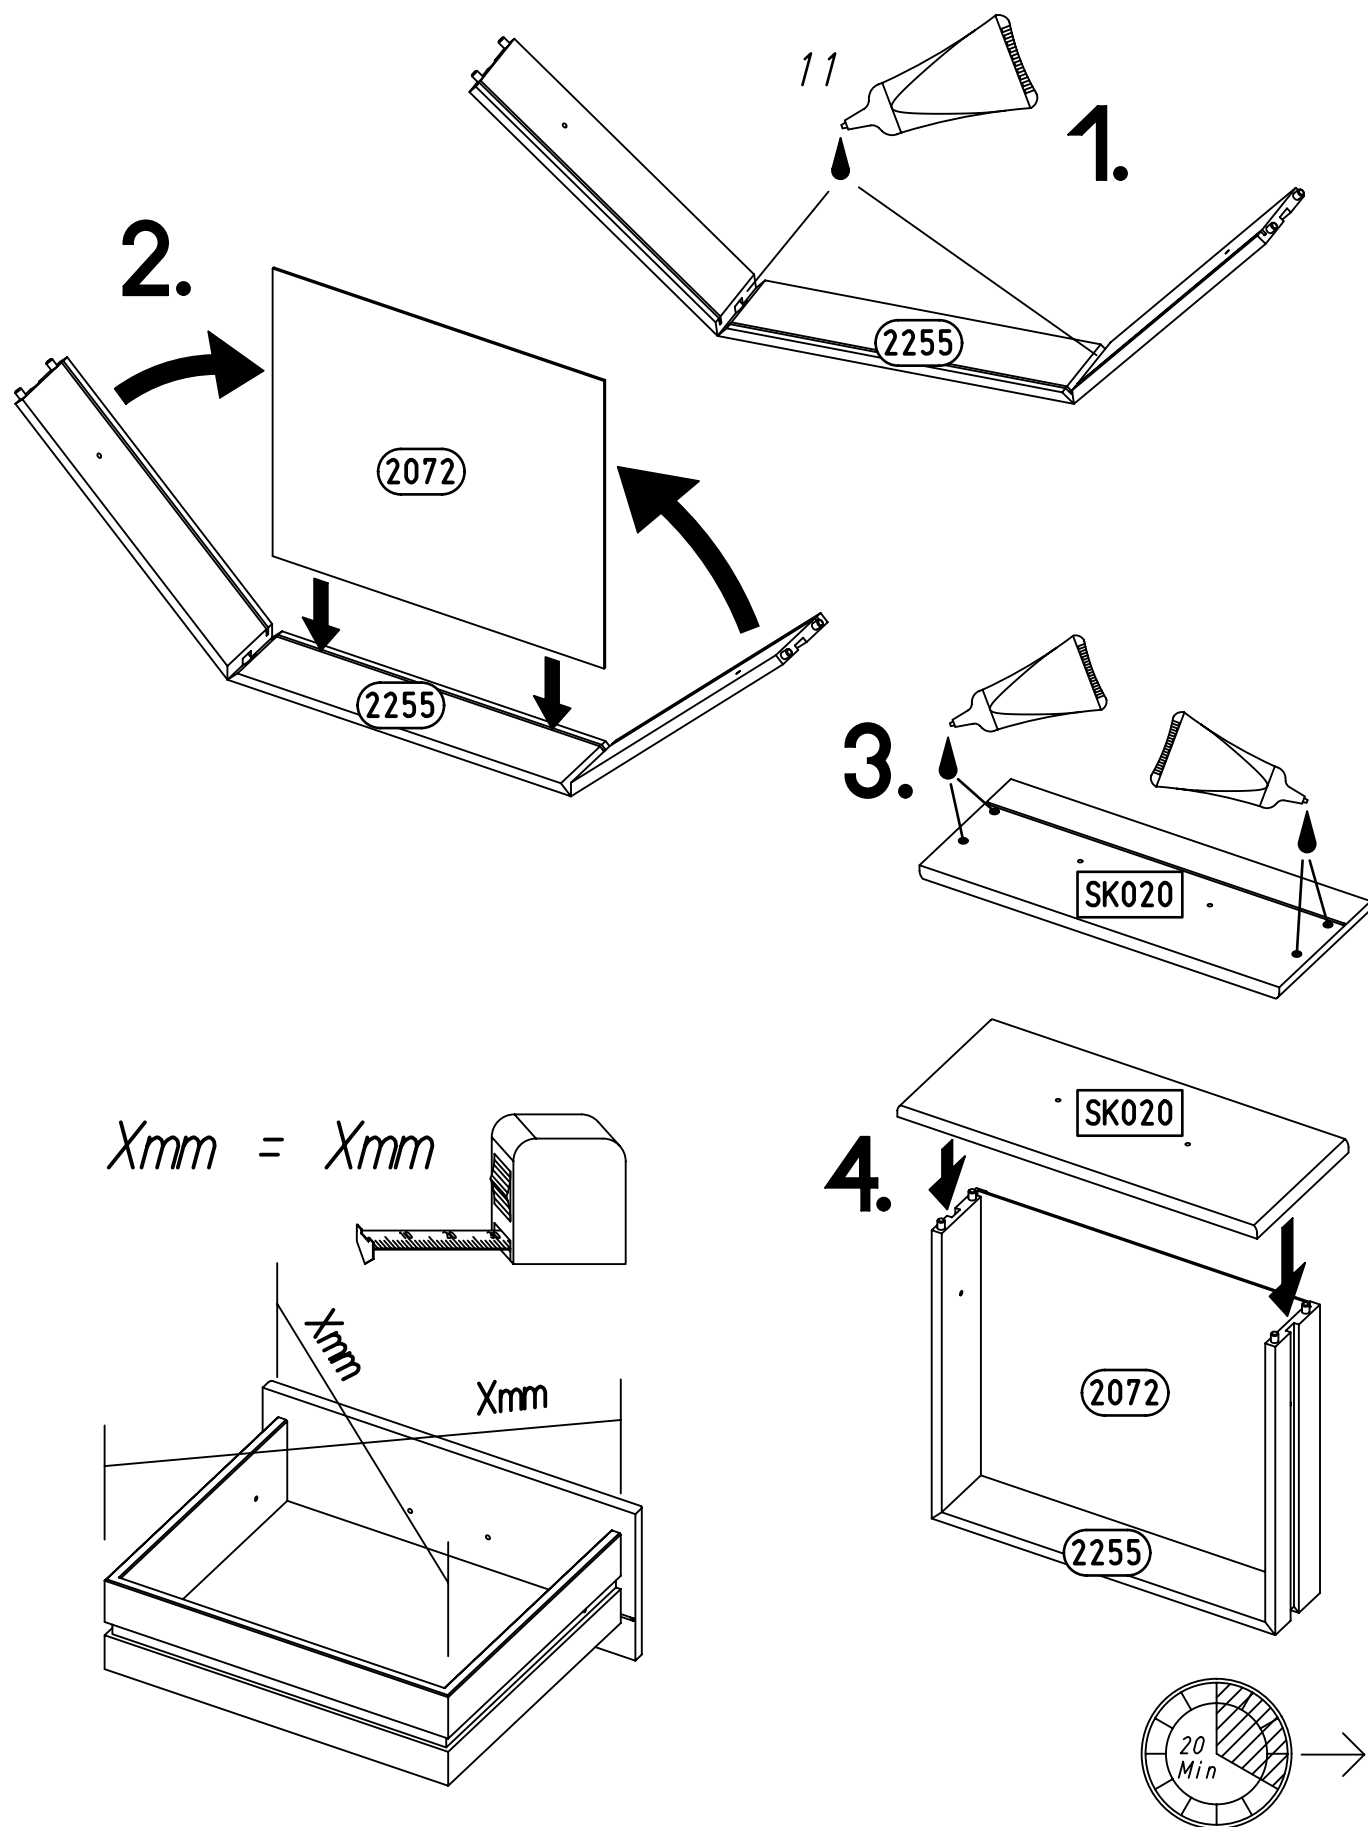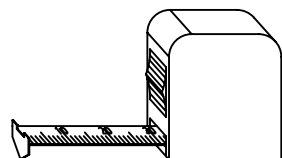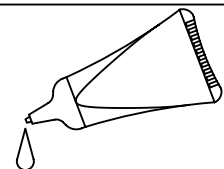

M2135

6.

2

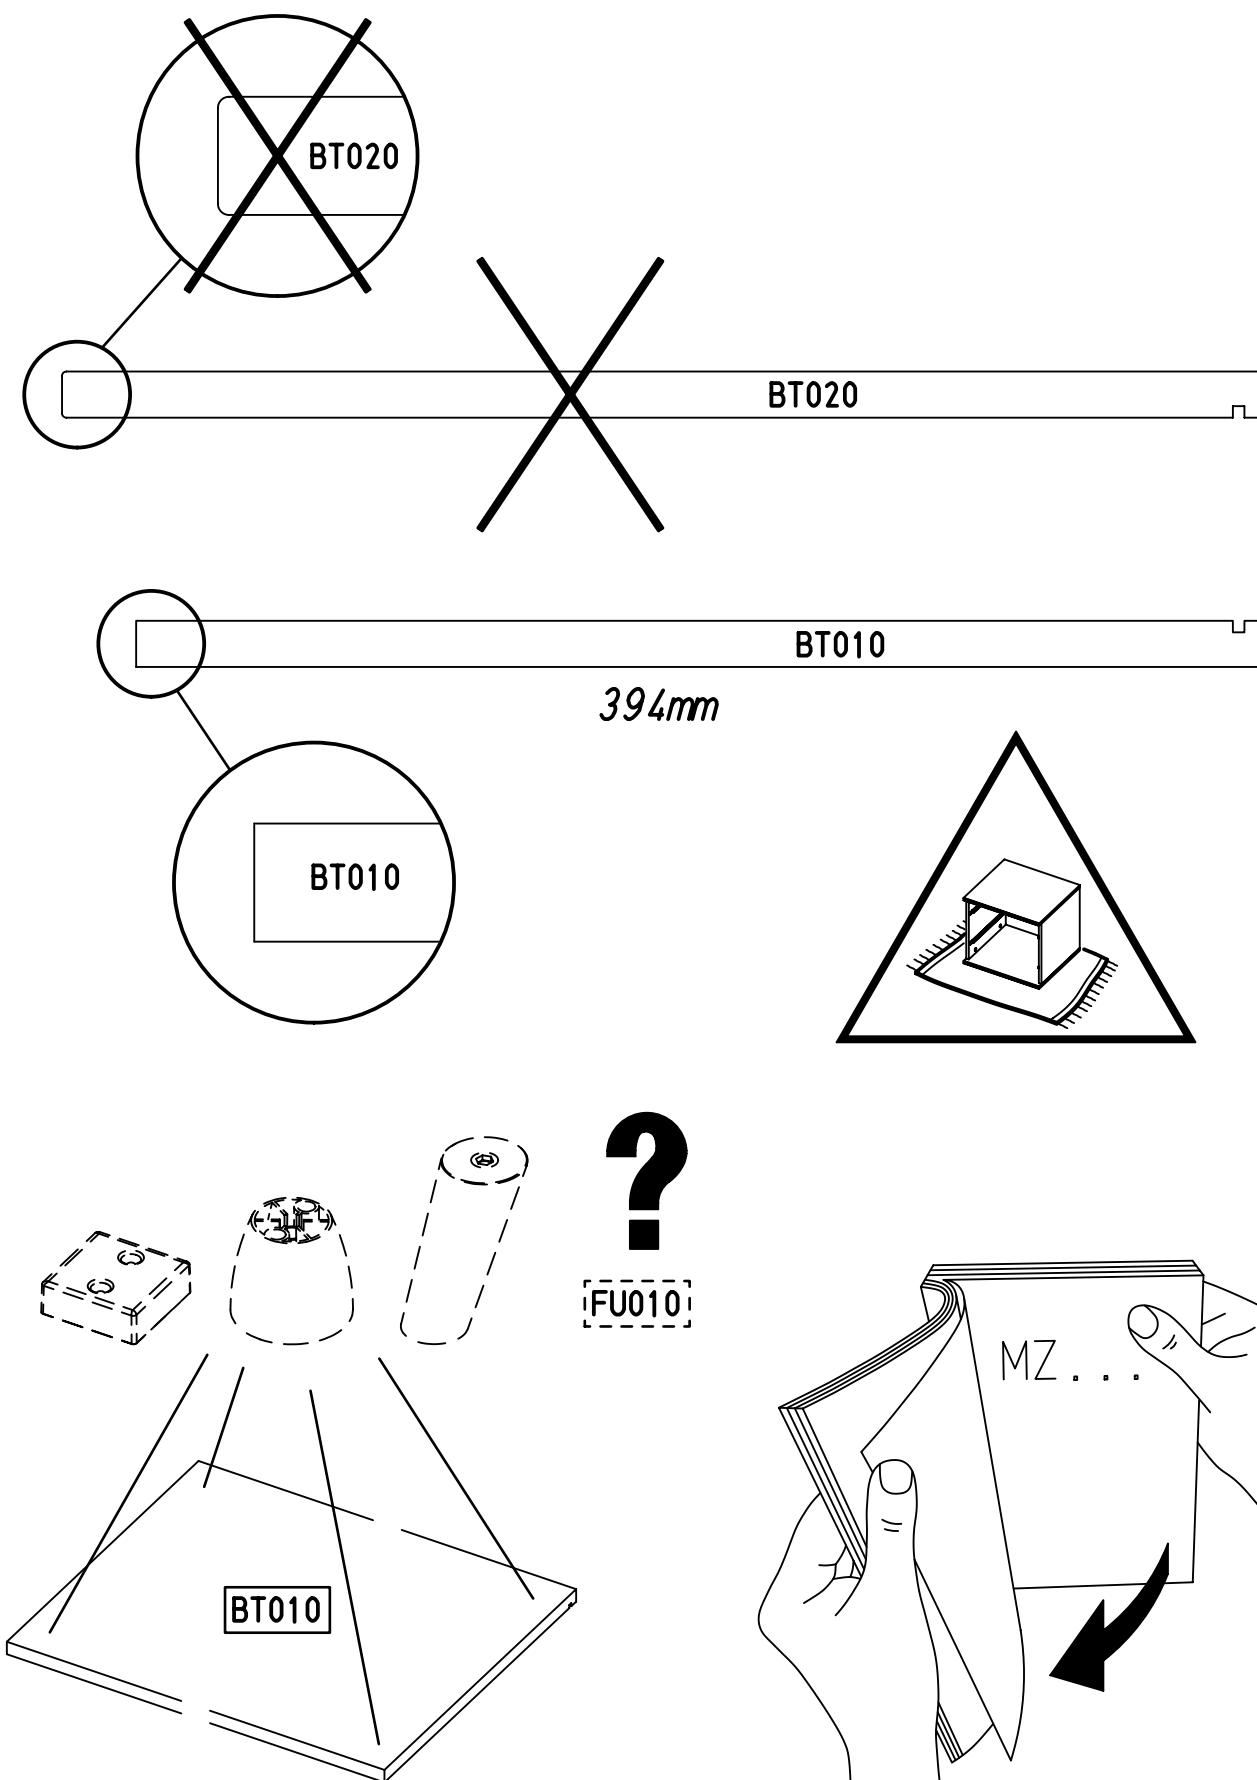


M2135

7.


3


4x

183



23/10x7,5/6,5




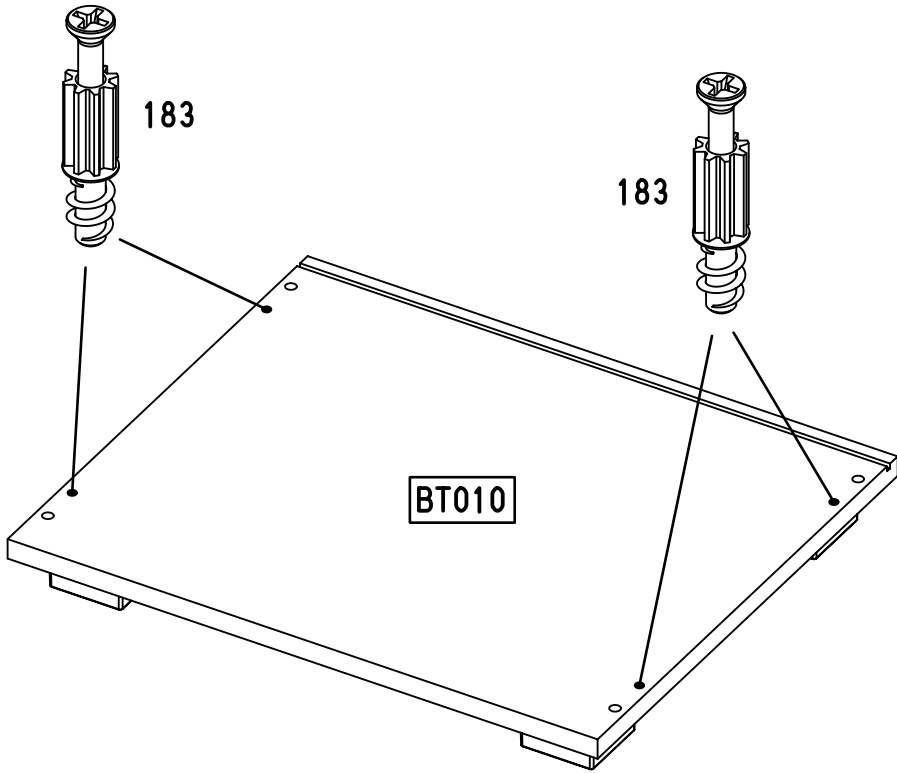


4

8x

18



8x30

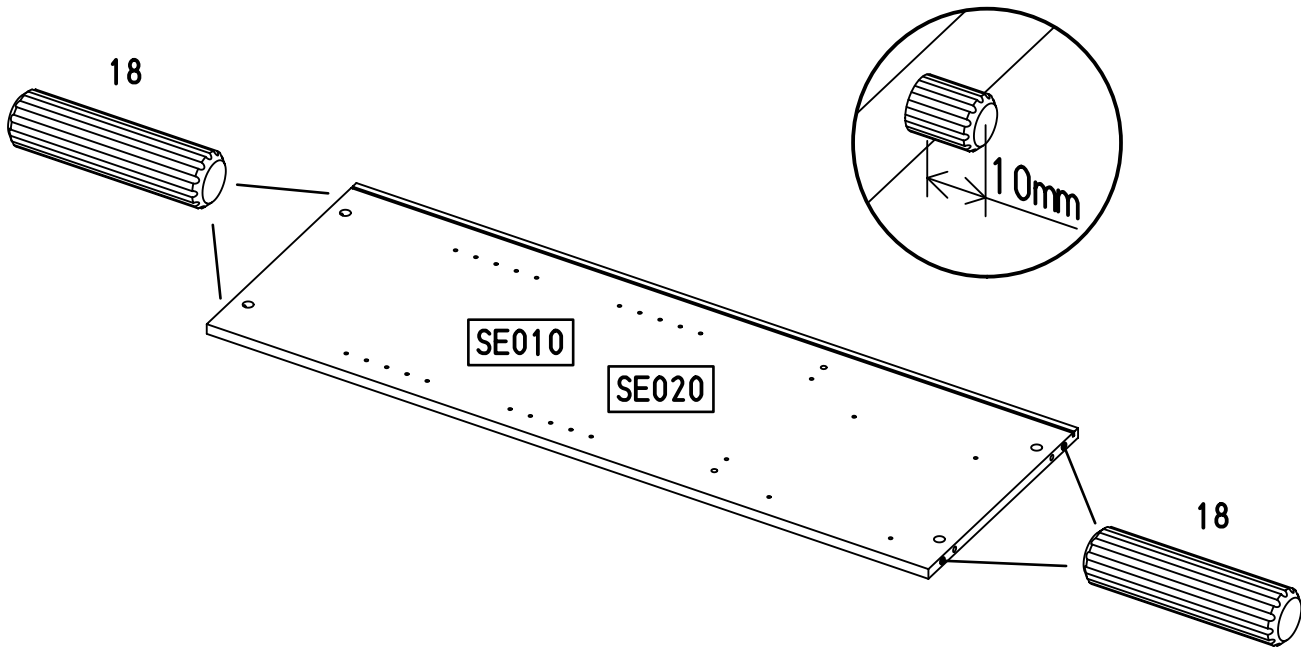


8.



5

8x

349






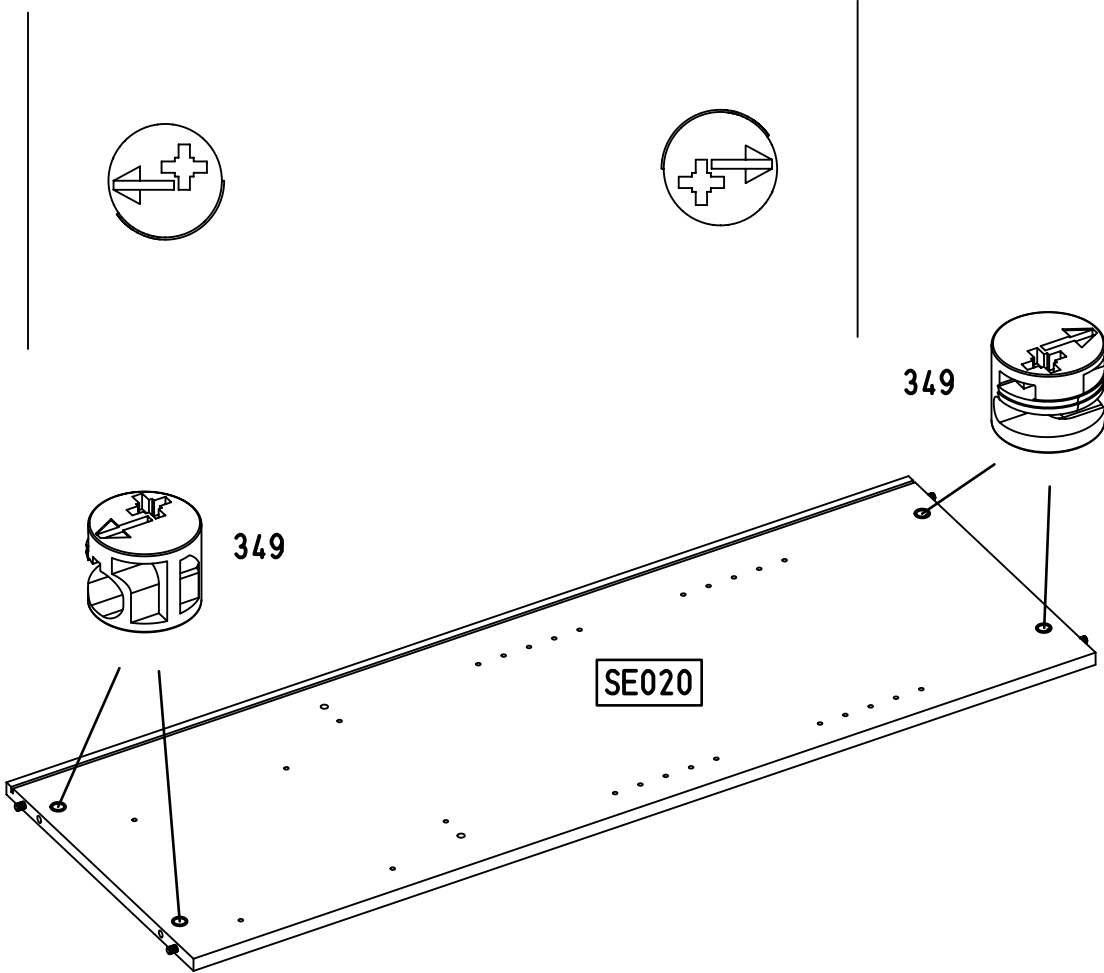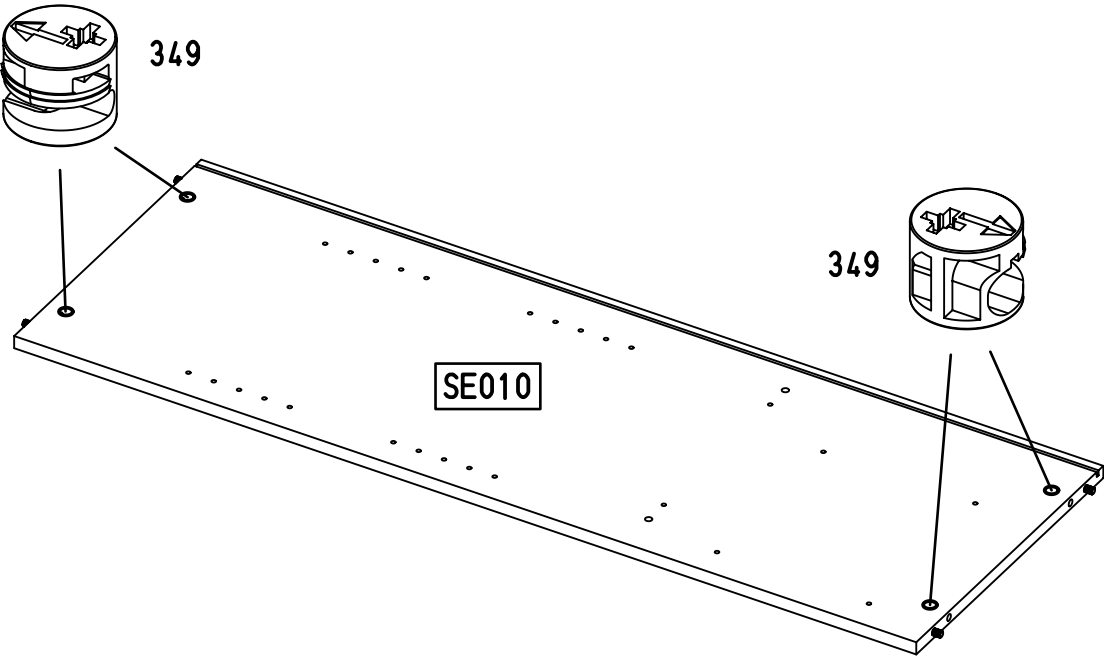

9.

6

2x (251)




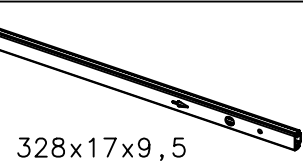


328x17x9,5

4x (227)



6x10,5

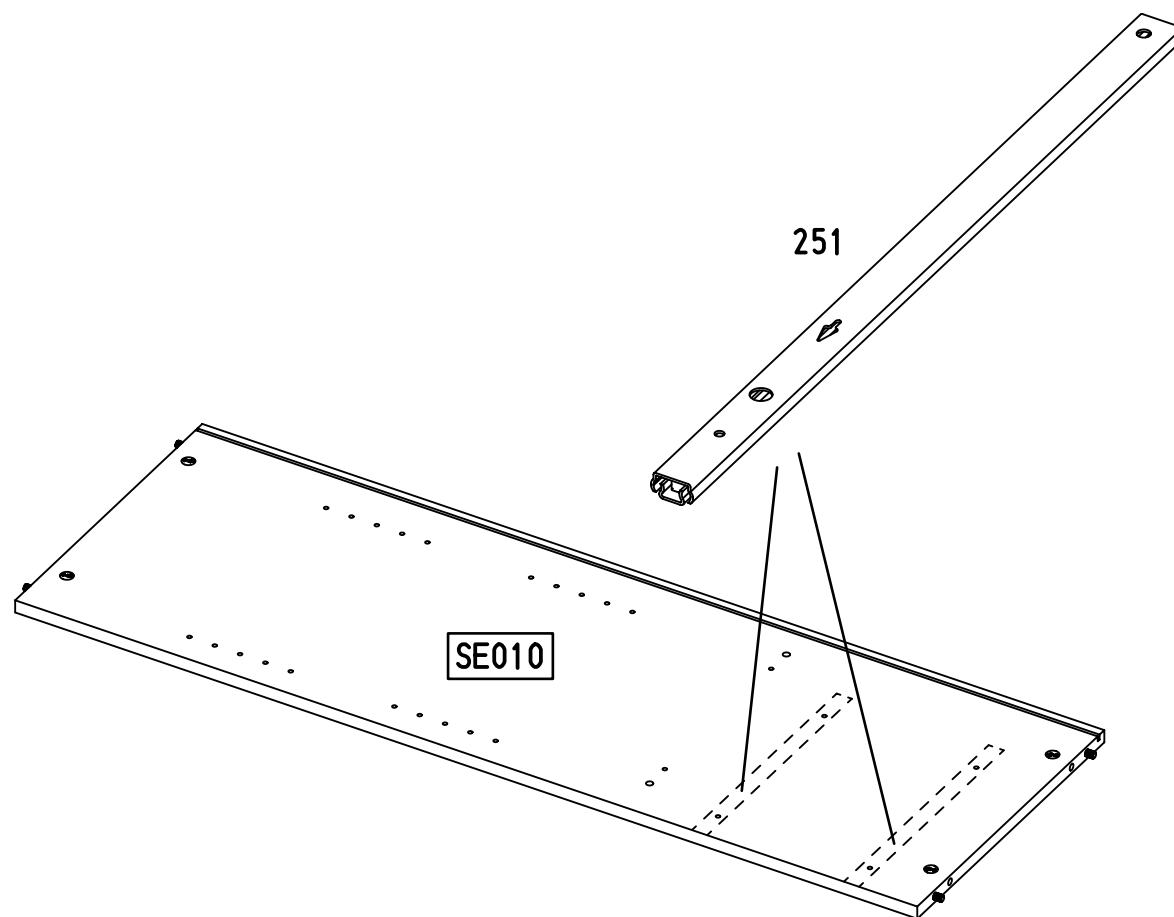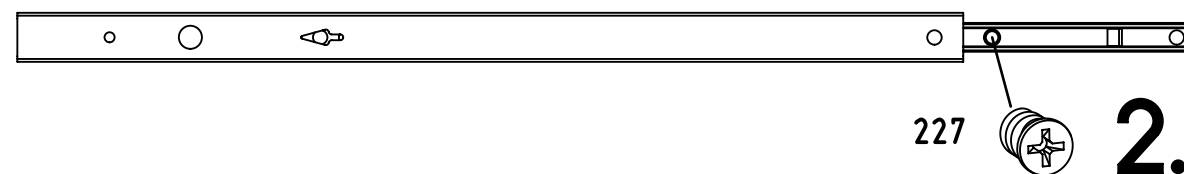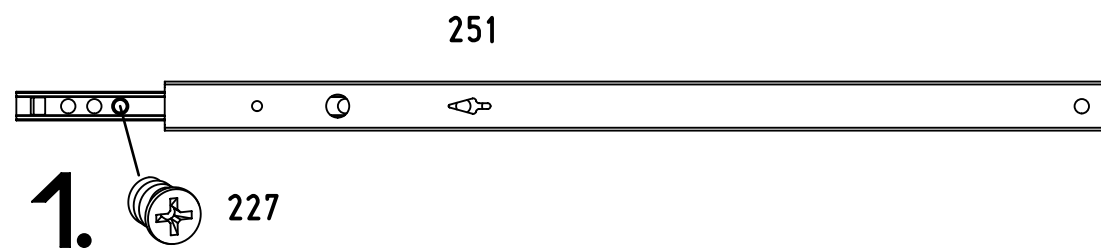


M2135

10.

7

2x (251)




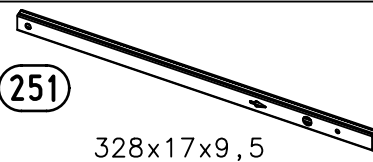


328x17x9,5

4x (227)



6x10,5

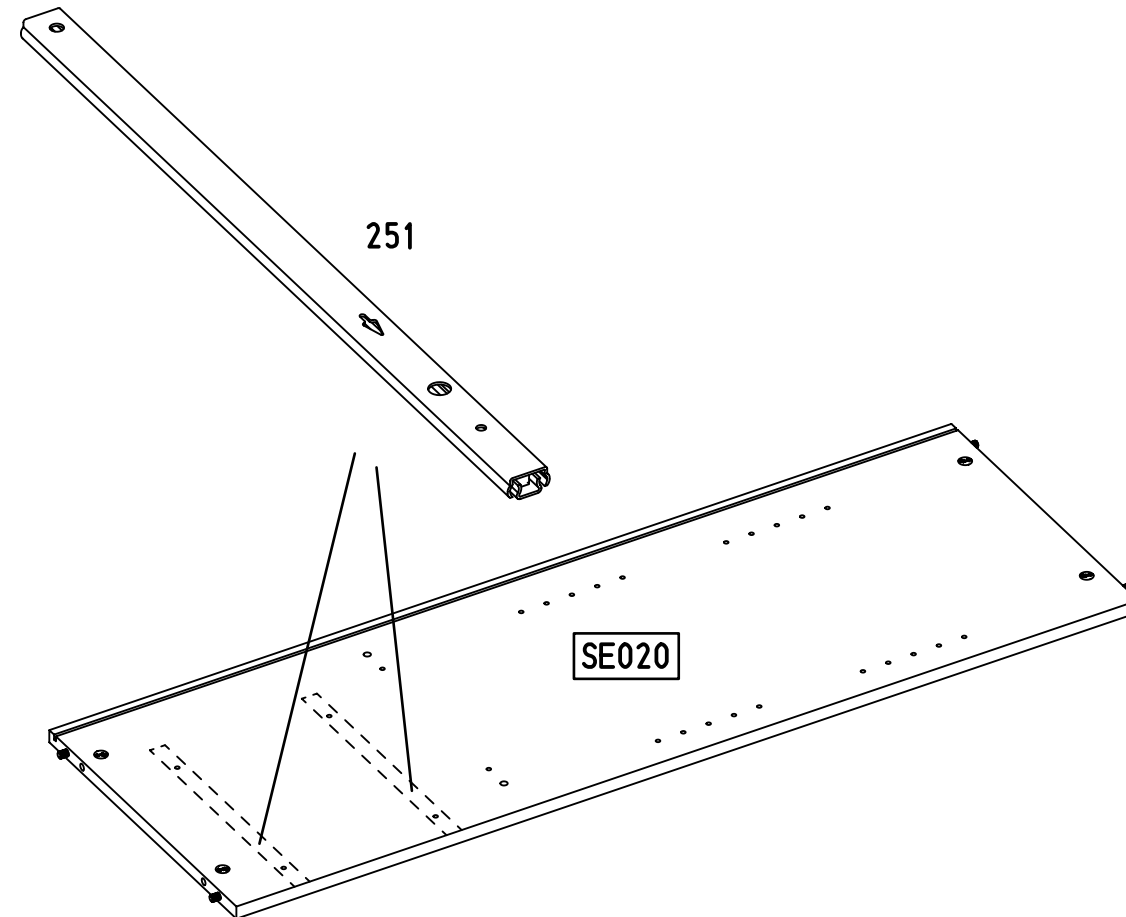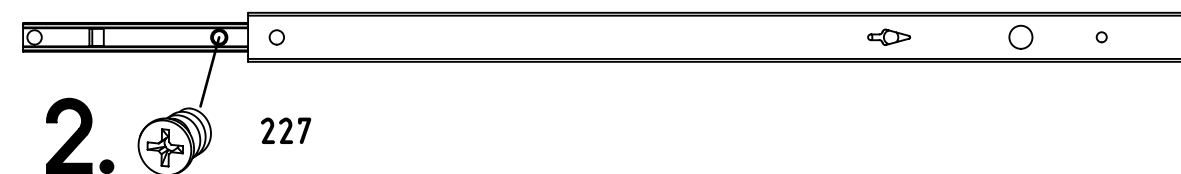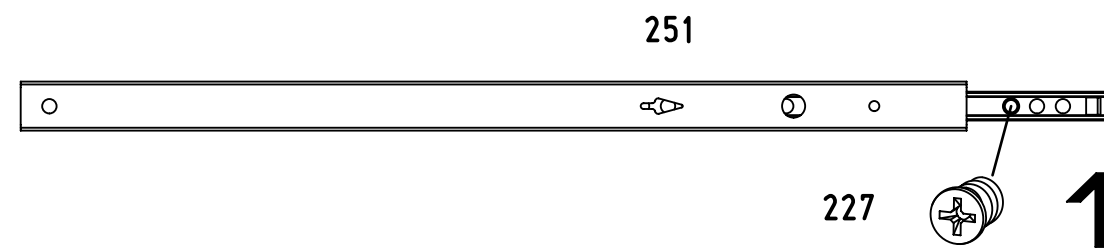


M2135




11.

8

4x 183

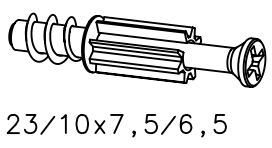


23/10x7,5/6,5

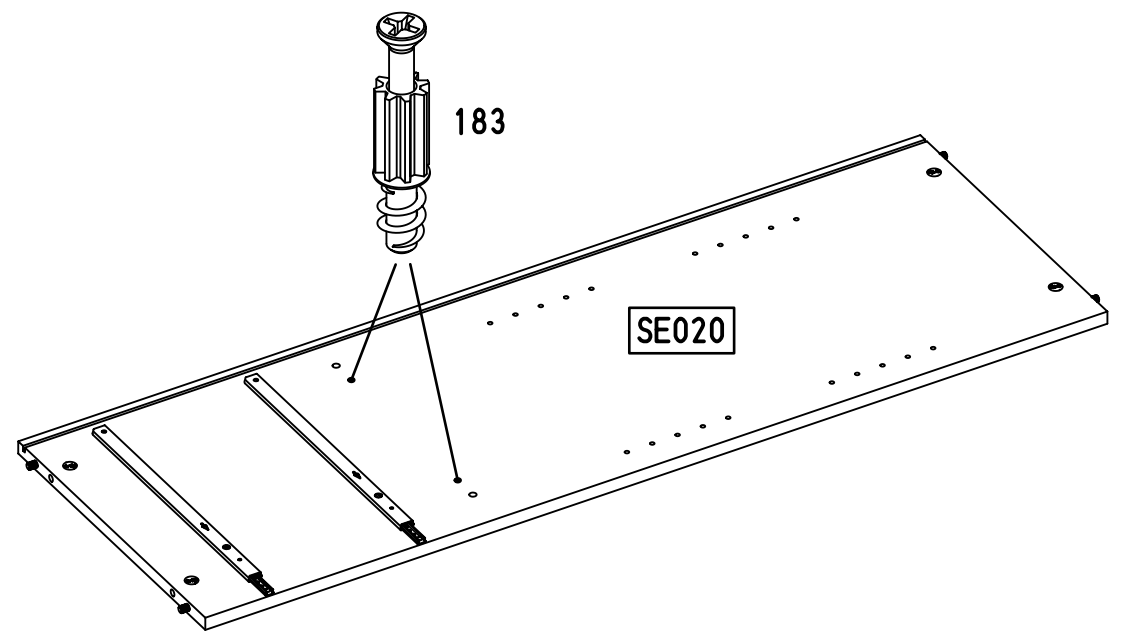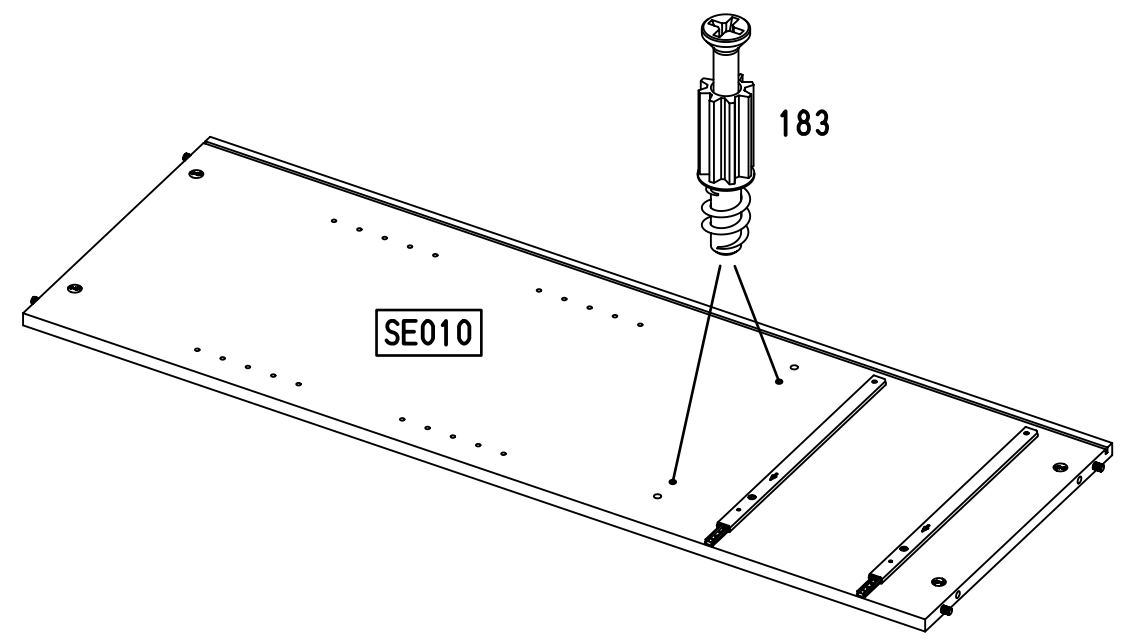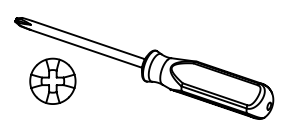


12.

9

4x 18



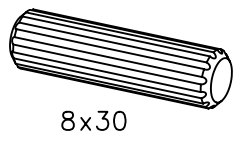


8x30

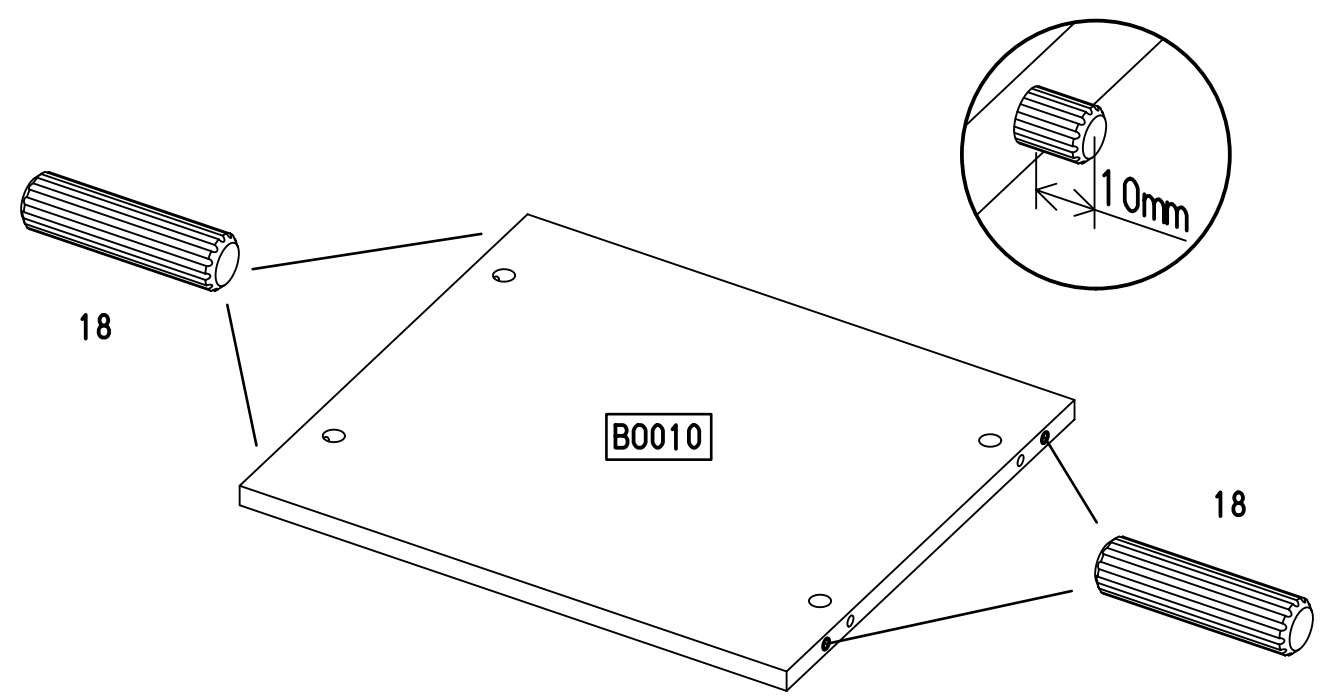




10

4x 349

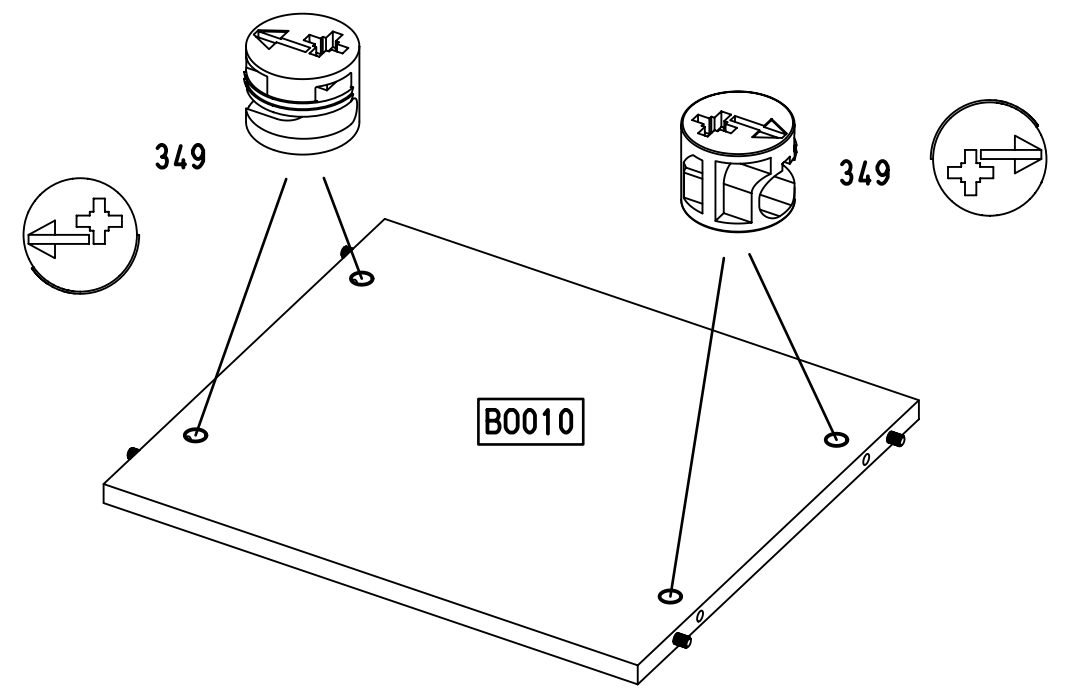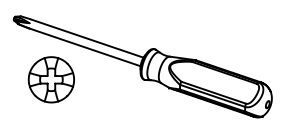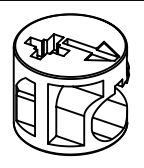

13.



11

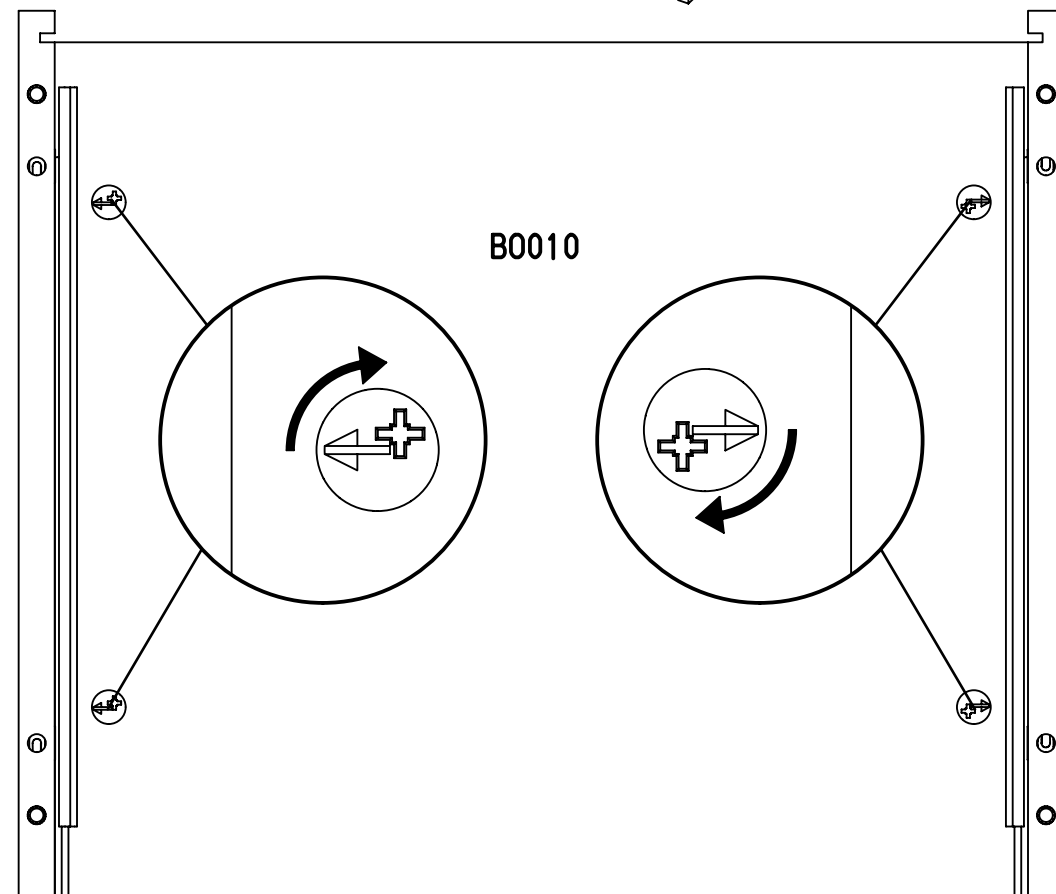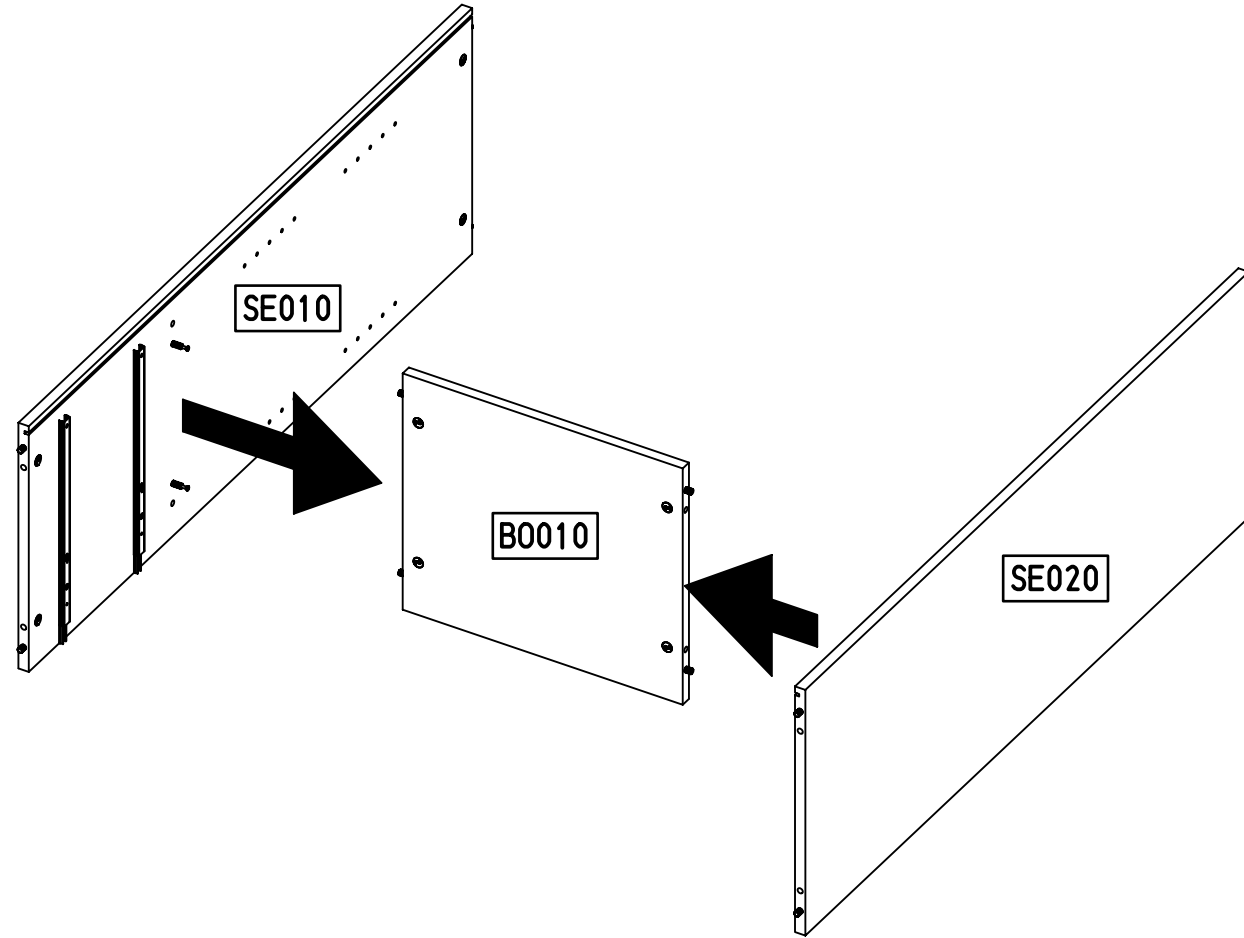

M2135

14.


12

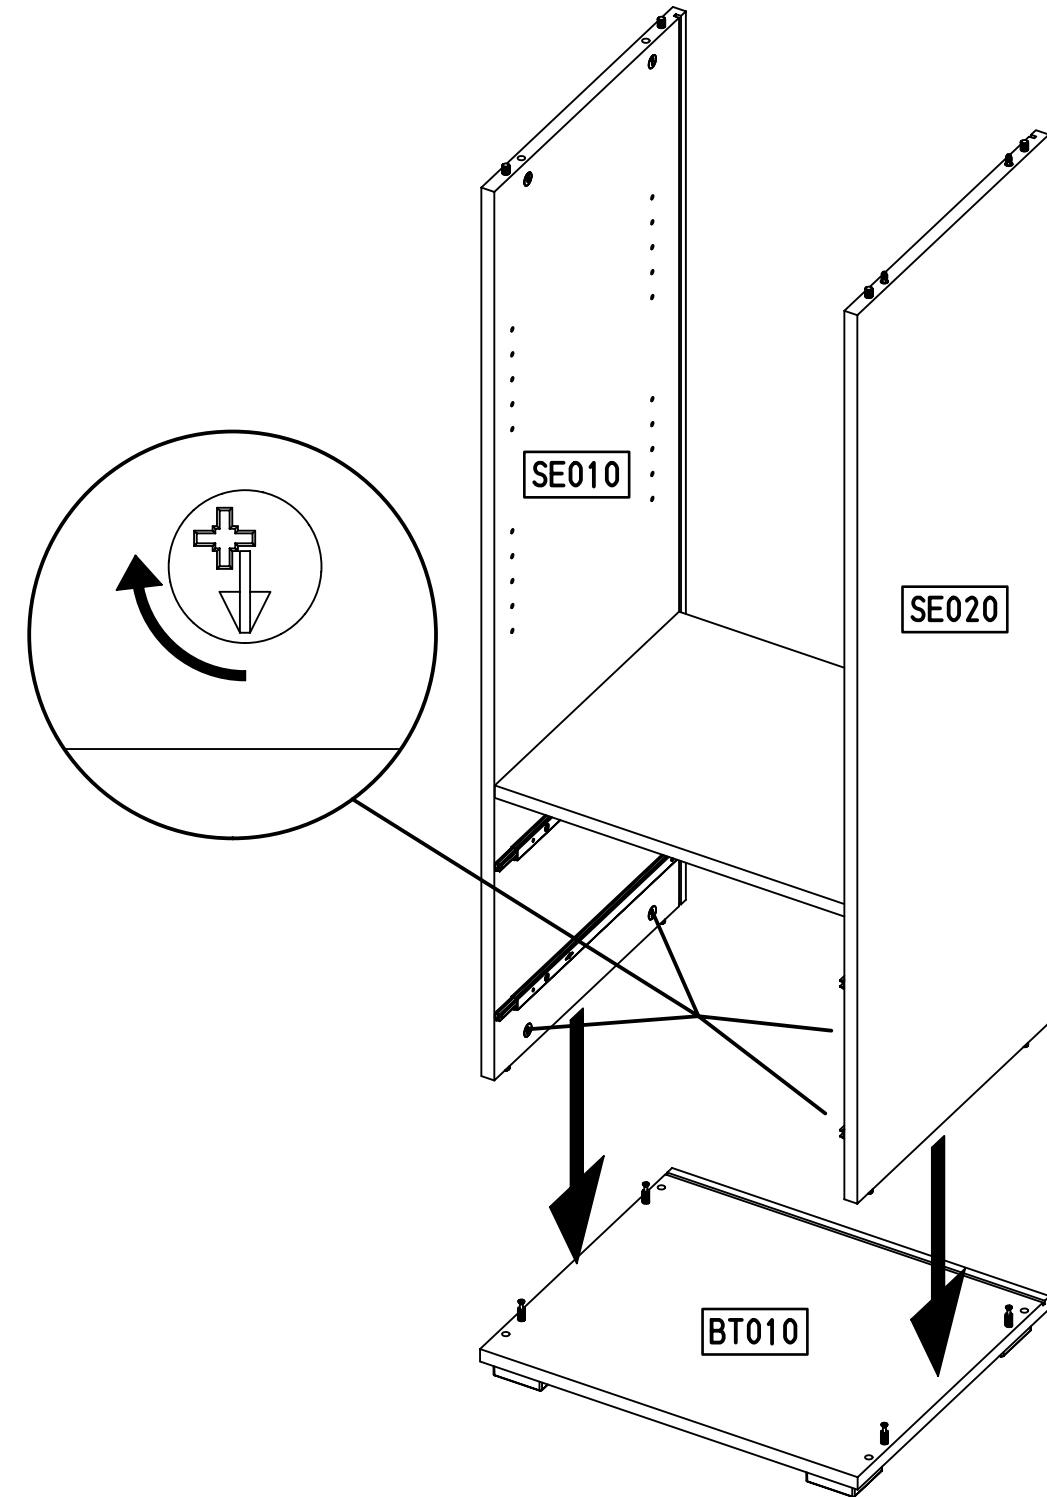

M2135


15.

13

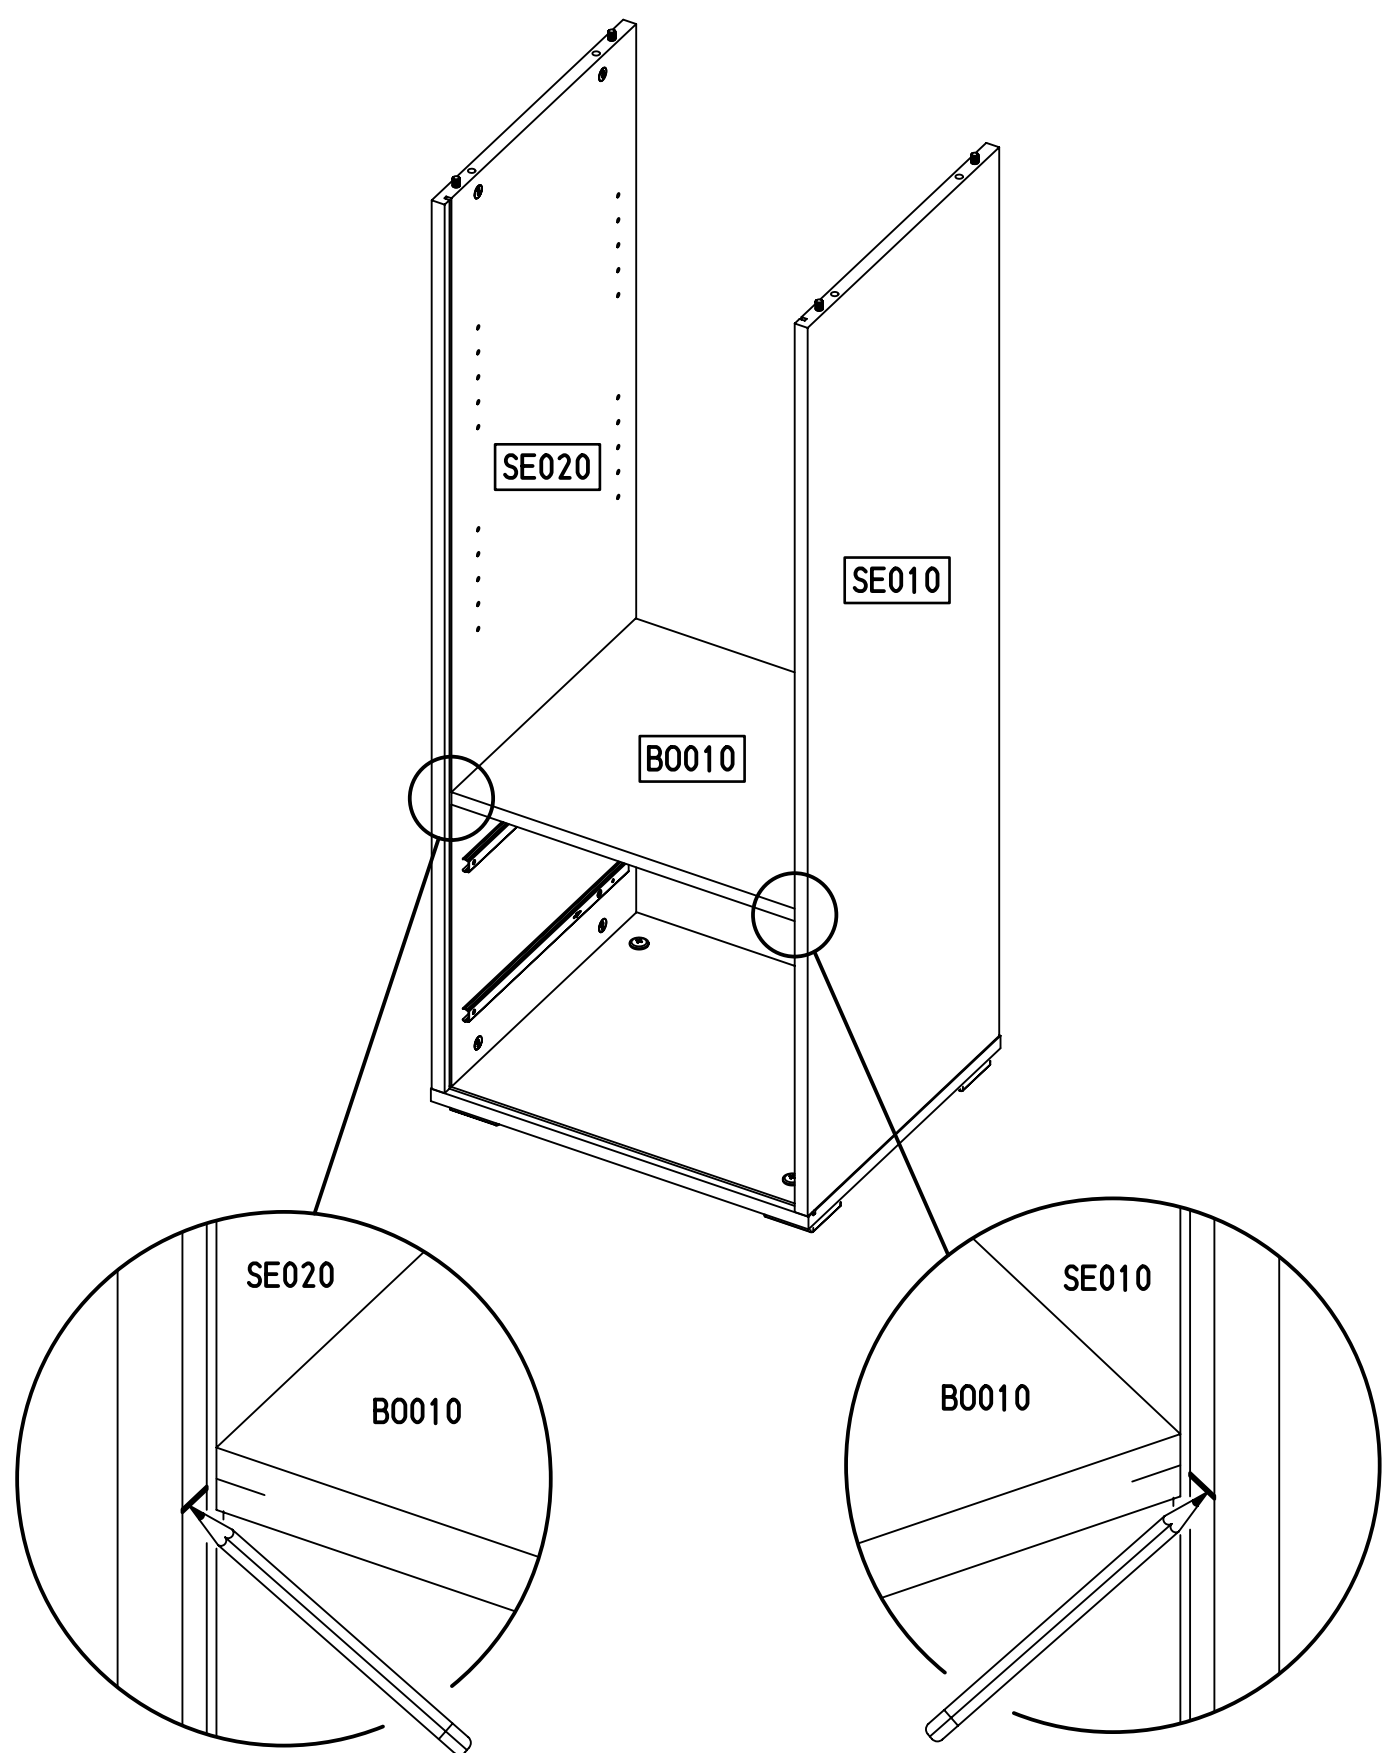

16.

14

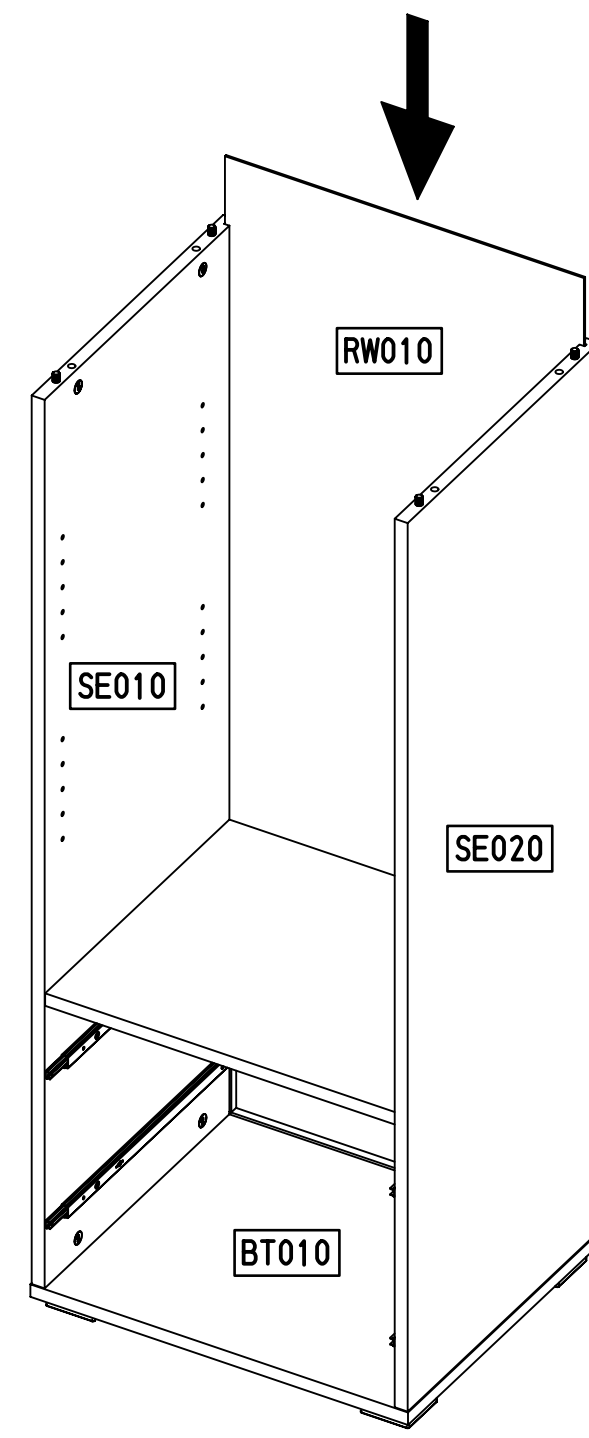


17.






15

4x

183



23/10x7,5/6,5

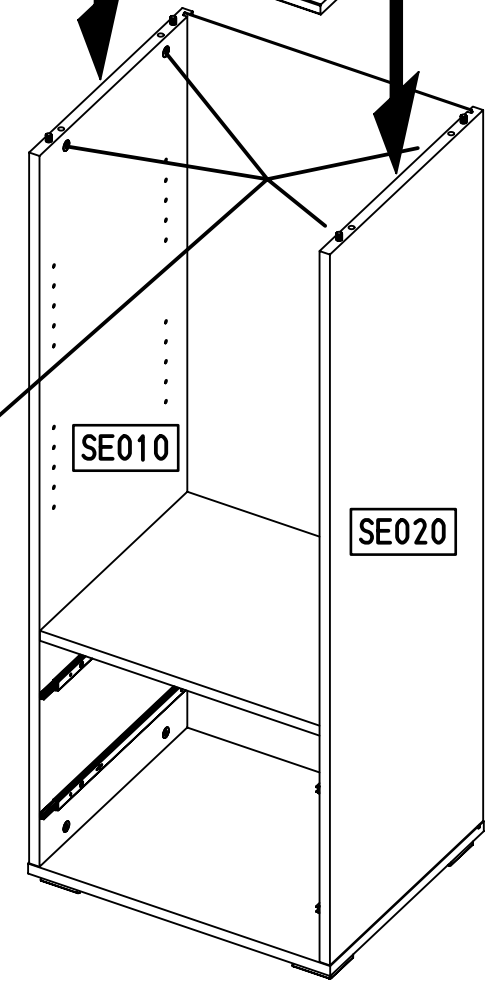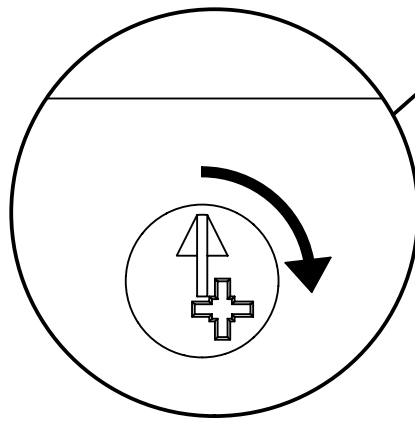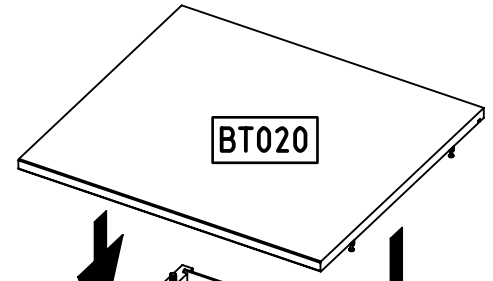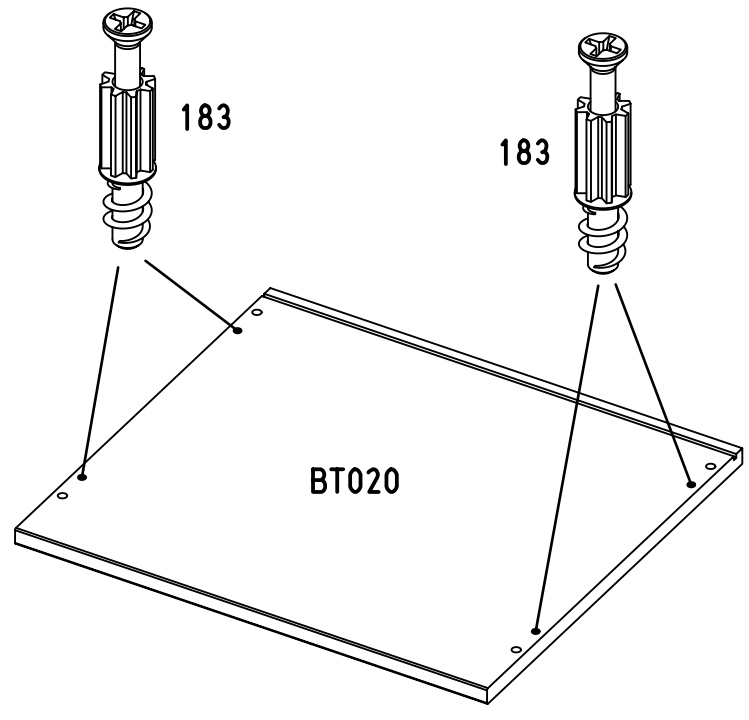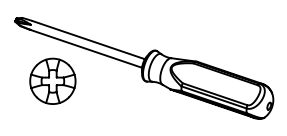




M2135

18.








16

6x

1090

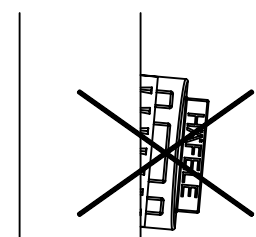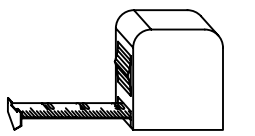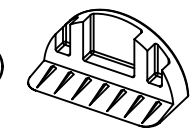

Xmm = Xmm

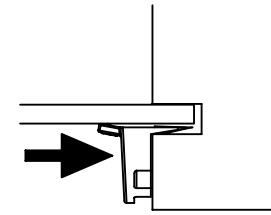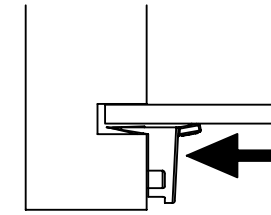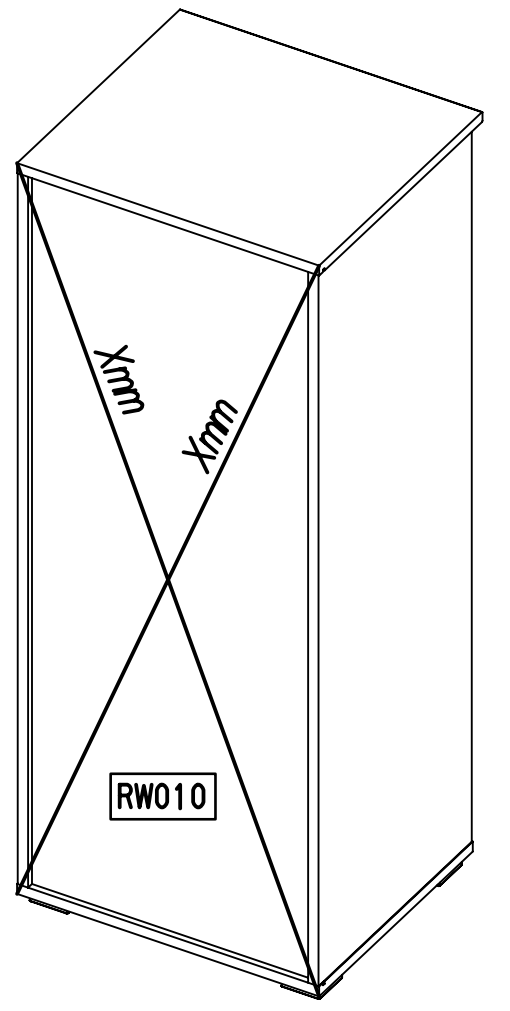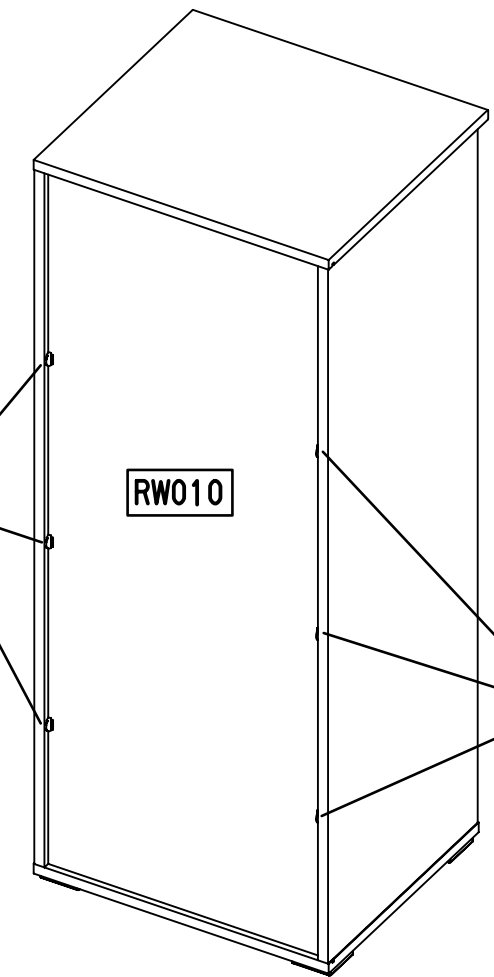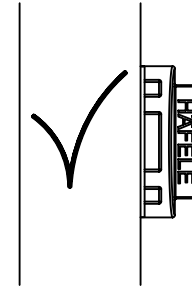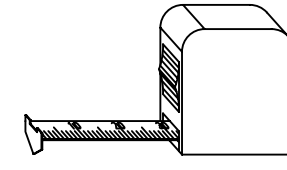

M2135

19.




17

3x

215



3x20

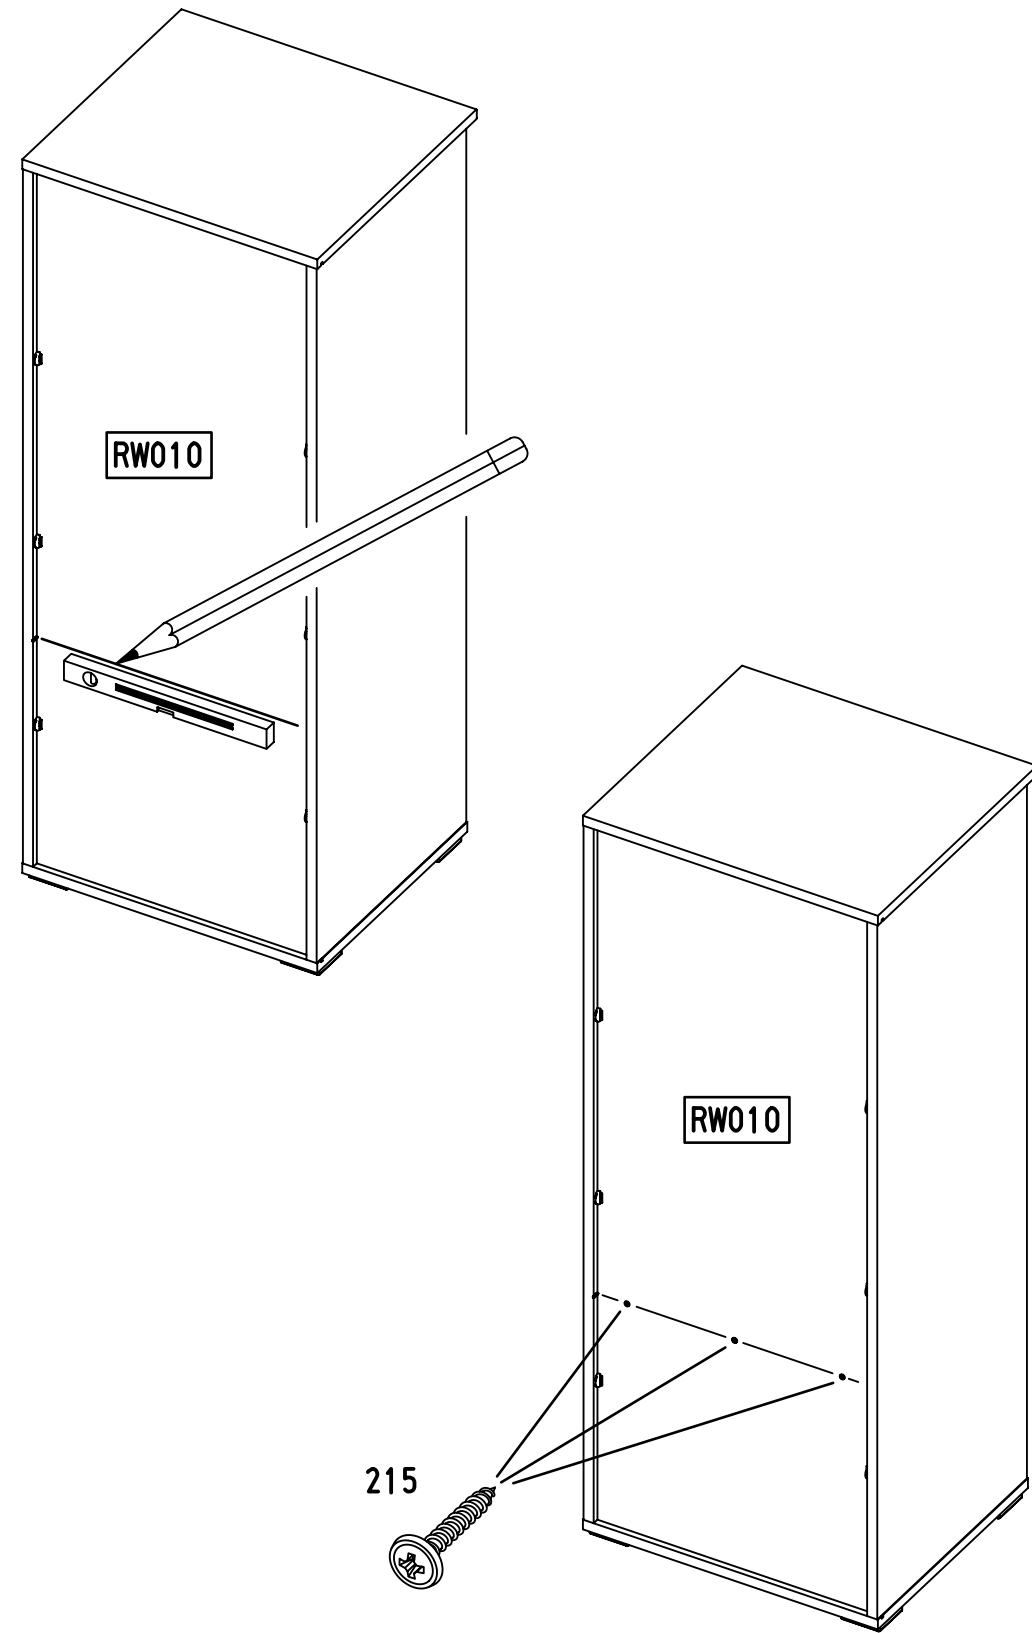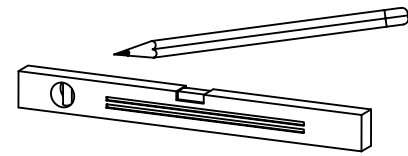



M2135

20.

18

2x


1091

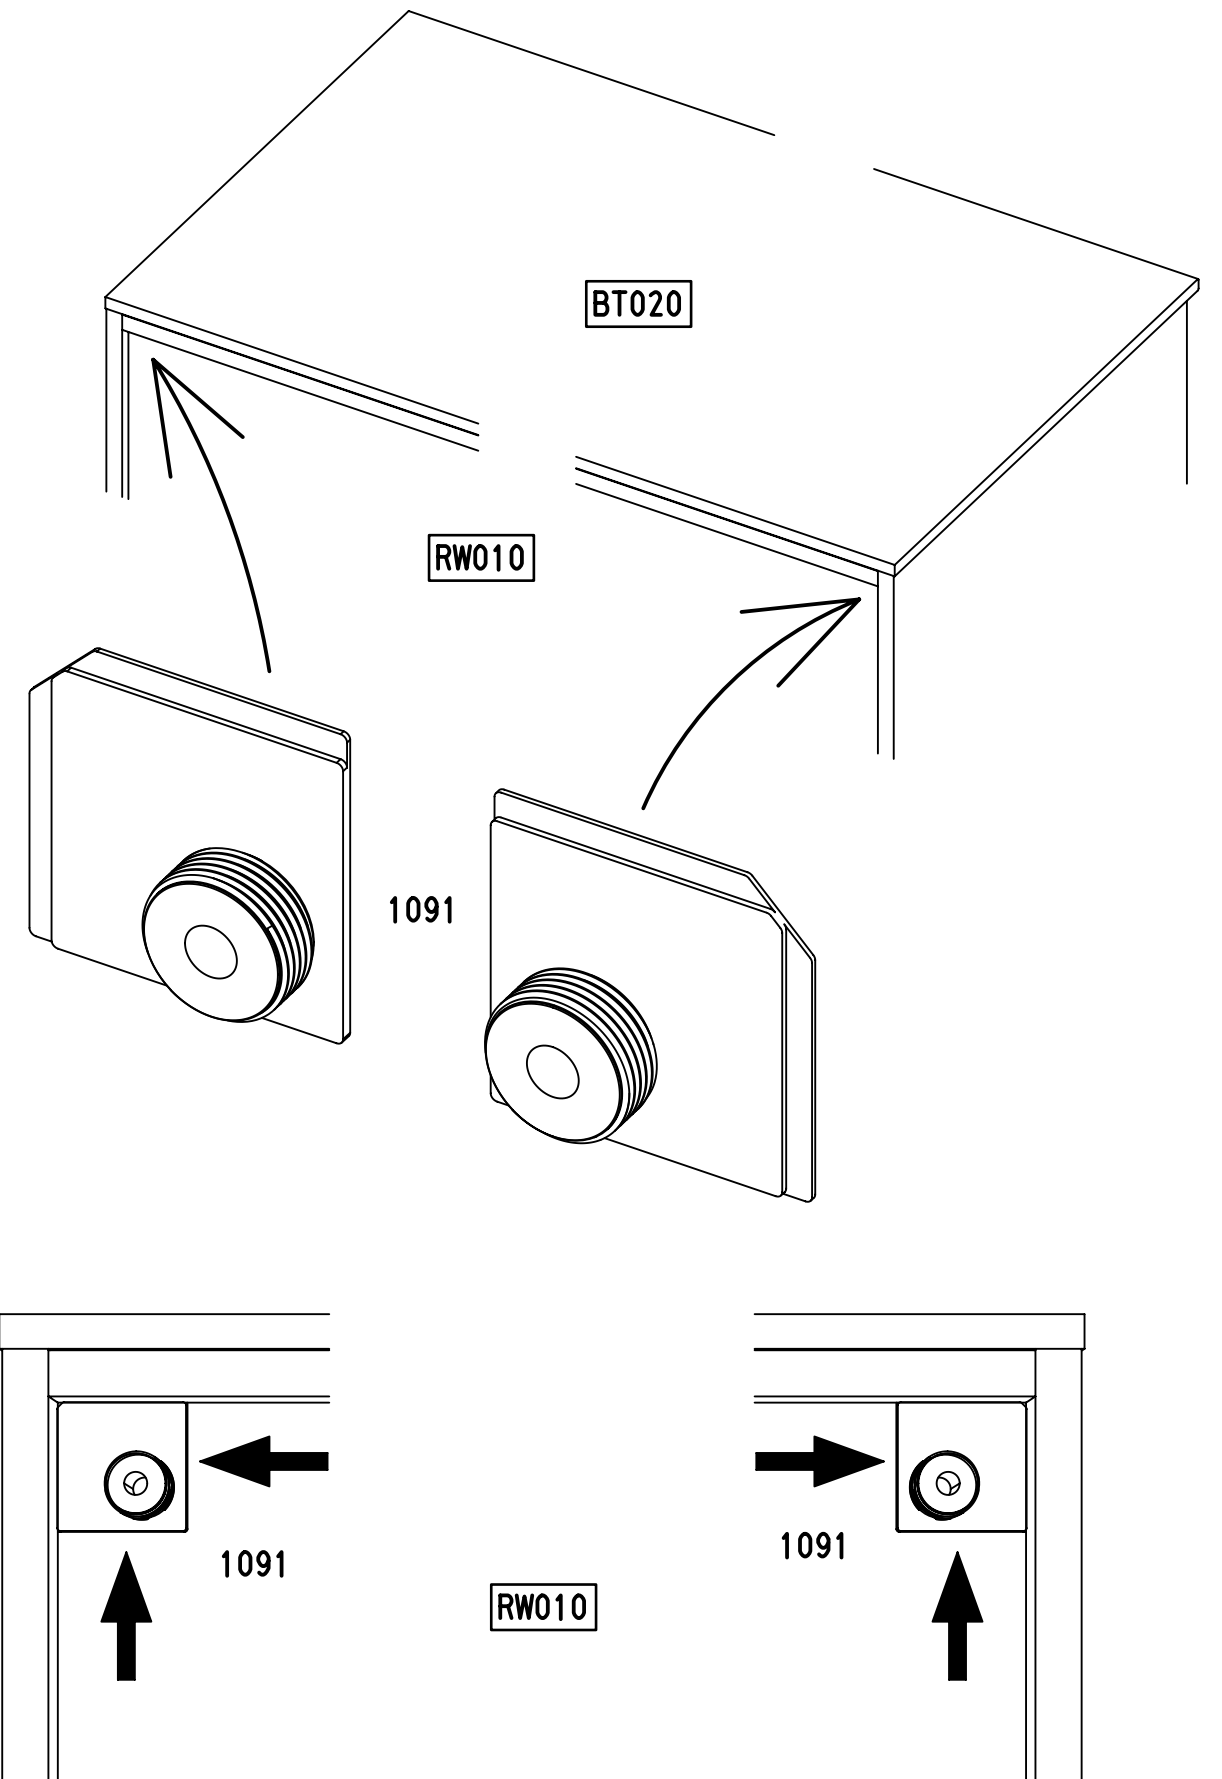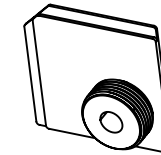

M2135

18


2x 1091

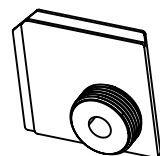

BT020


RW010

1091

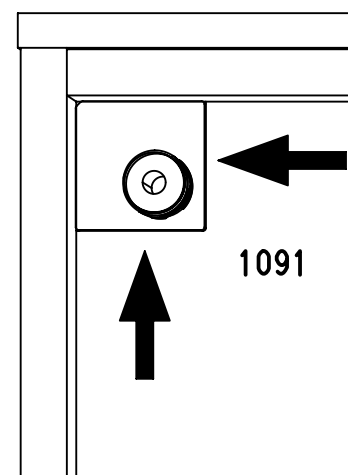

1091


RW010

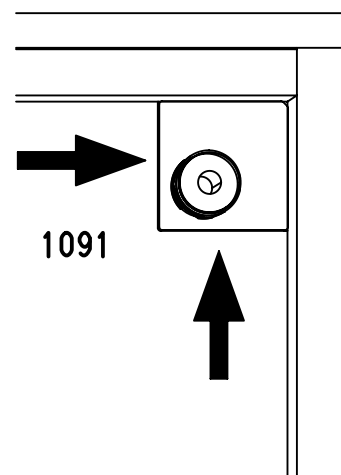

1091

19


ø6mm

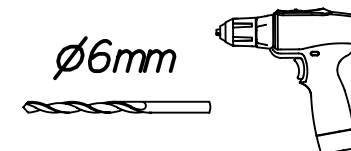

BT020


RW010

ø6mm

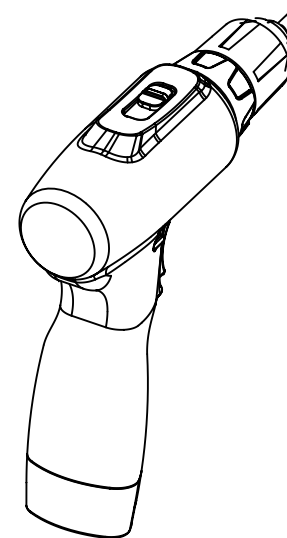


BT020

RW010

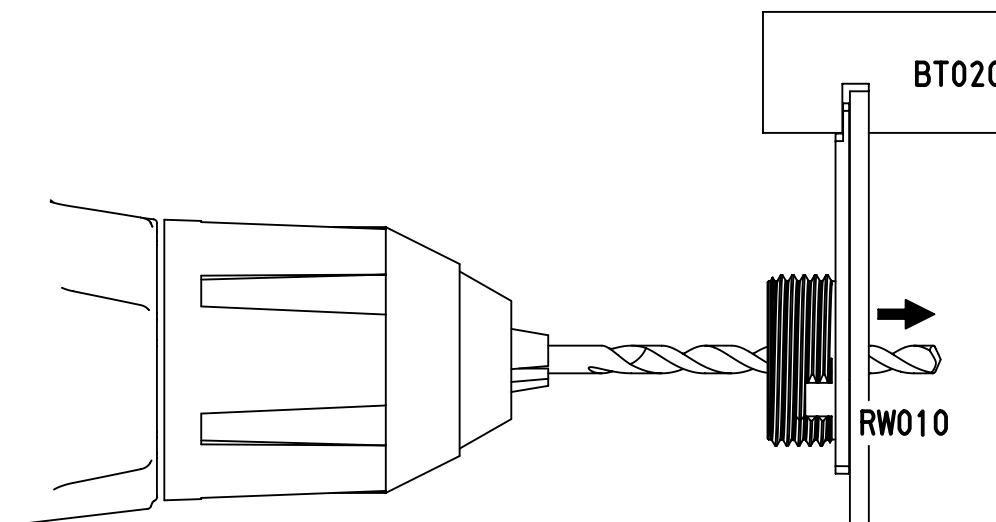

23.

20

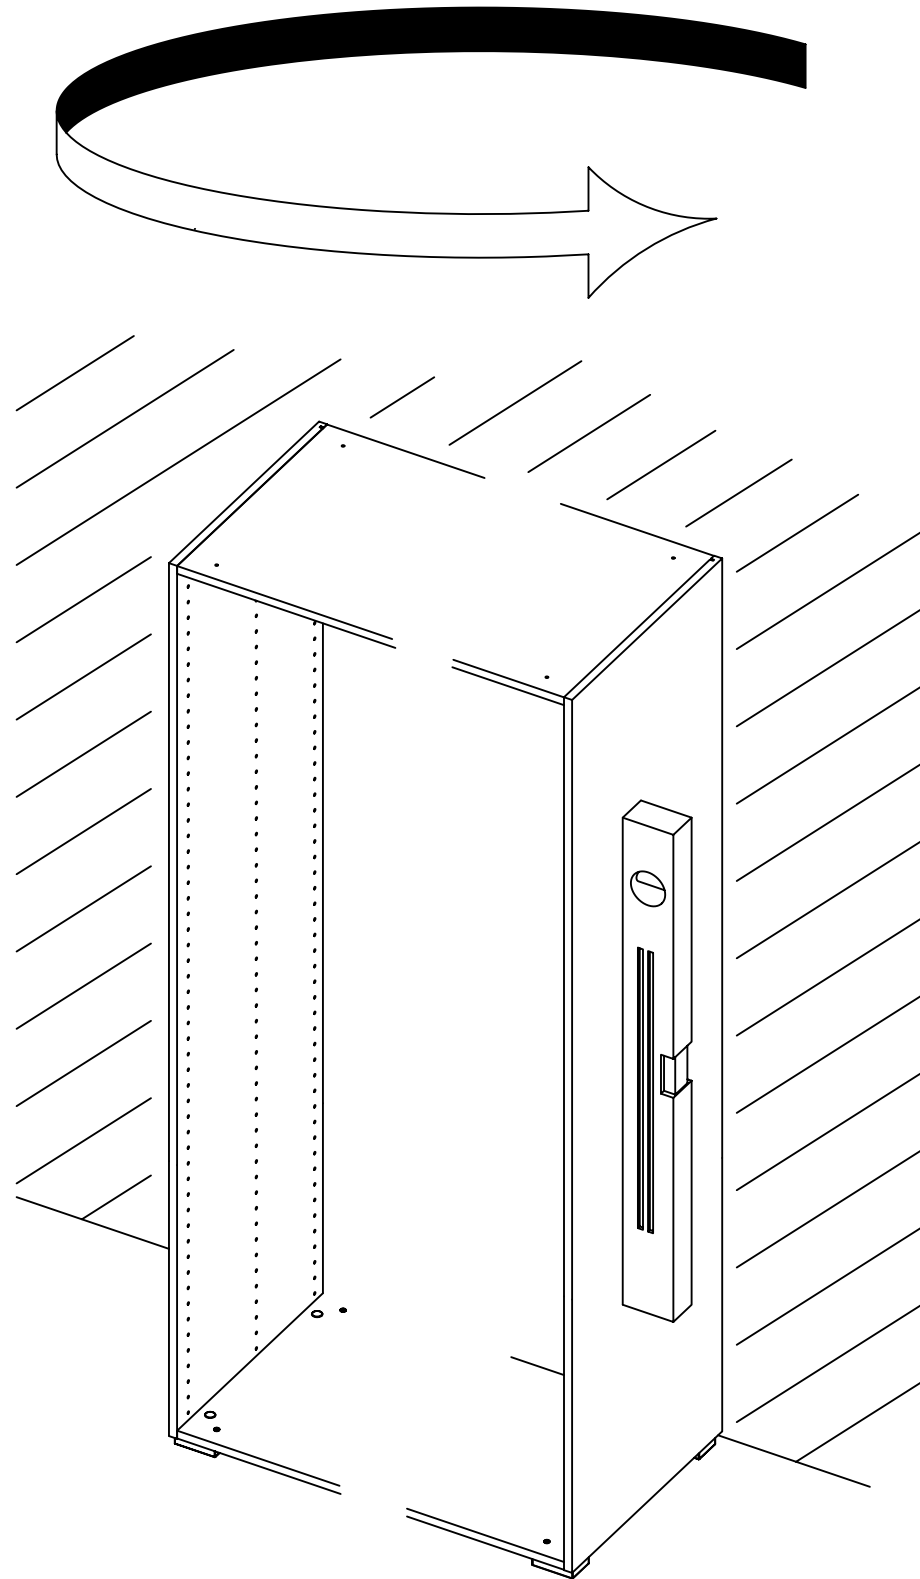


M2135

24.


21

2x 1093



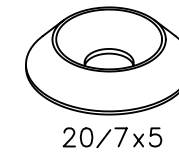


20/7x5

2x 1147

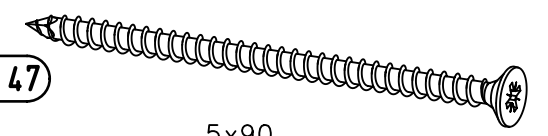


5x90

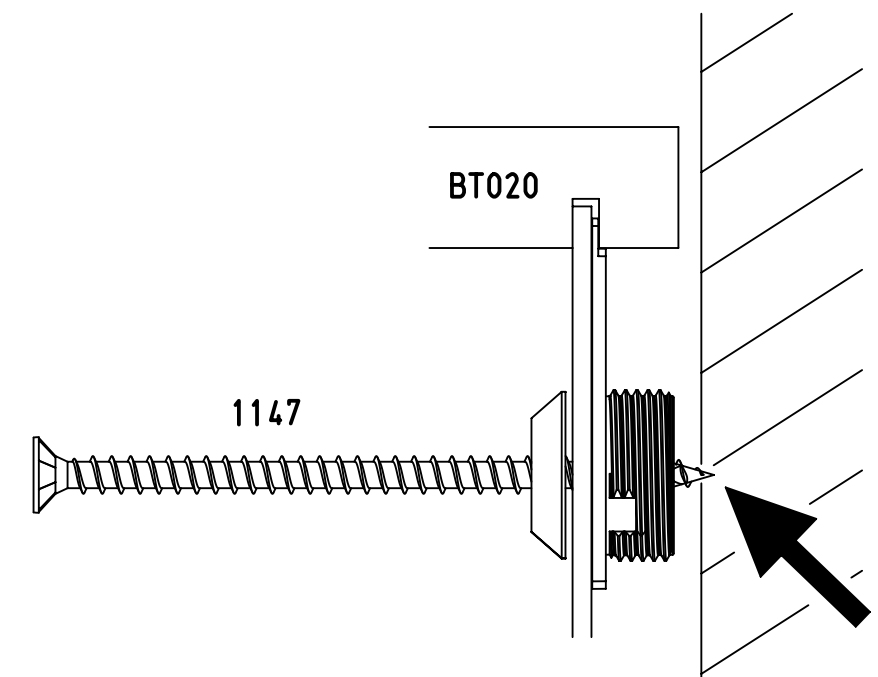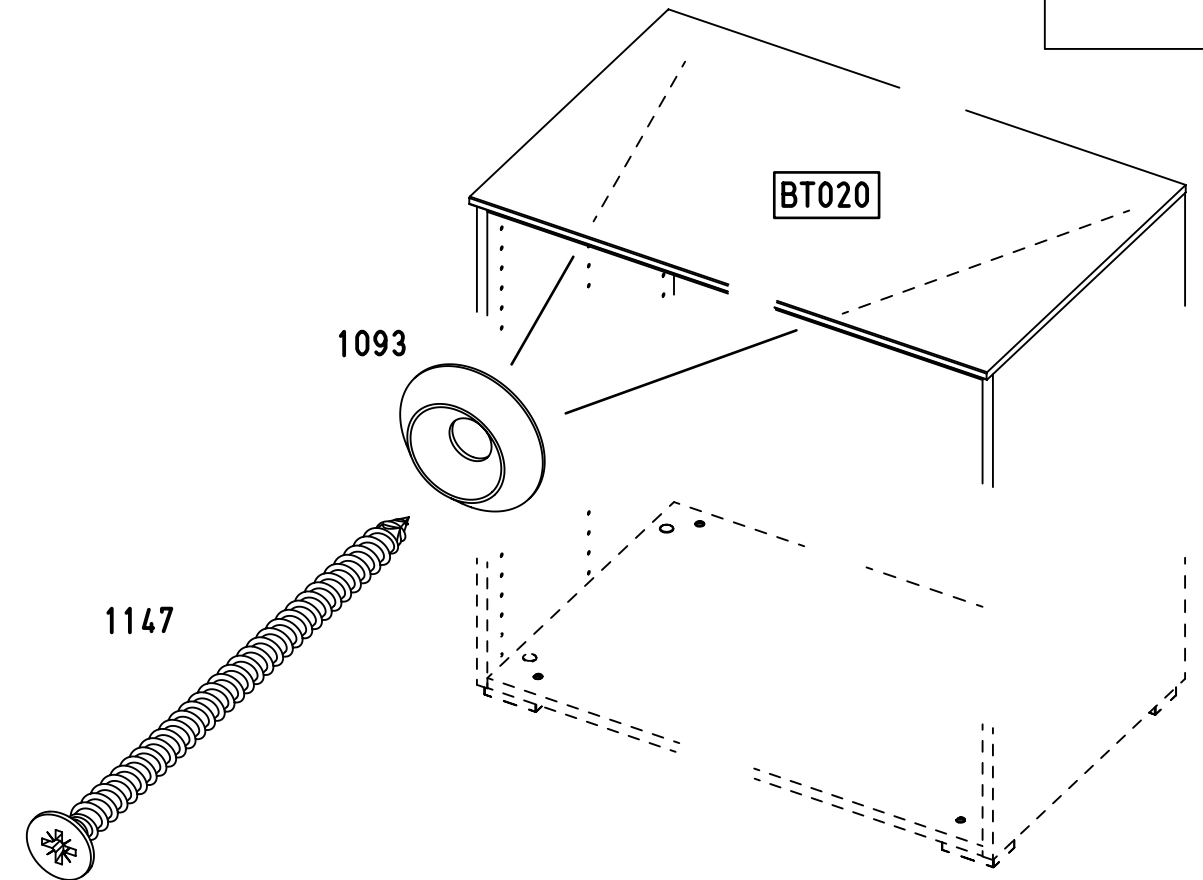


M2135

25.


22

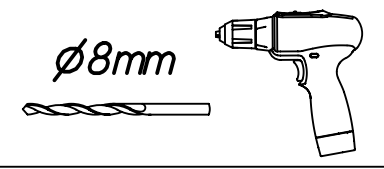

1.

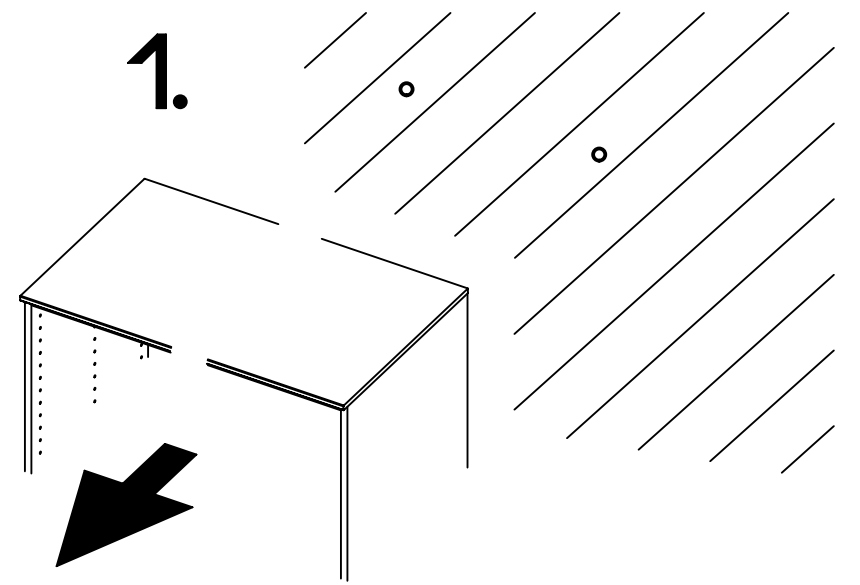


2.

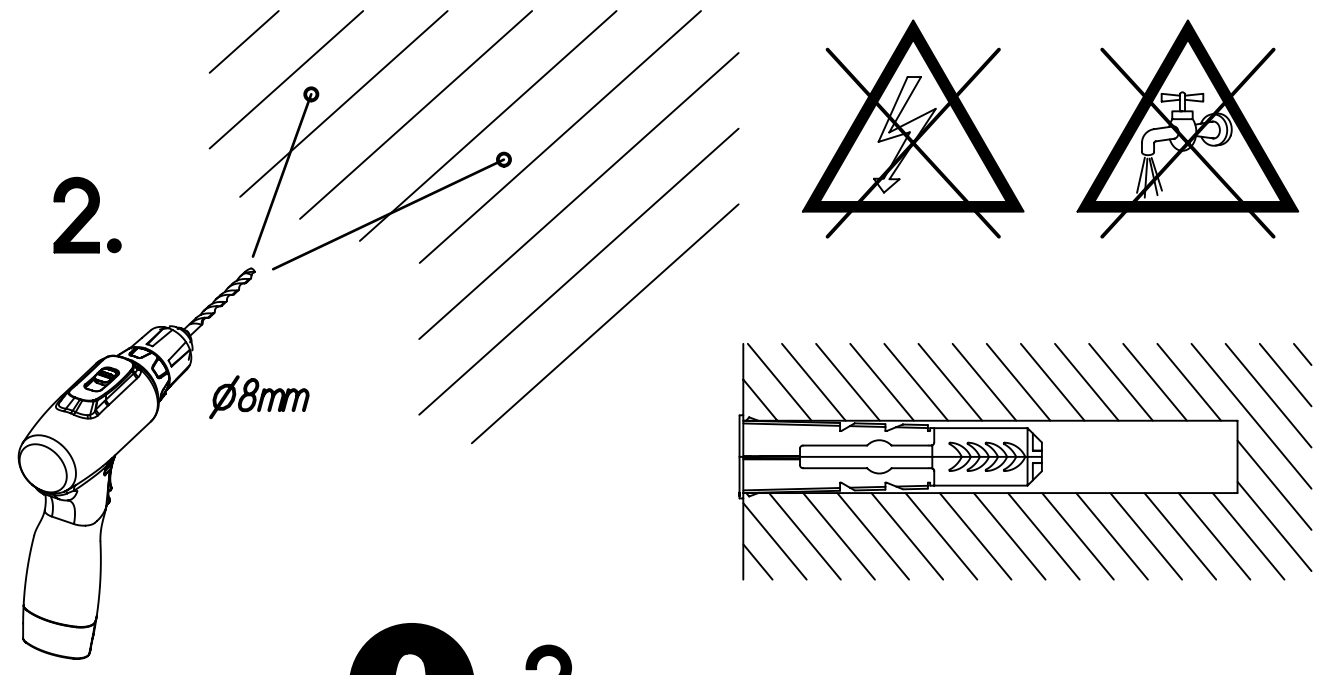

?

3.



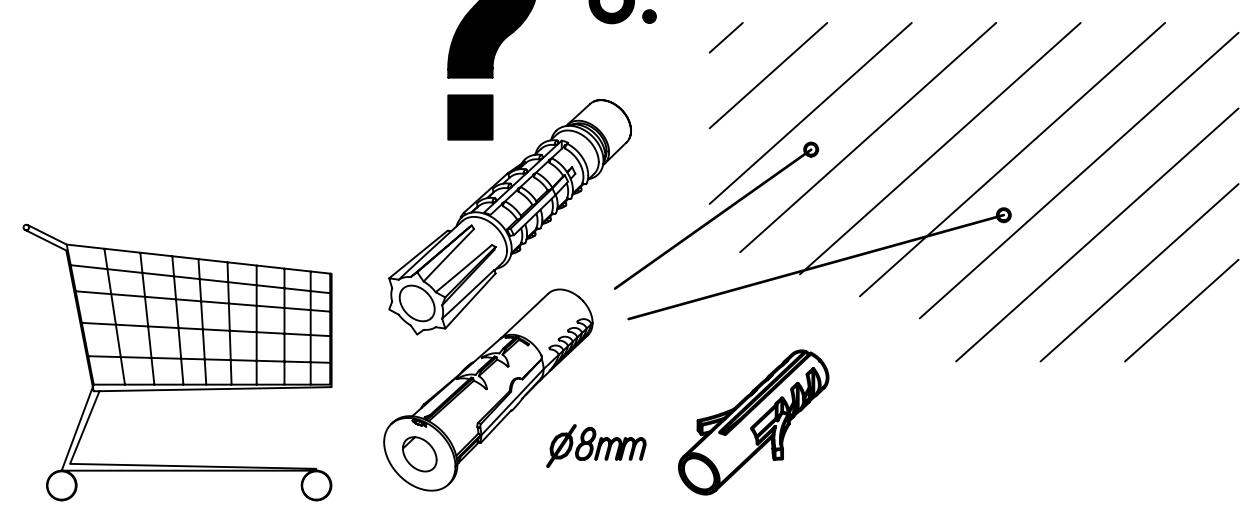


M2135



26.

23

2x 1092

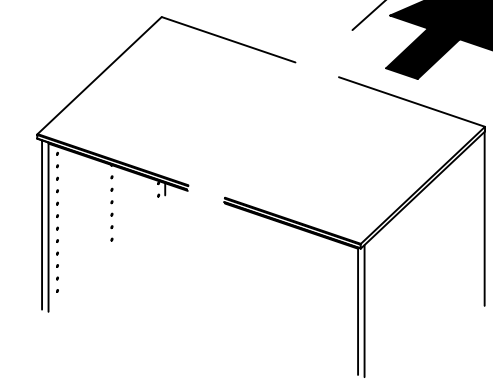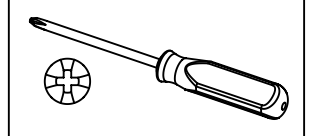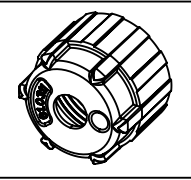


1092

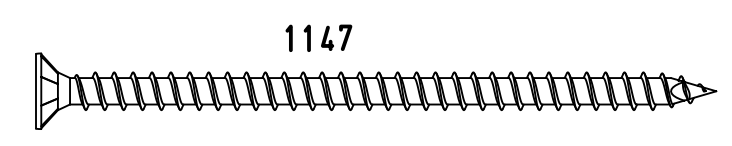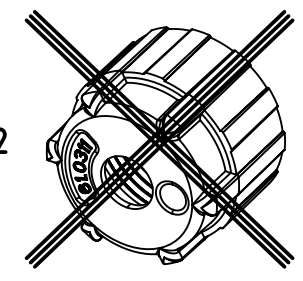


1147

1093

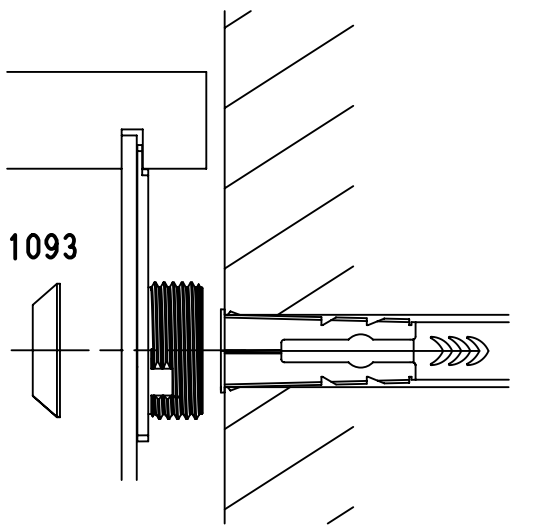


10-15mm

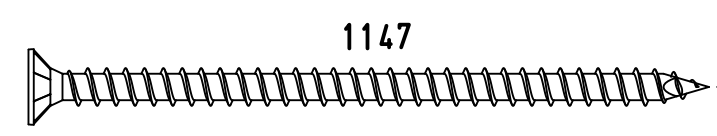

1147

1093

1092


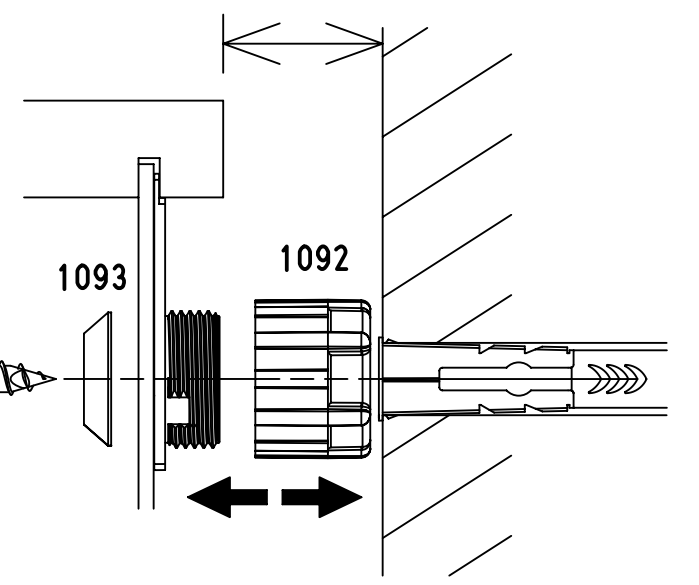


M2135

27.

24

4x 568

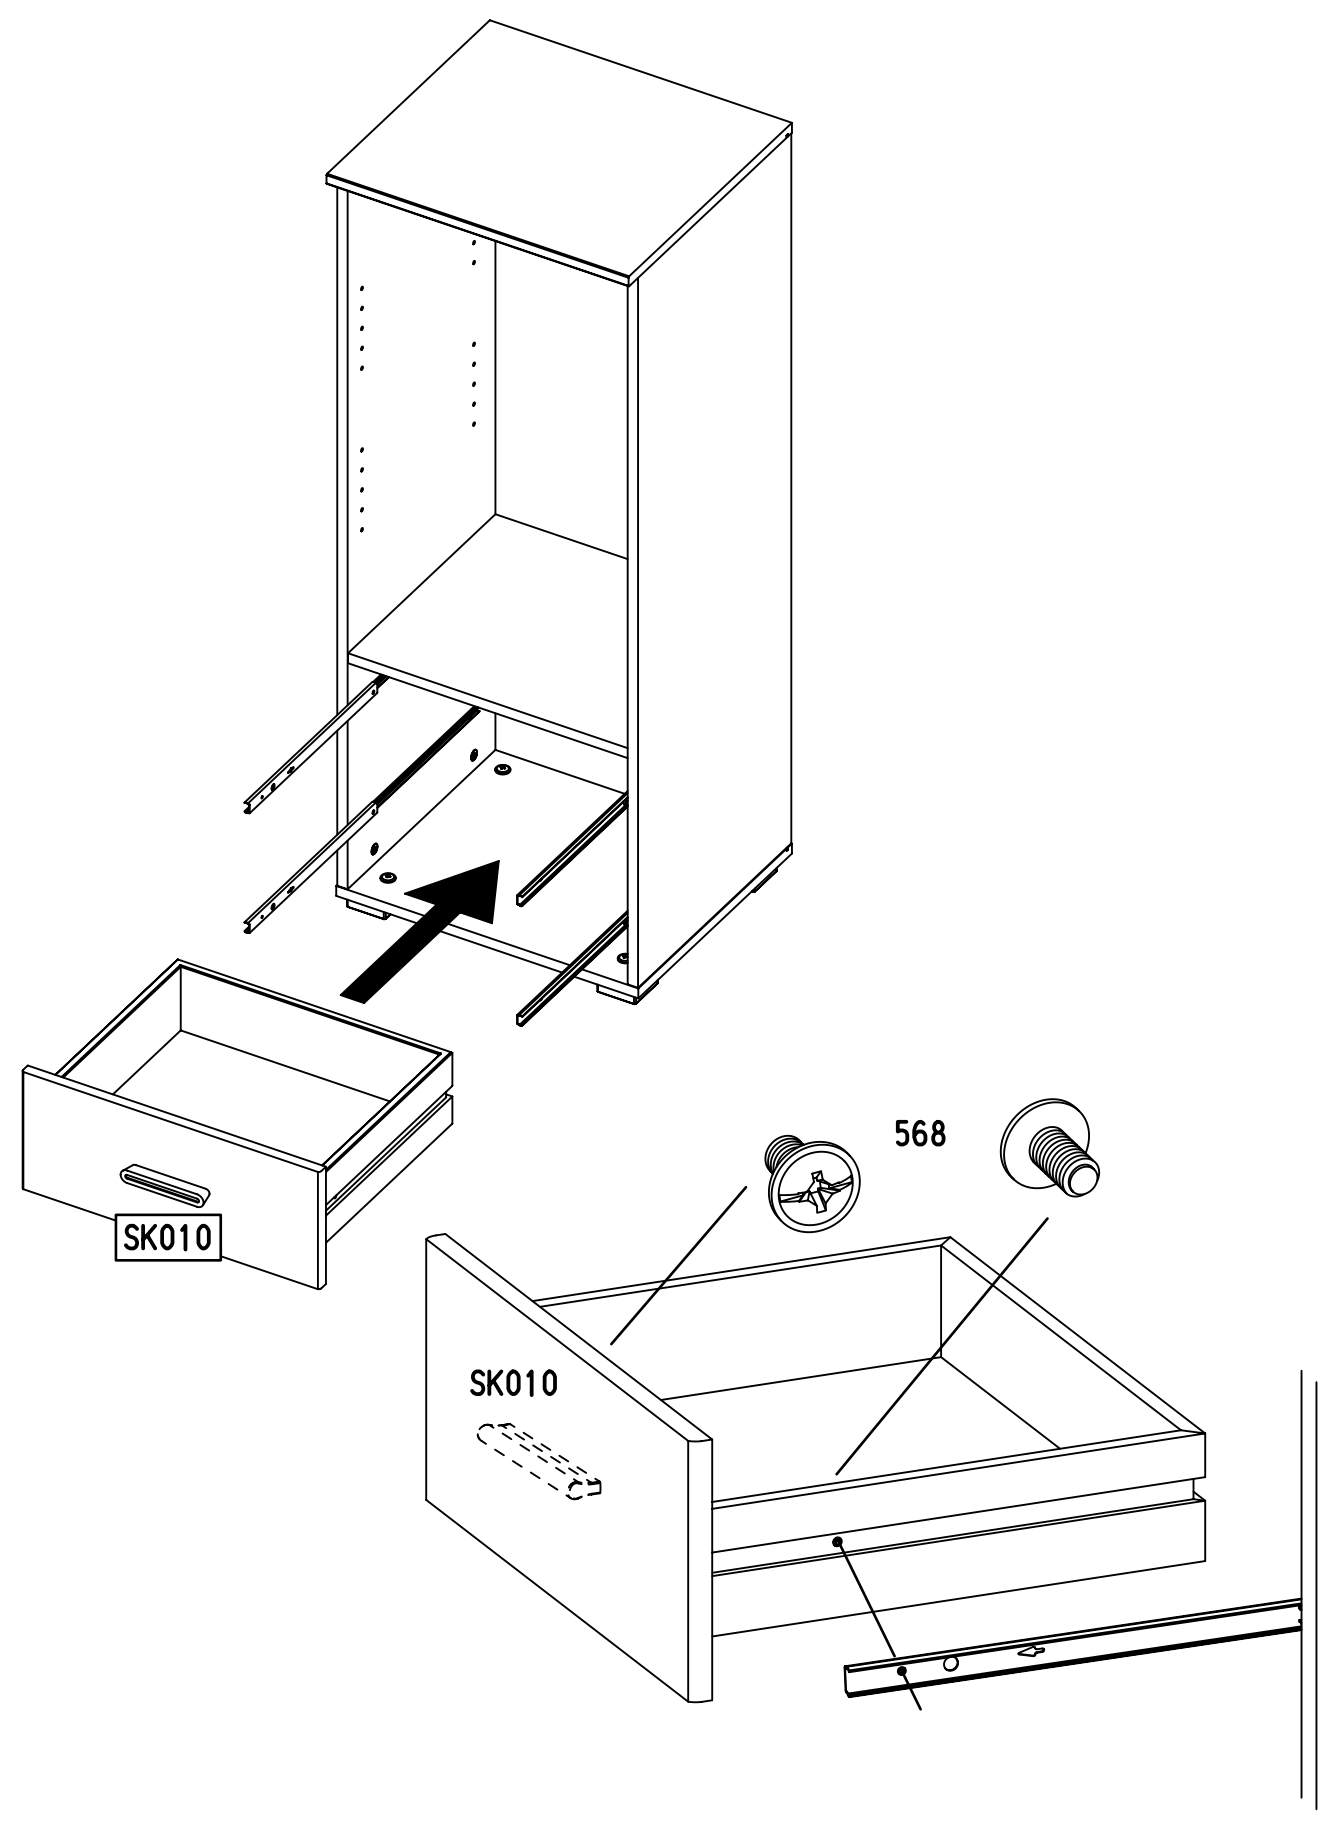
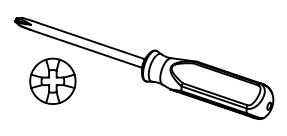


M2135

28.

25



16x 1105

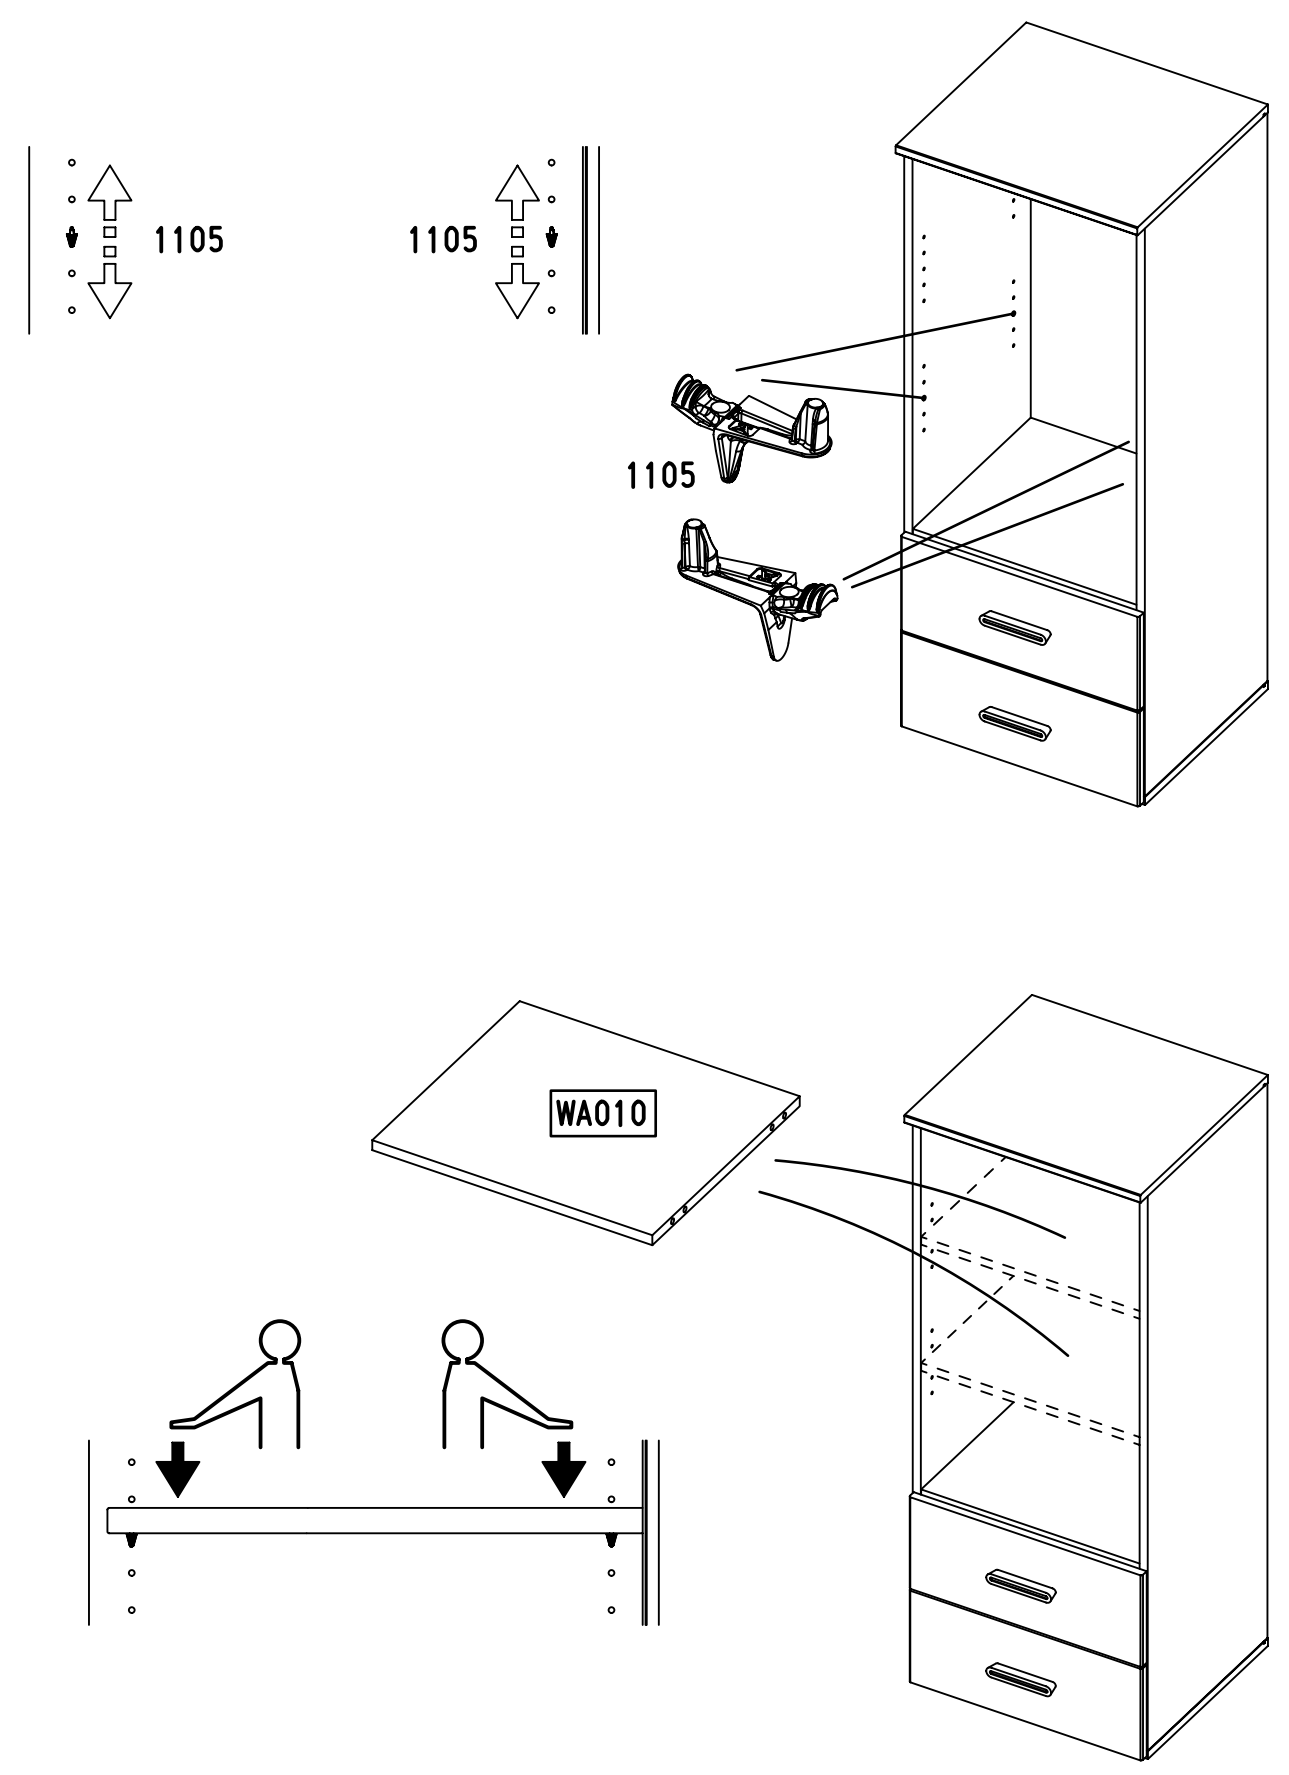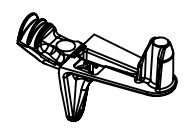



M2135

1.


MZ103_01

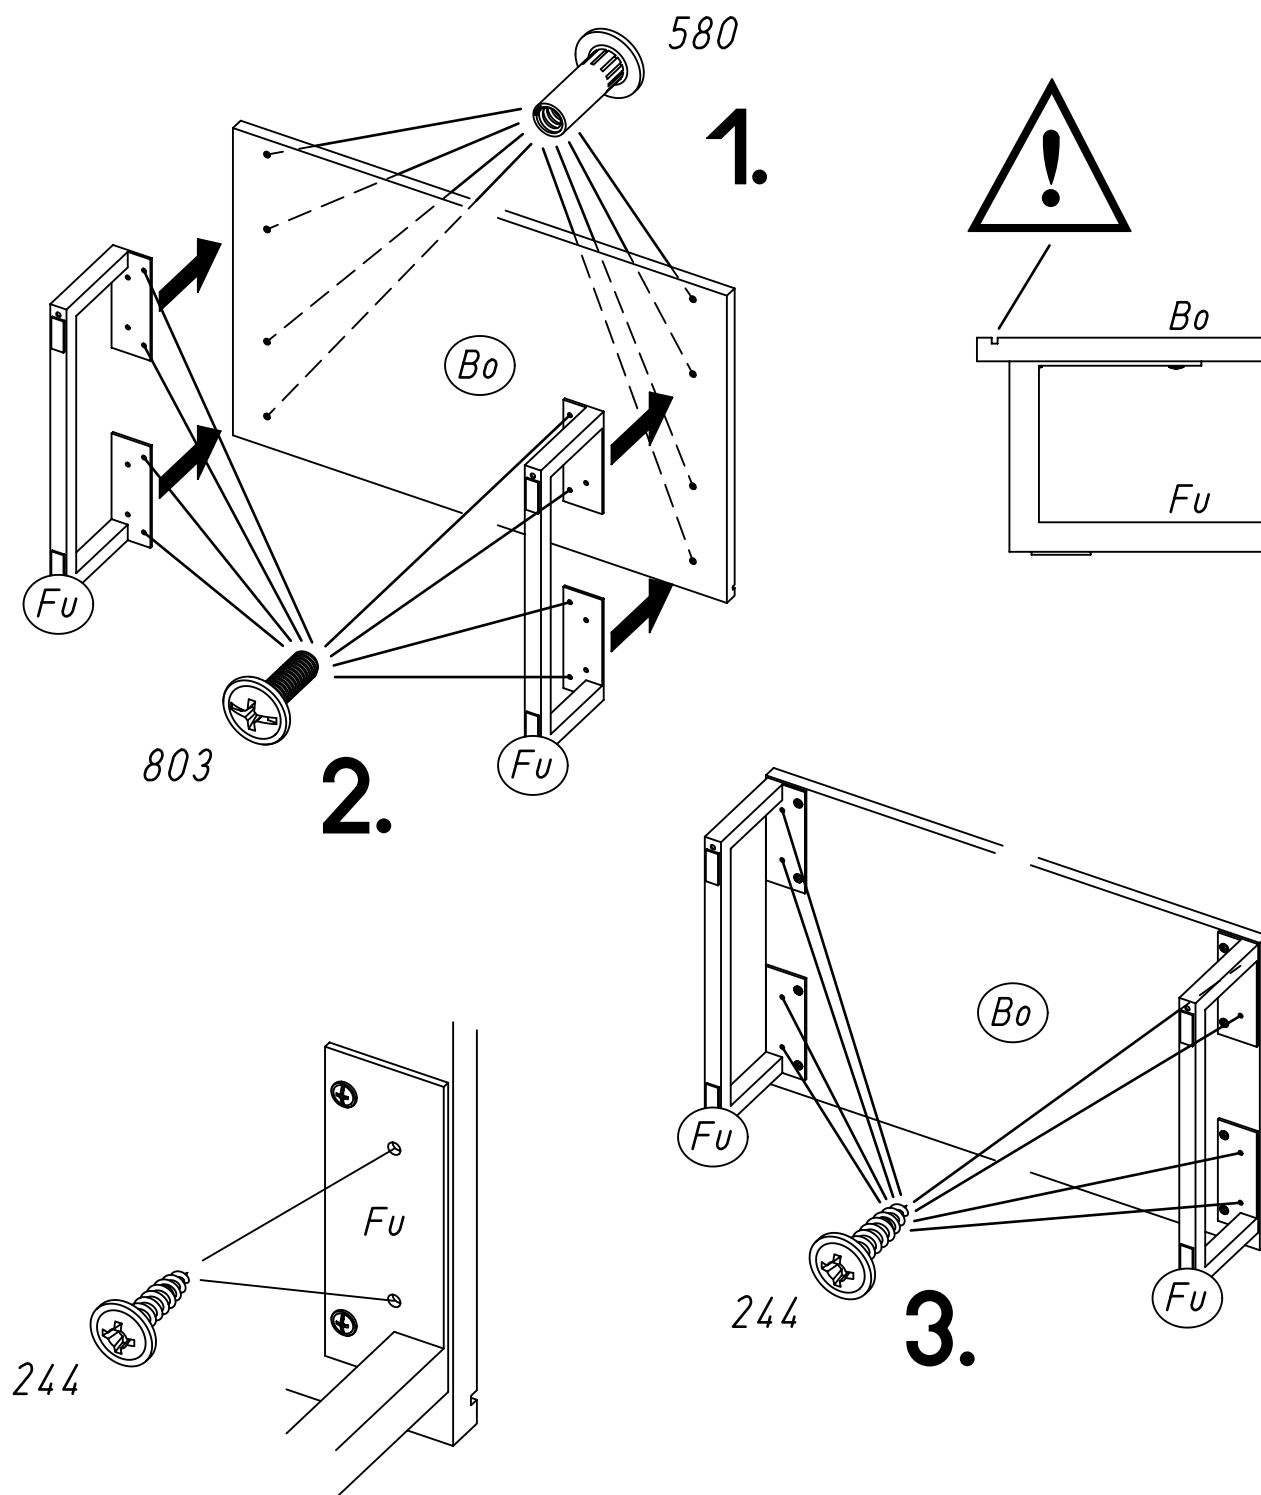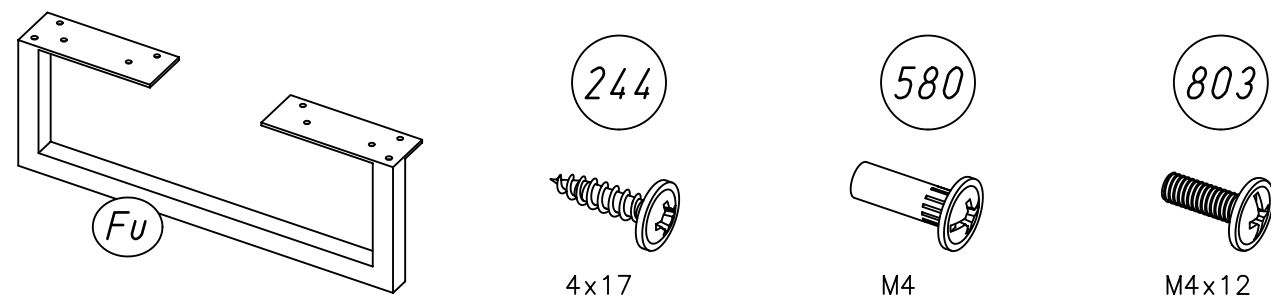

2.

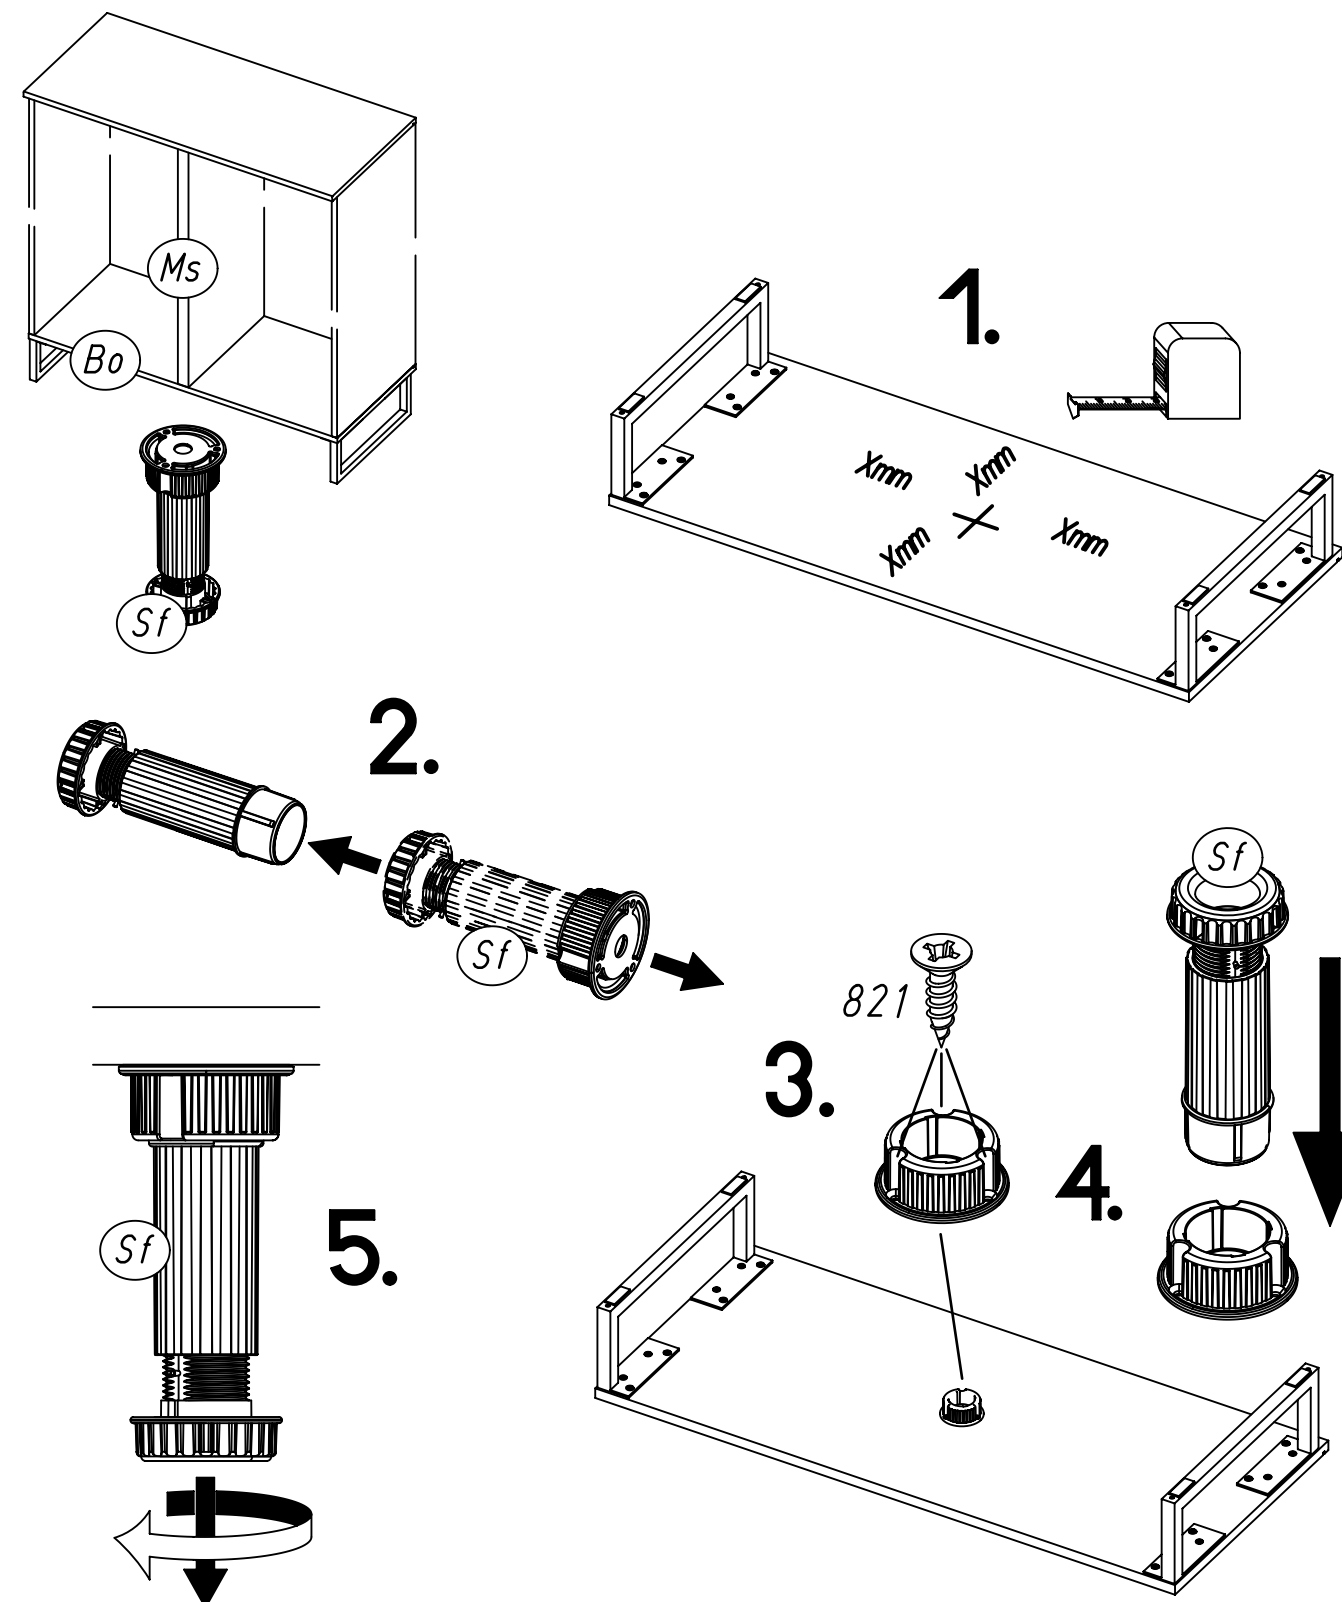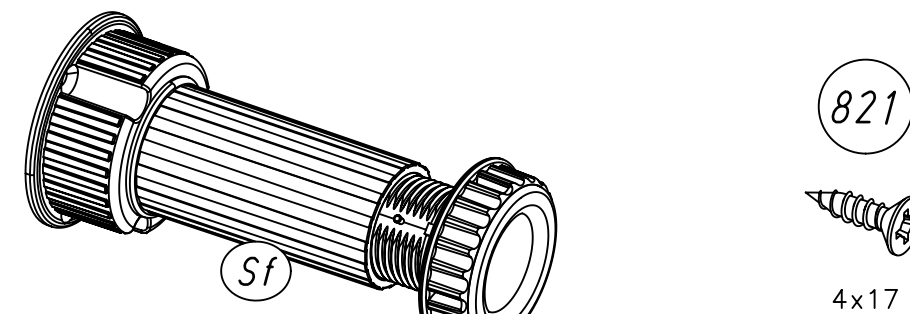


3.

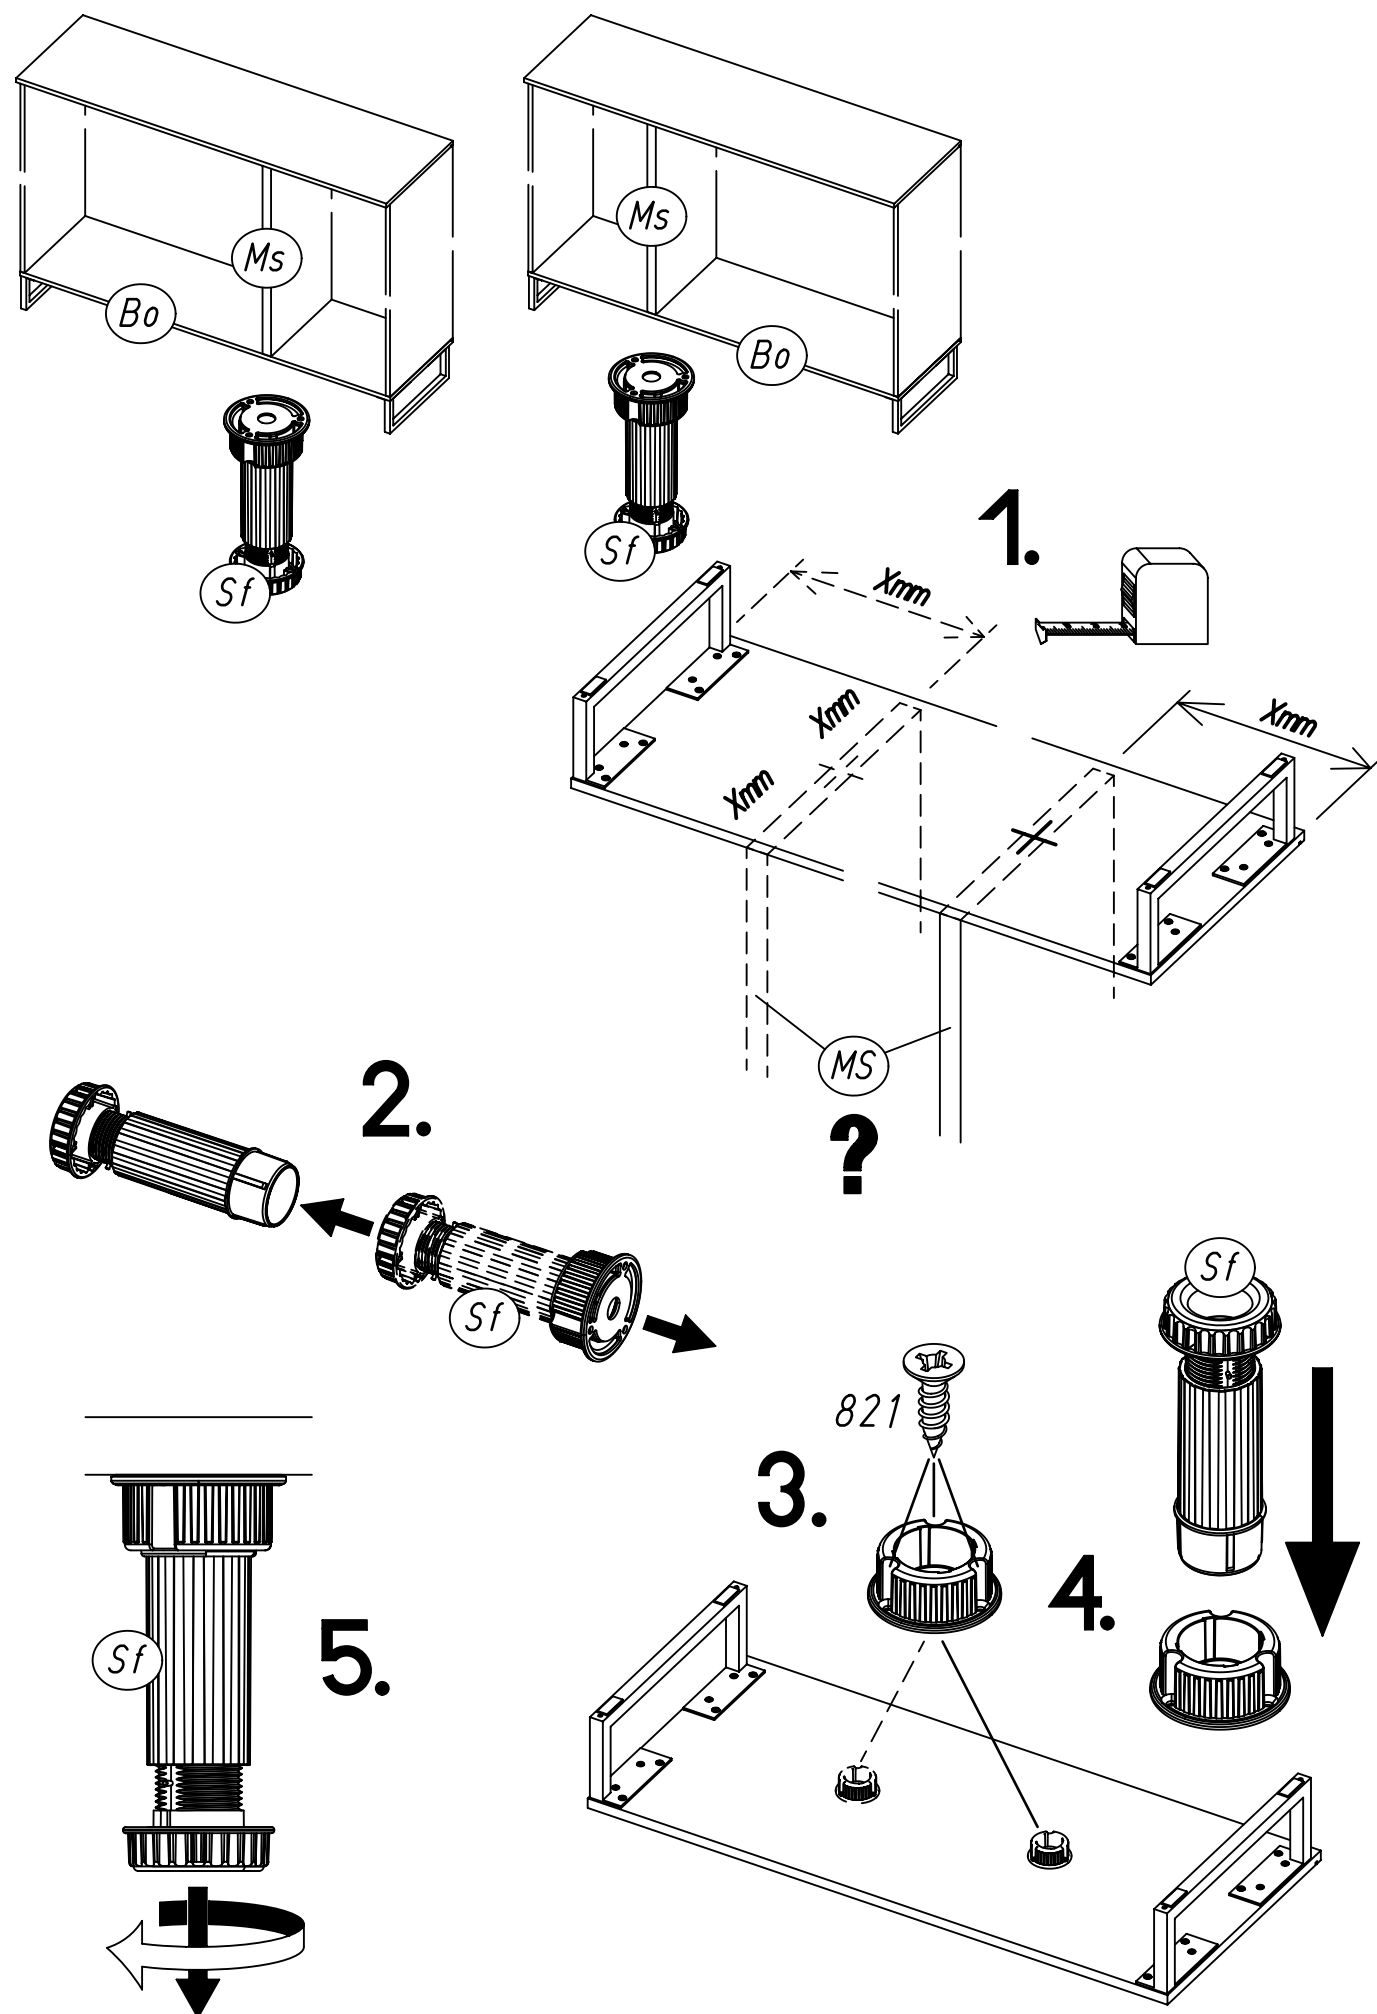

MZ103

4.

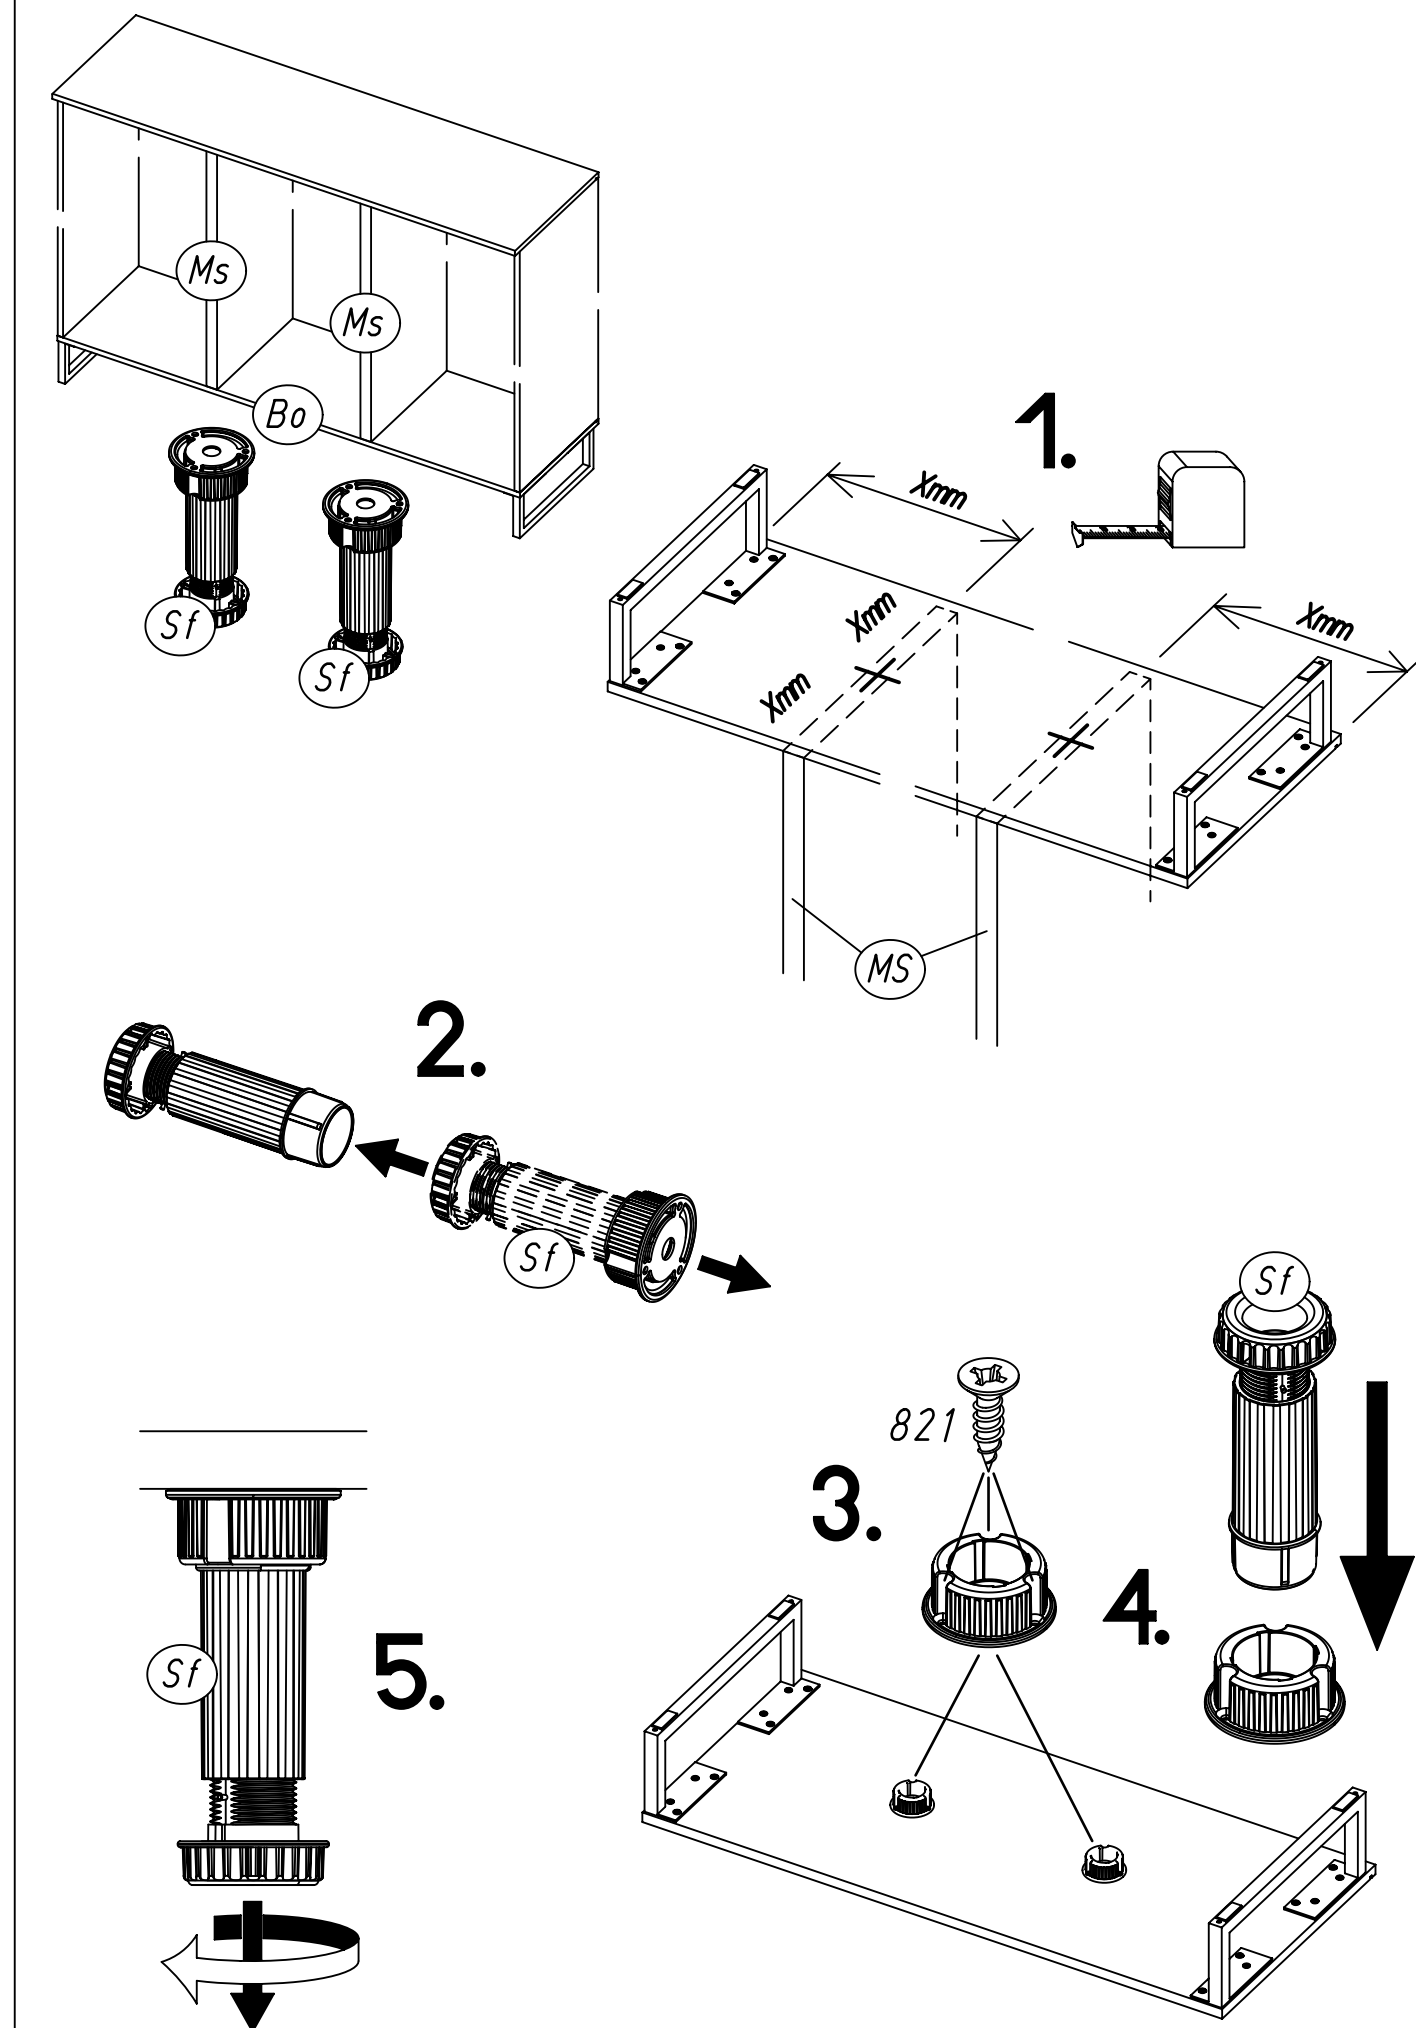

M103