

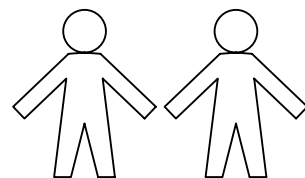



1.



M2110_03

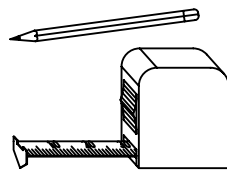

Ø8mm

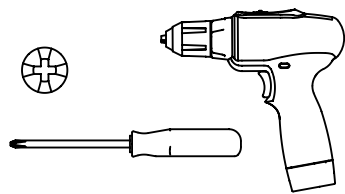


Ø6mm

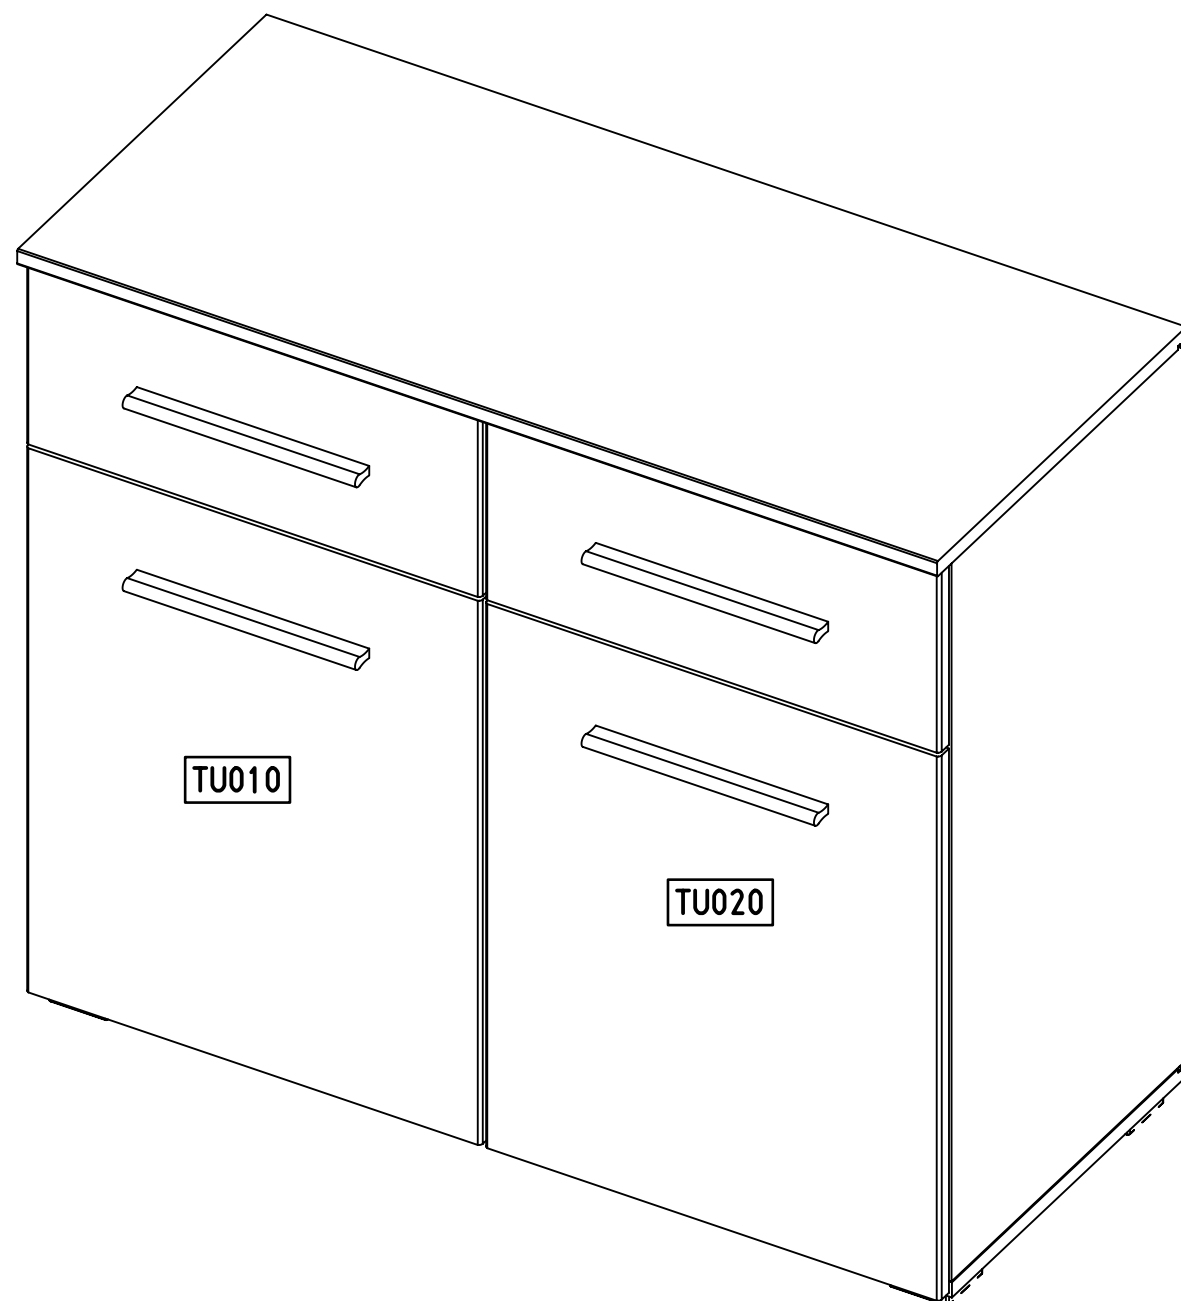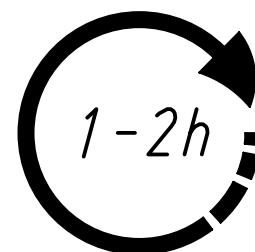


2.


2x

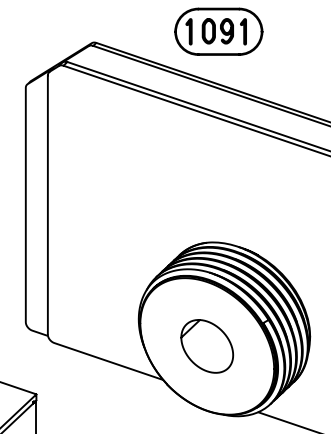

1092

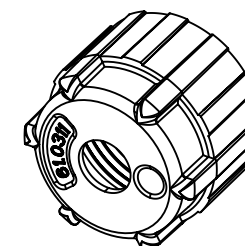


1093






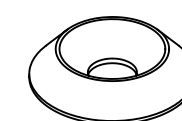


20/7x5


1147






5x90

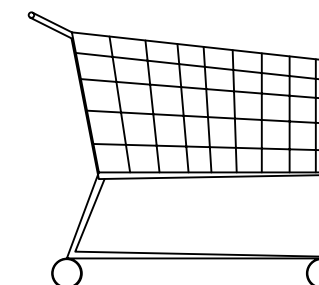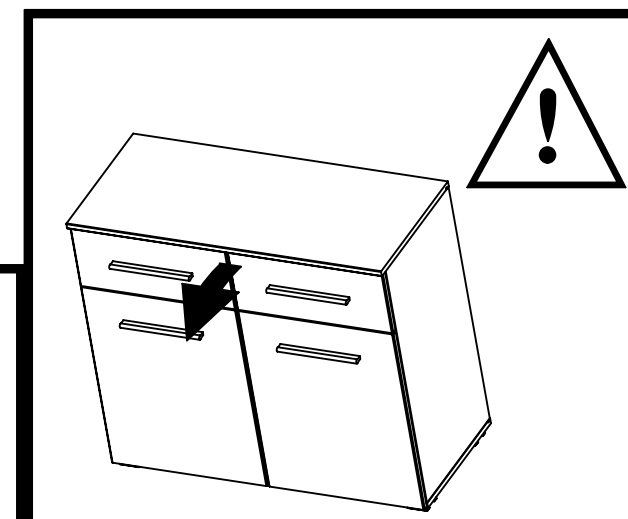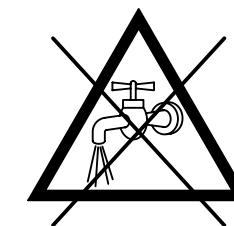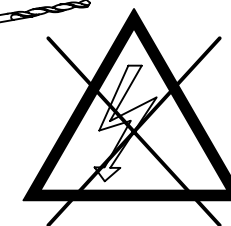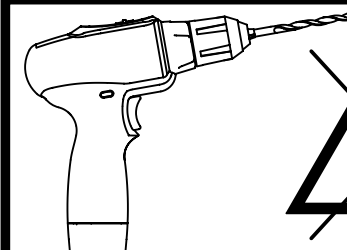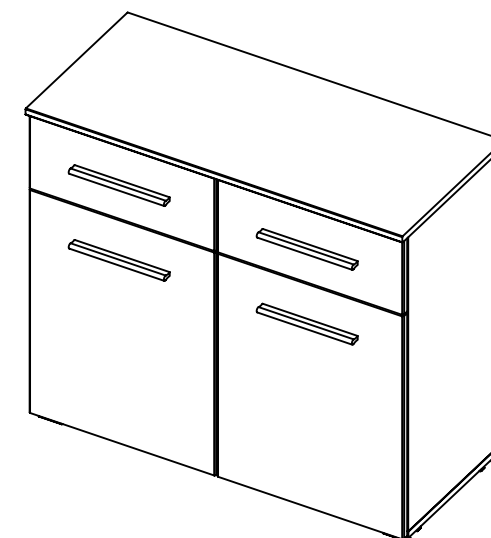


Ø8mm

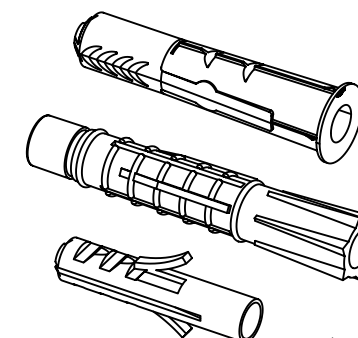


?

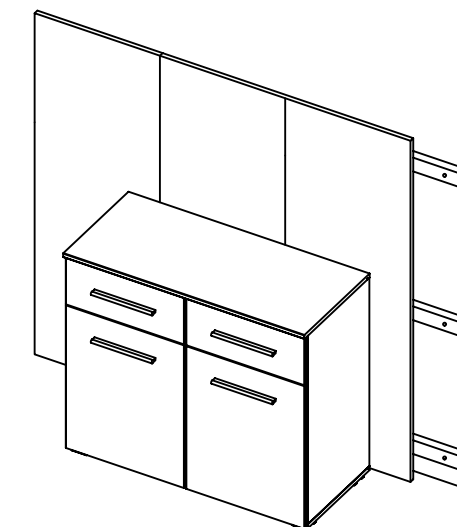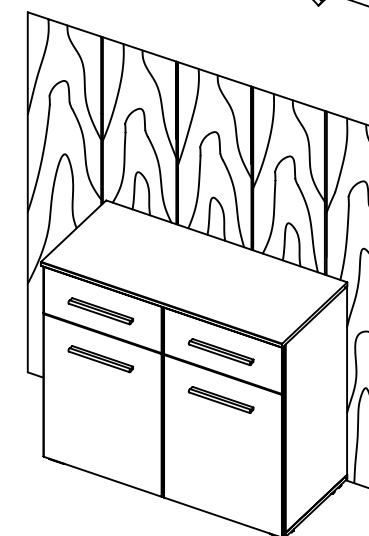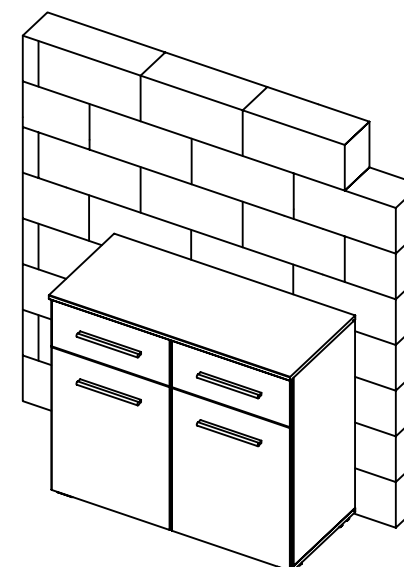

3.

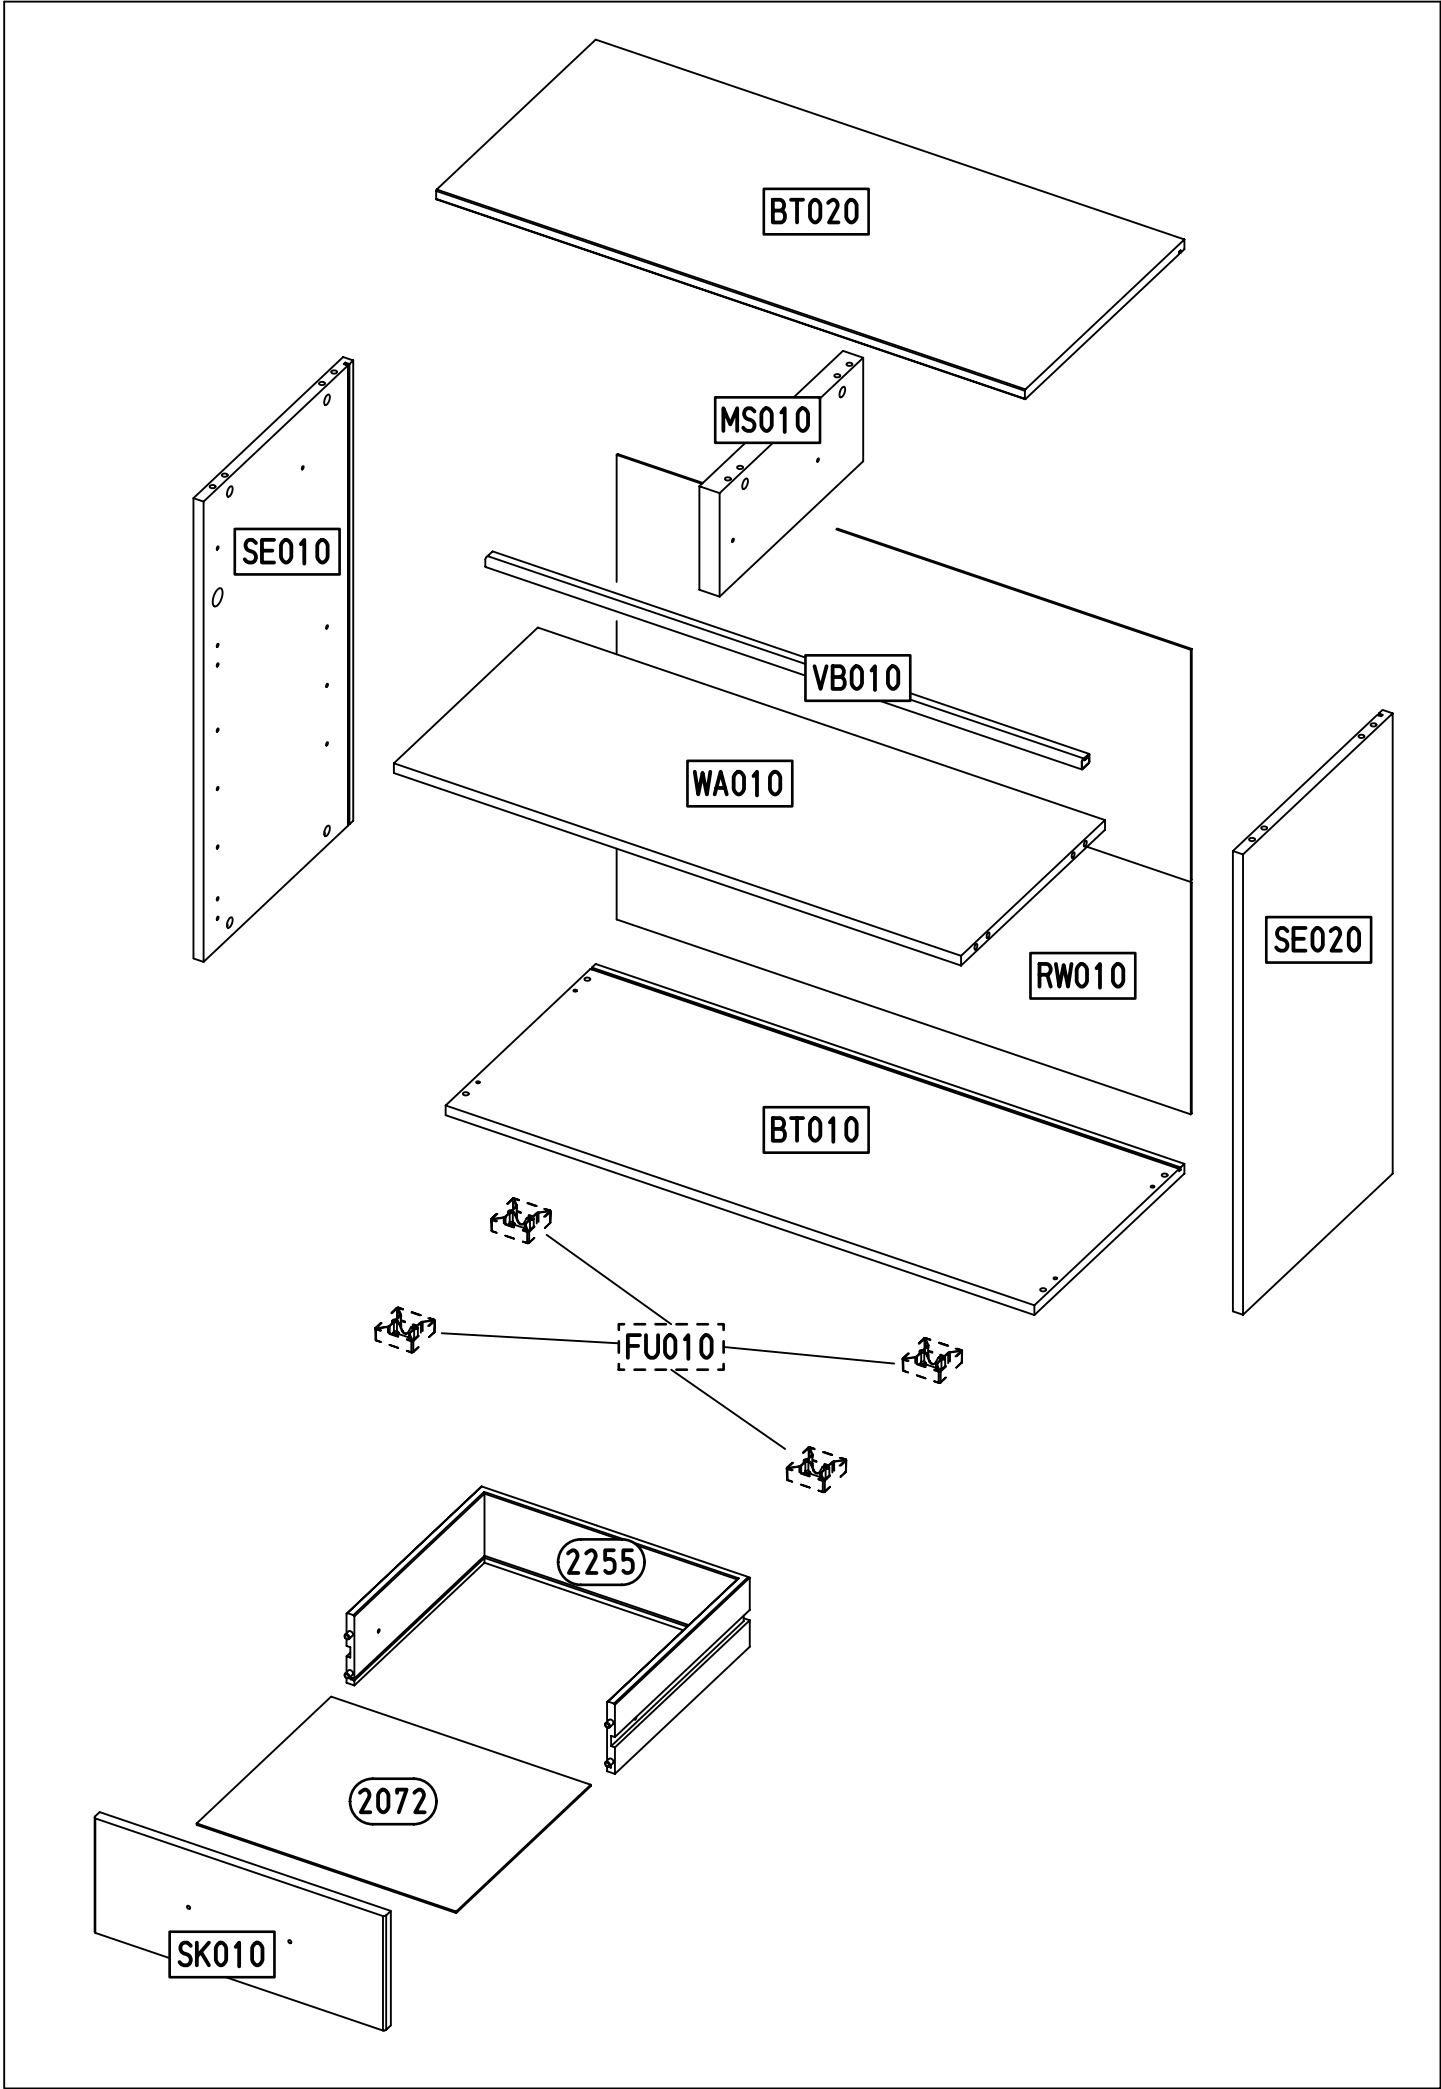




4.

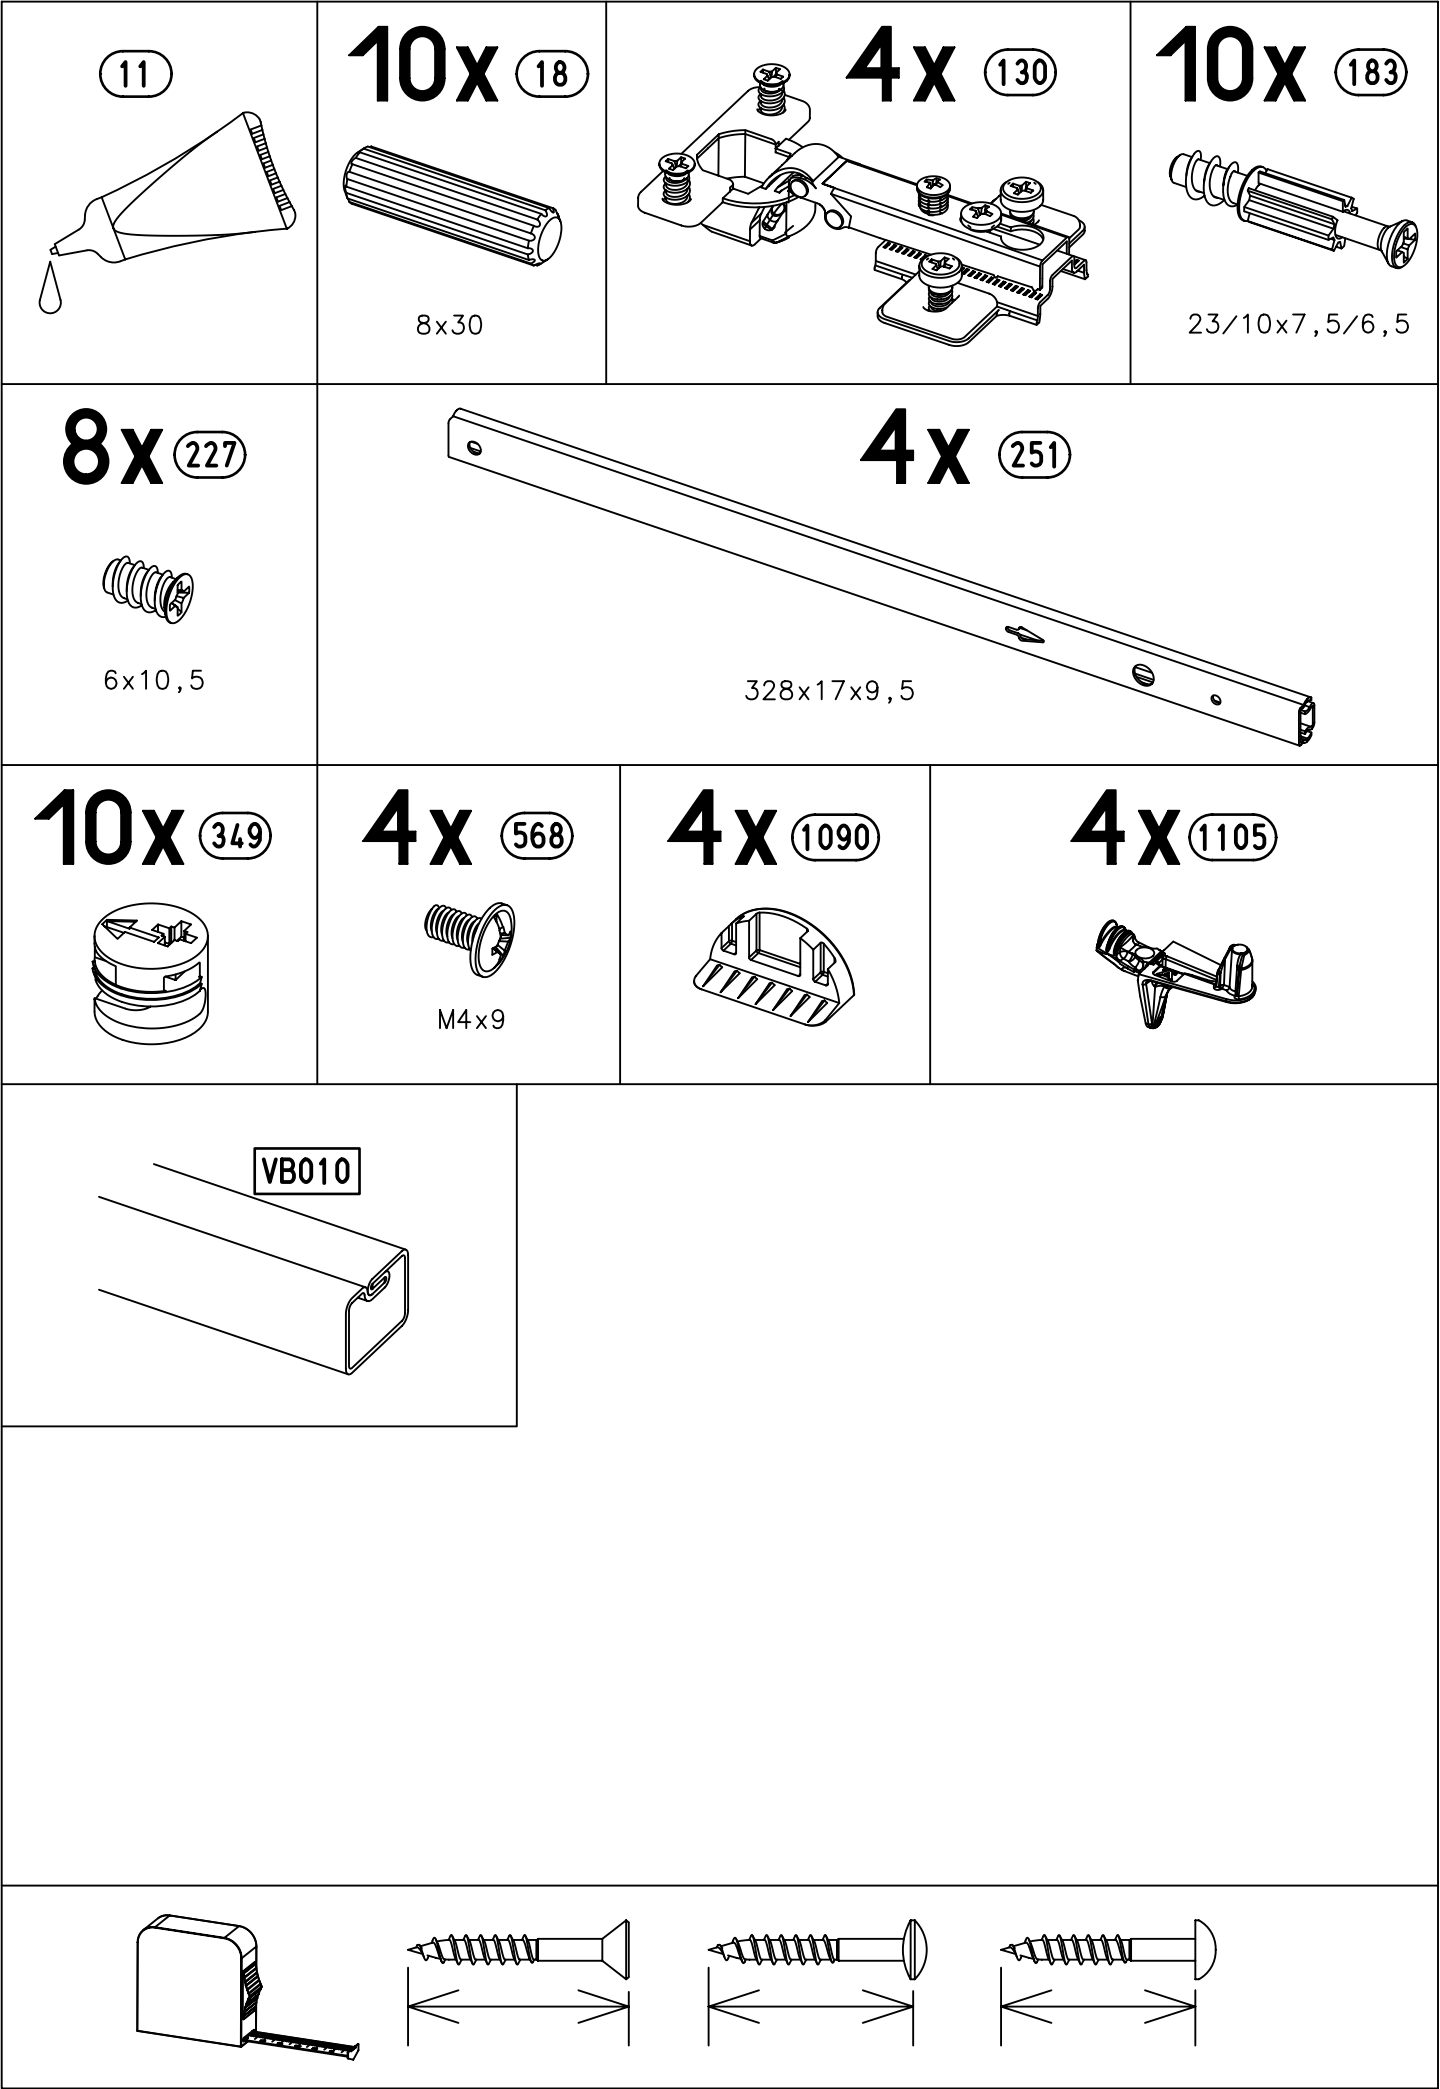


5.

1


11

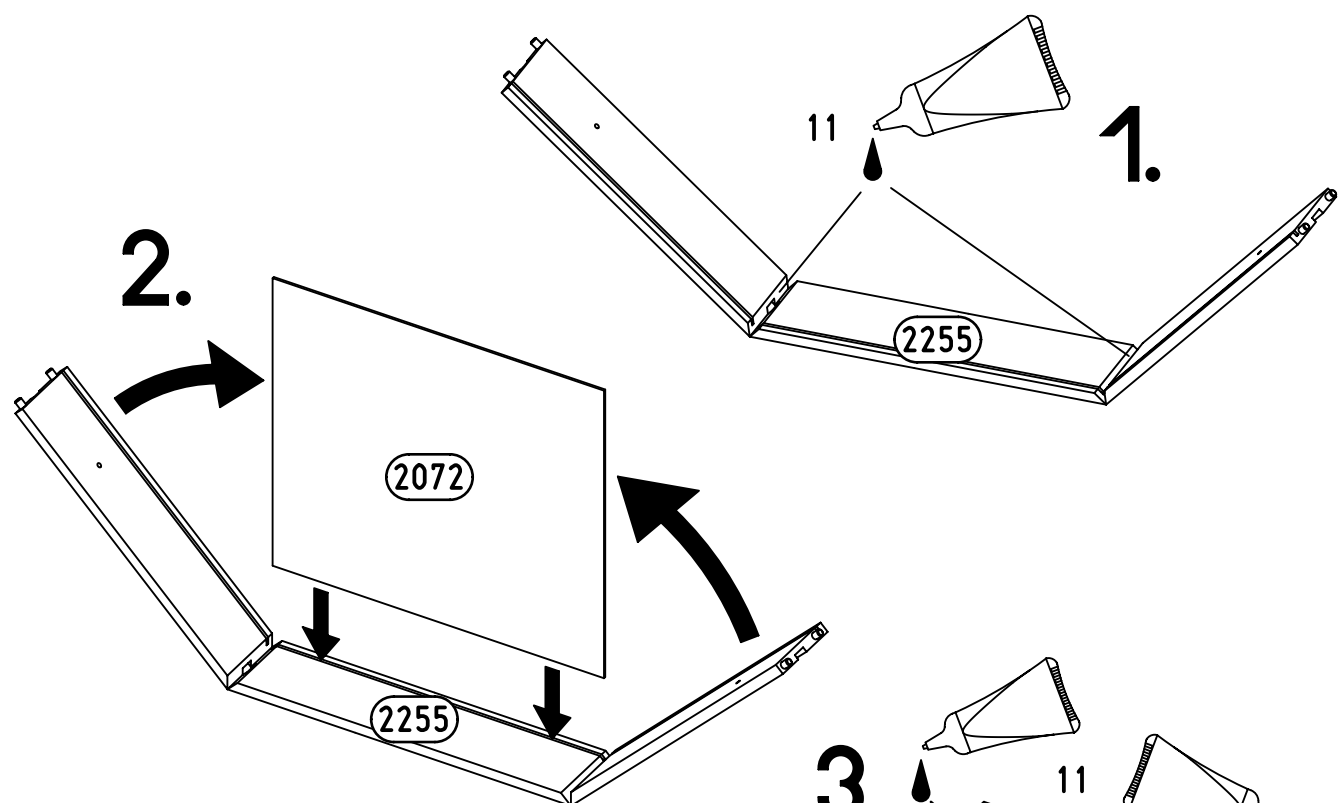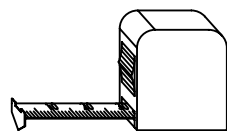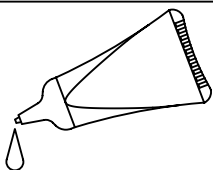




3.

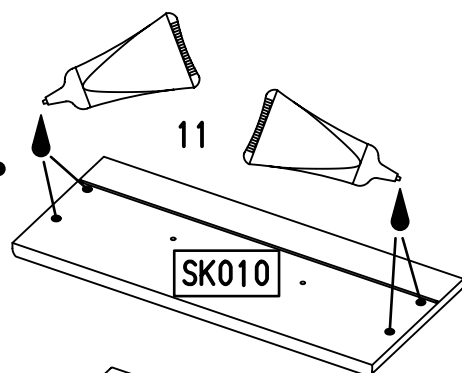

4.

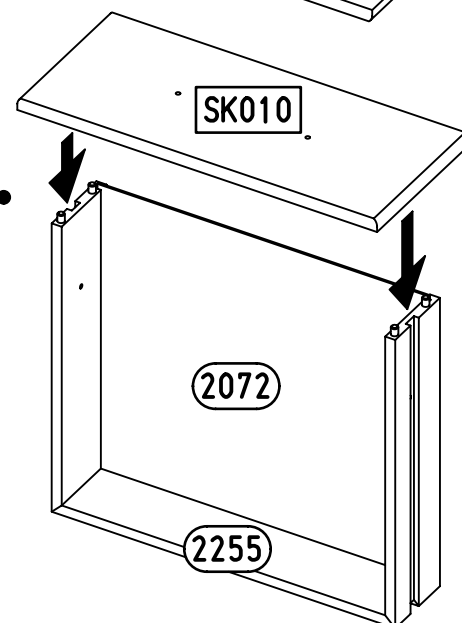





Xmm = Xmm

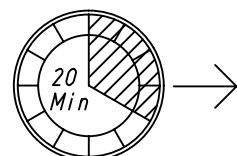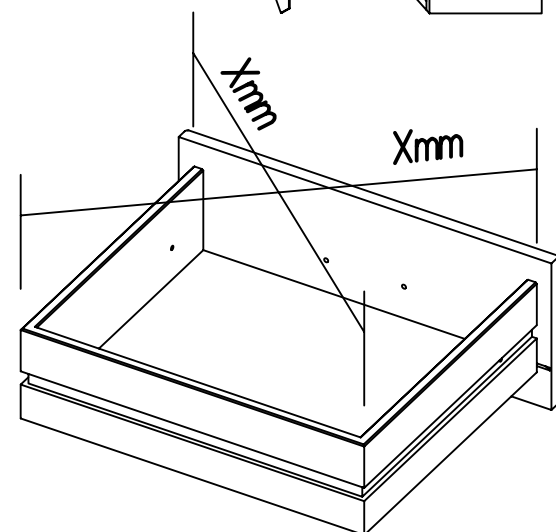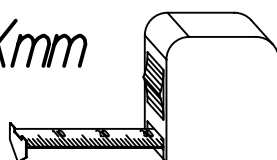

M2110



6.

2

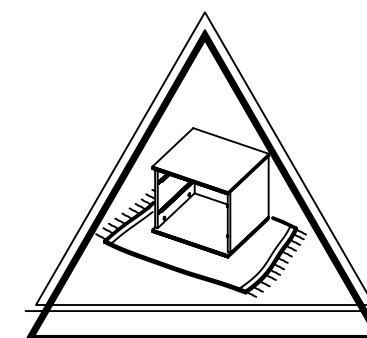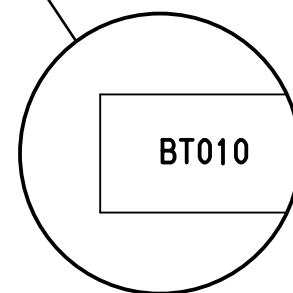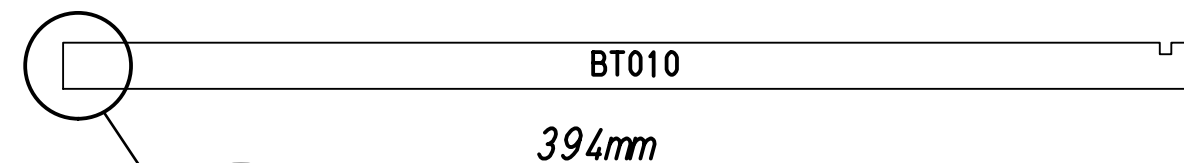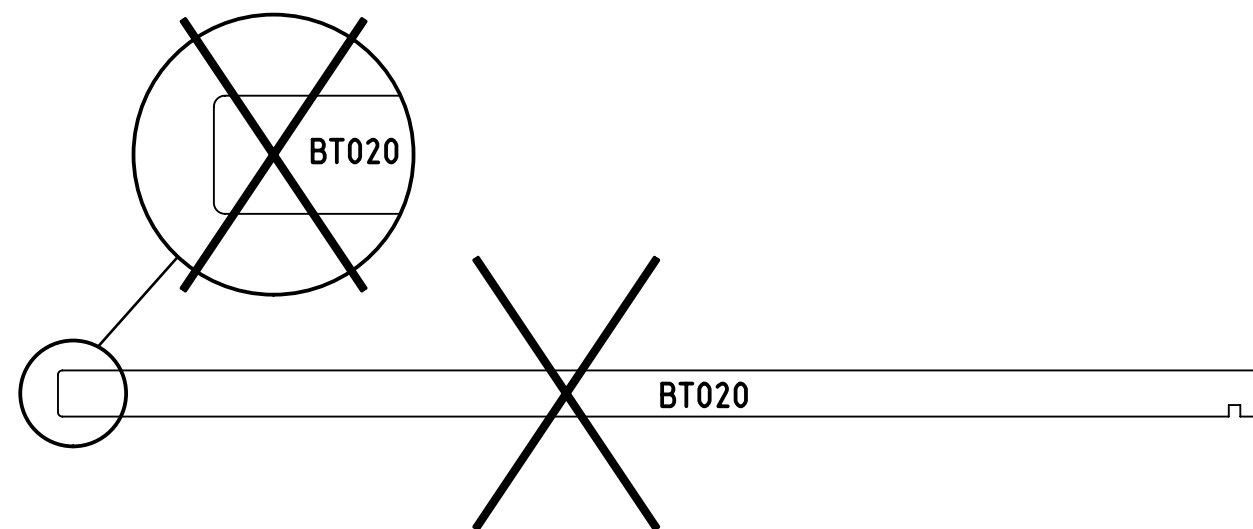

?

FU010

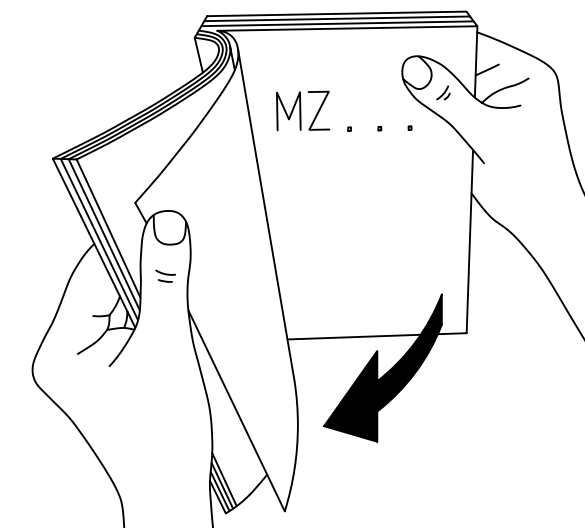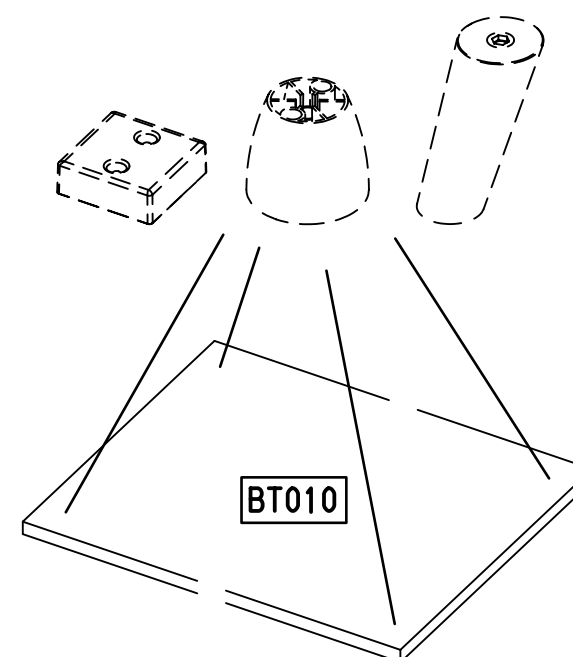


M2110

7.


3


4x

183



23/10x7,5/6,5




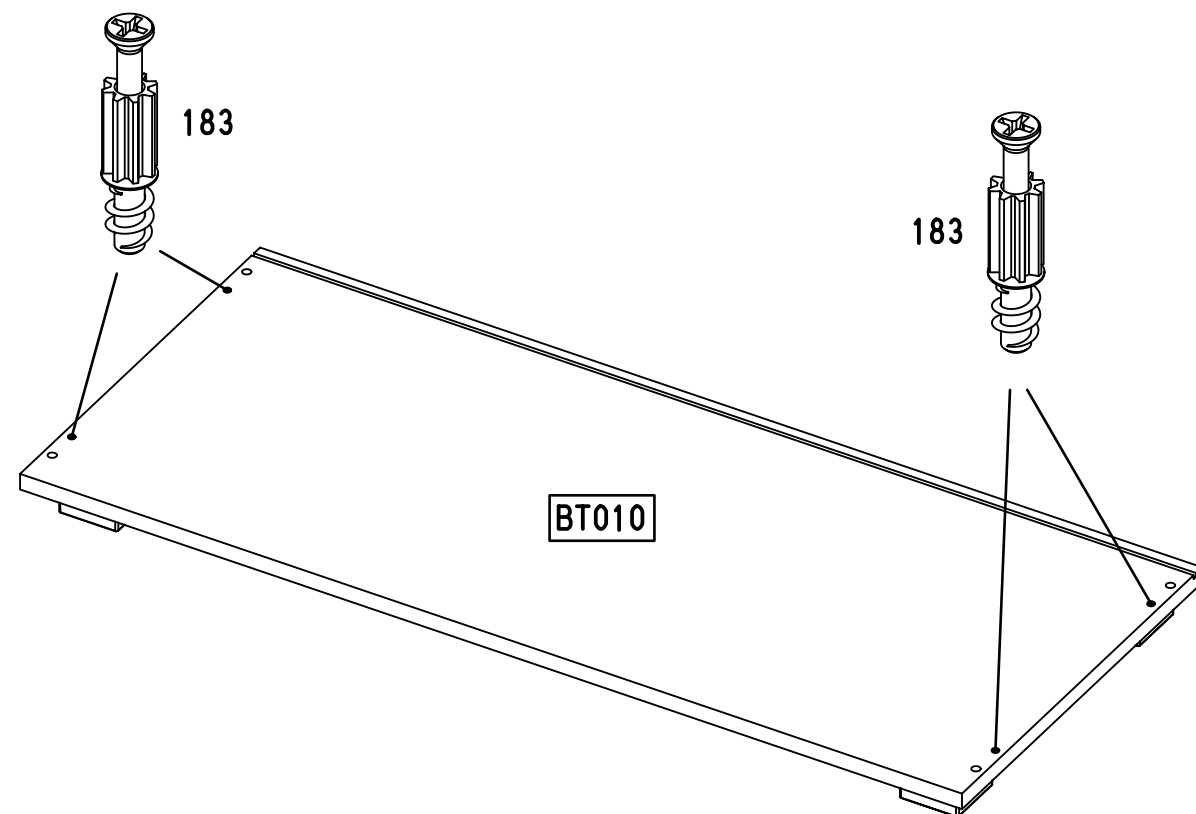


4

8x

18



8x30

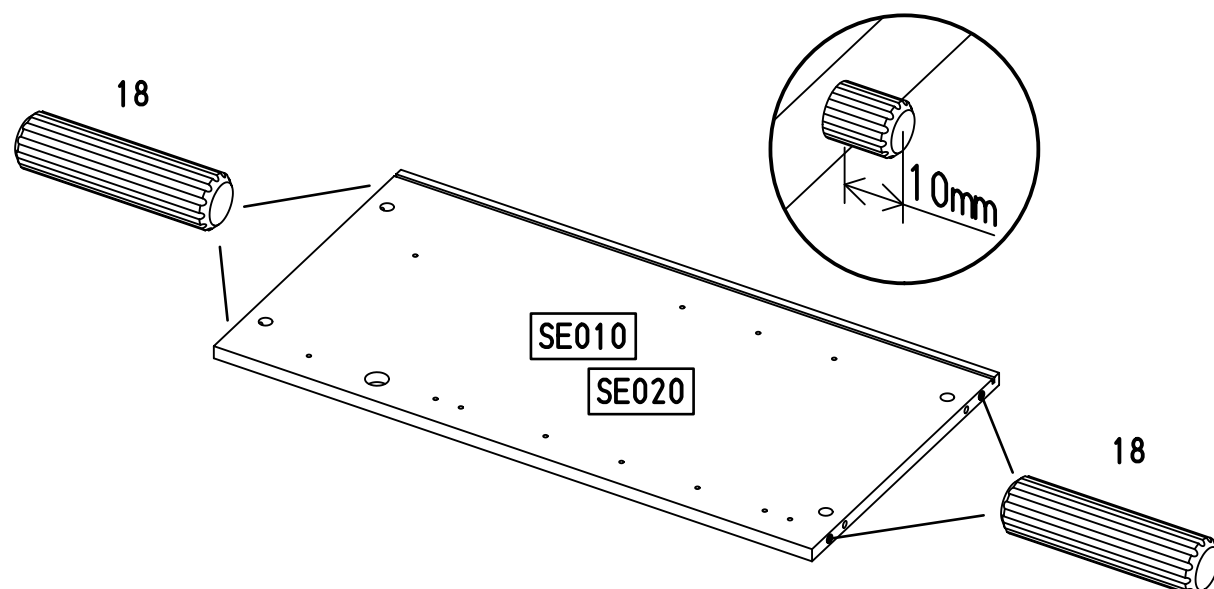

M2110


8.





5

8x

349





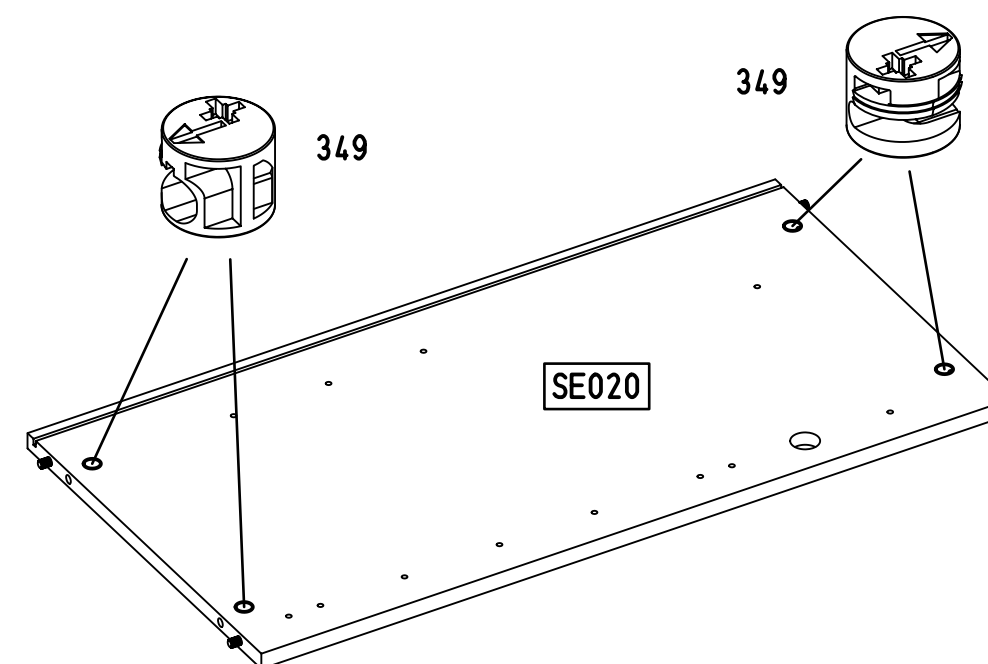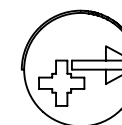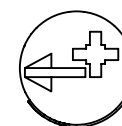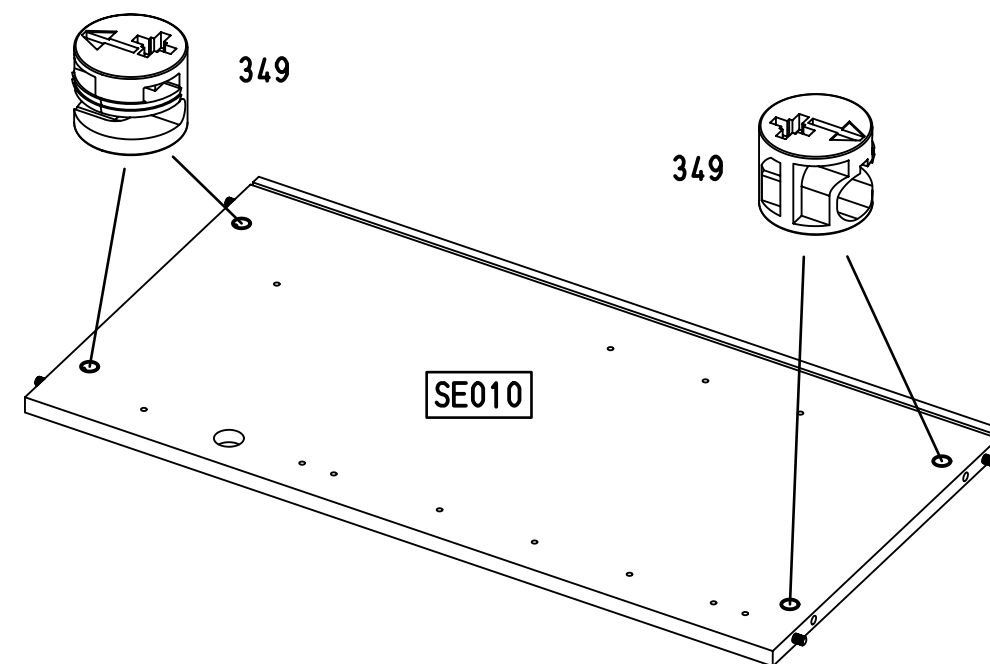


M2110

9.

6

1x (251)




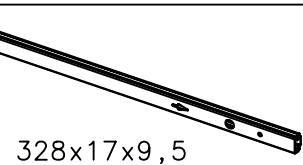


328x17x9,5

2x (227)



6x10,5

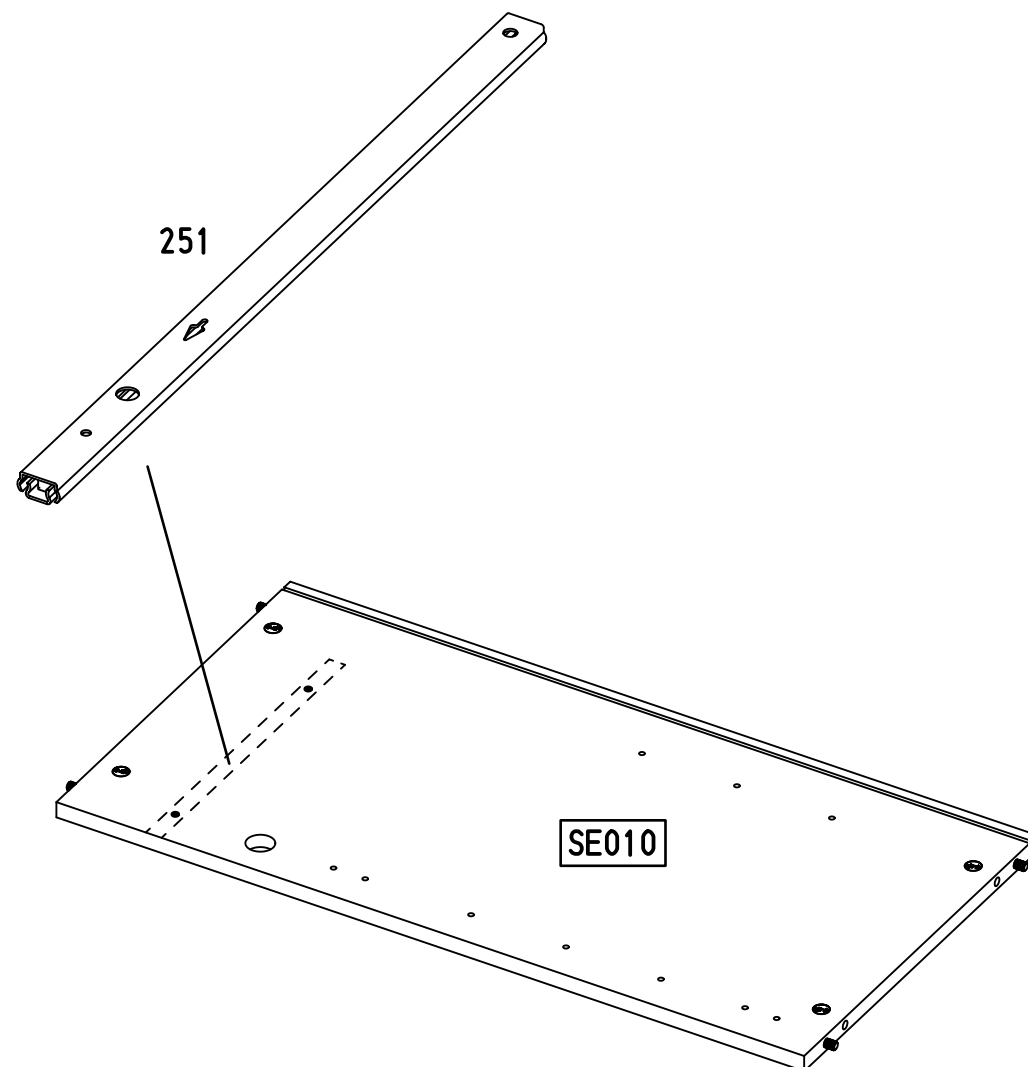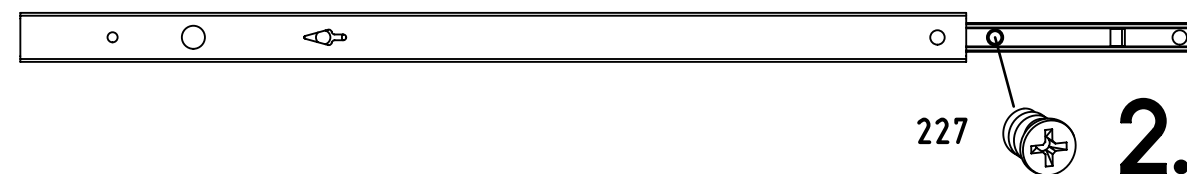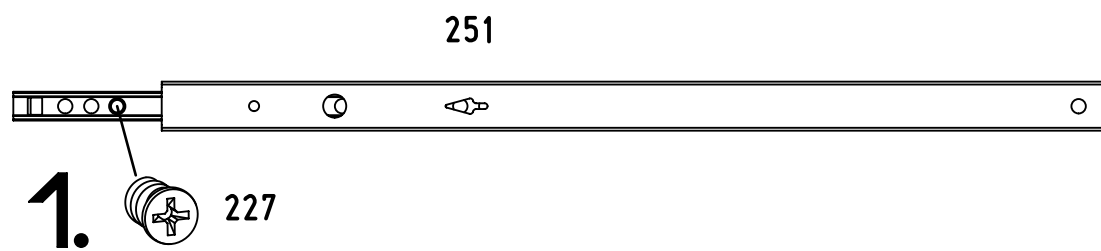


M2110

10.

7

1x (251)




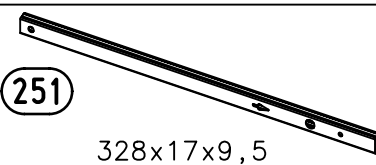


328x17x9,5

2x (227)





6x10,5

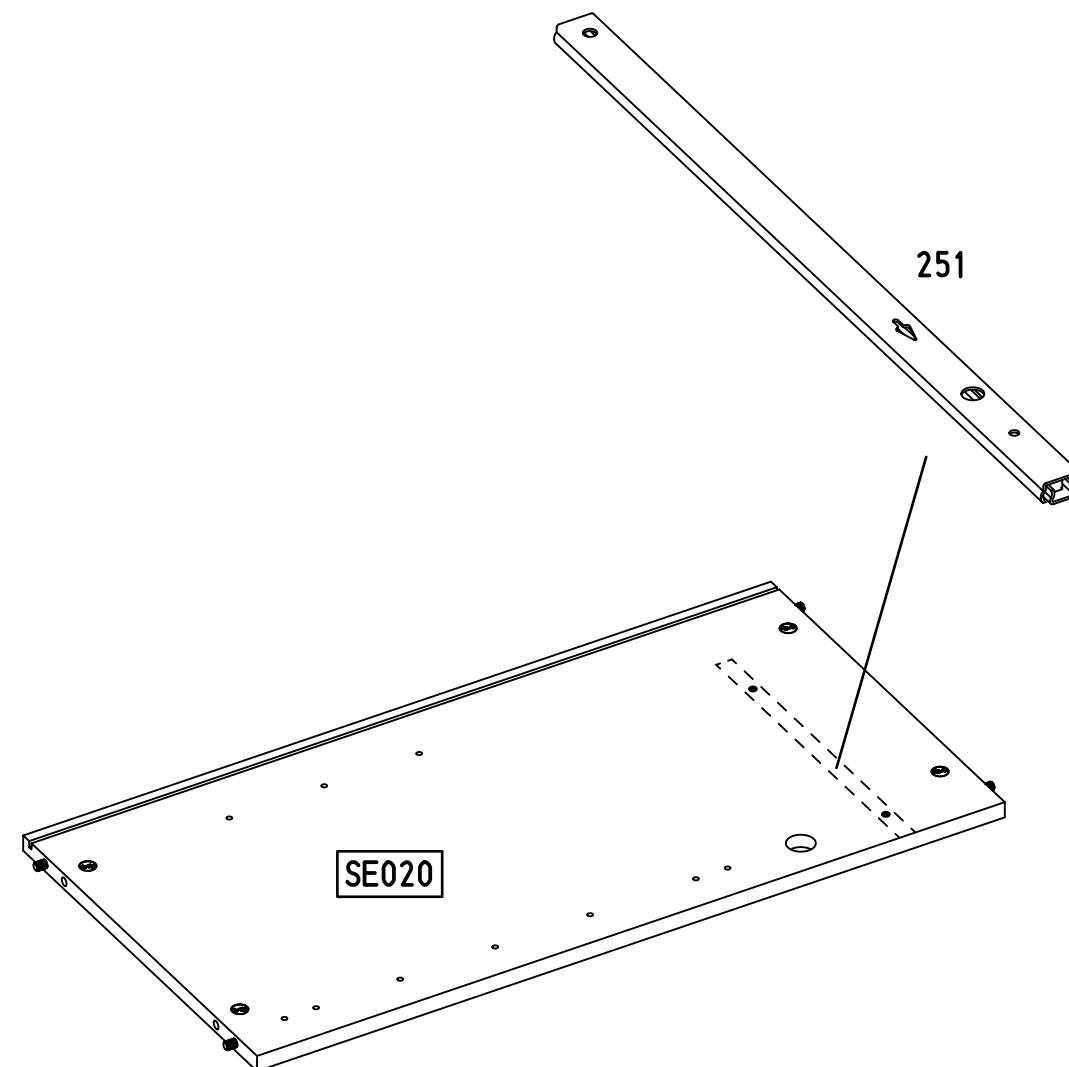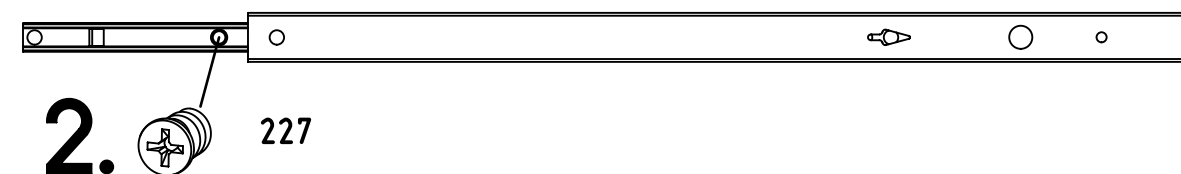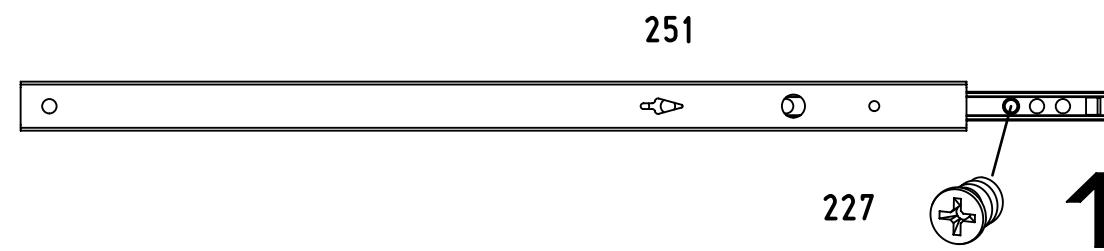

M2110

11.


8

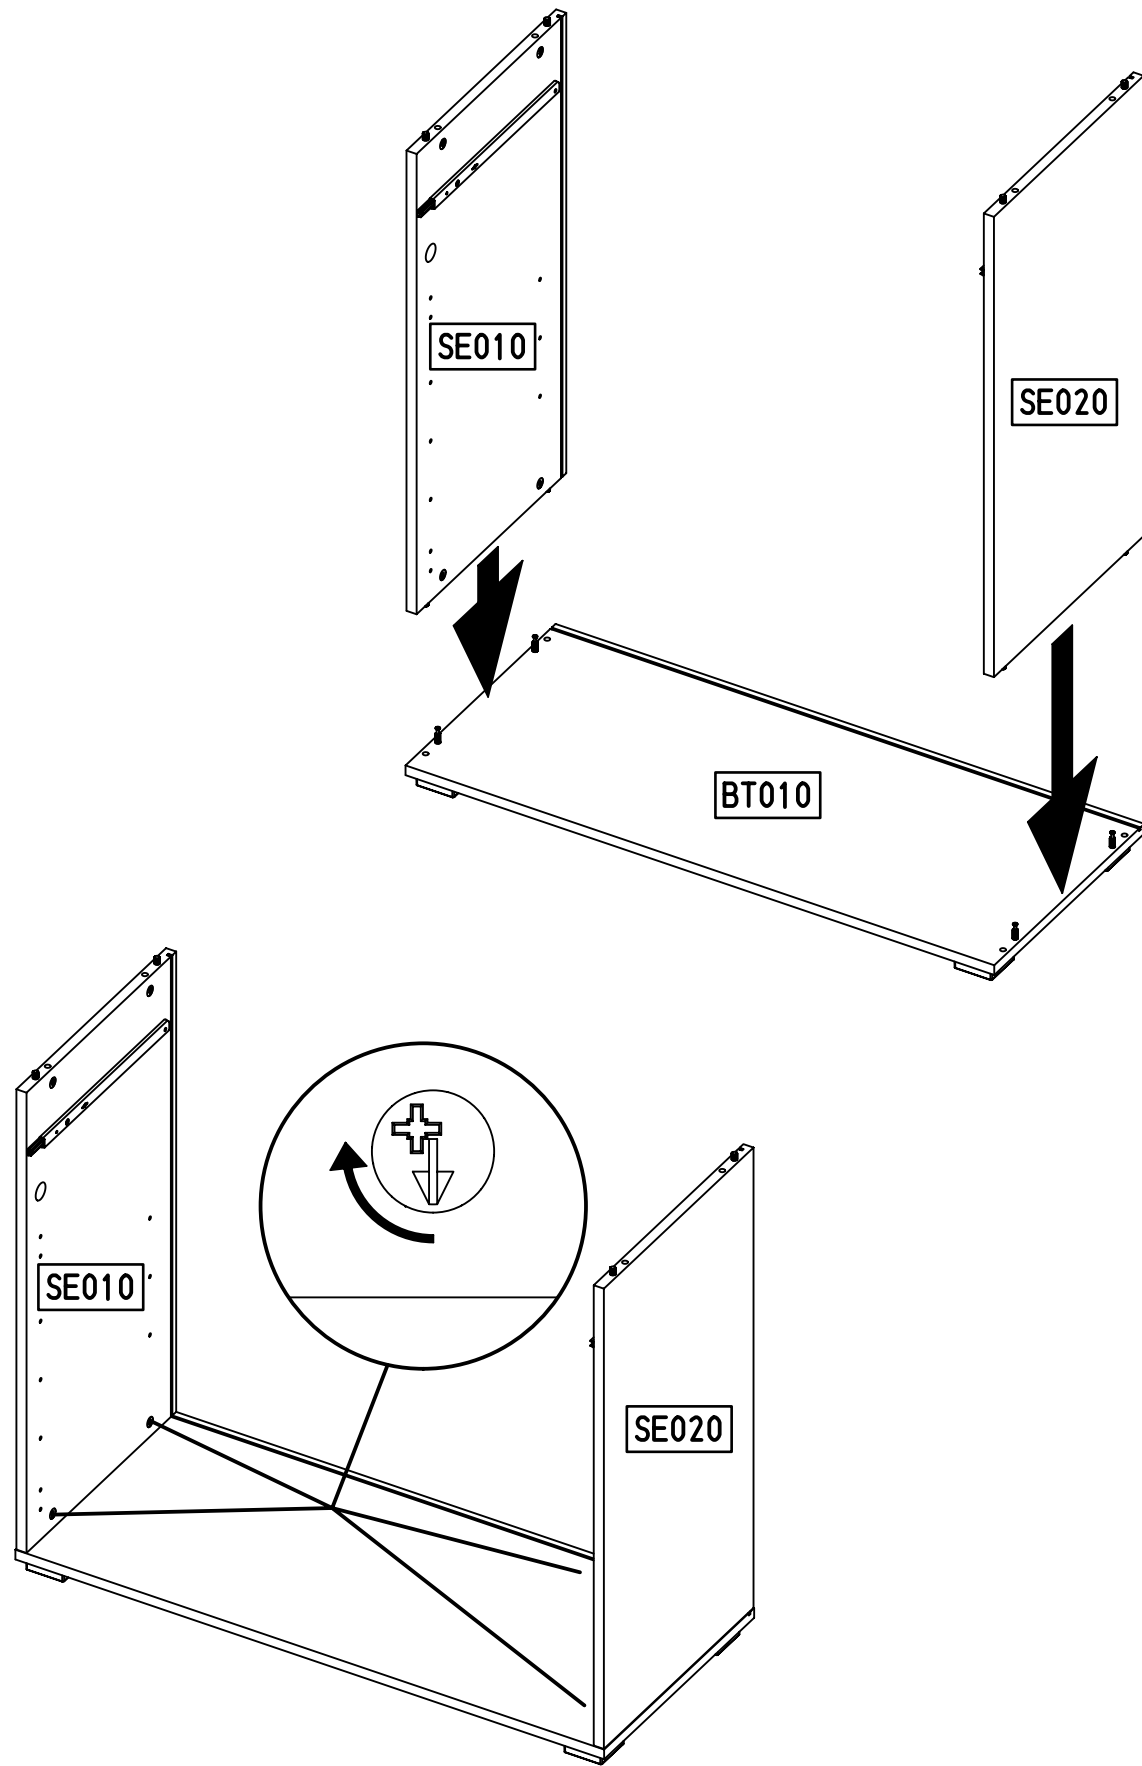

M2110

12.

9

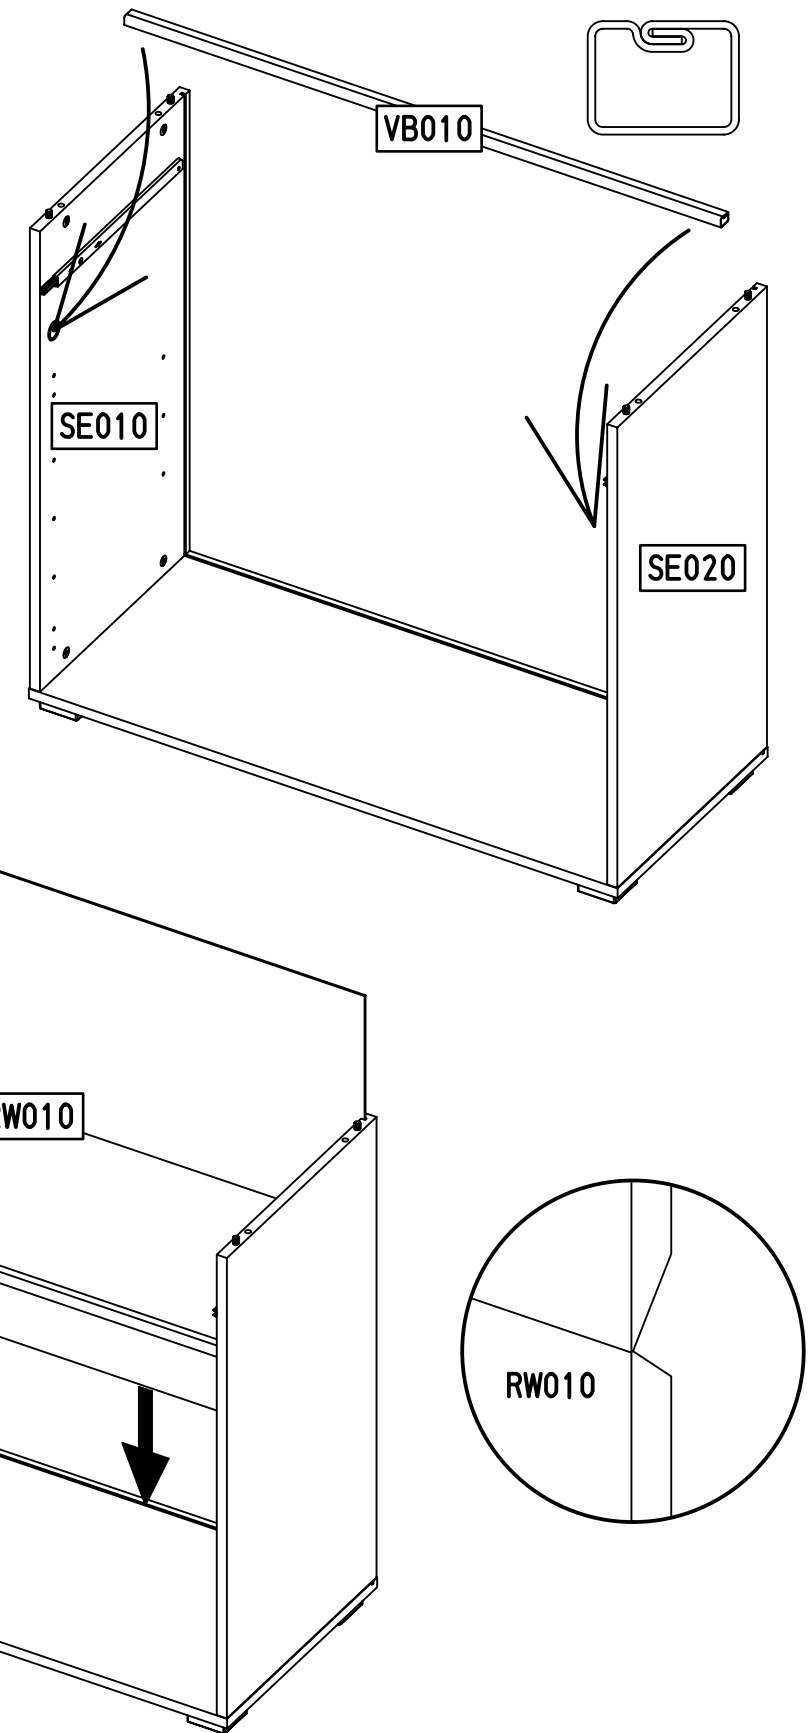


M2110

13.



10

2x

18






8x30

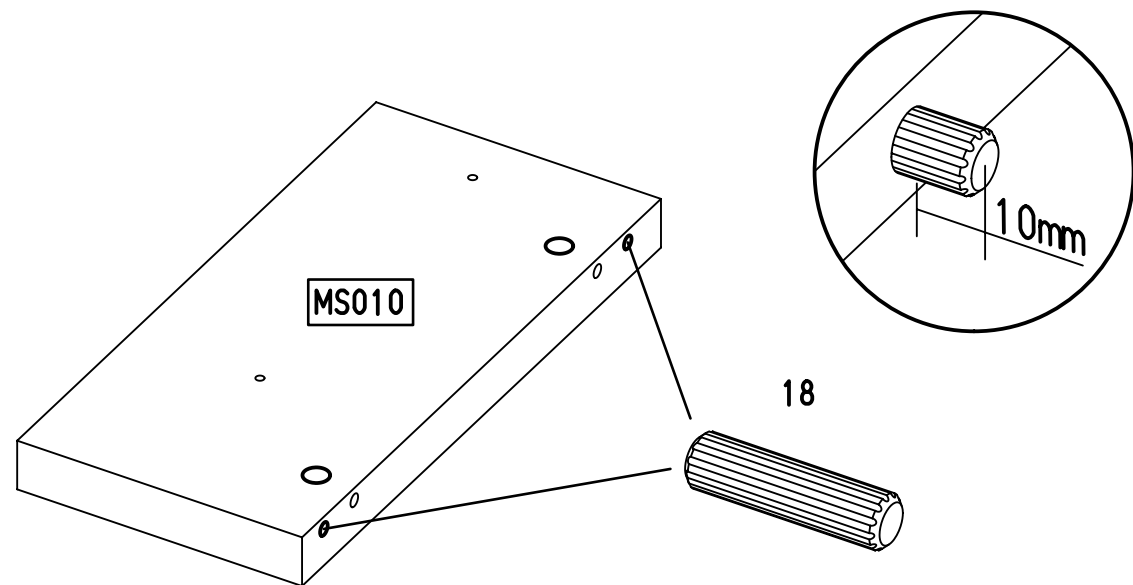

11

2x

349

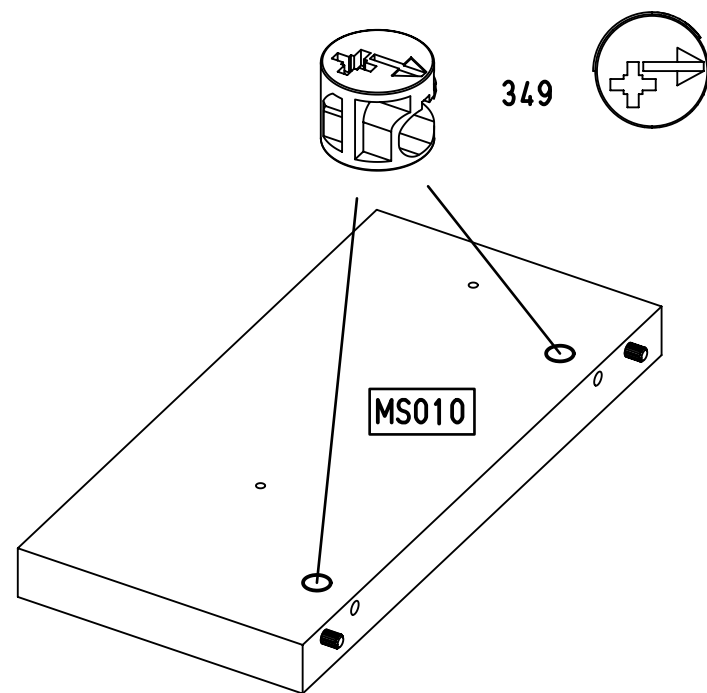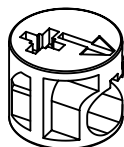

M2110

14.

12

2x

251





328x17x9,5

4x

227



6x10,5

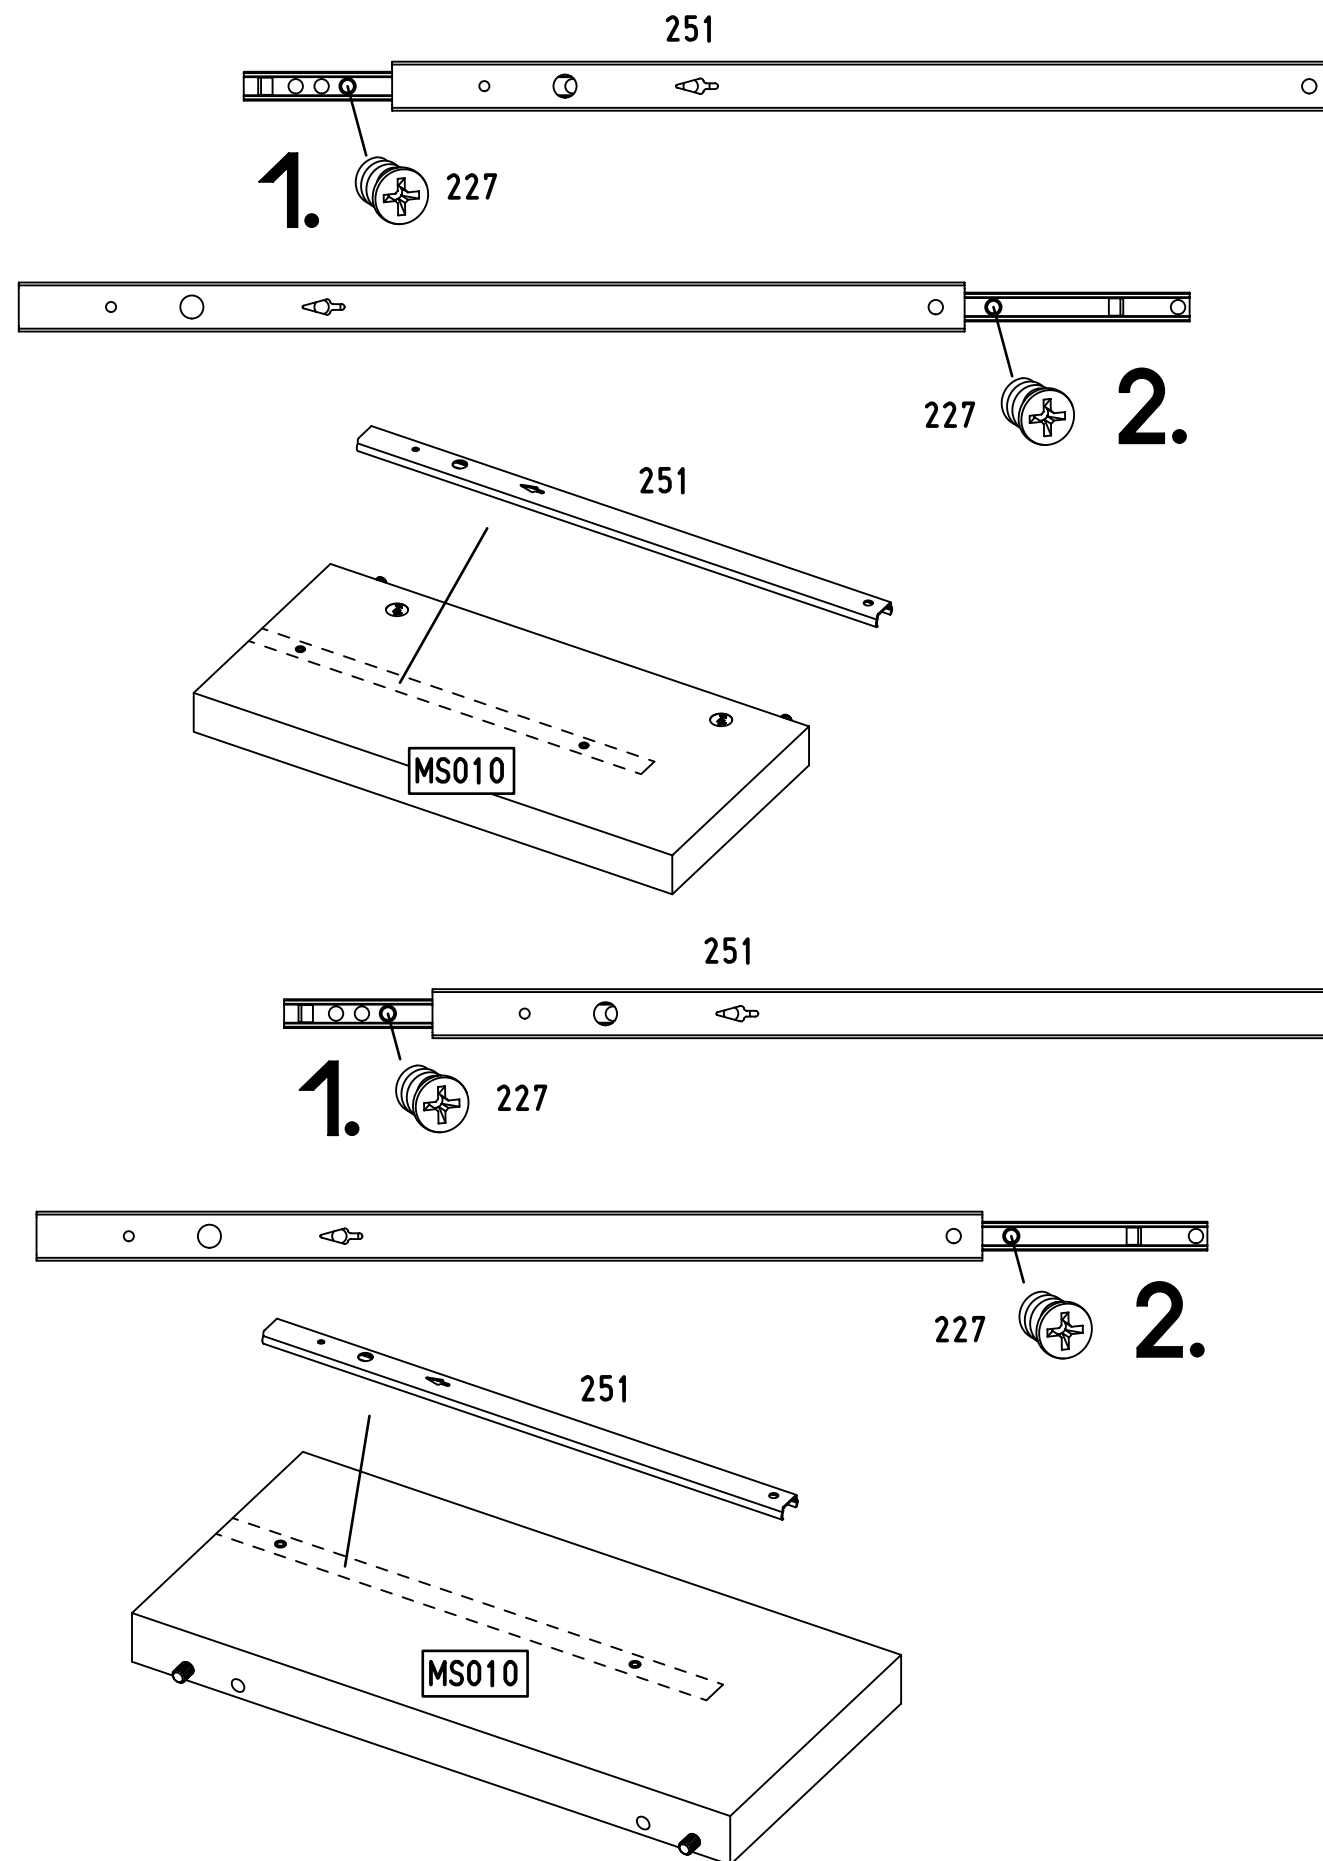


M2110

15.



13

6x

183





23/10x7,5

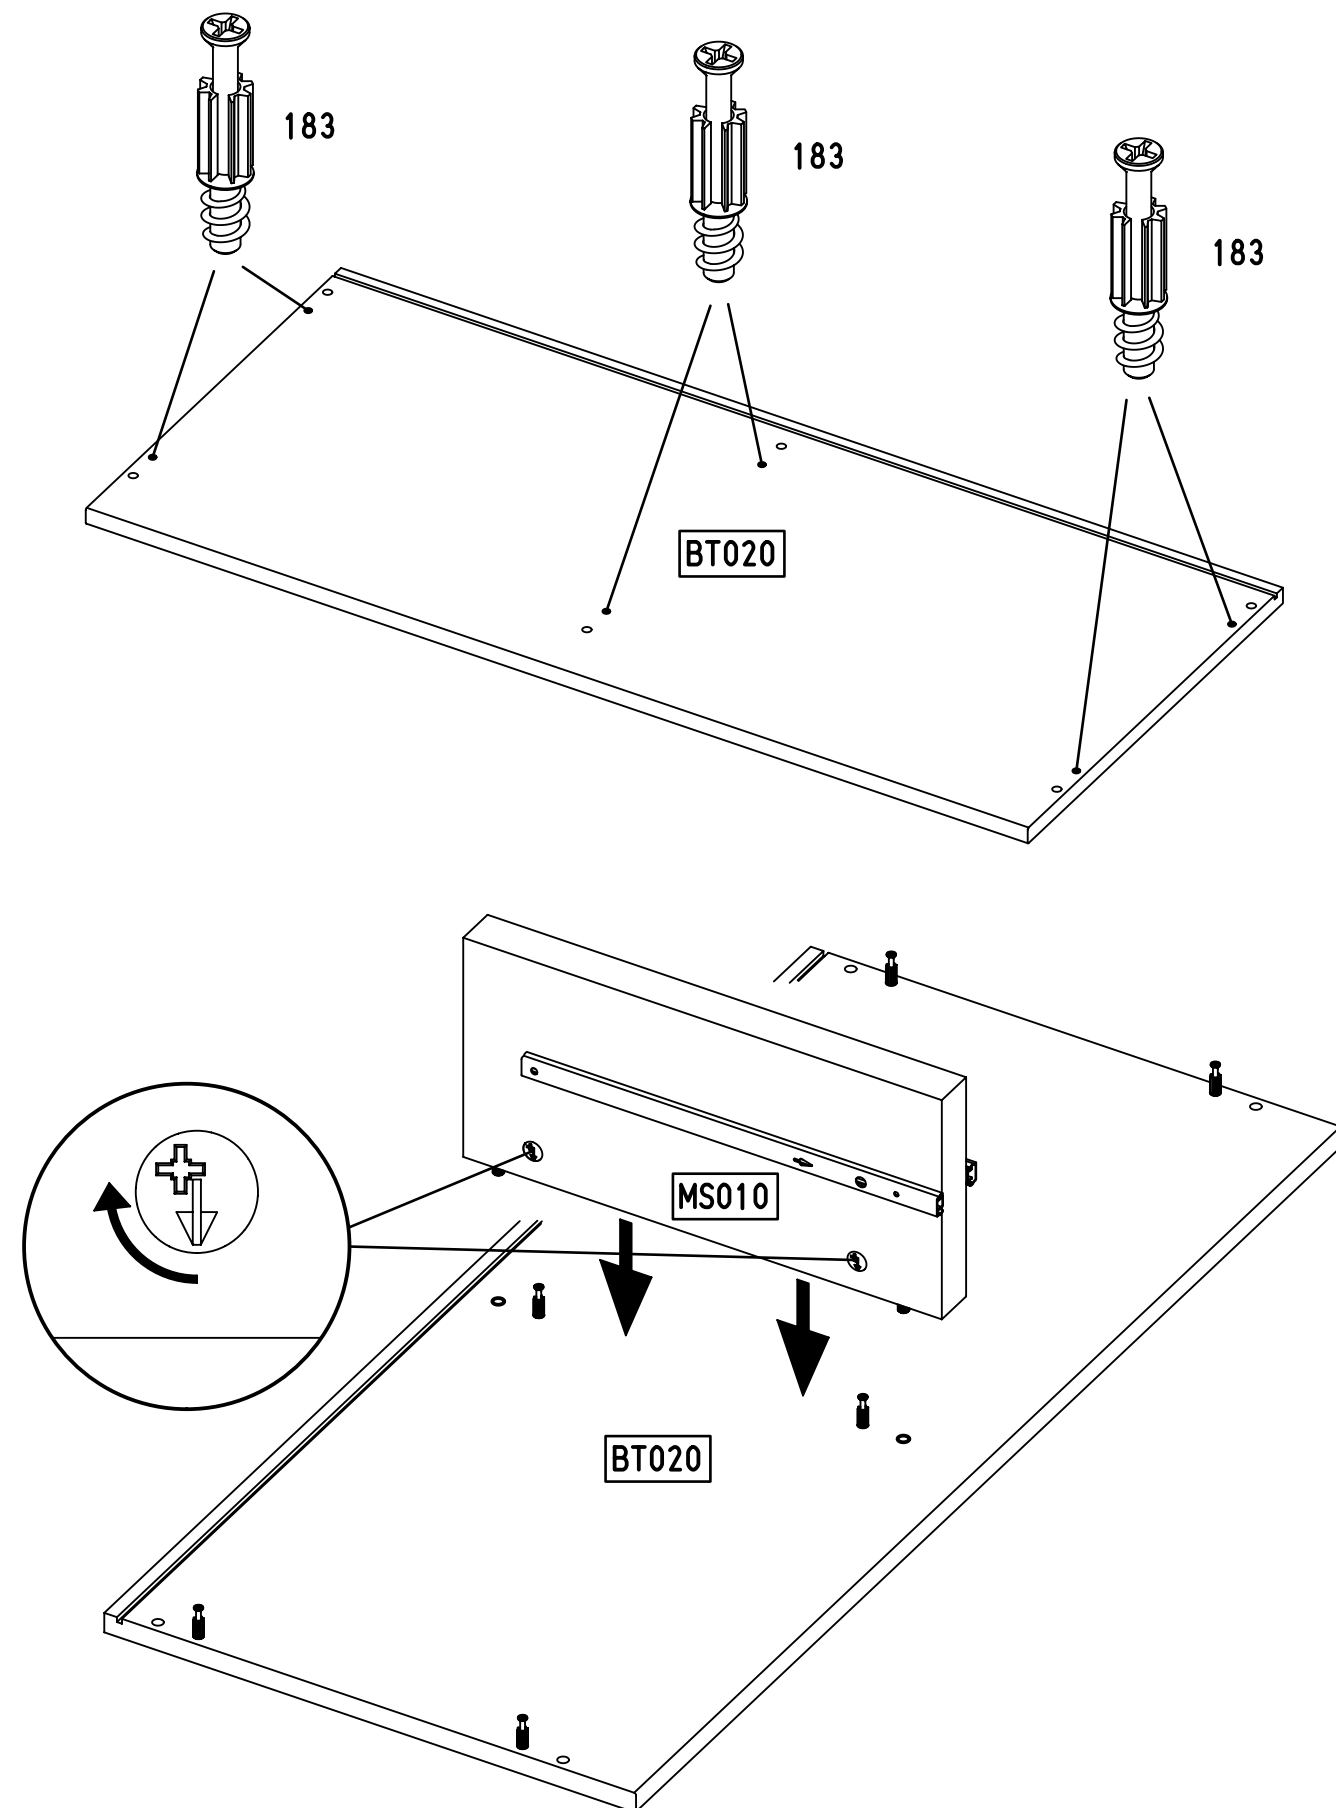

M2110

16.



14

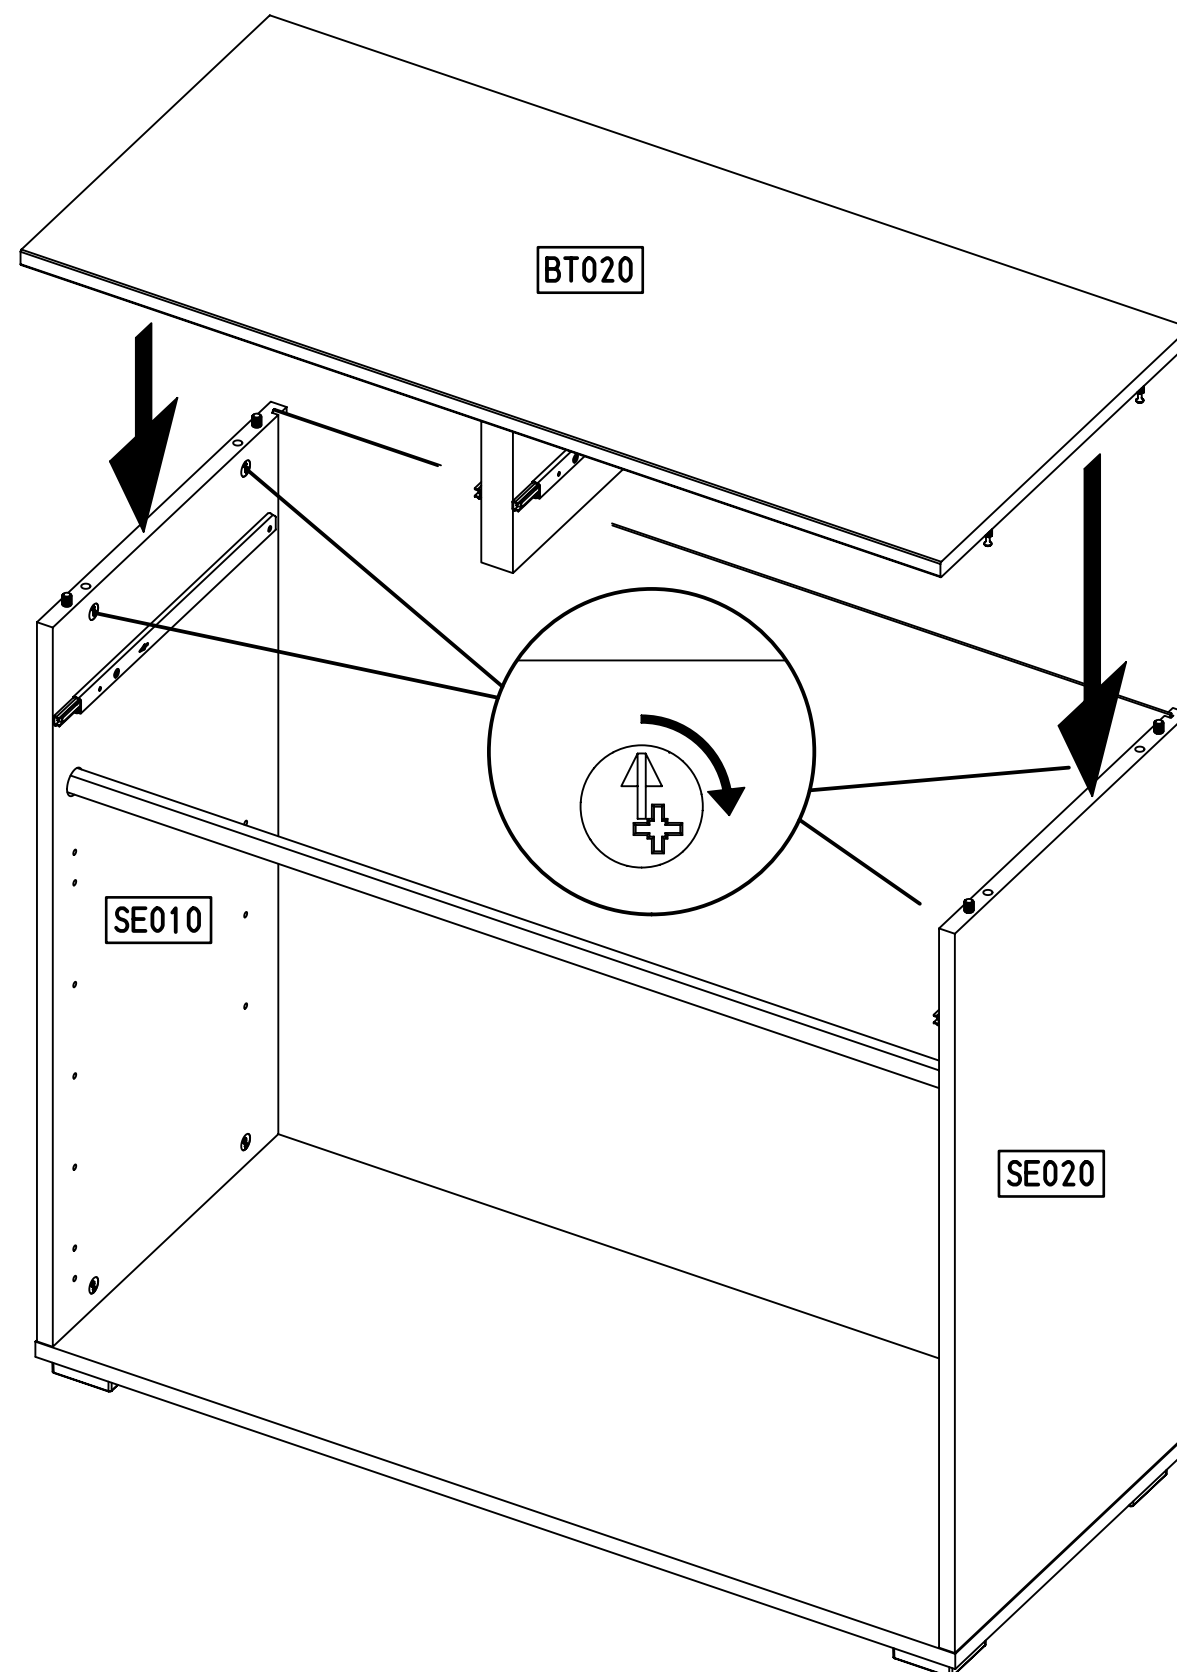





M2110

15

4x 1090

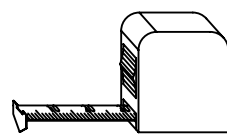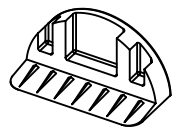


Xmm = Xmm

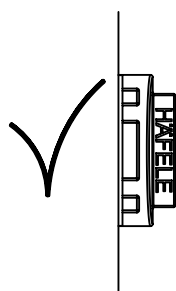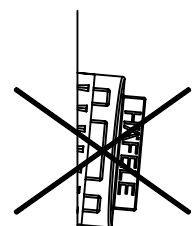
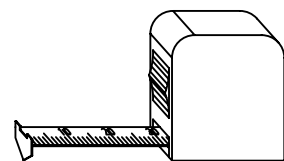


1090

RW010





1090

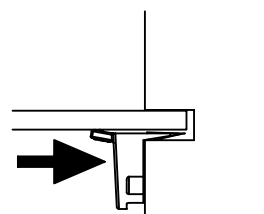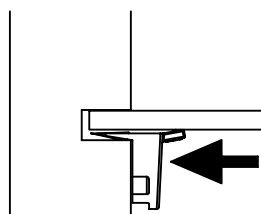


16

2x 1091

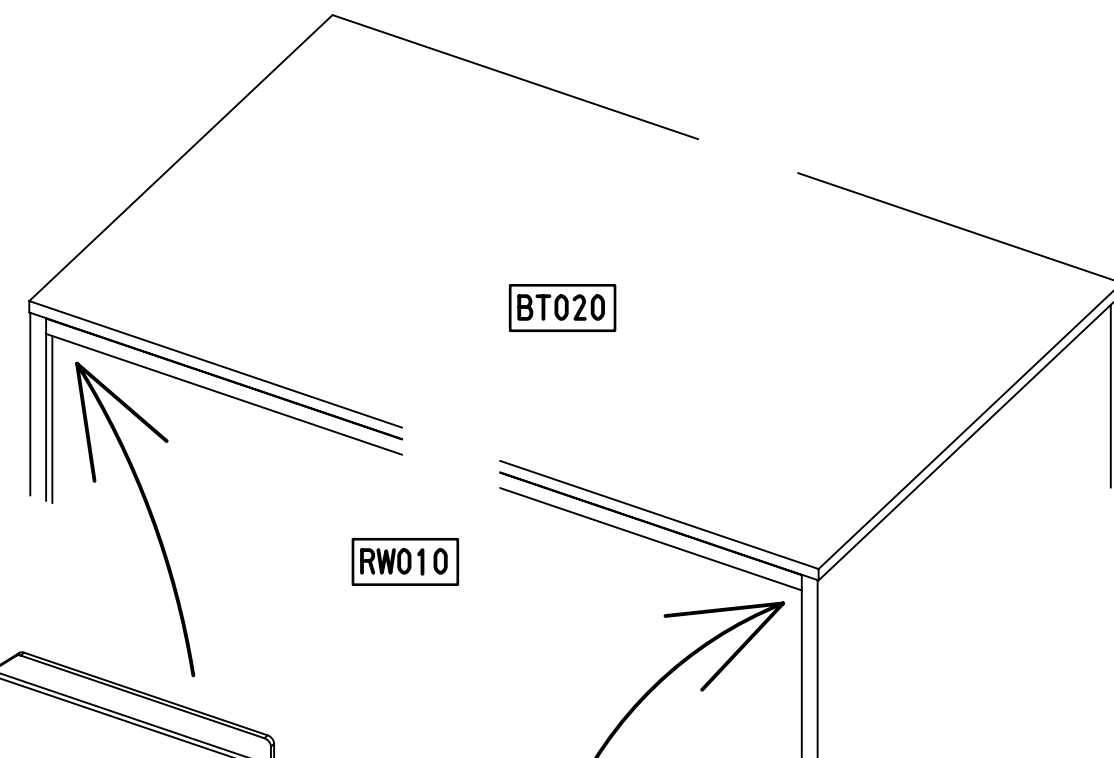
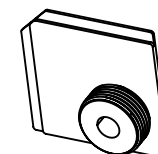


BT020


RW010

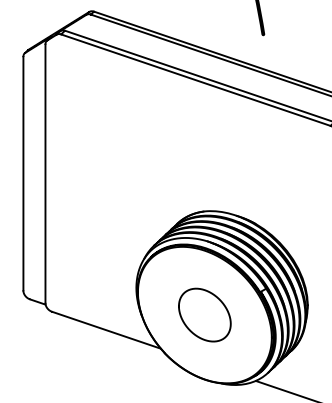

1091

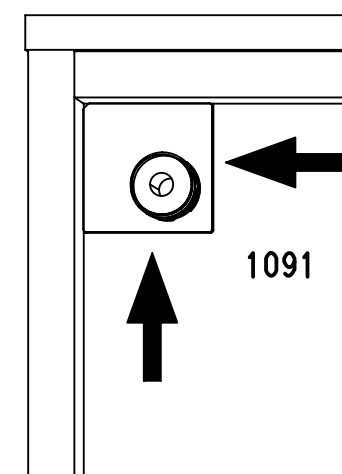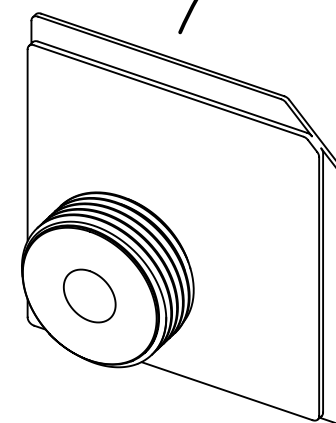

1091

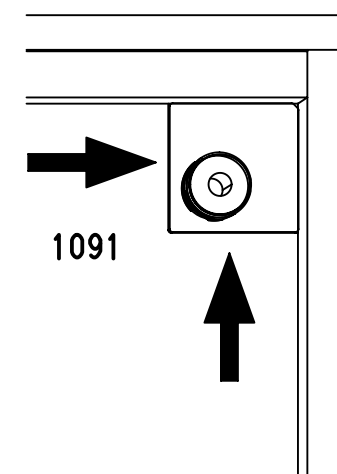



1091

RW010

19.

17



ø6mm

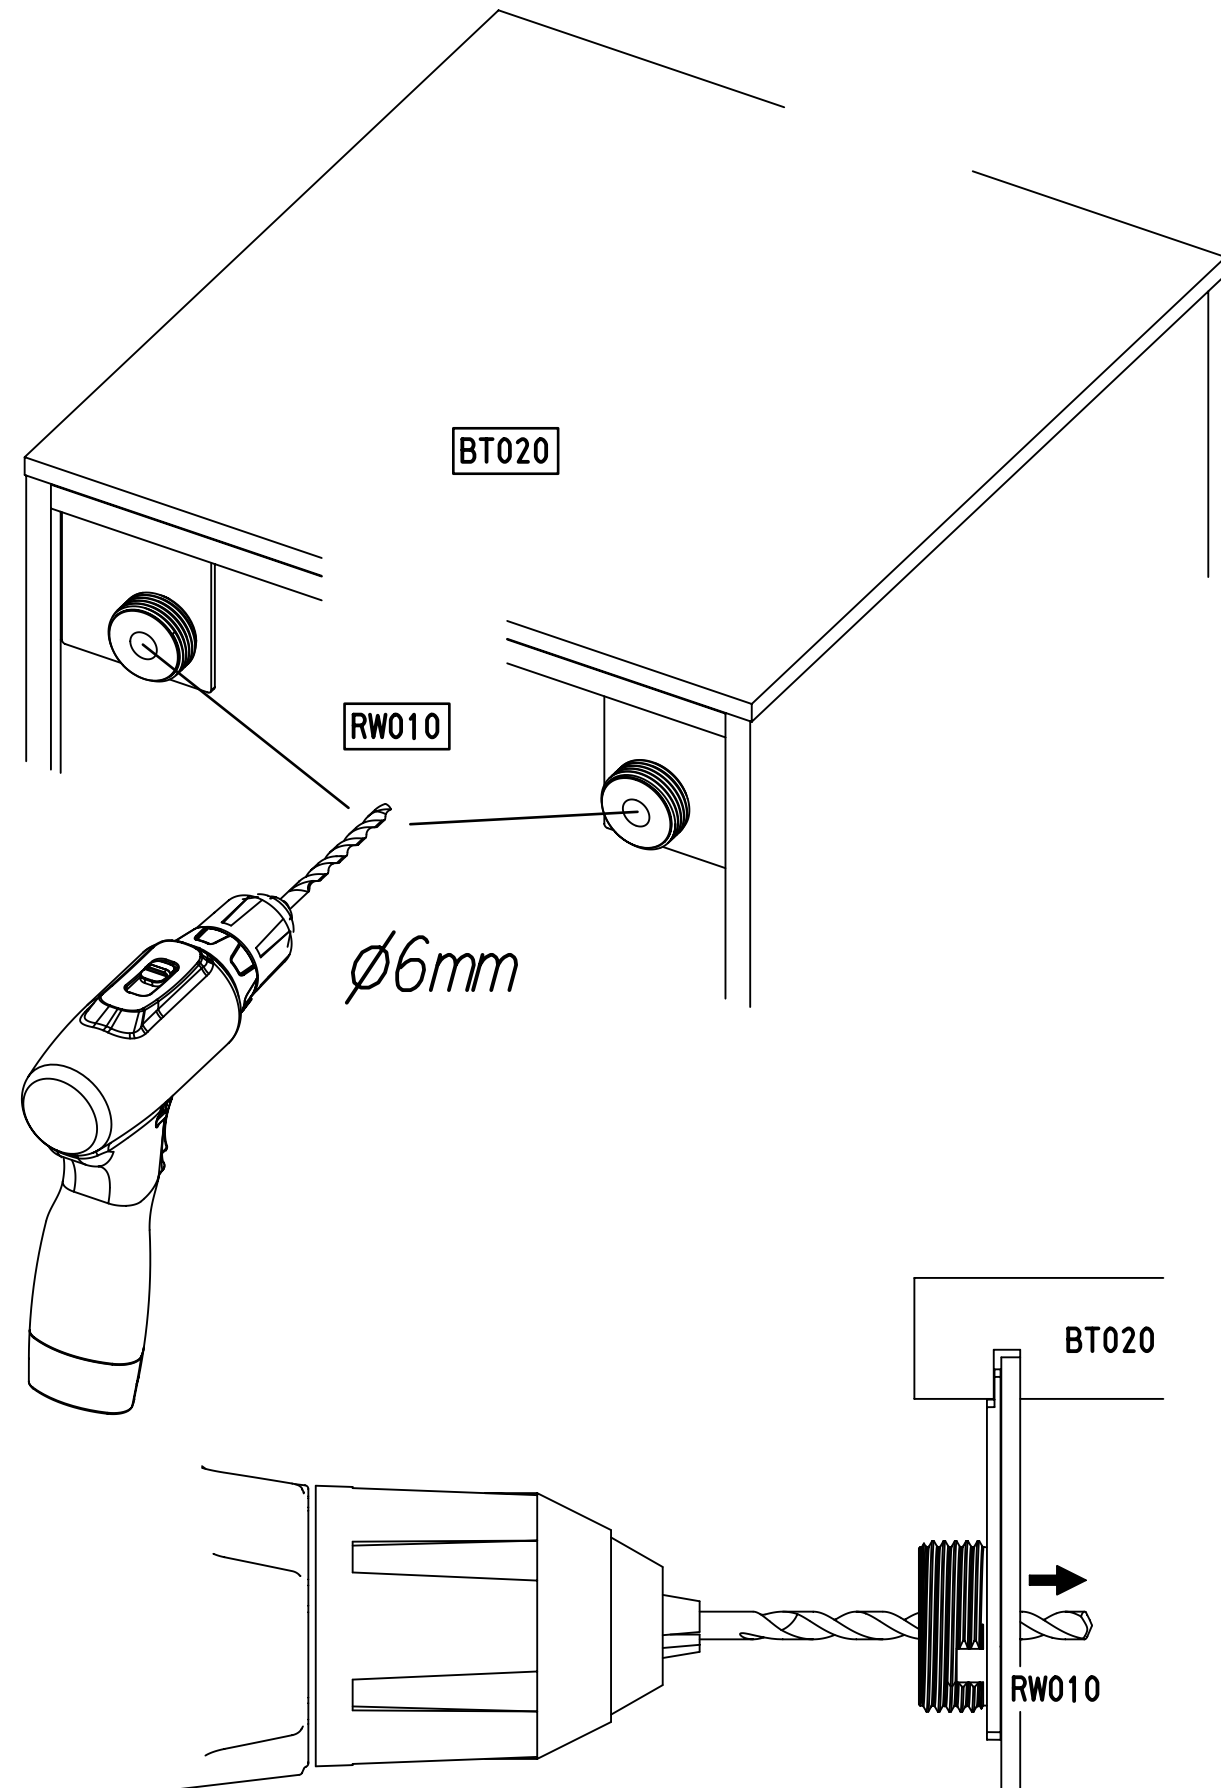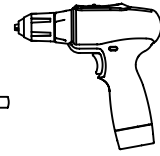

M2110

20.

18

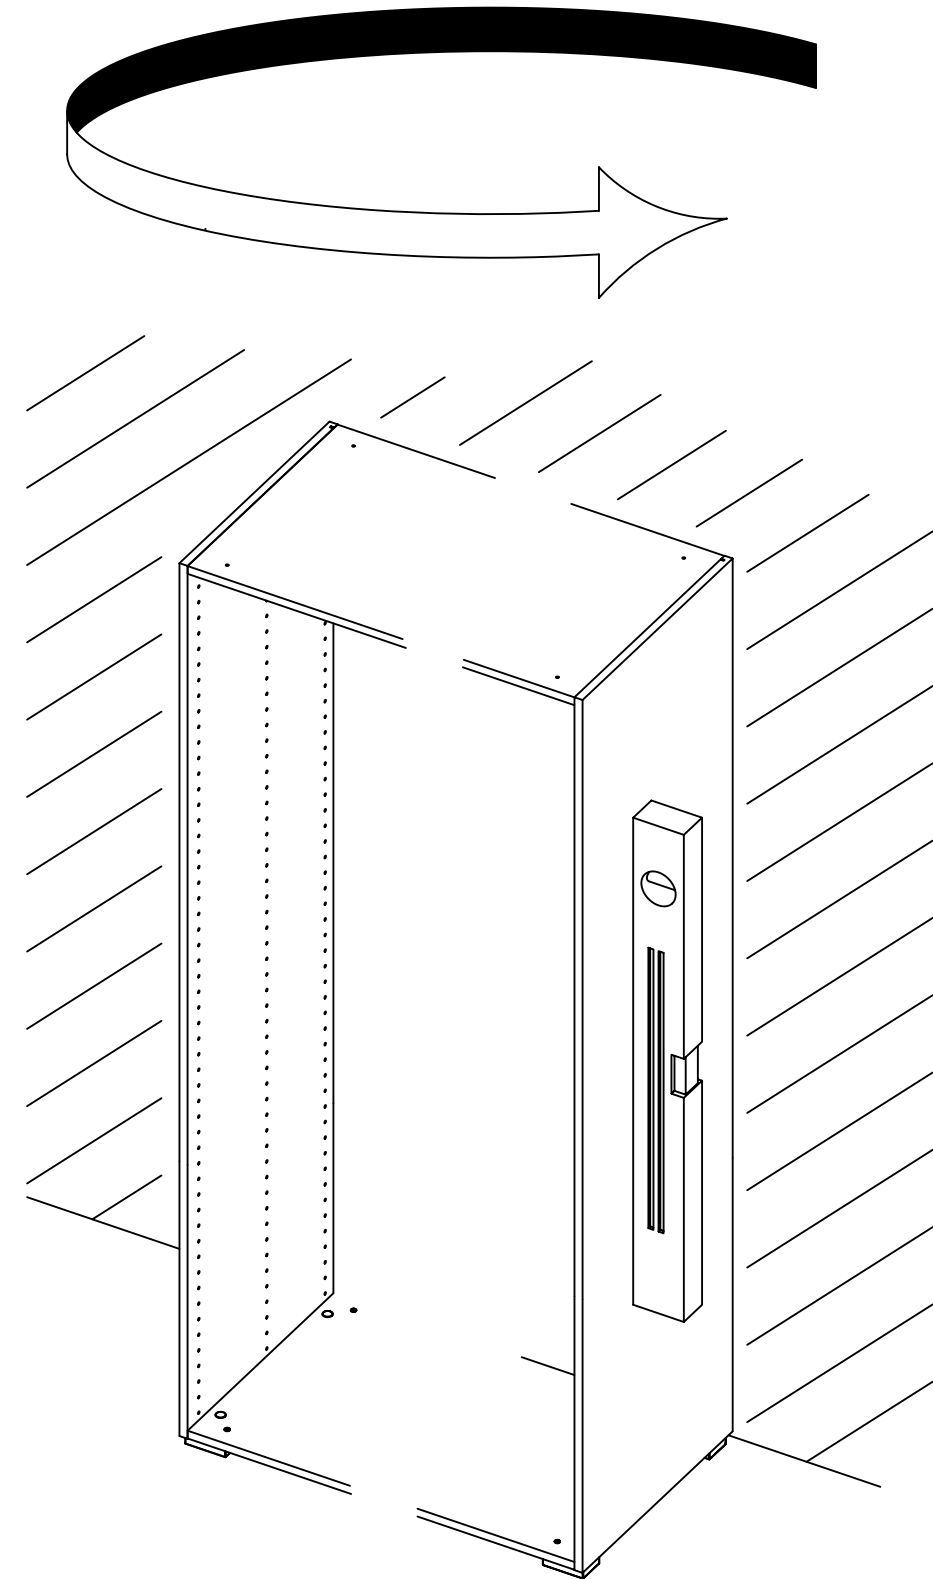


M2110

21.


19

2x 1093



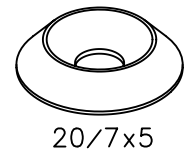


20/7x5

2x 1147

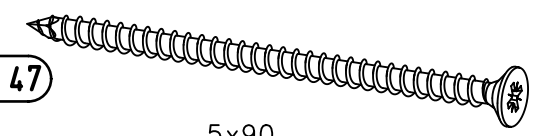


5x90

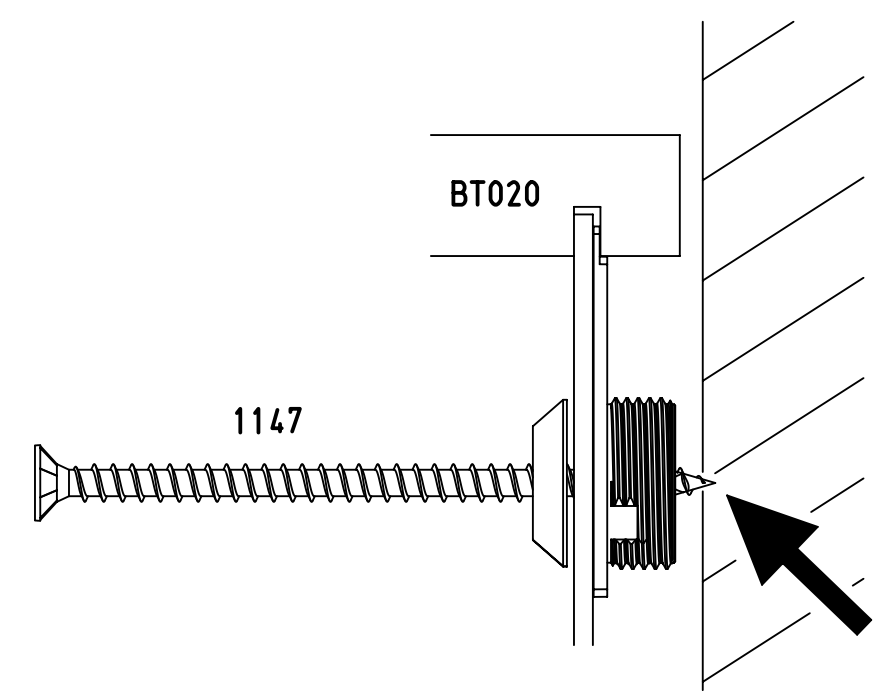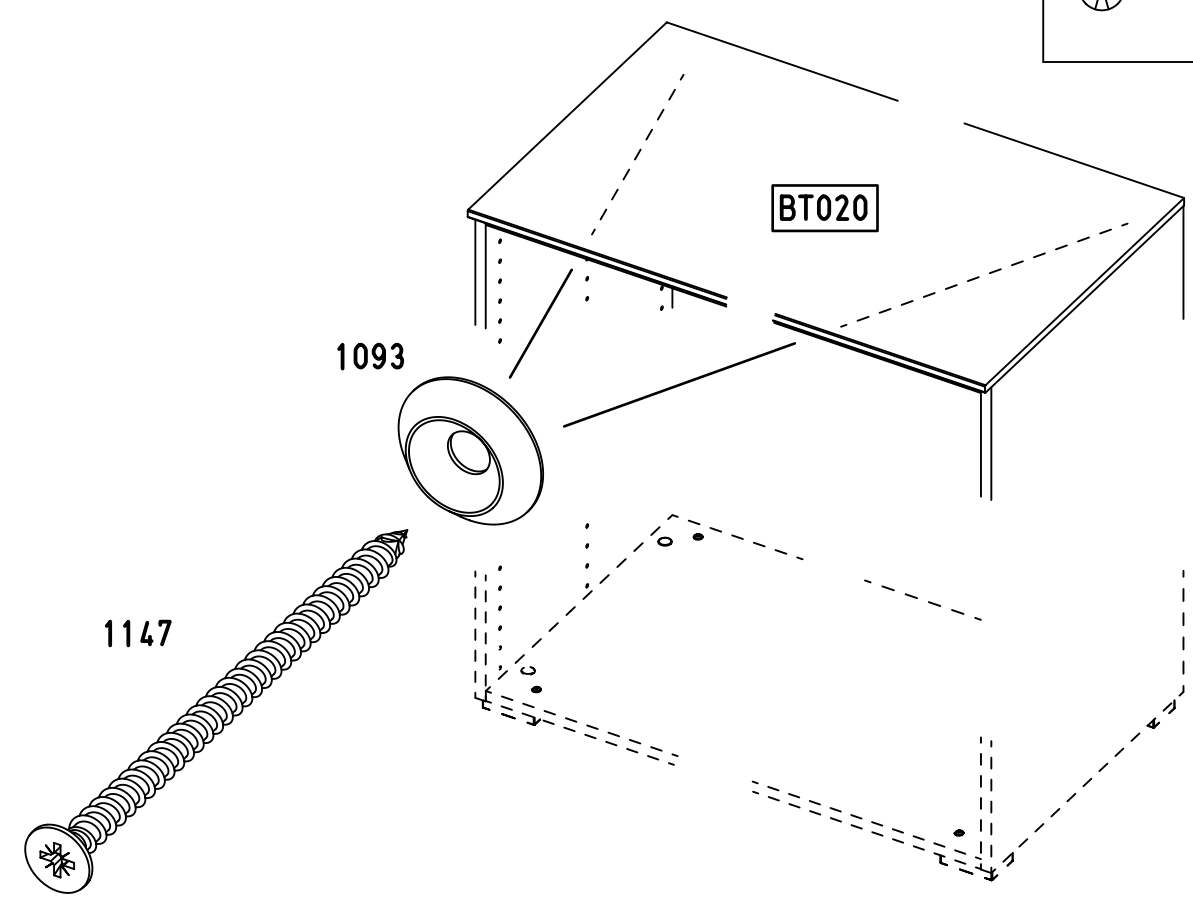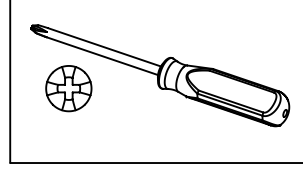


22.

20





ø8mm

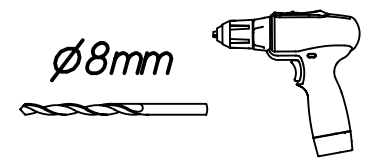


1.

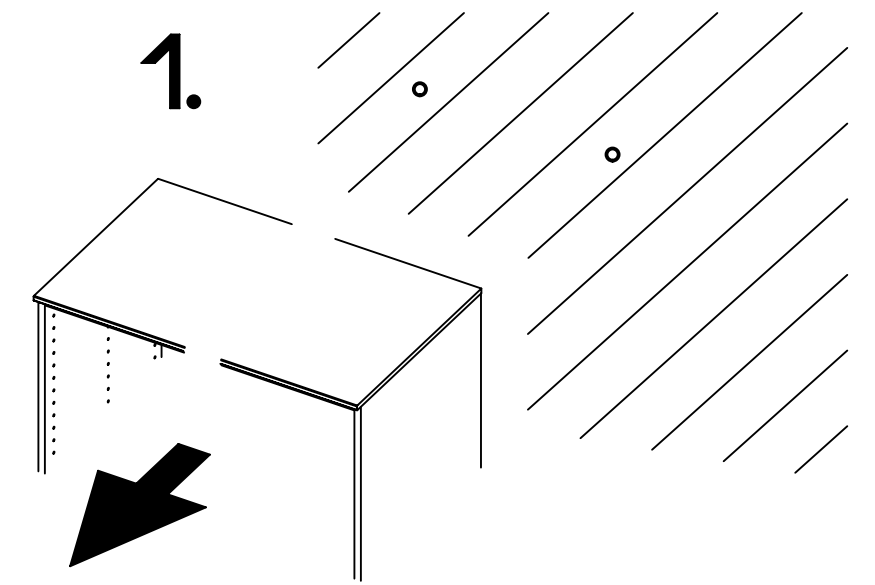

2.

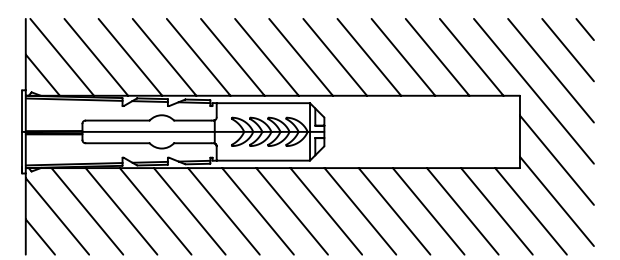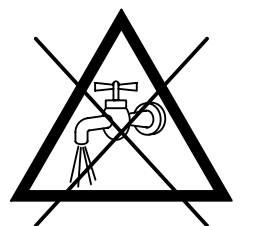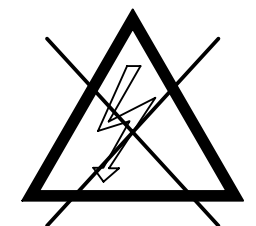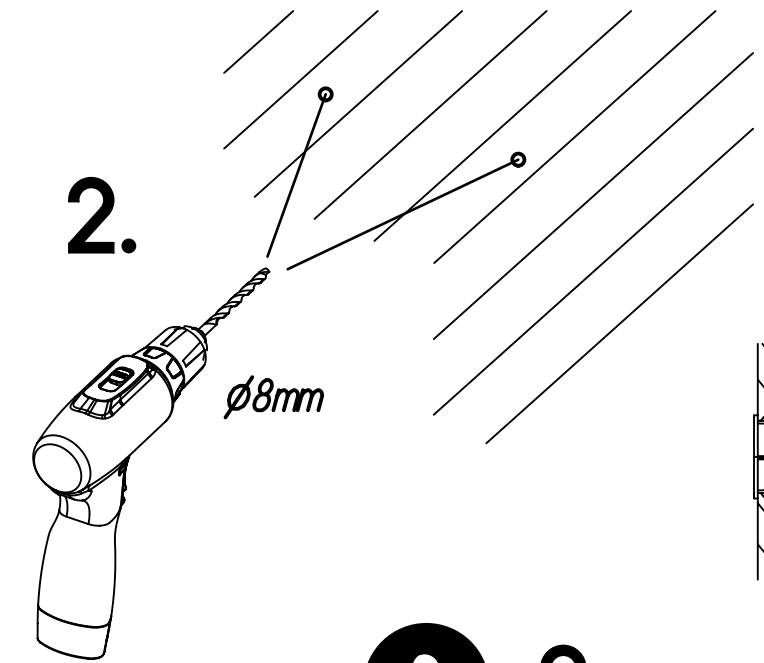






? 3.

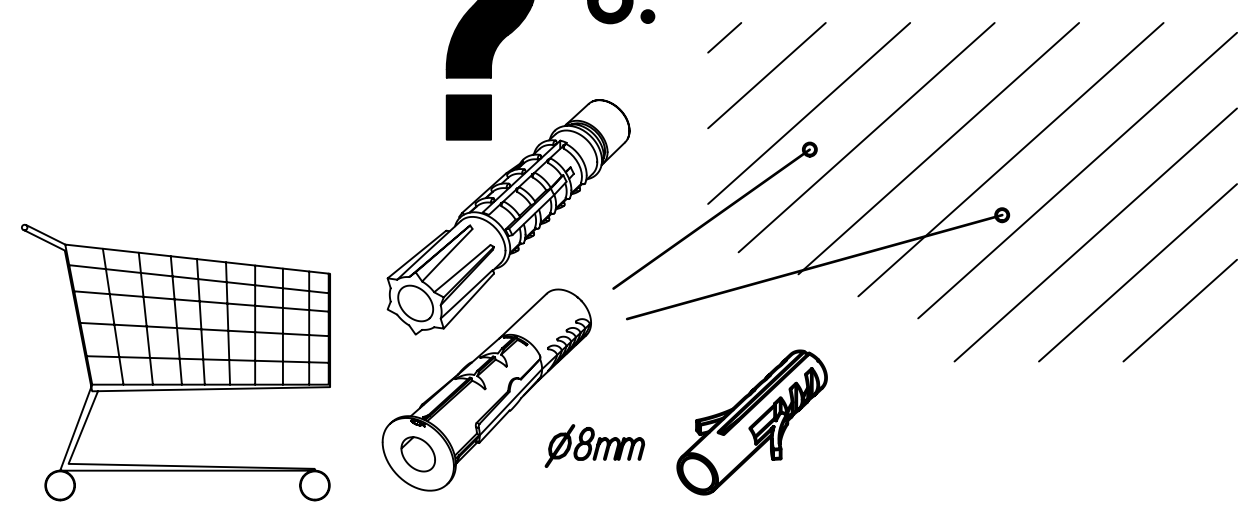


23.

21


2x 1092

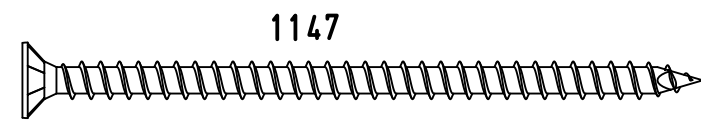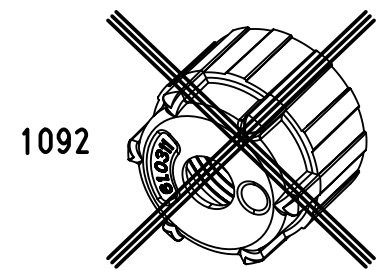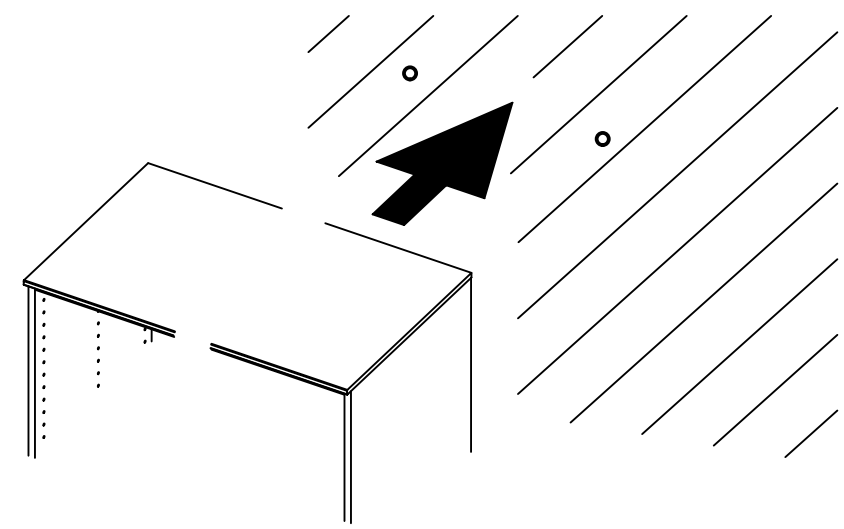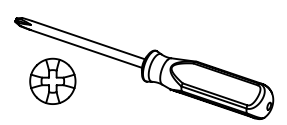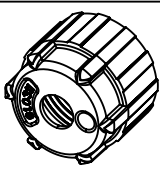

1093

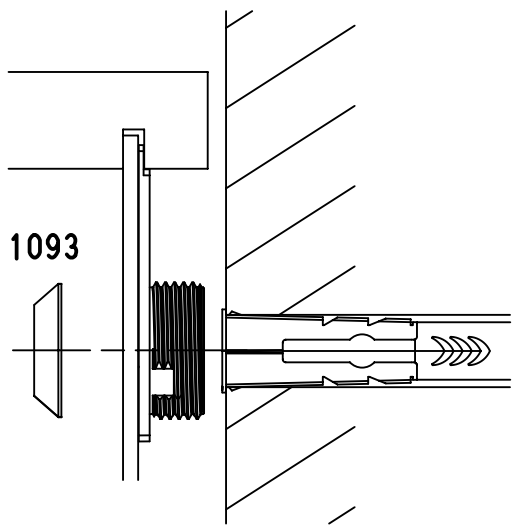


10-15mm

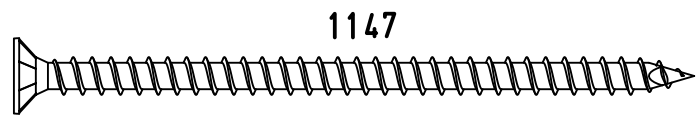

1093

1092

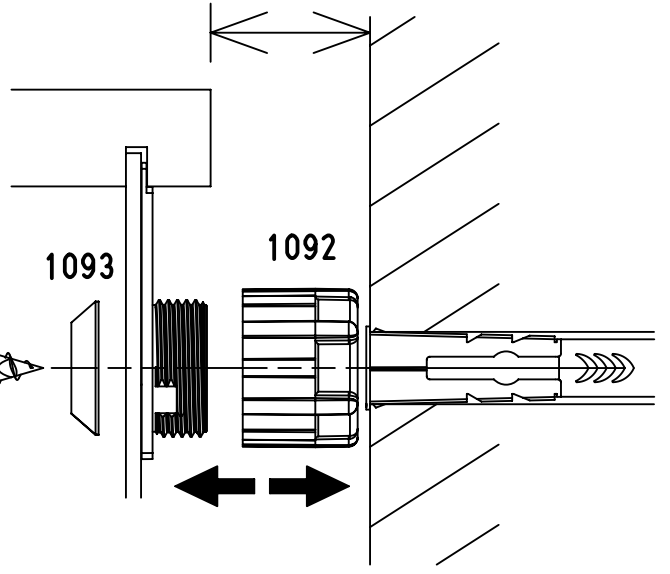

M2110




24.

22

4x 568





M4x9

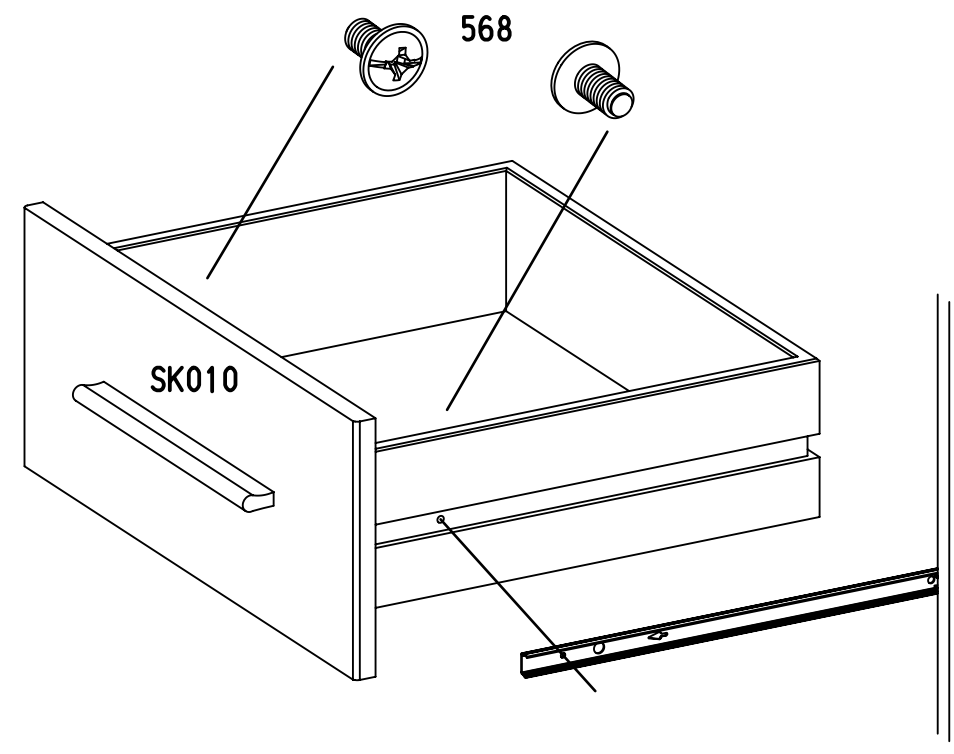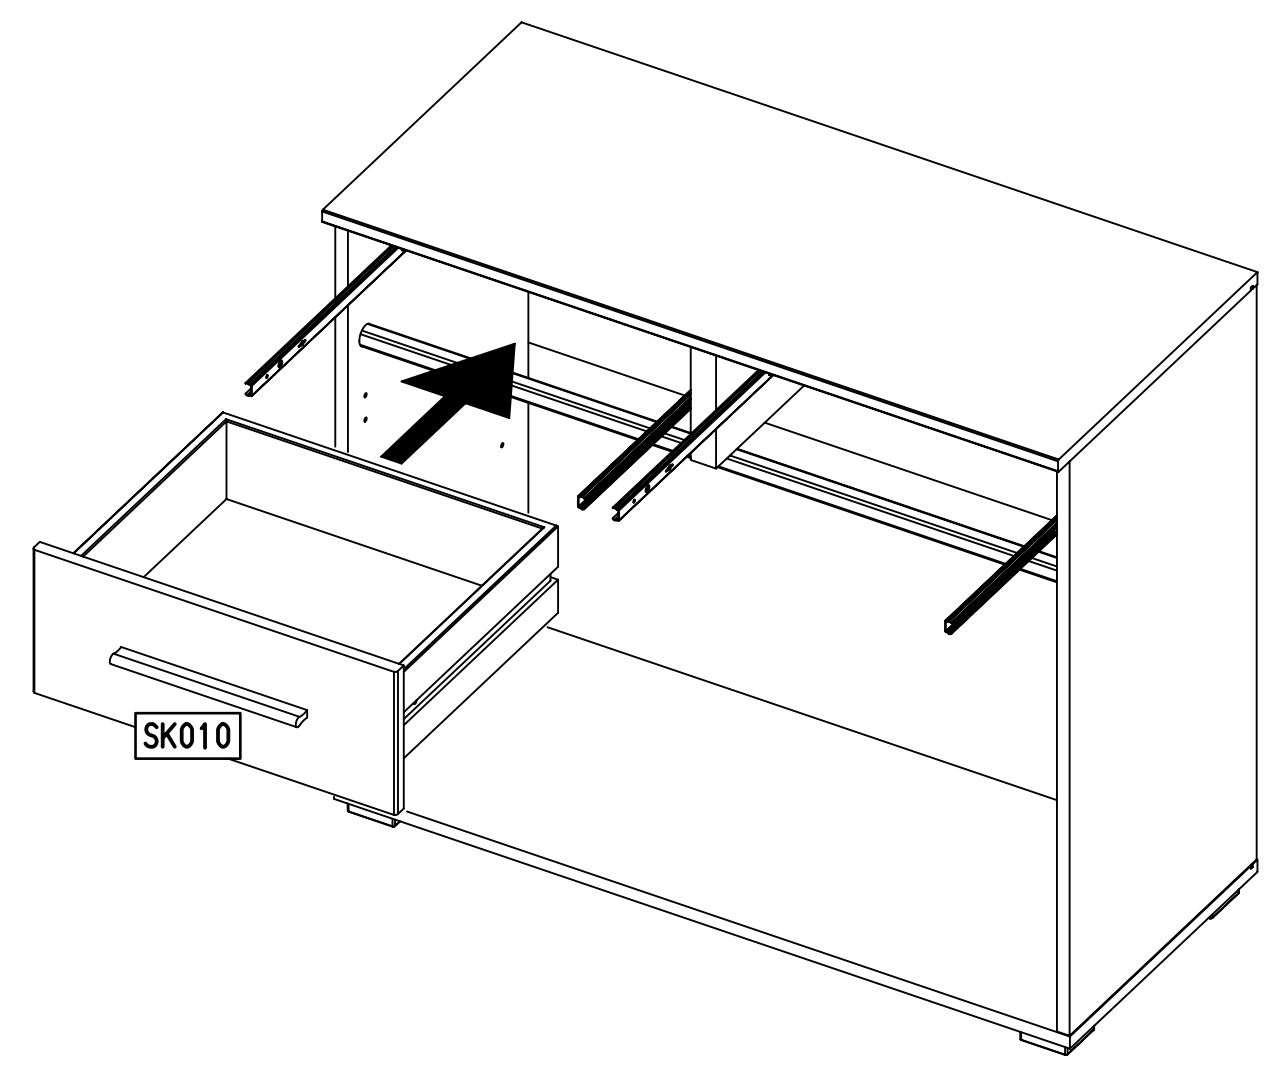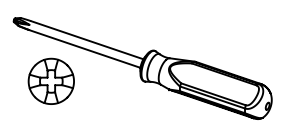

M2110




23

4x 1105






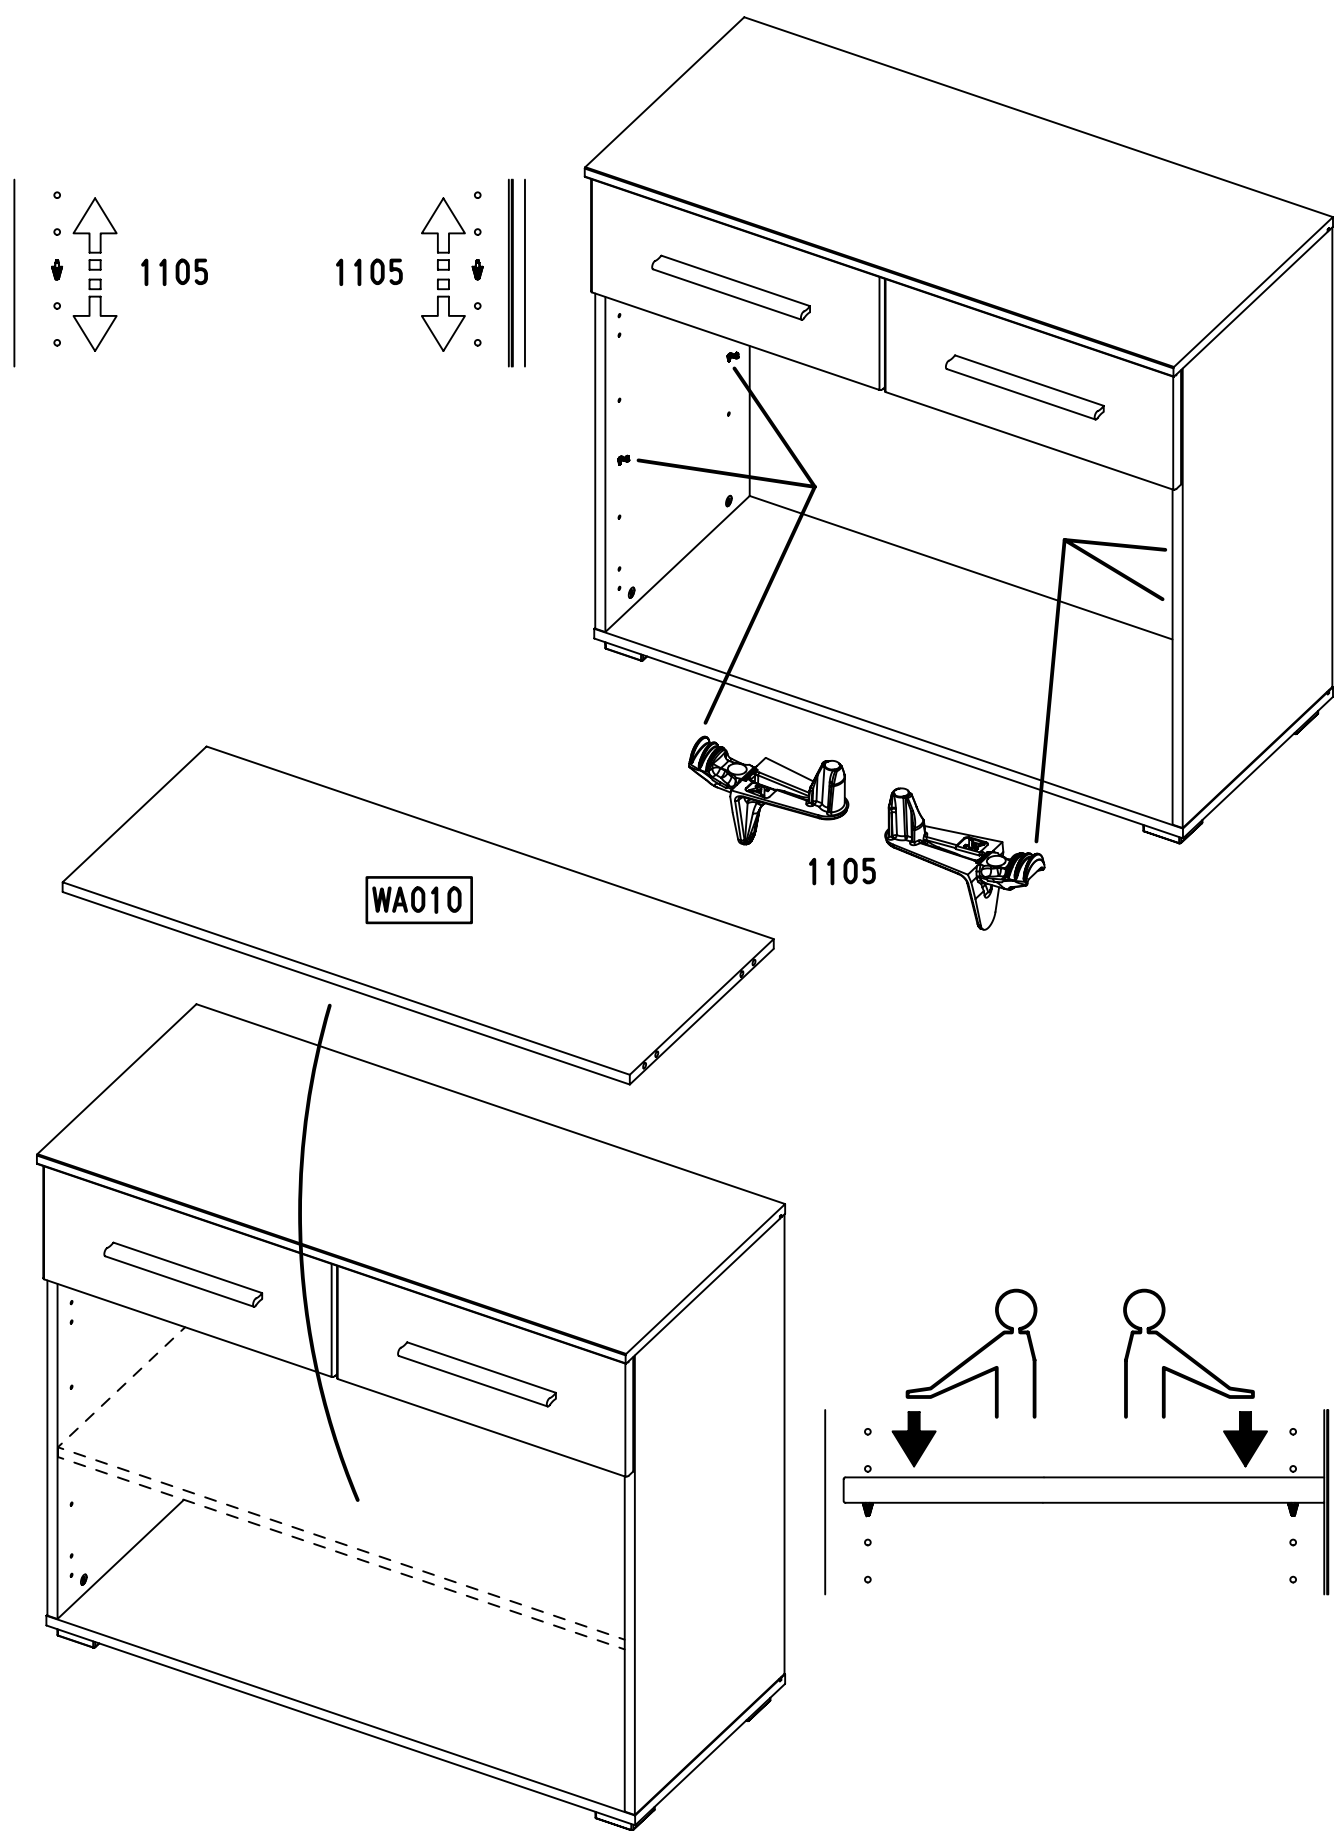
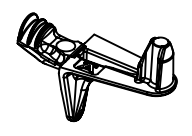


24

4x 130

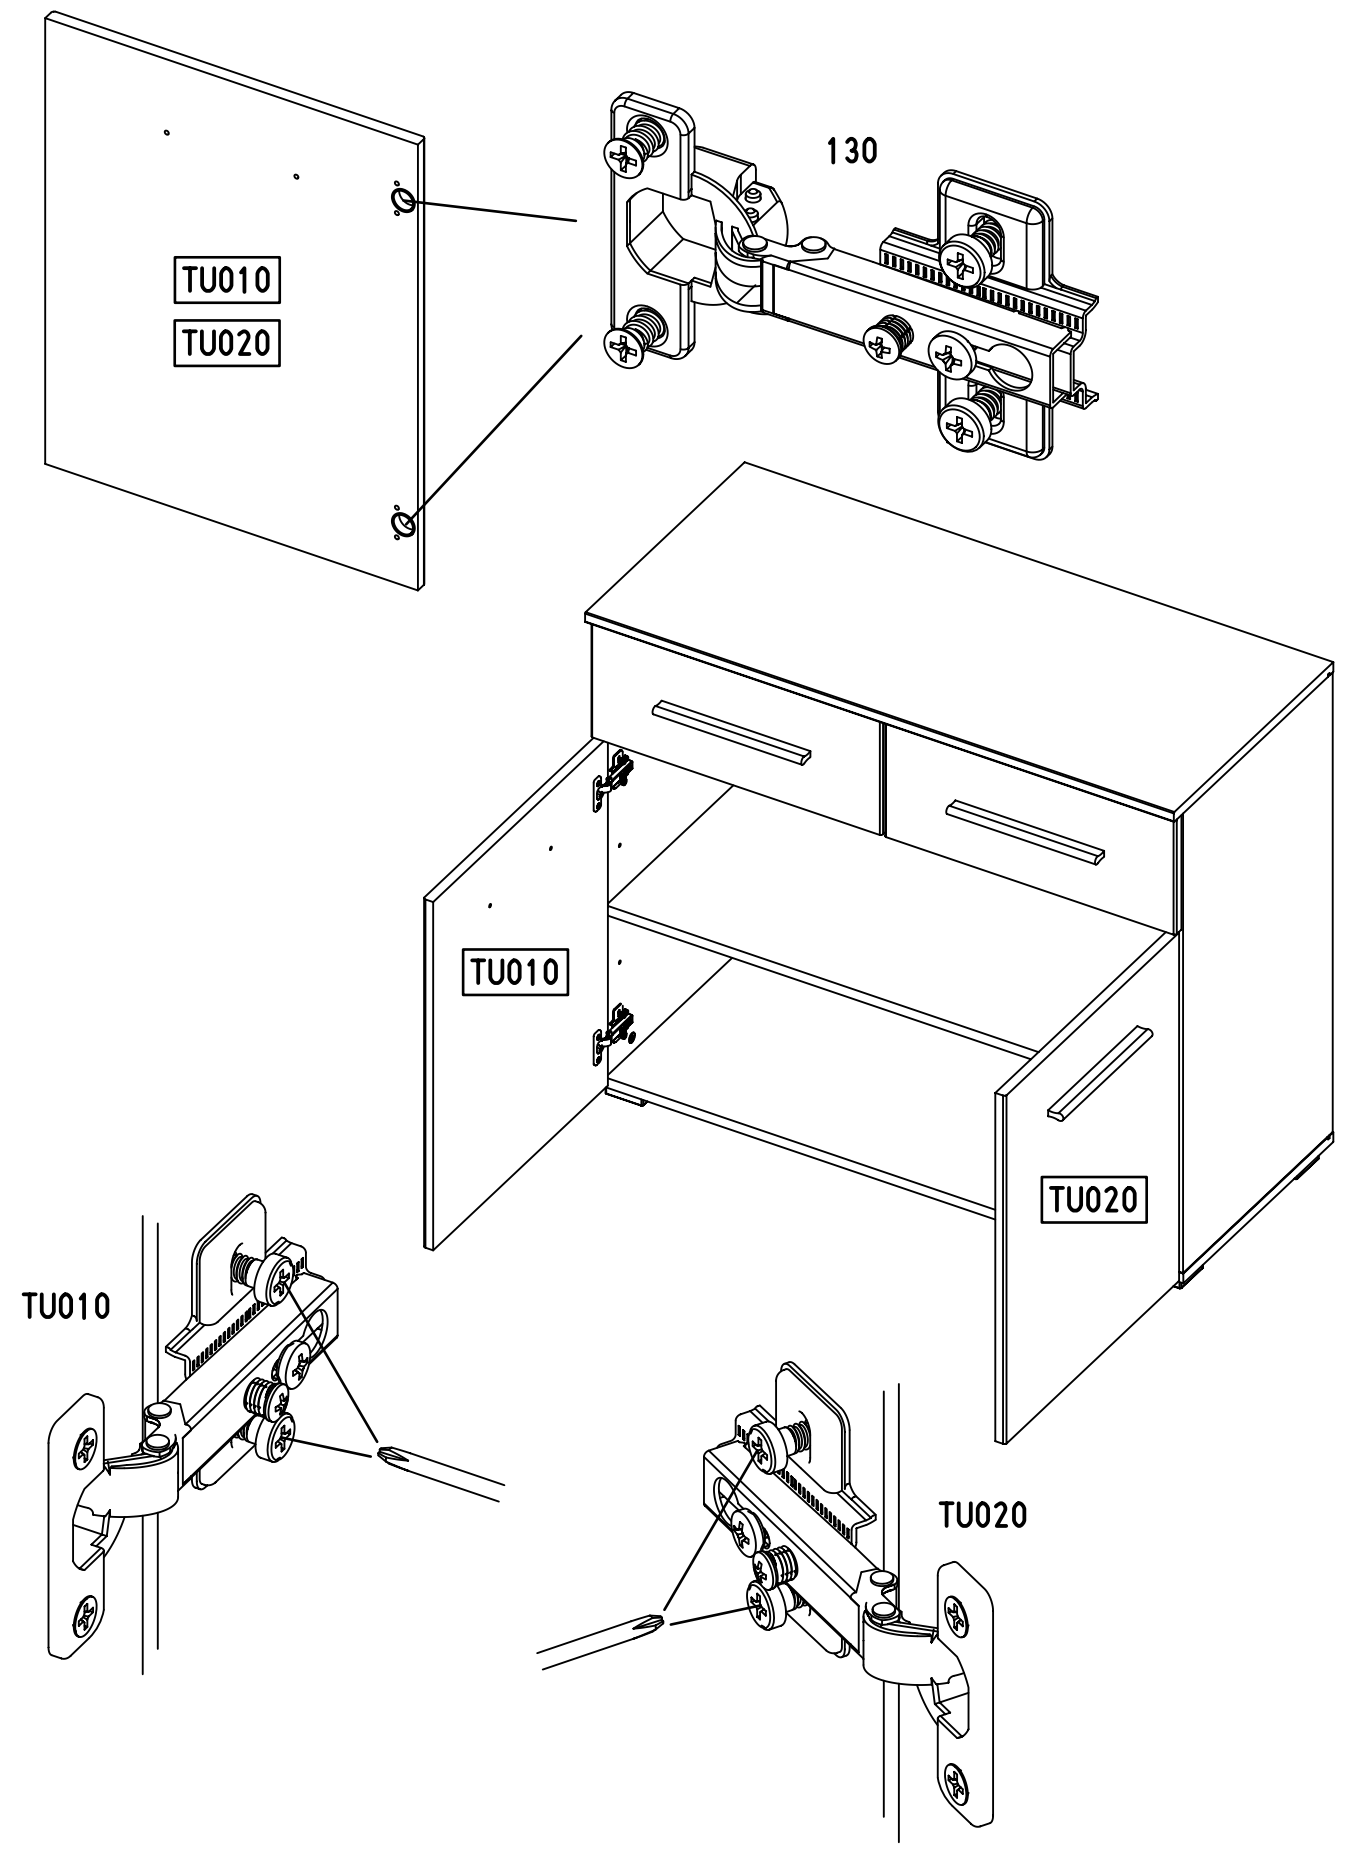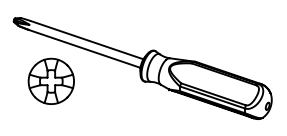
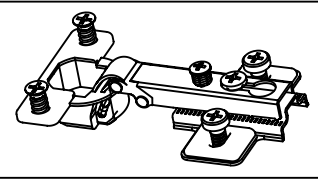


25

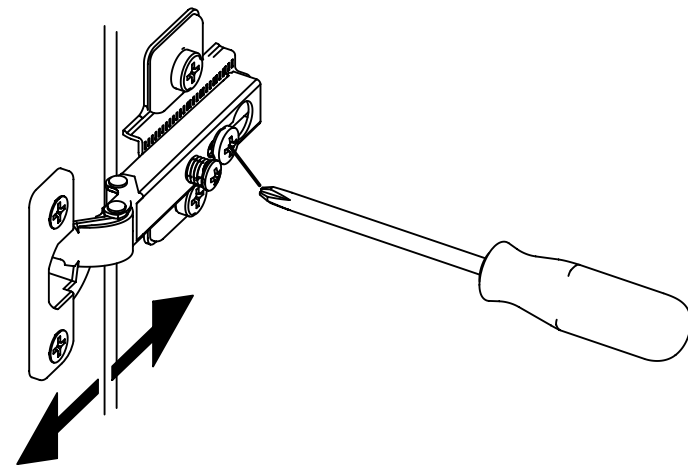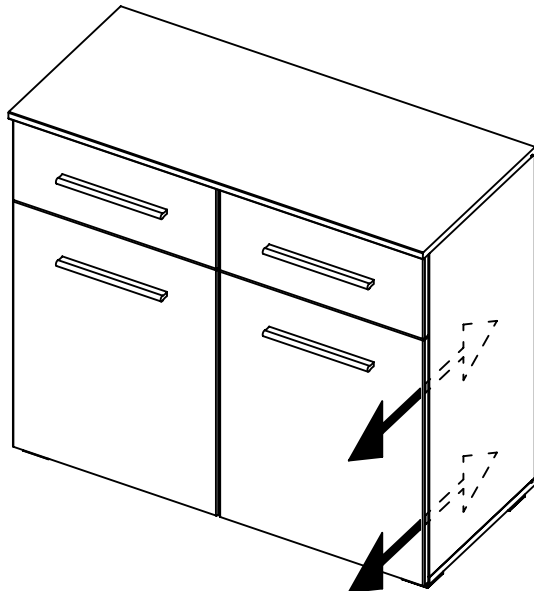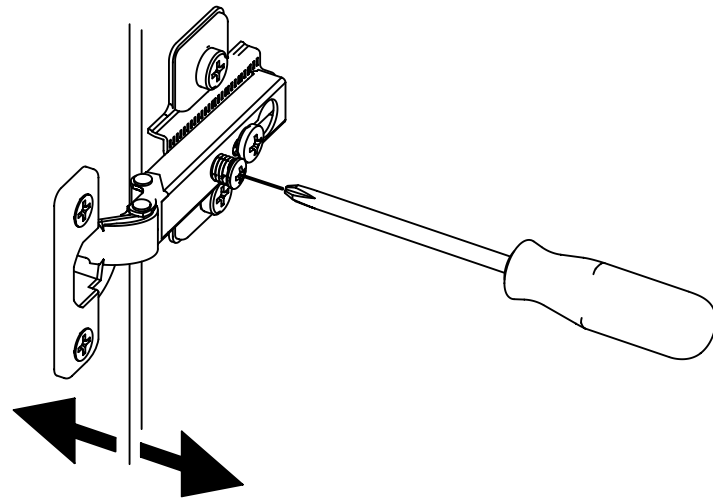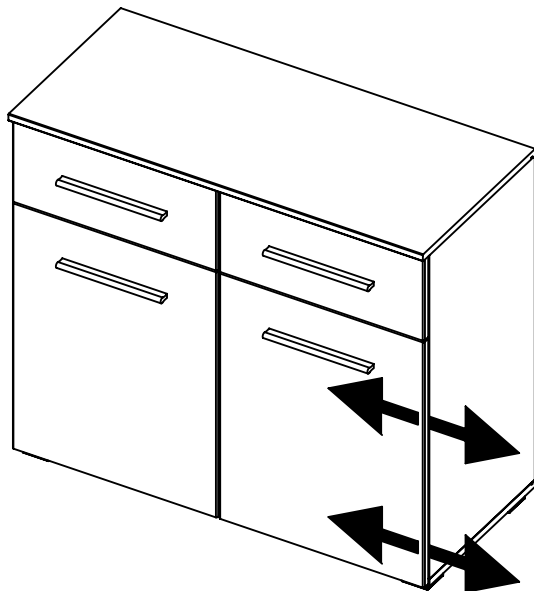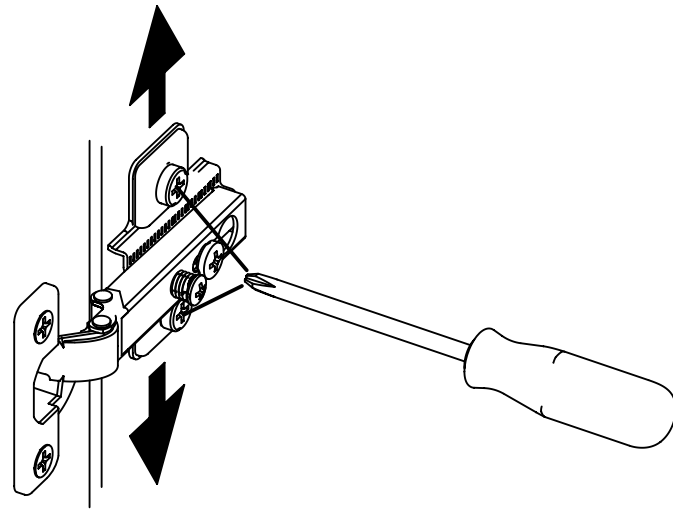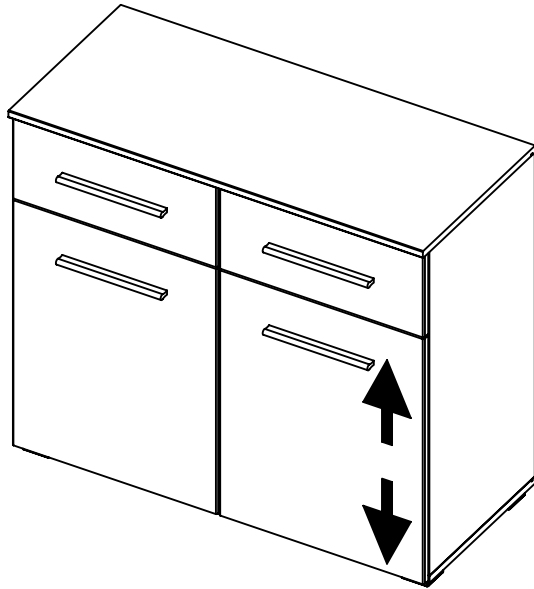



1.


MZ103_01

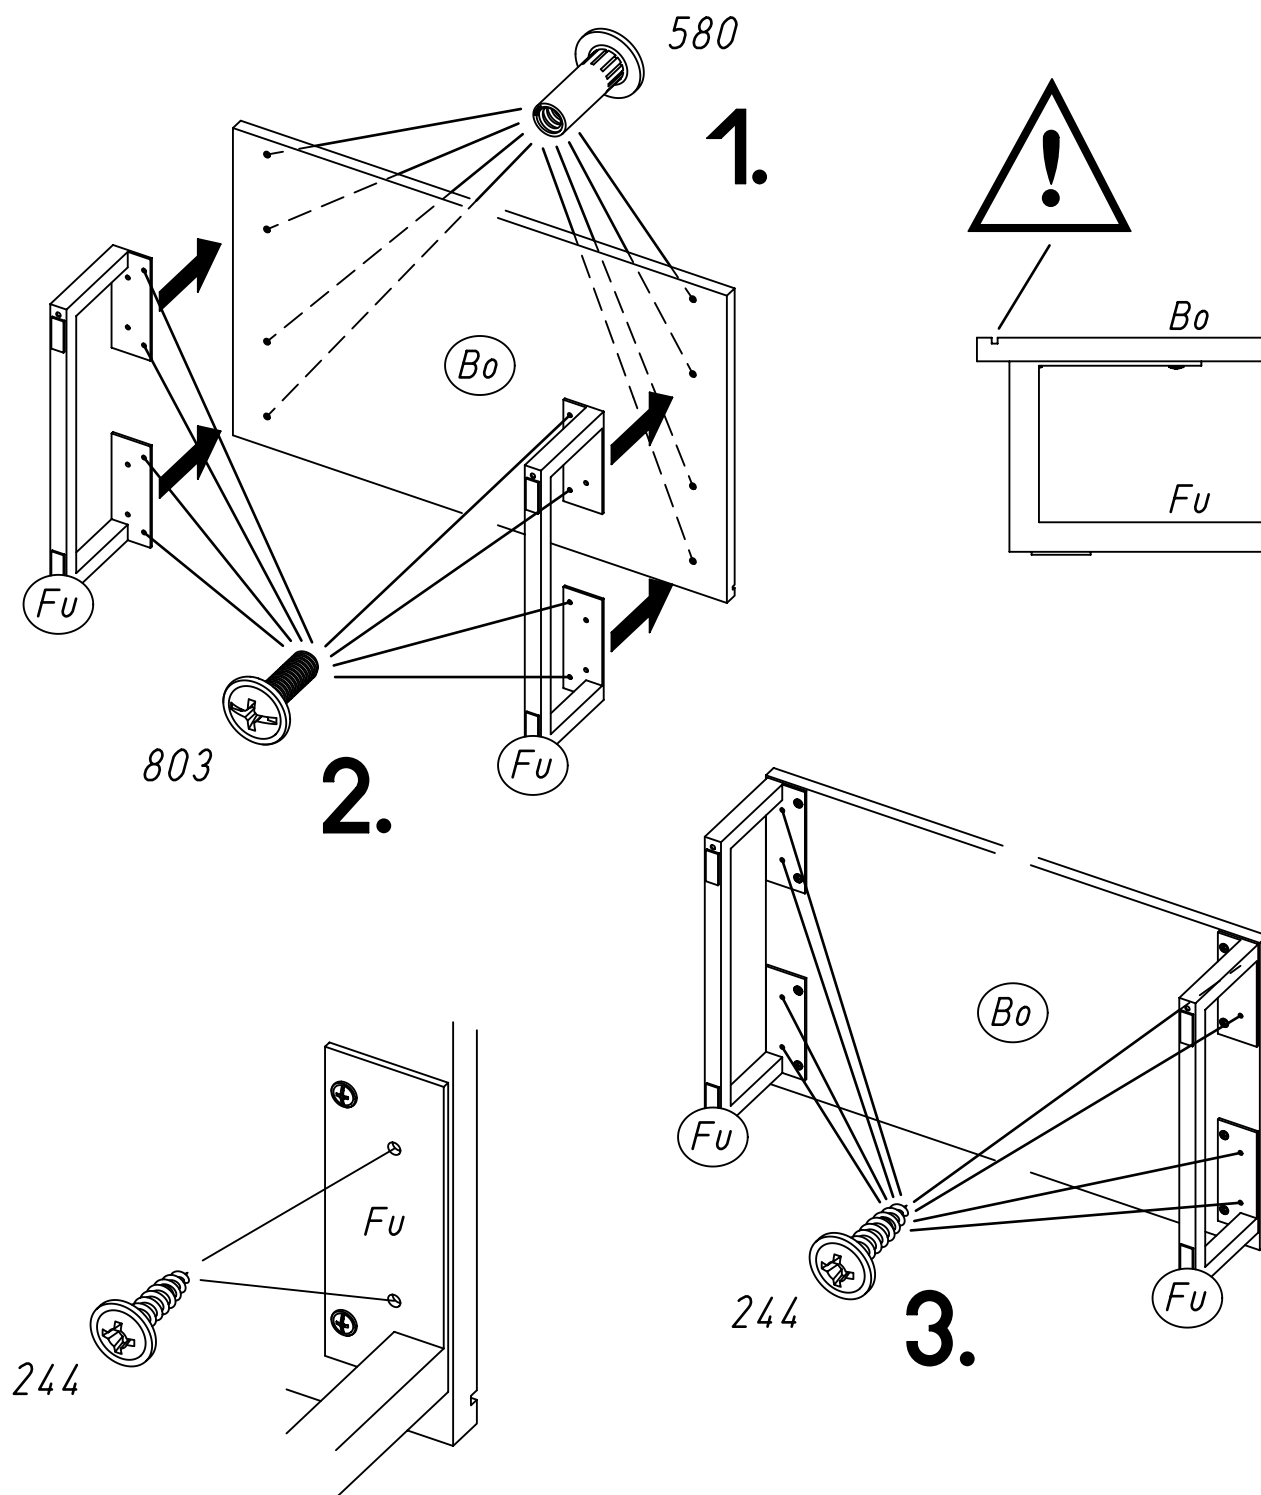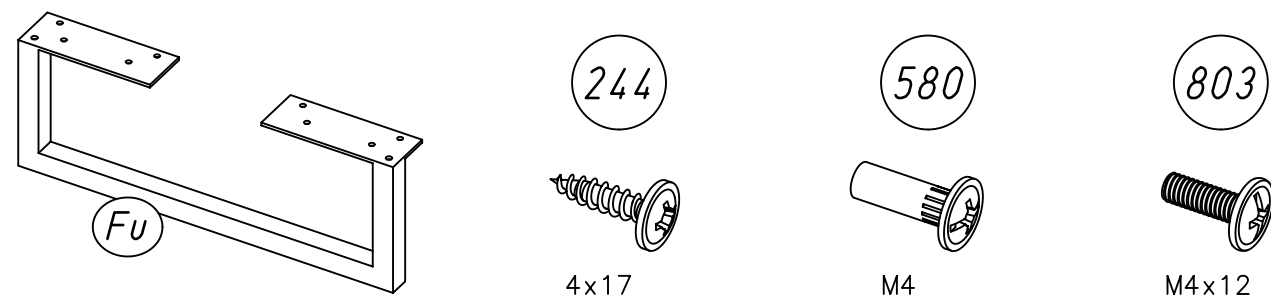

2.

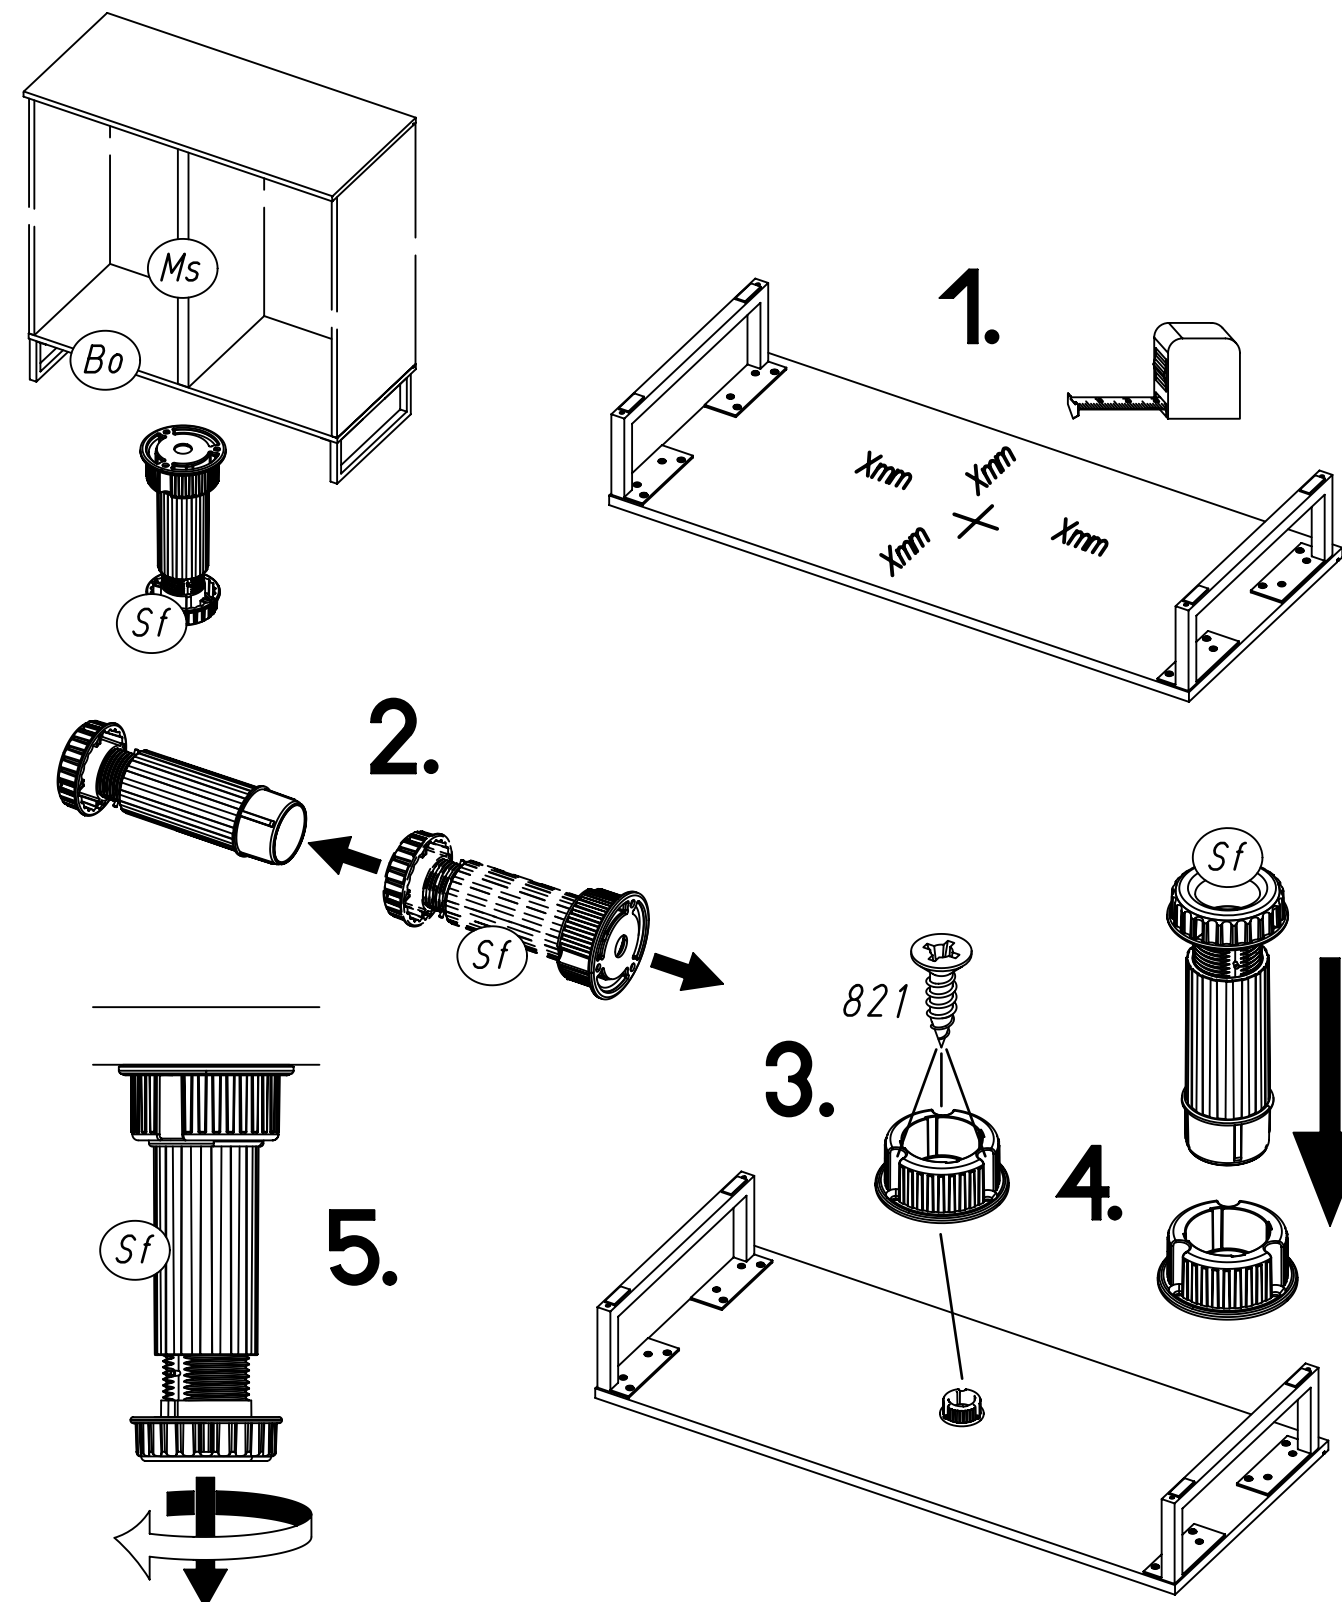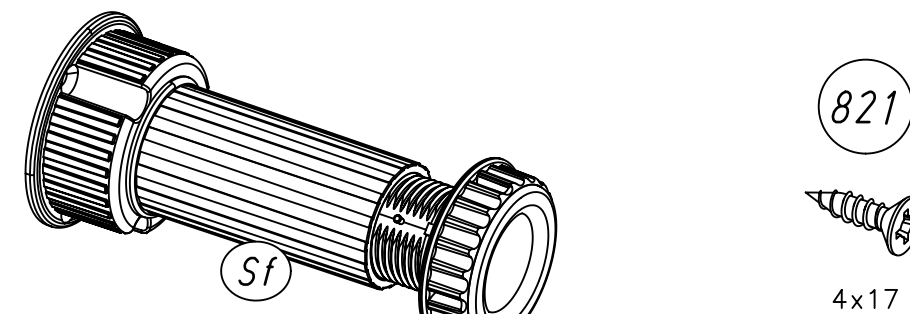


3.

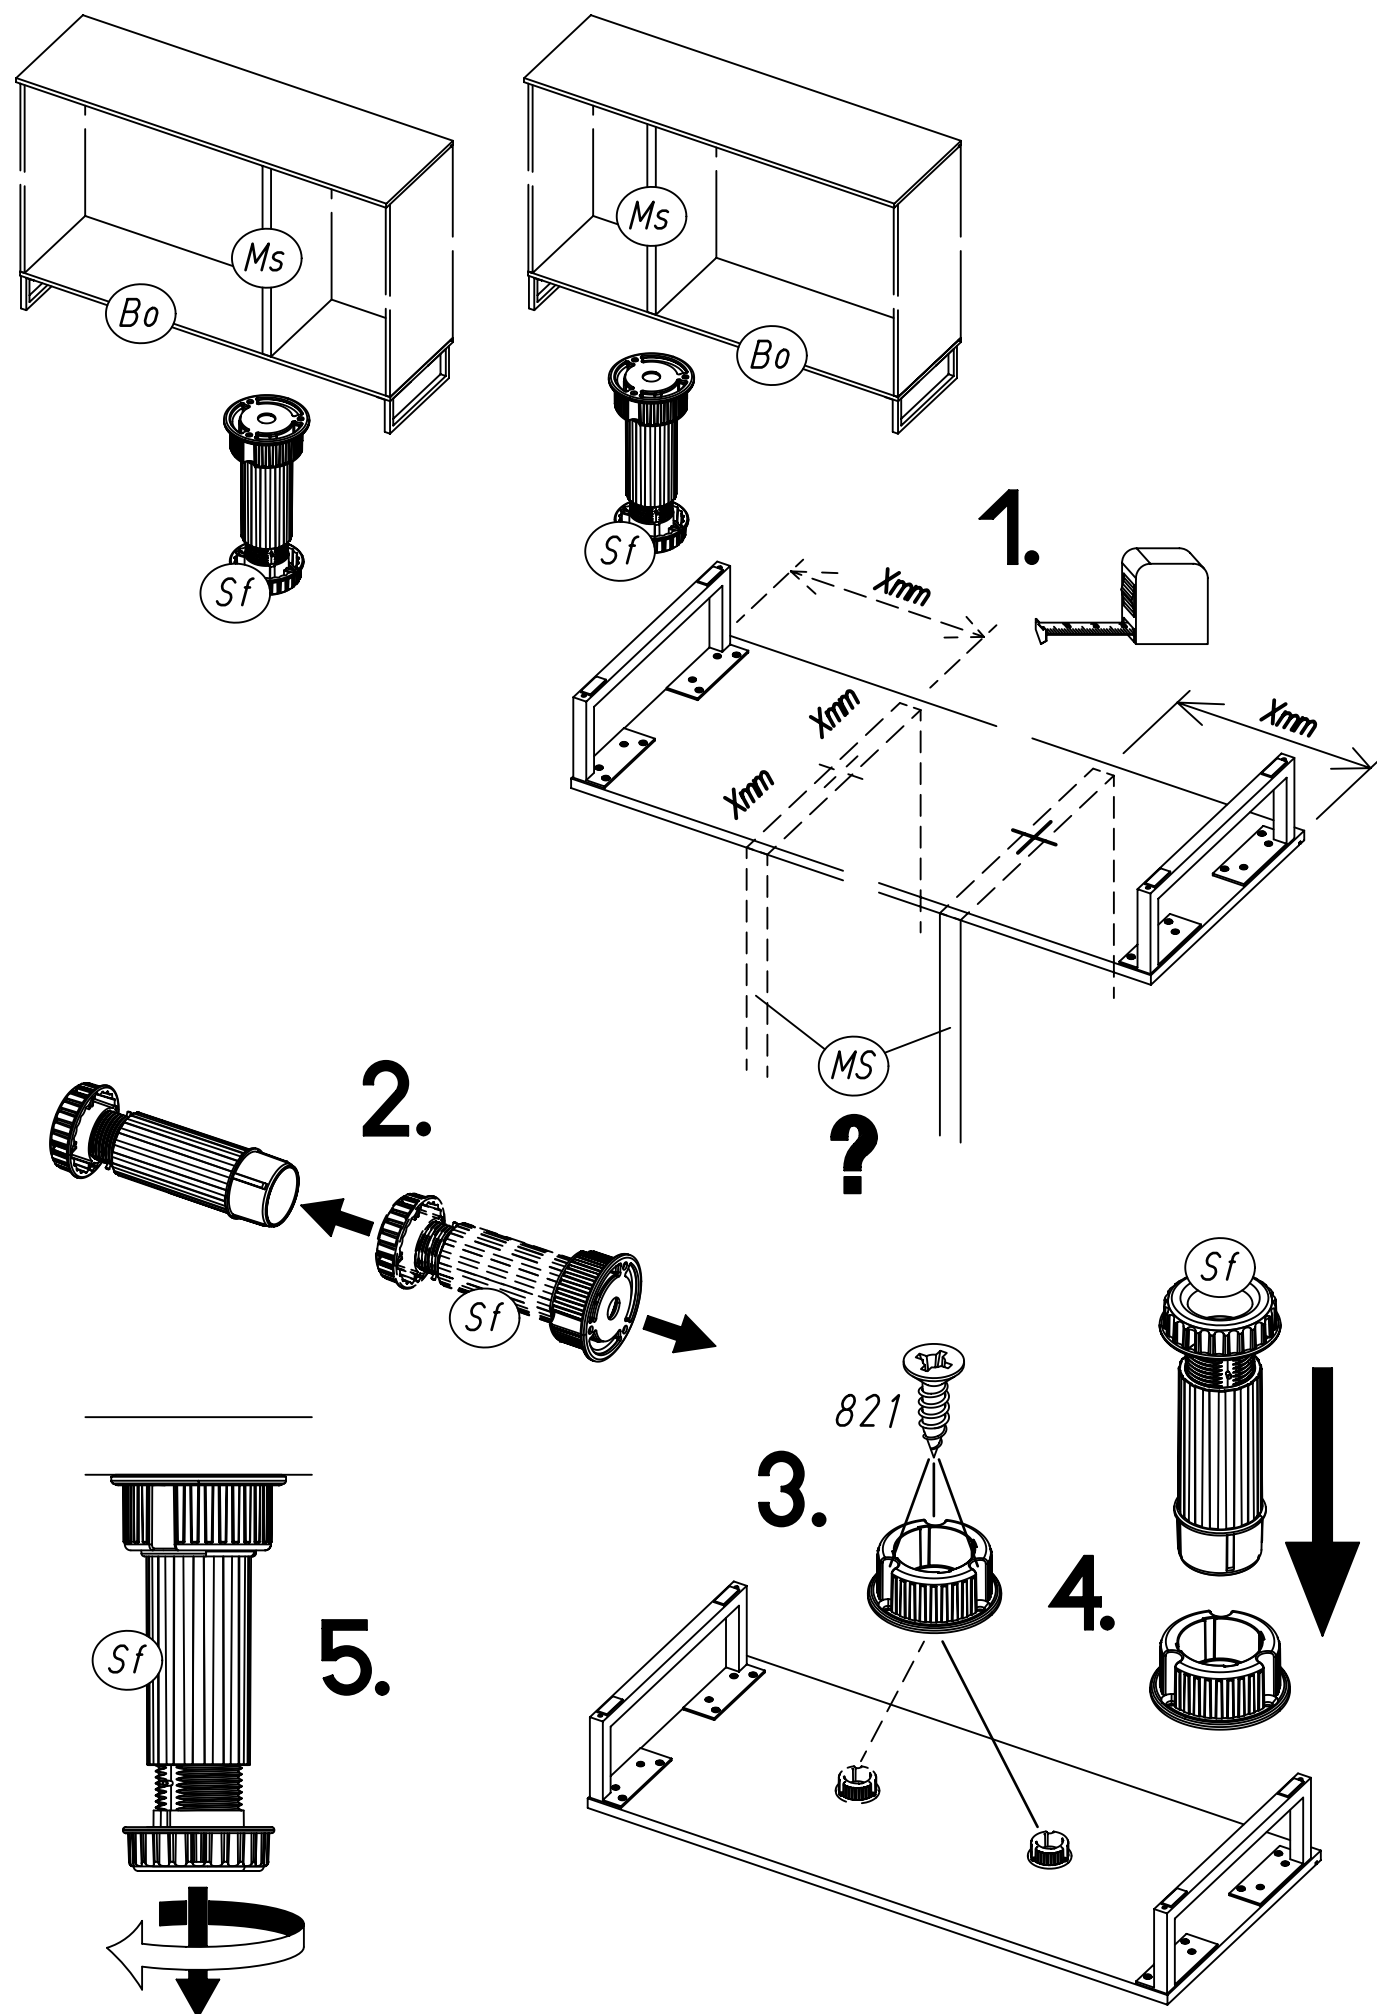

MZ103

4.

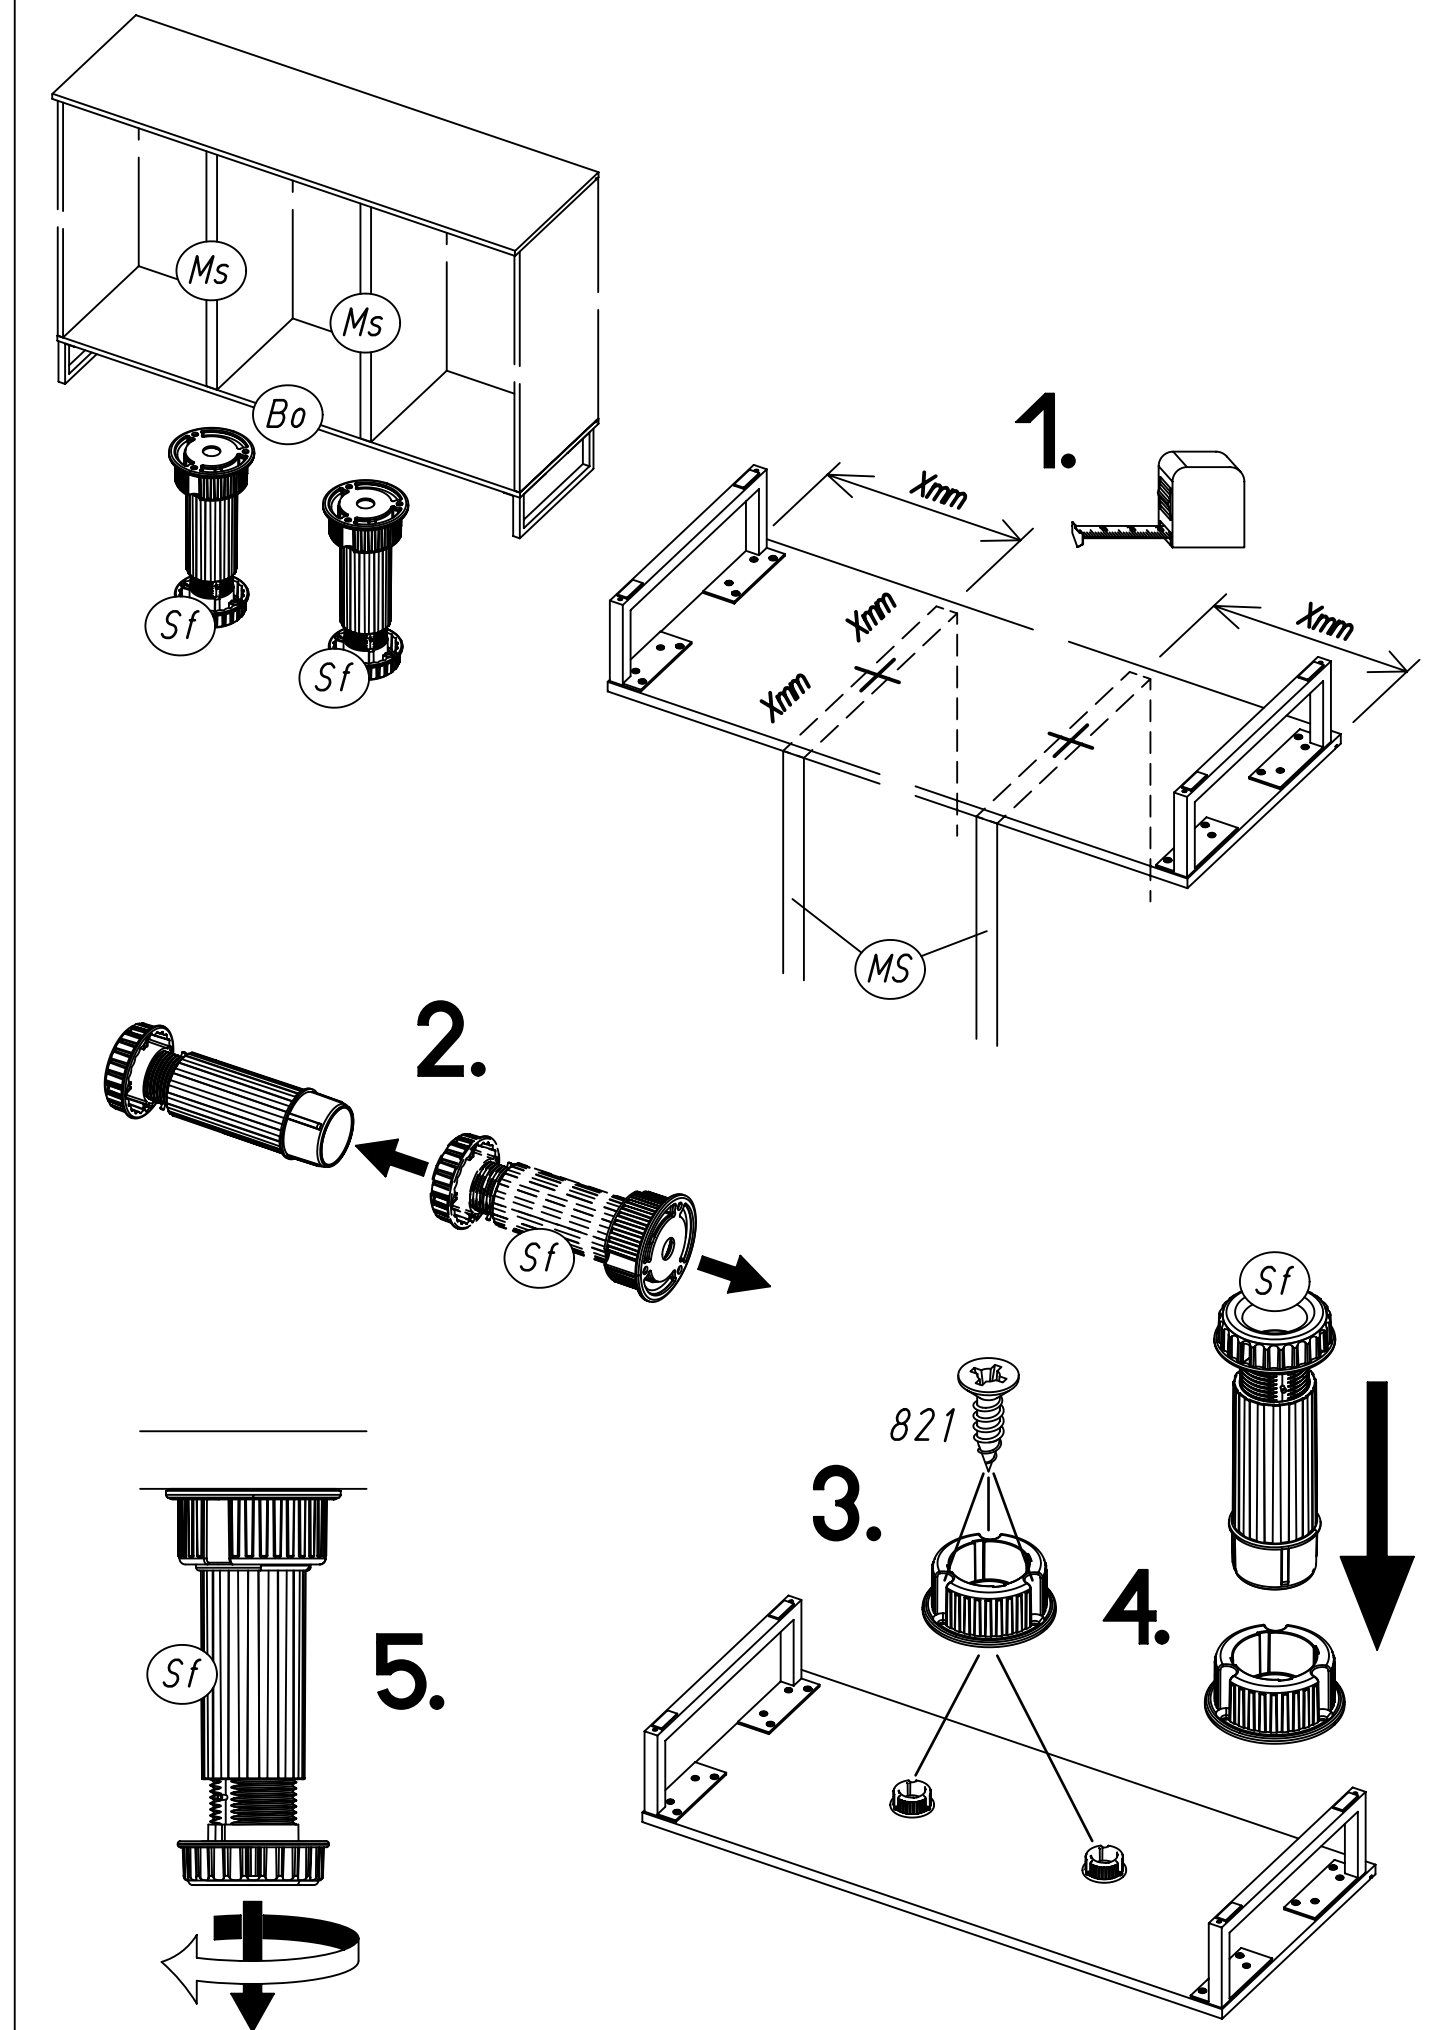

M103