

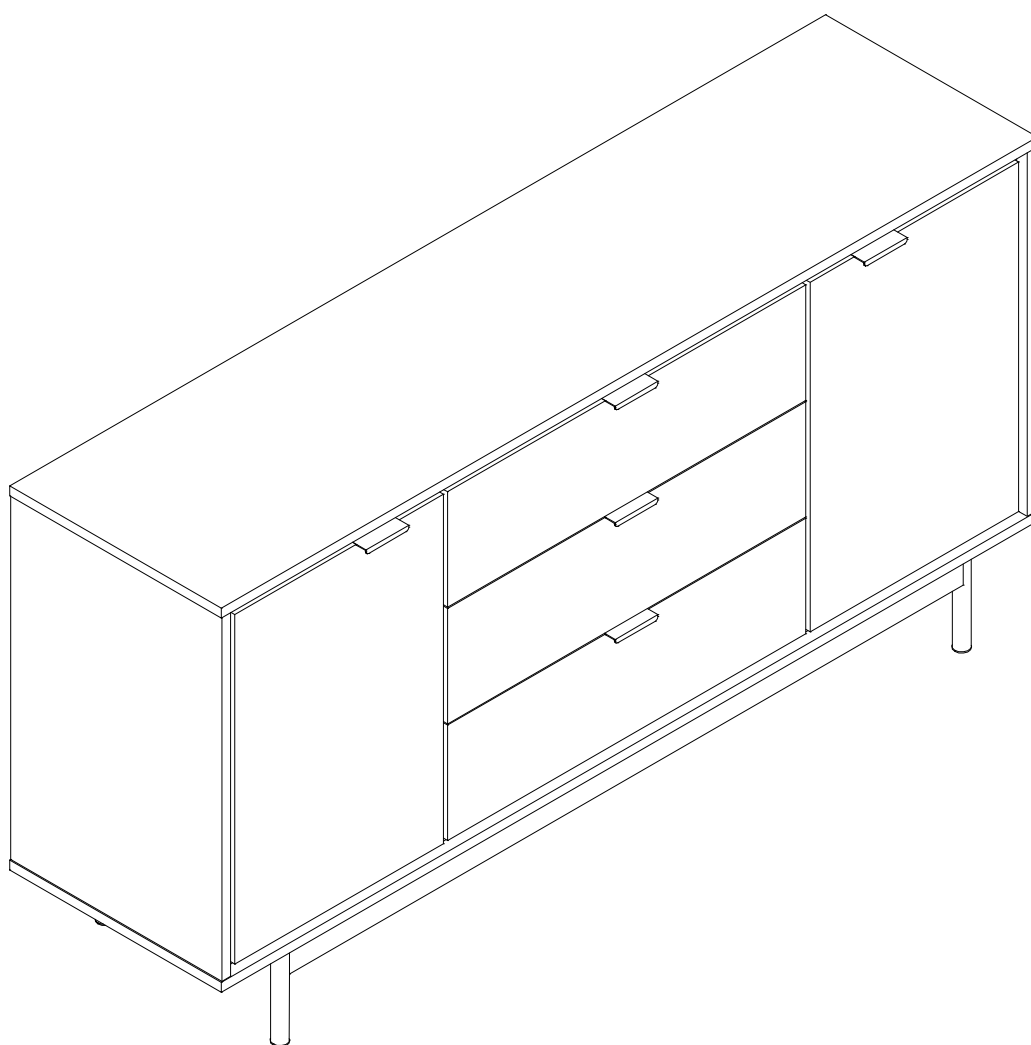
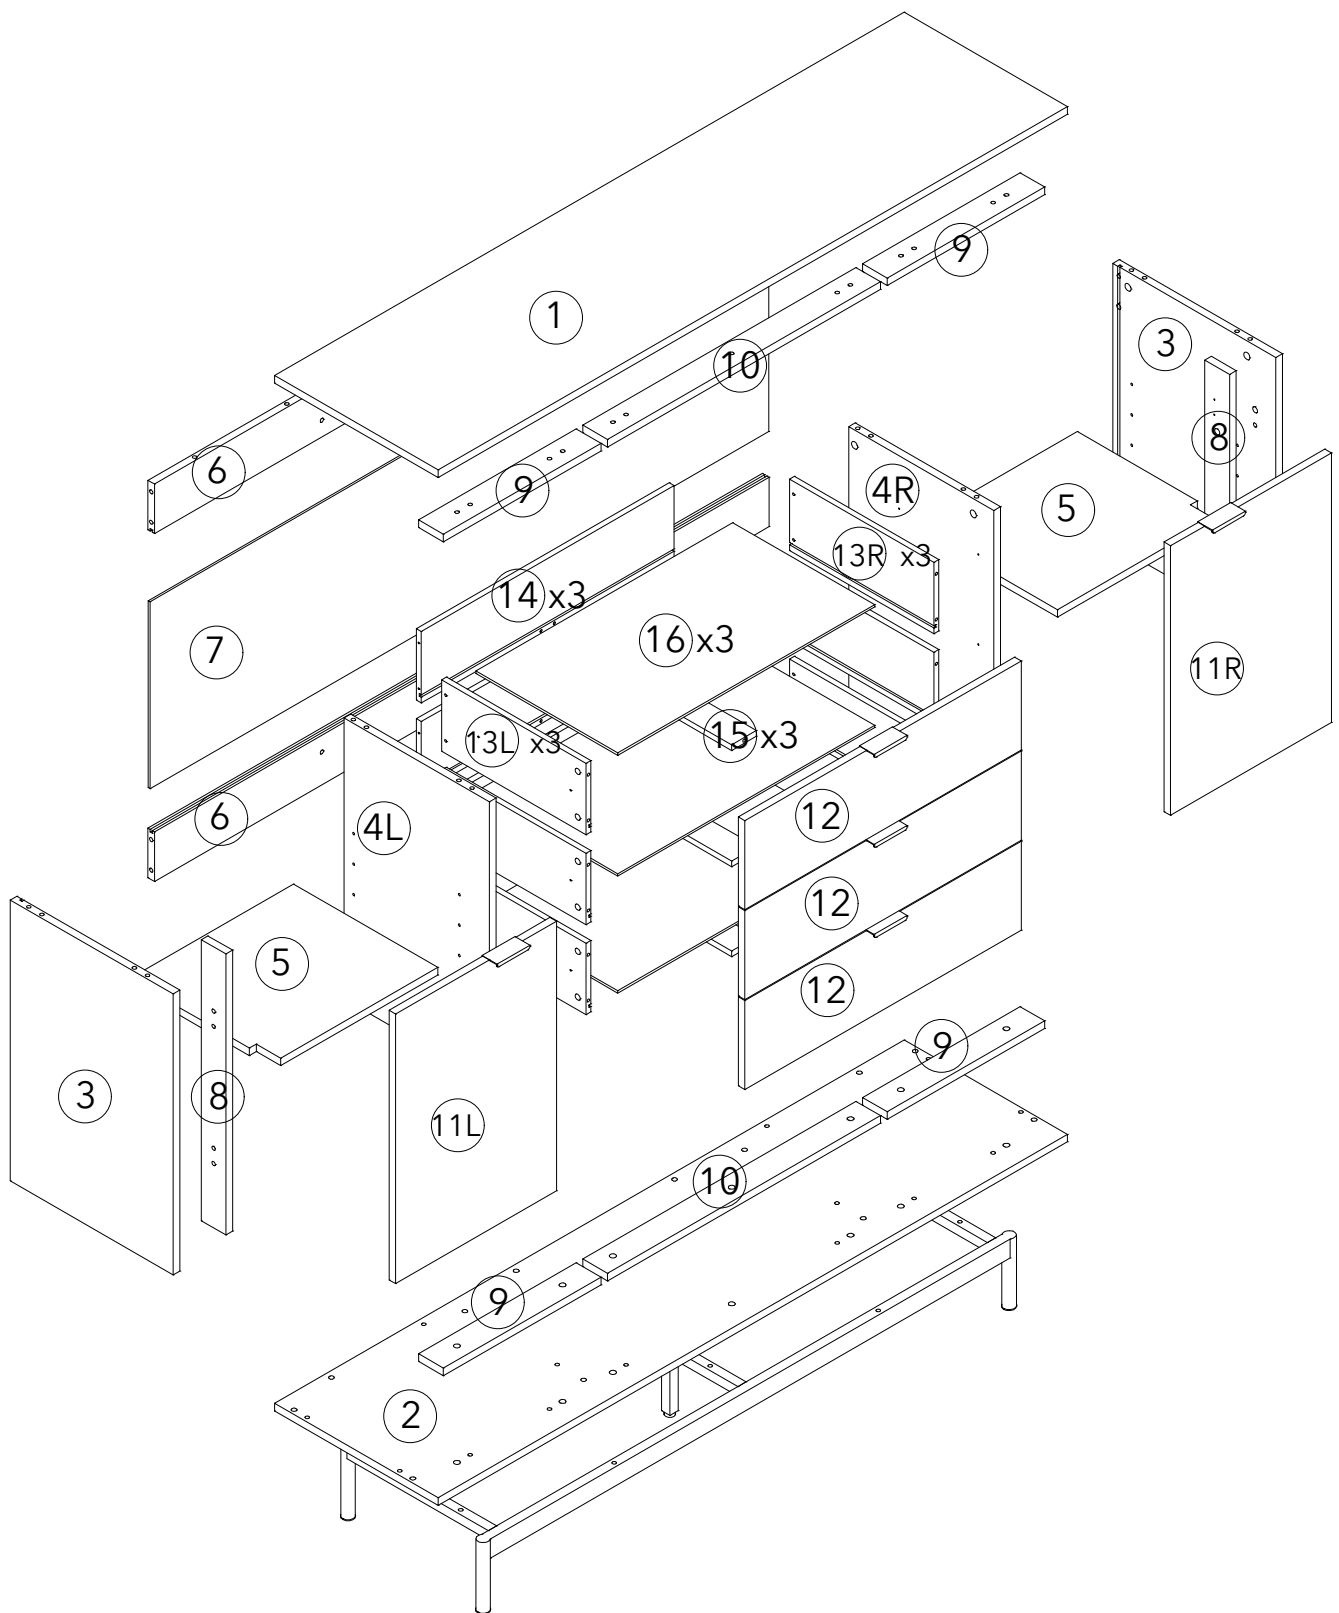
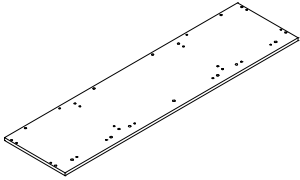
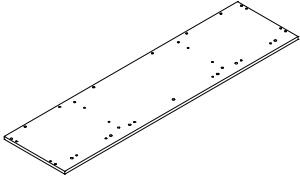
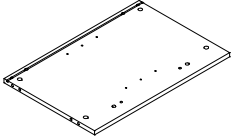
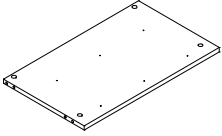
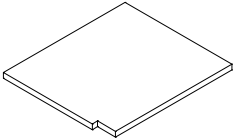
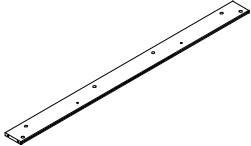
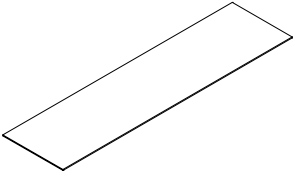
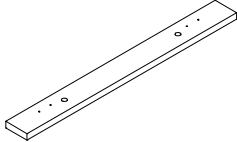

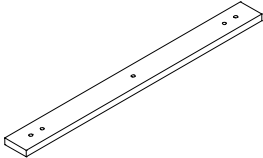
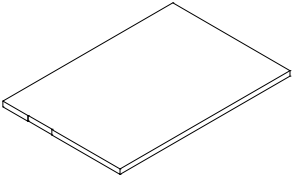
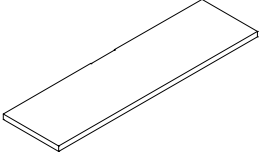

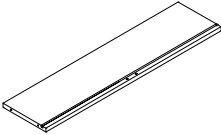



INSTRUCTION MANUAL




















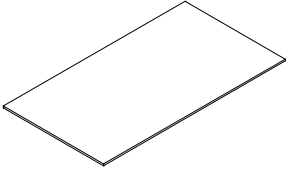


Ref	Dimensions(mm)	Visual	Qty
1	1526x396x16		1
2	1526x396x16		1
3	590x395x16		2
4	590x352x16		2
5	398x350x16		2
6	1490x104x16		2
7	1500x392x5		1
8	590x60x16		2
9	382x60x16		4
10	662x60x16		2

Ref	Dimensions(mm)	Visual	Qty
11	566x390x16		2
12	670x187x16		3
13	350x150x12		6
14	613x150x12		3
15	334x60x12		3
16	623x344x5		3

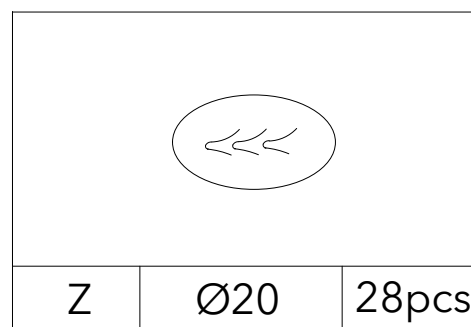

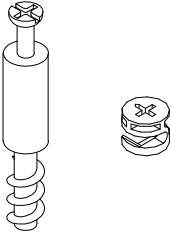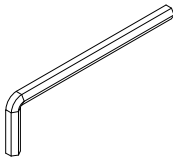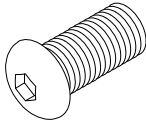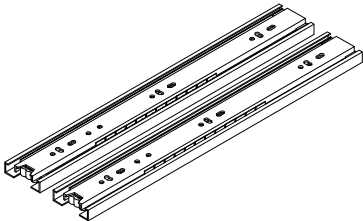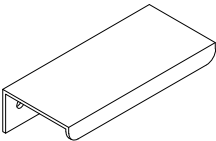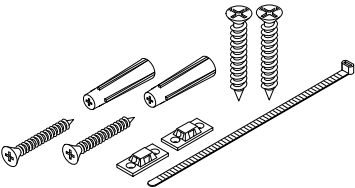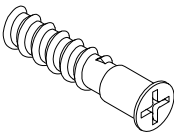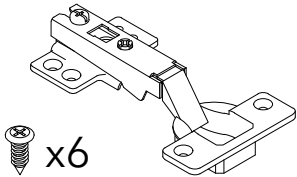
								
A	M6x40mm	28pcs	B	Ø15x11.5	28pcs	C	Ø8x30	24pcs
								
D	Ø12x10mm	15set	E	M4x14	36pcs	F	M4x30	18pcs
								
O	4#	1pcs	R	M6x16	6pcs	H	M6x20mm	18pcs
								
N	Ø8x20	16pcs	G	M6x12mm	8pcs	K	12"	3set
								
I	M4x14	10pcs	J	L=80	5pcs	Q	/	8pcs
								
P	/	2set	M	M7x50	4pcs	L	/	4set


Step 1:

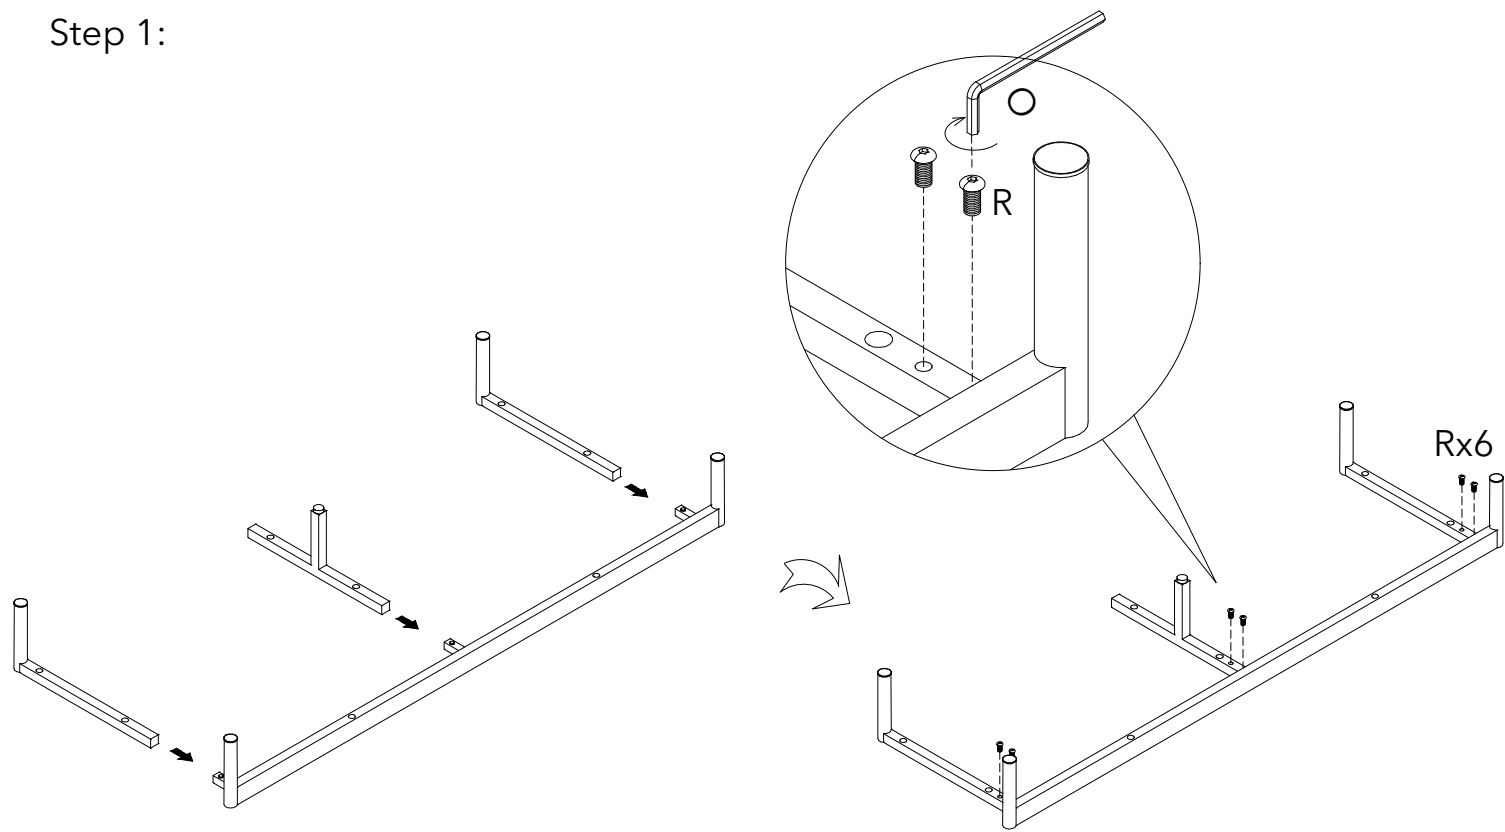



					
O	4#	1pcs	R	M6x16	6pcs

Step 2:


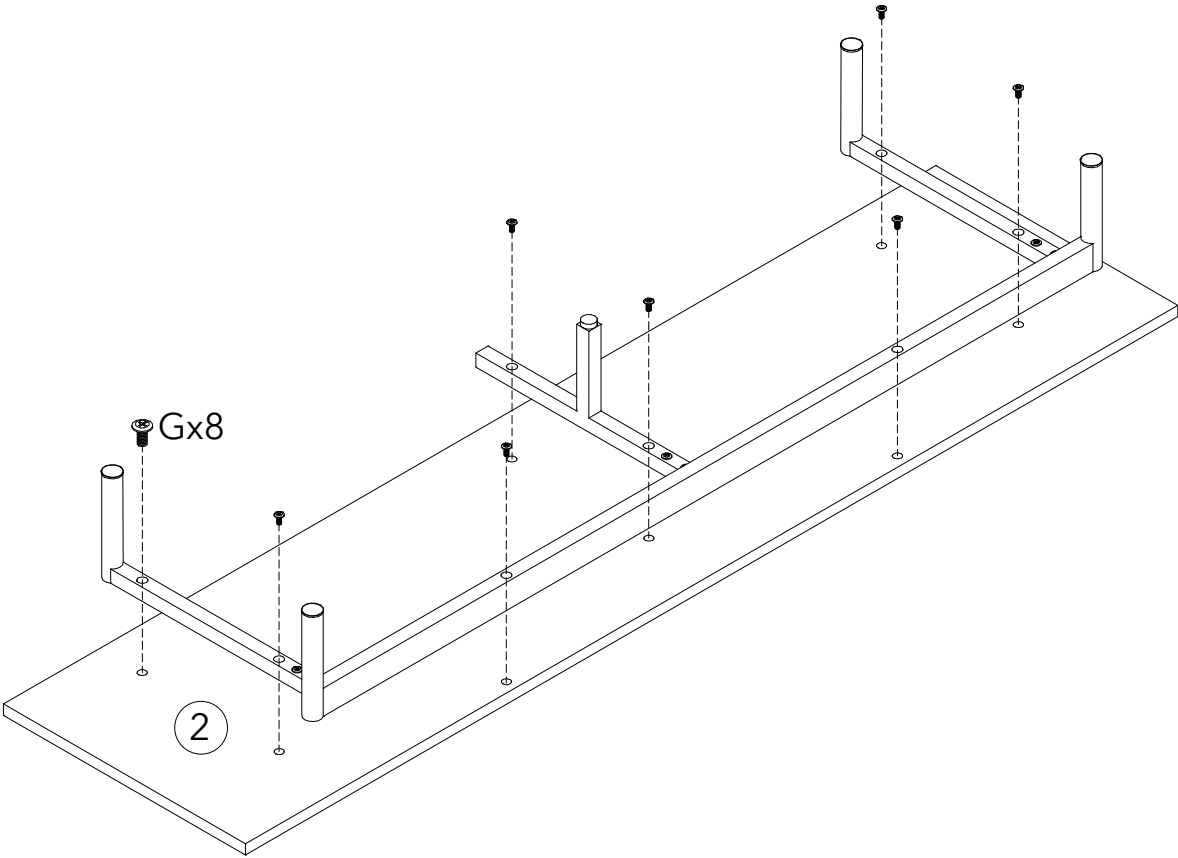


			
G	M6x12mm	8pcs	


Step 3:

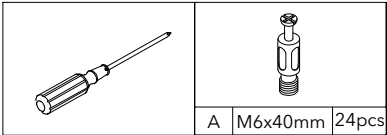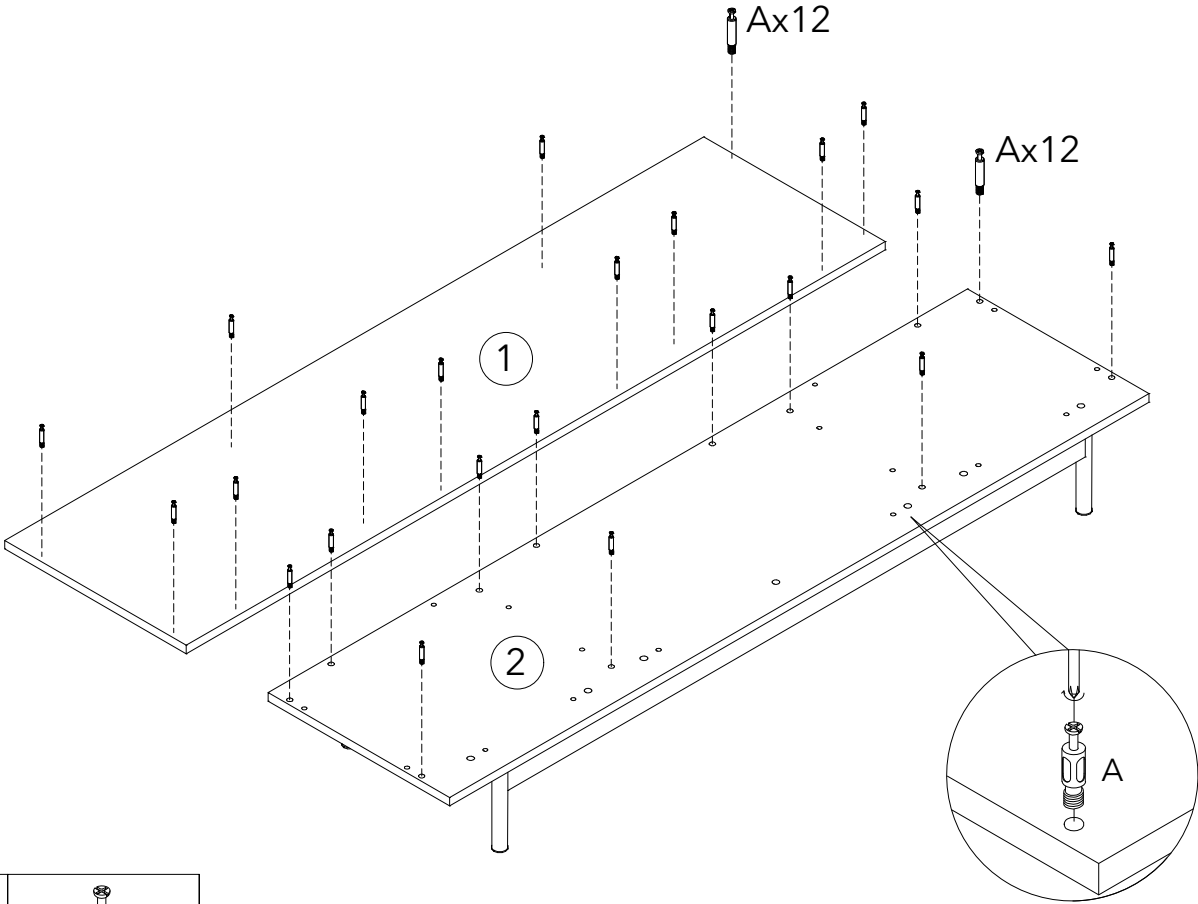


Step 4:

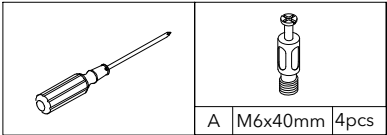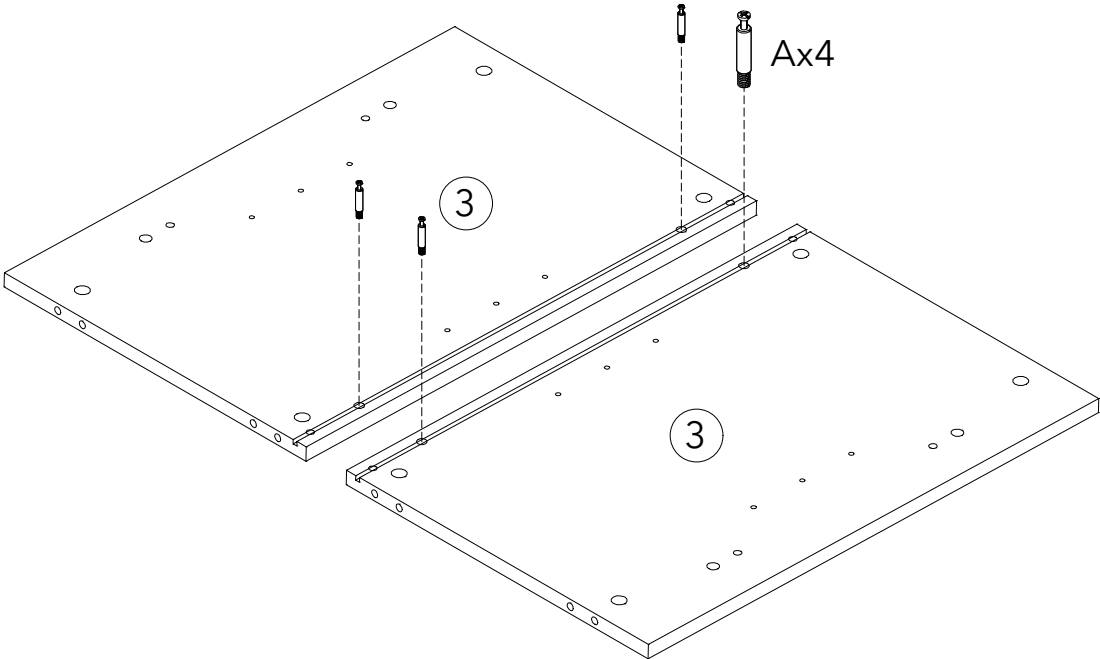


Step 5:

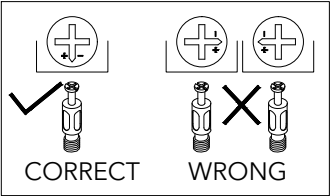



Please note that the locking cam faces outwards

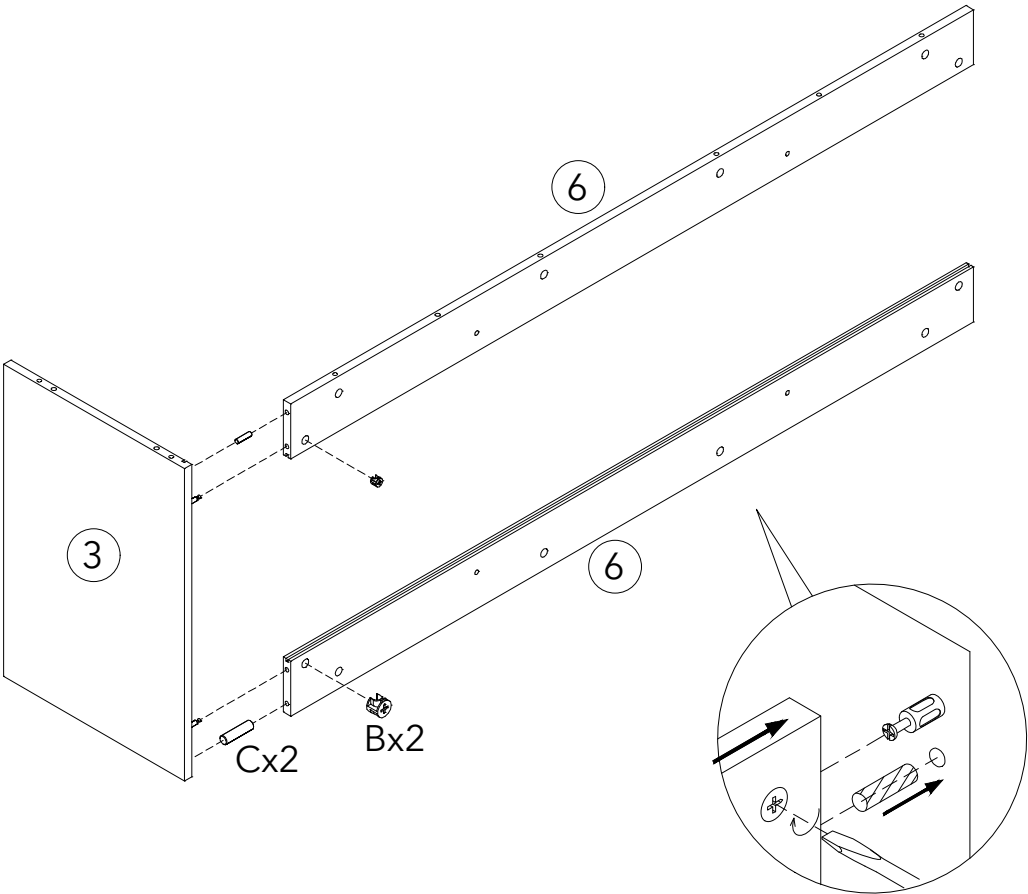


	
C	Ø 8x30 2pcs
	
B	Ø15x11.5 2pcs

Step 6:

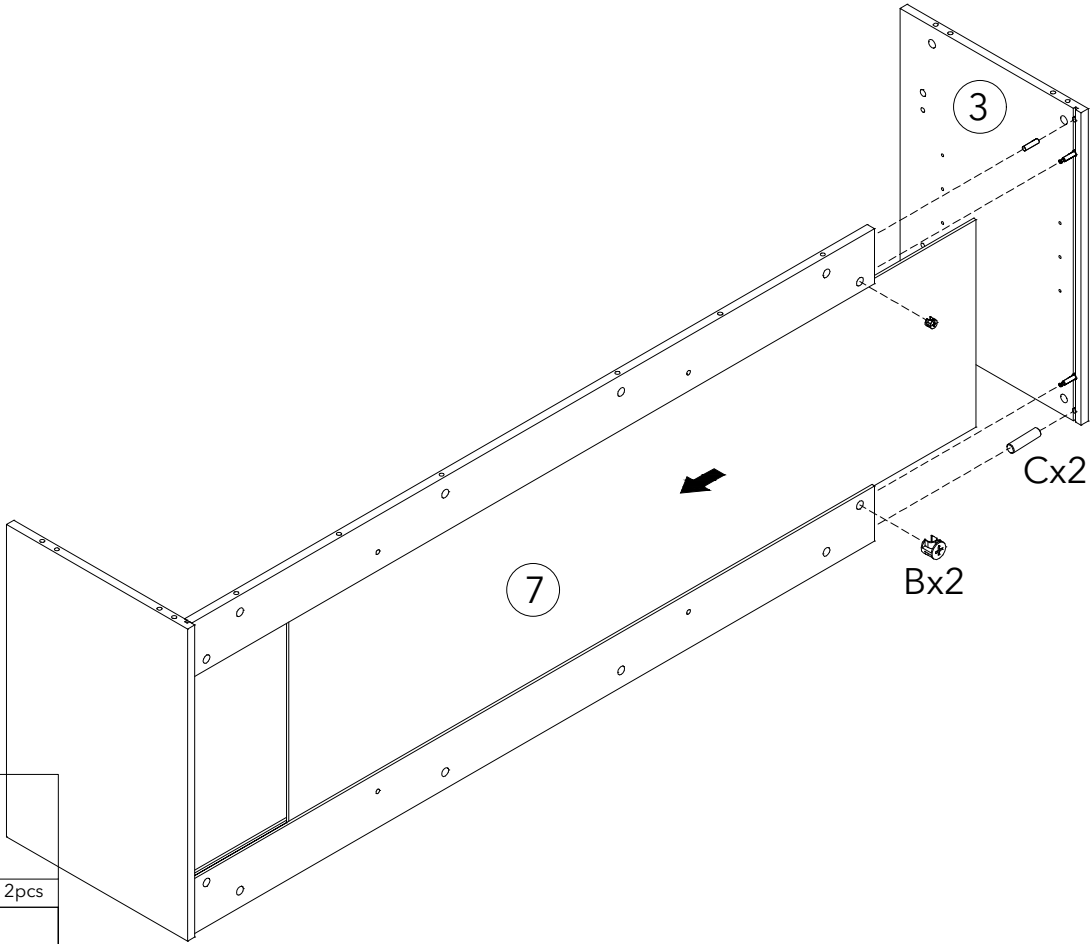


	
C	Ø 8x30 2pcs
	
B	Ø15x11.5 2pcs



Step 7:

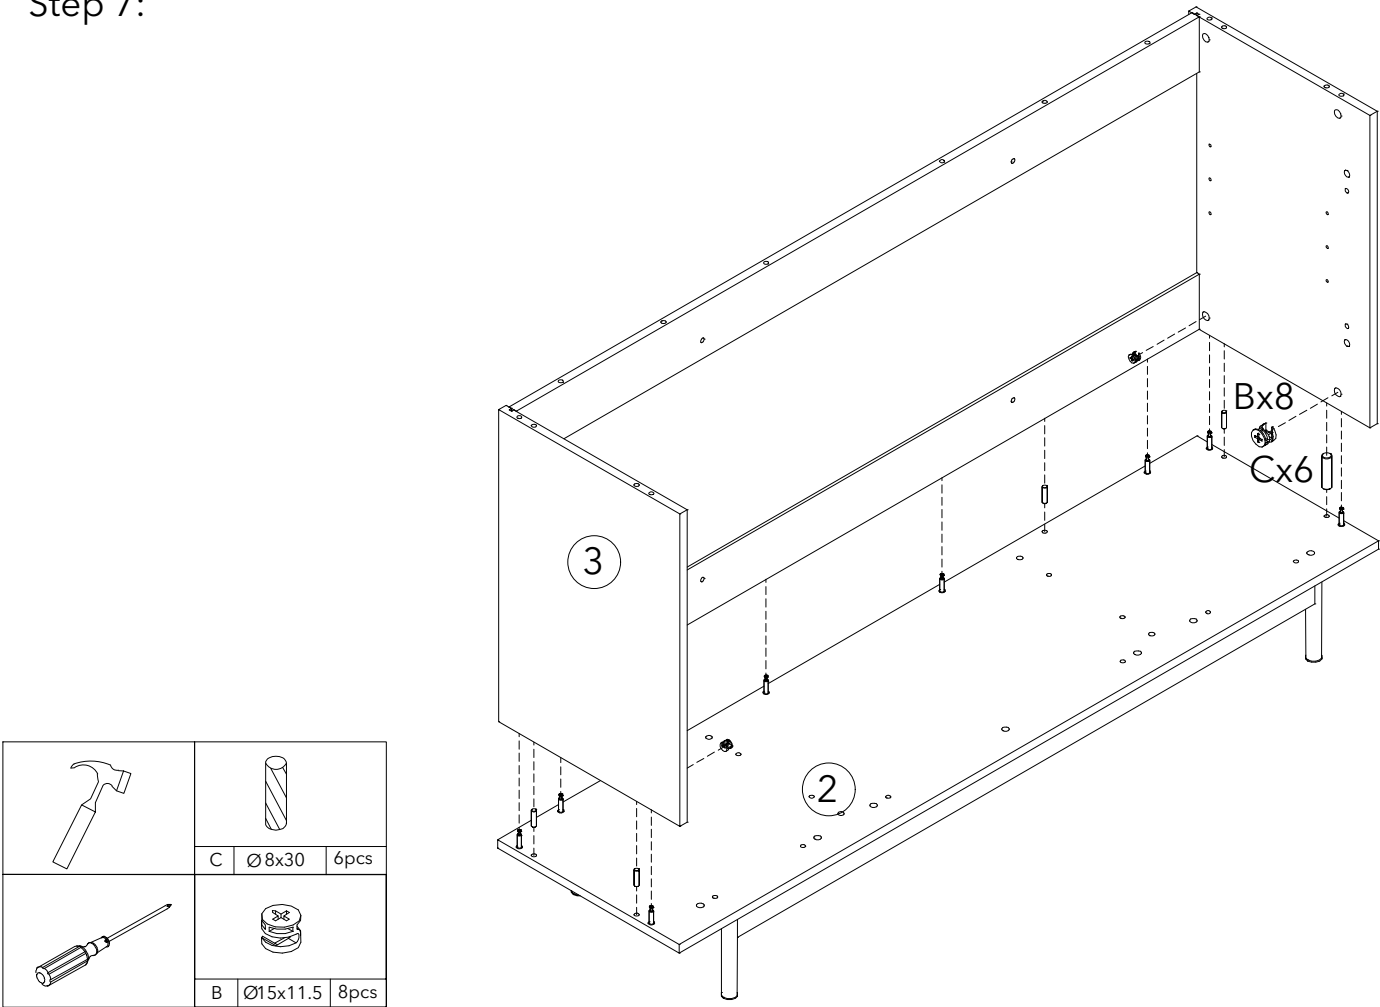


Step 8:

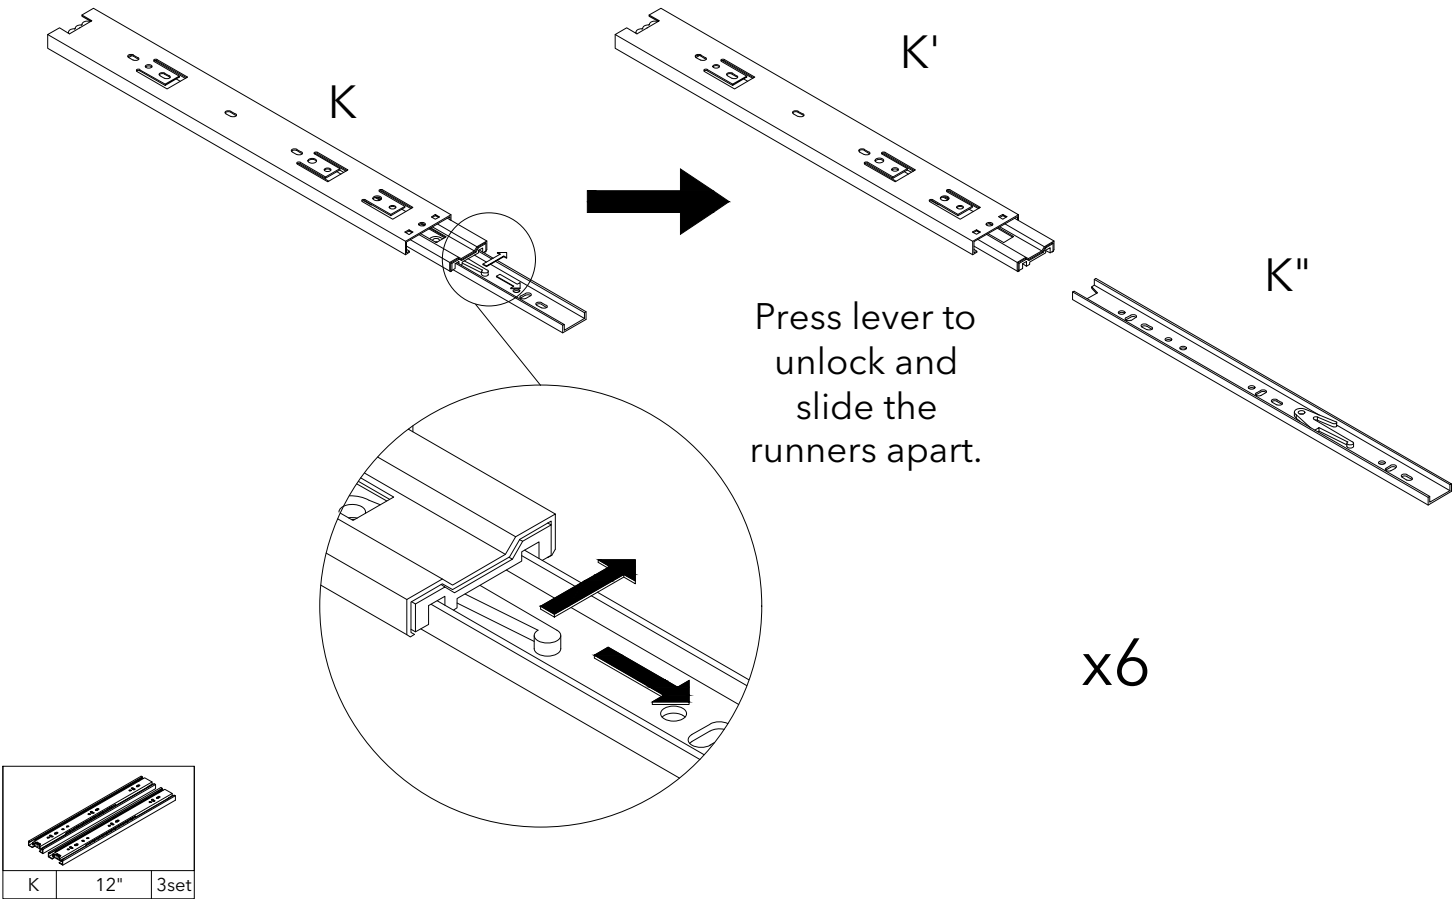


Step 9:

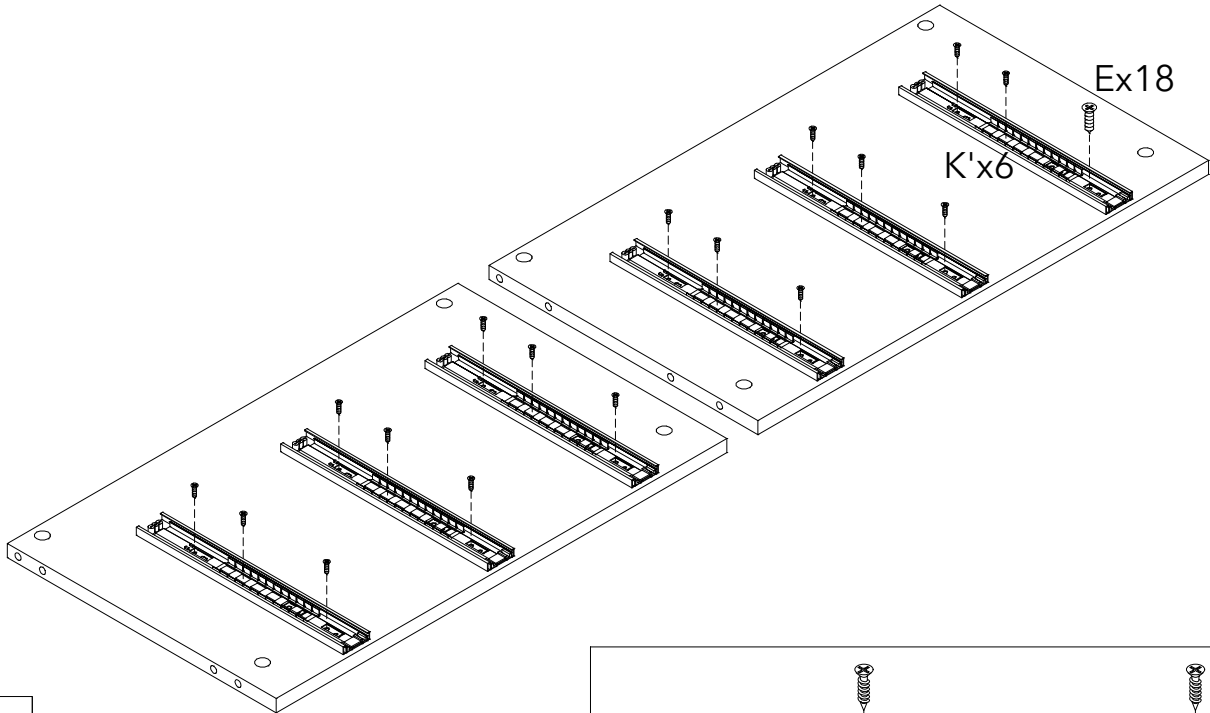



K	12"	3set
---	-----	------

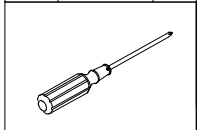


E	M4x14	18pcs
---	-------	-------

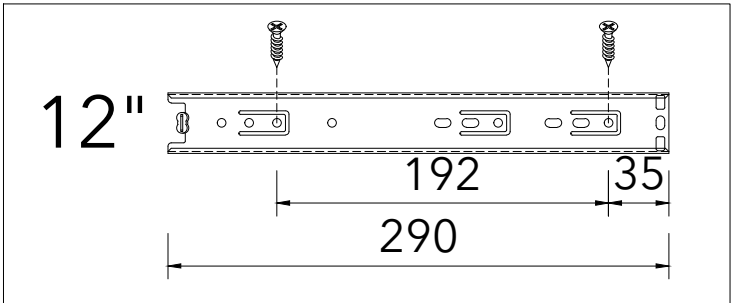

Step 10:

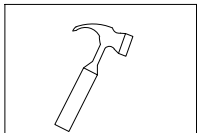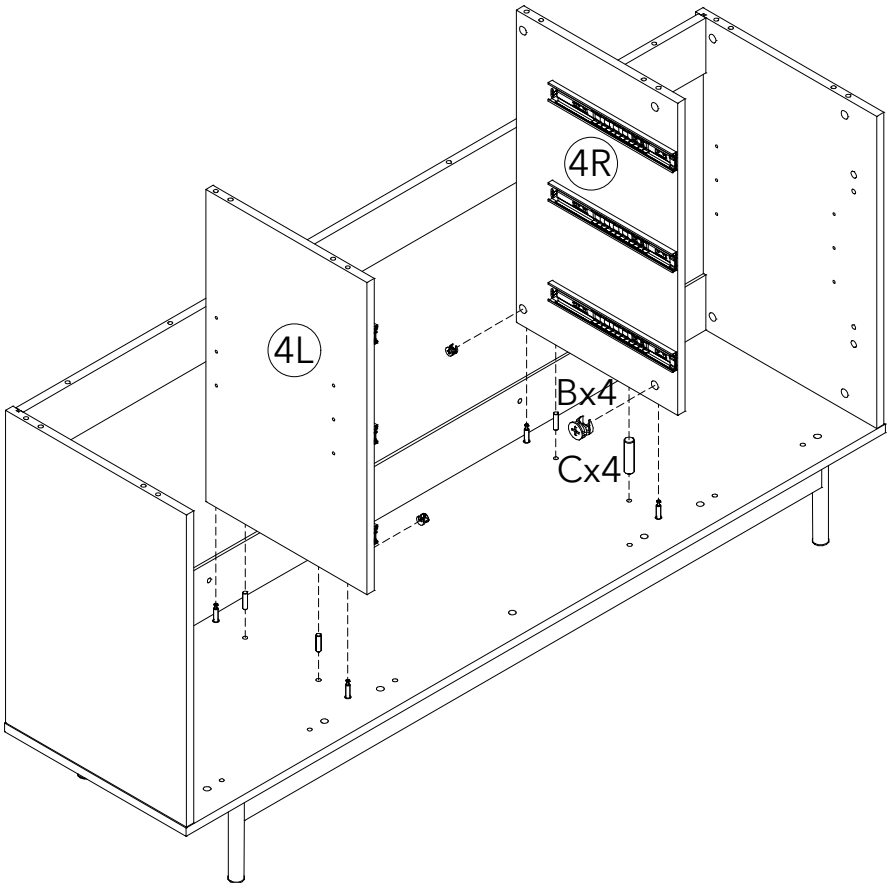


C	Ø8x30	4pcs
---	-------	------

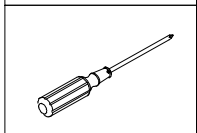


B	Ø15x11.5	4pcs
---	----------	------


Step 11:

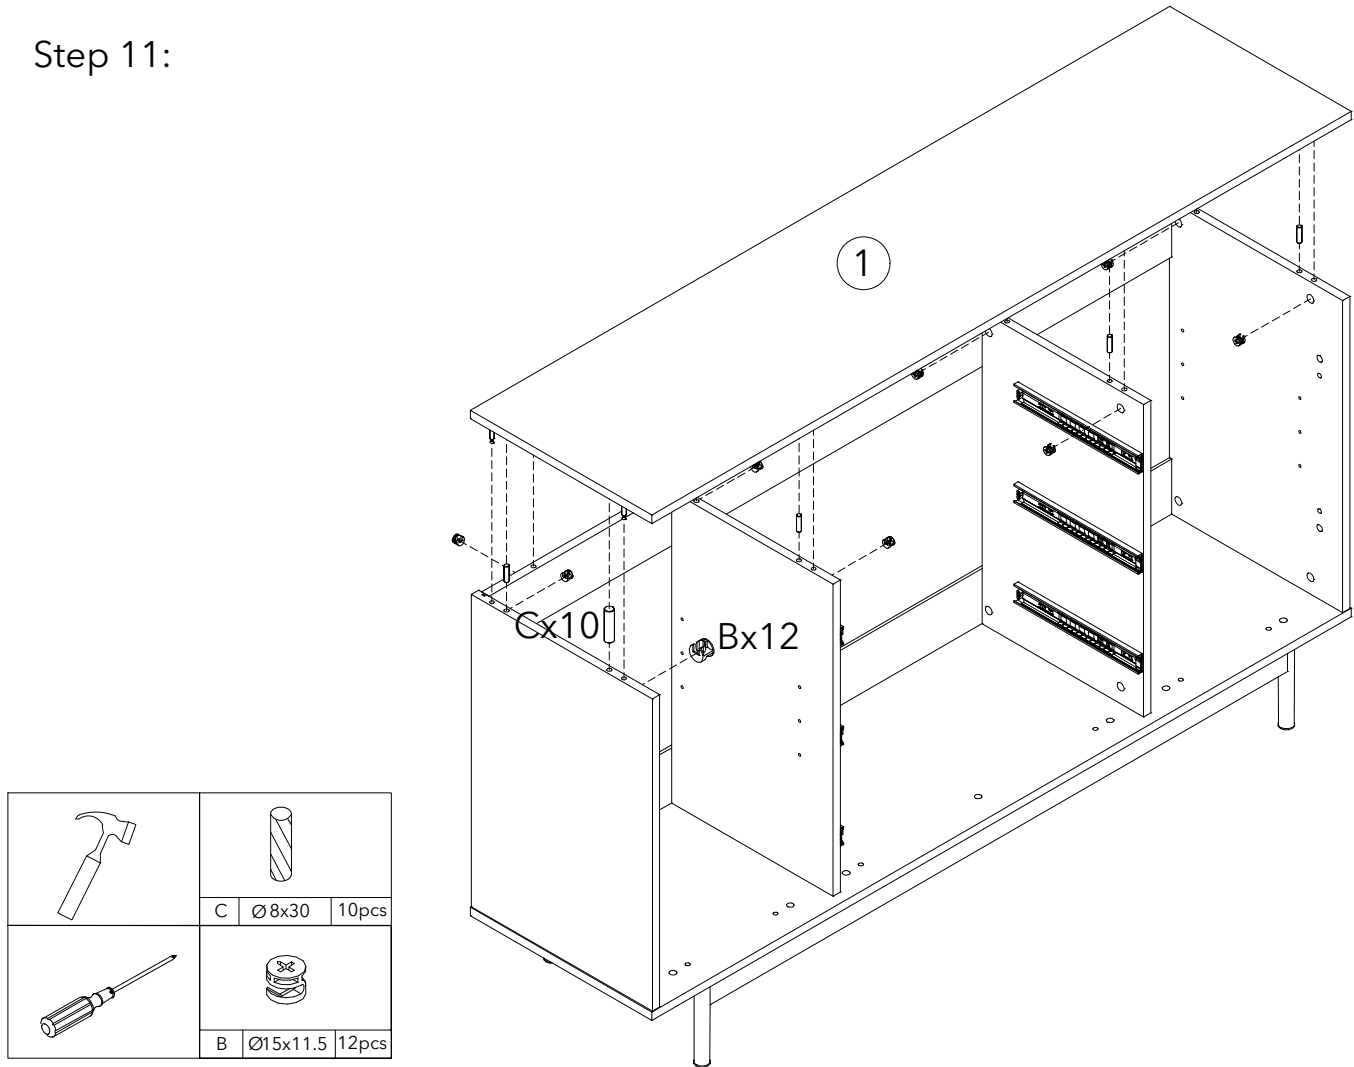


Step 12:

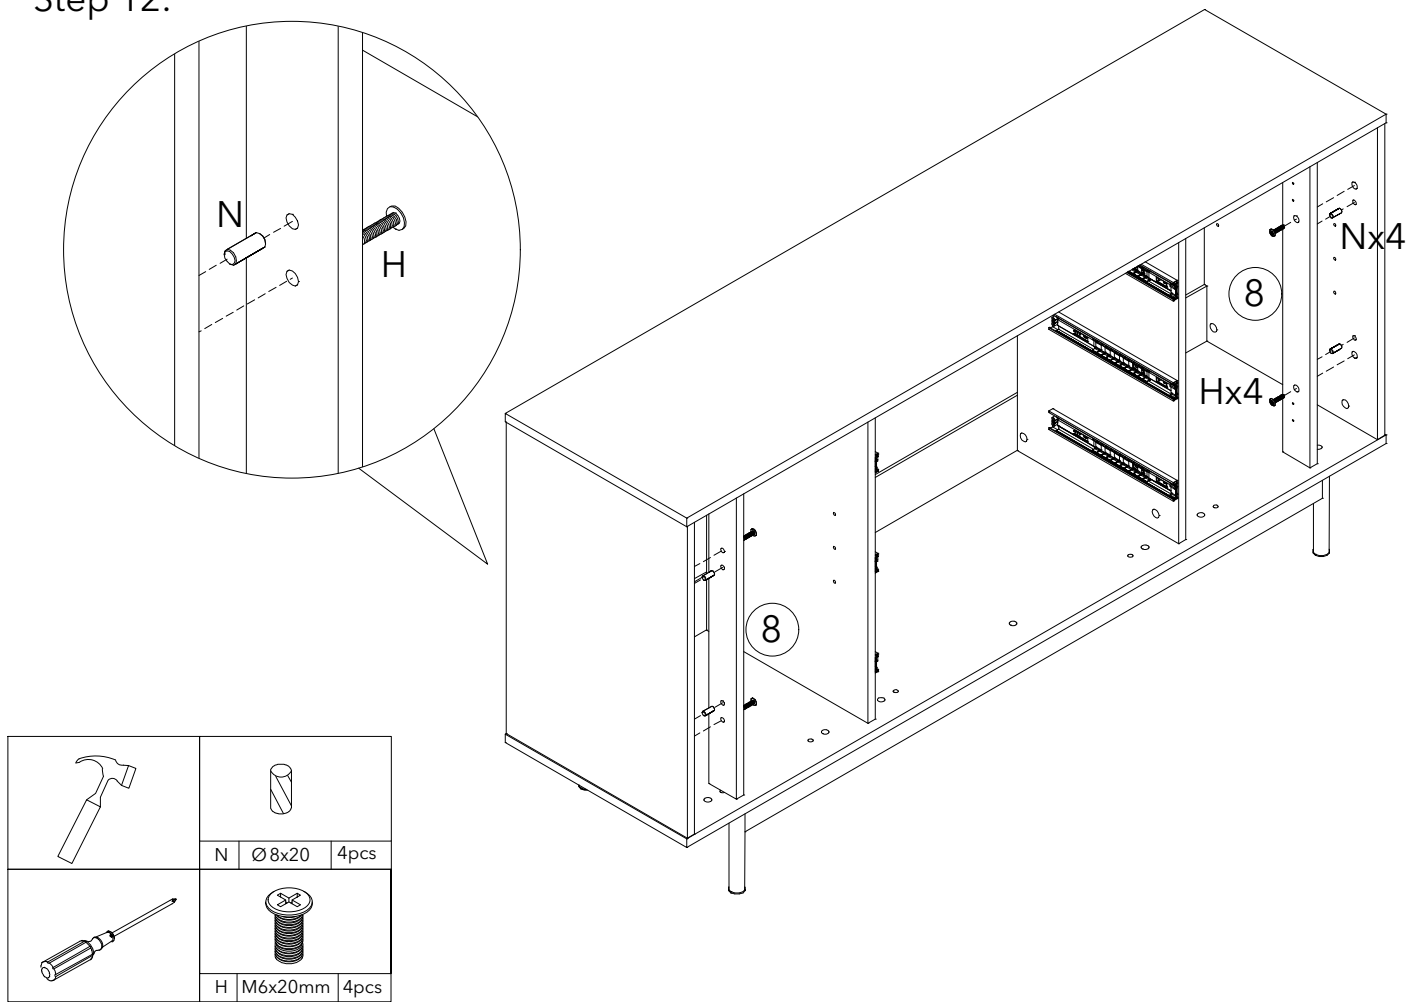



Step 13:

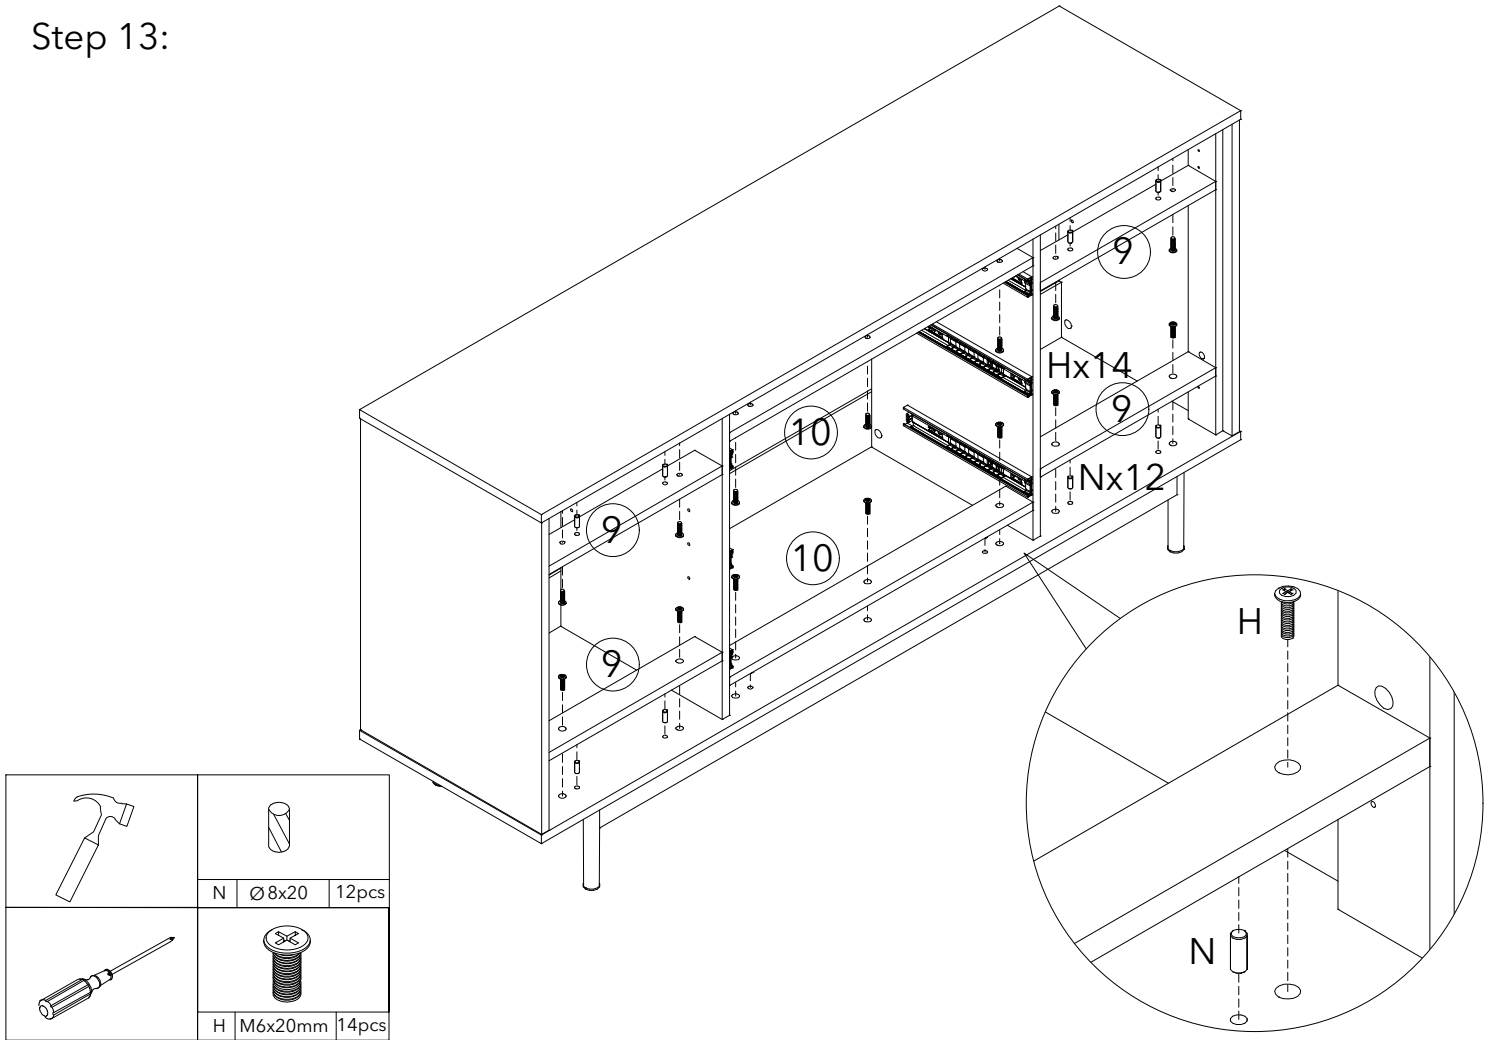




Step 14:

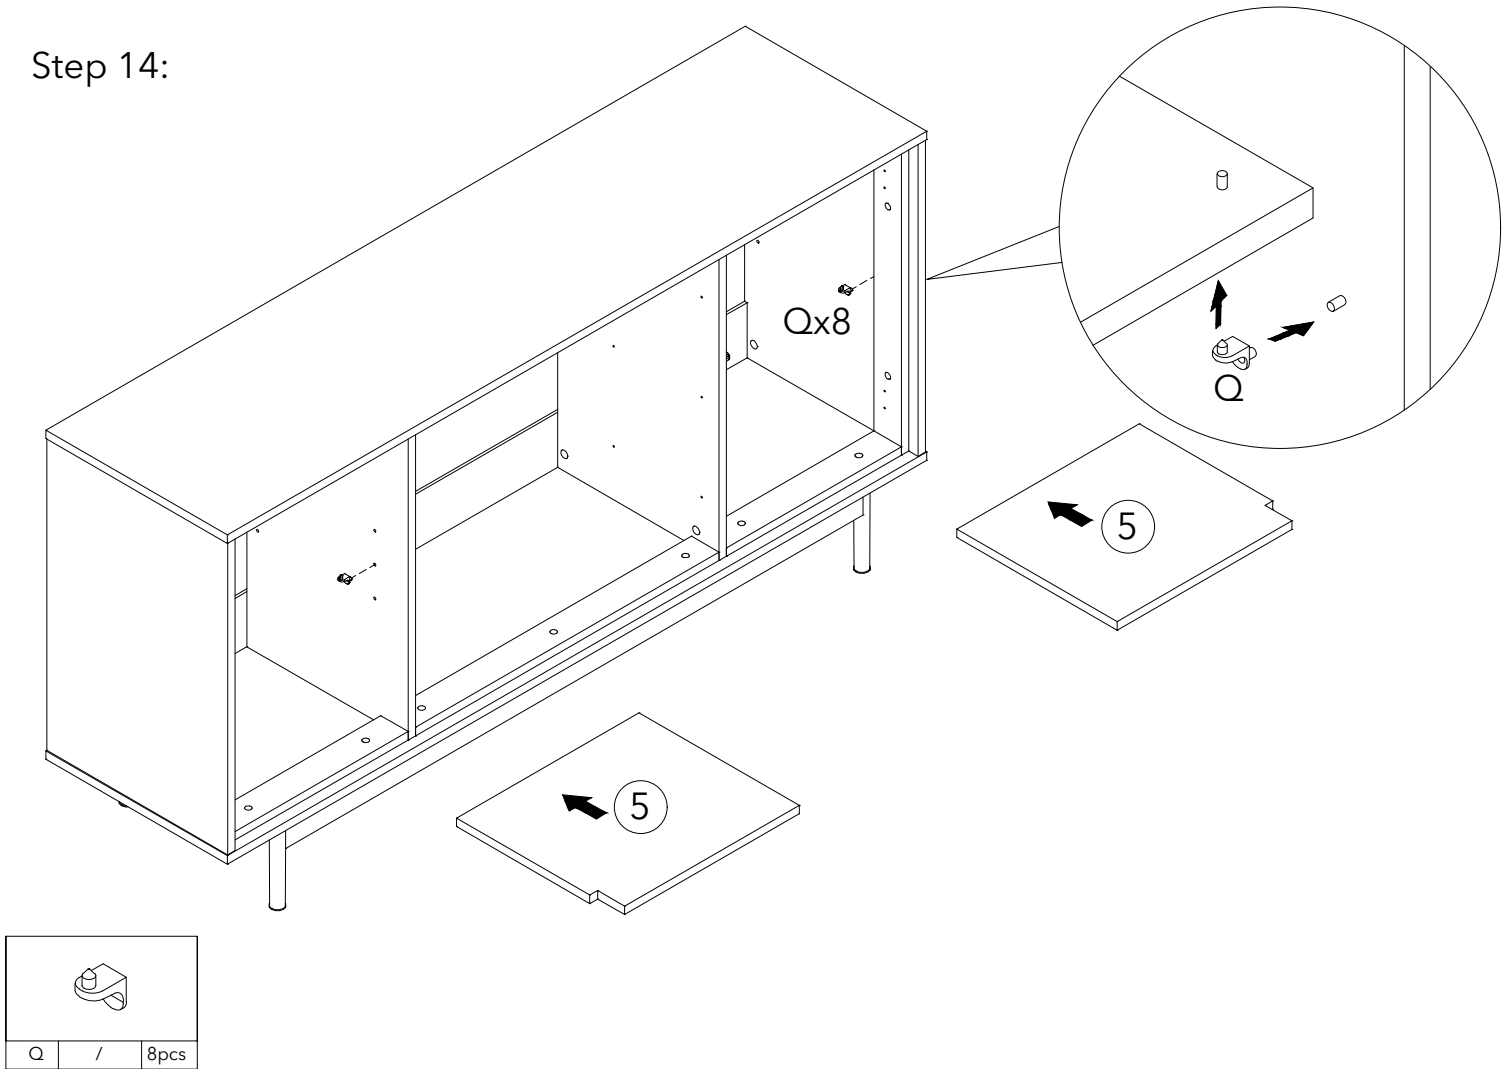


Step 15:

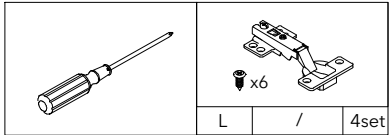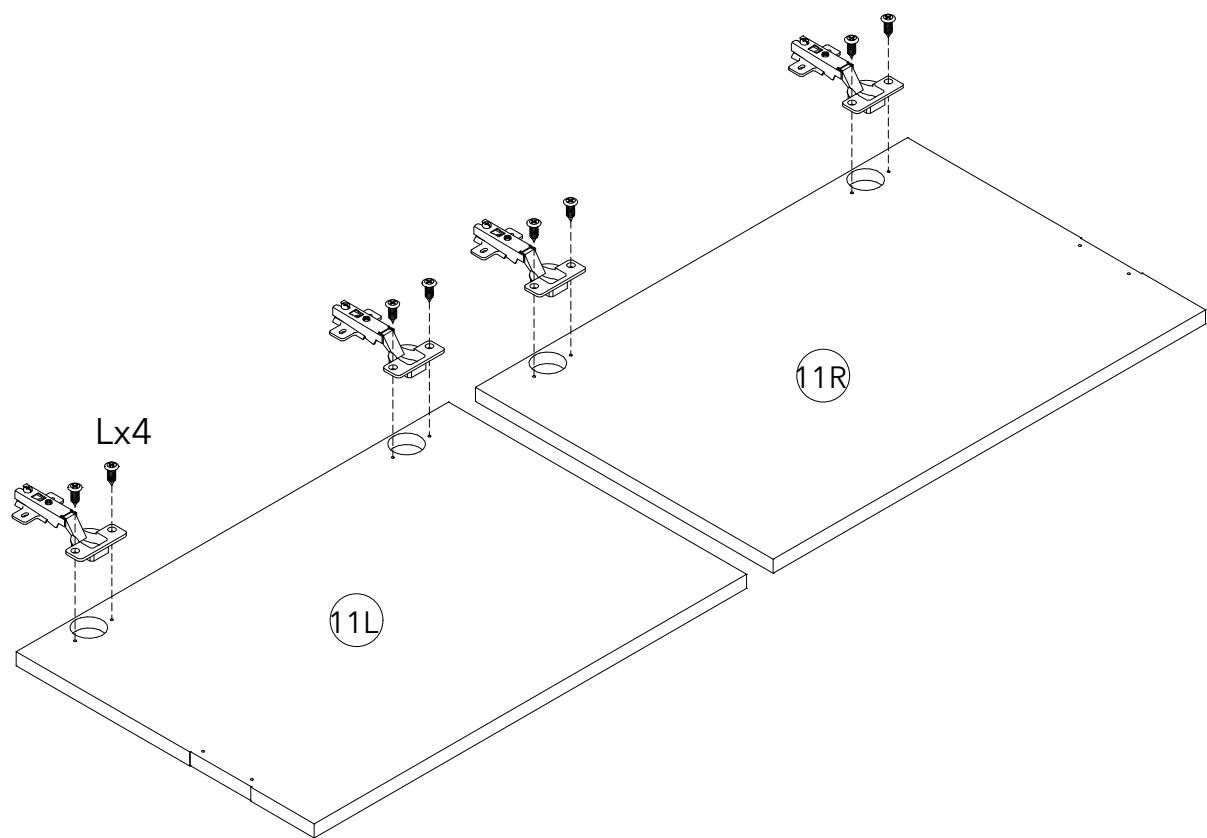


Step 16:

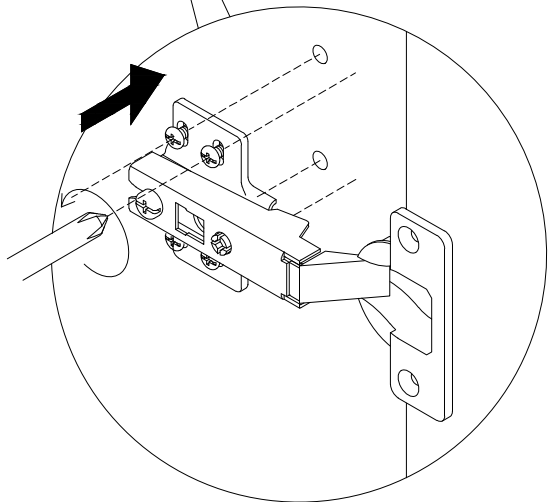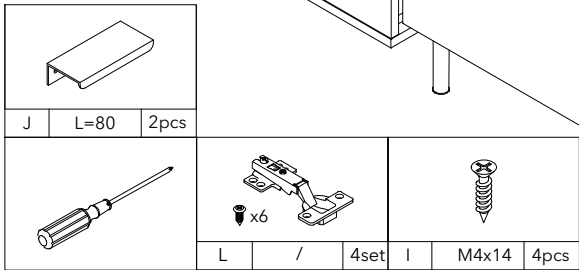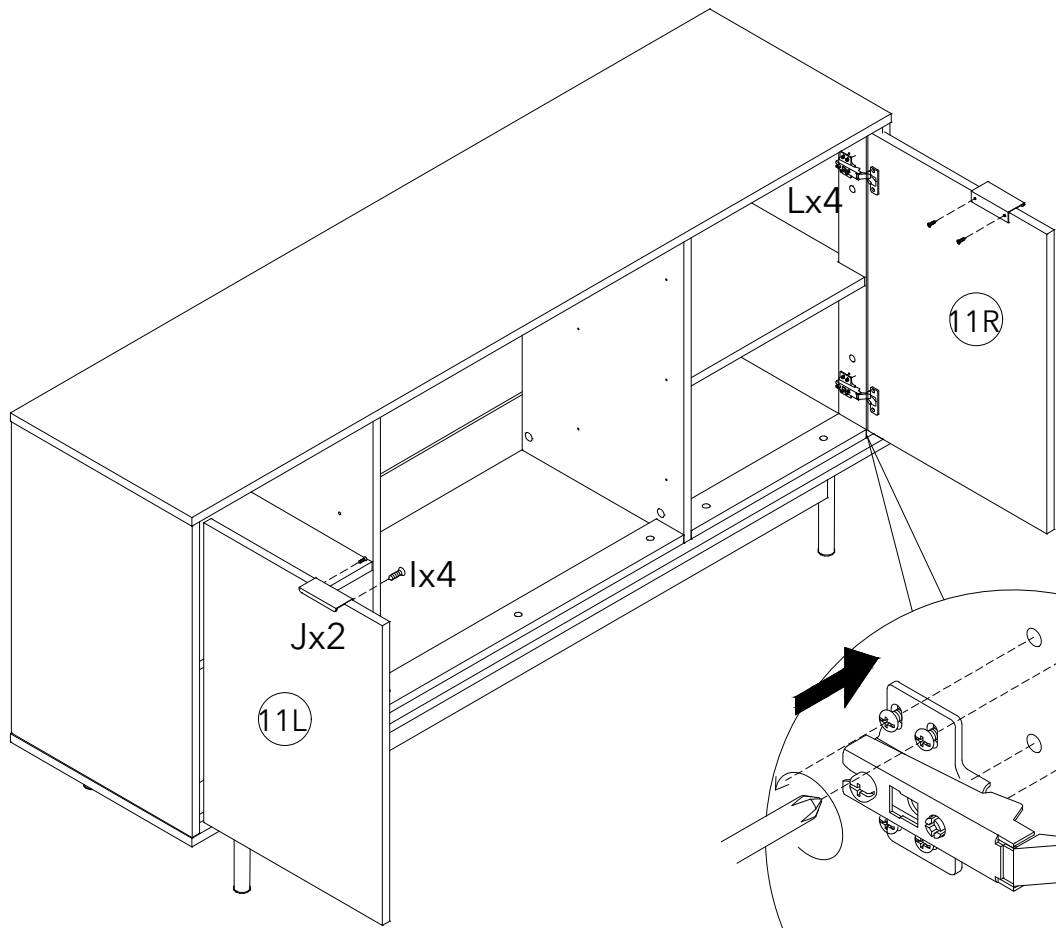


Step 17: x3

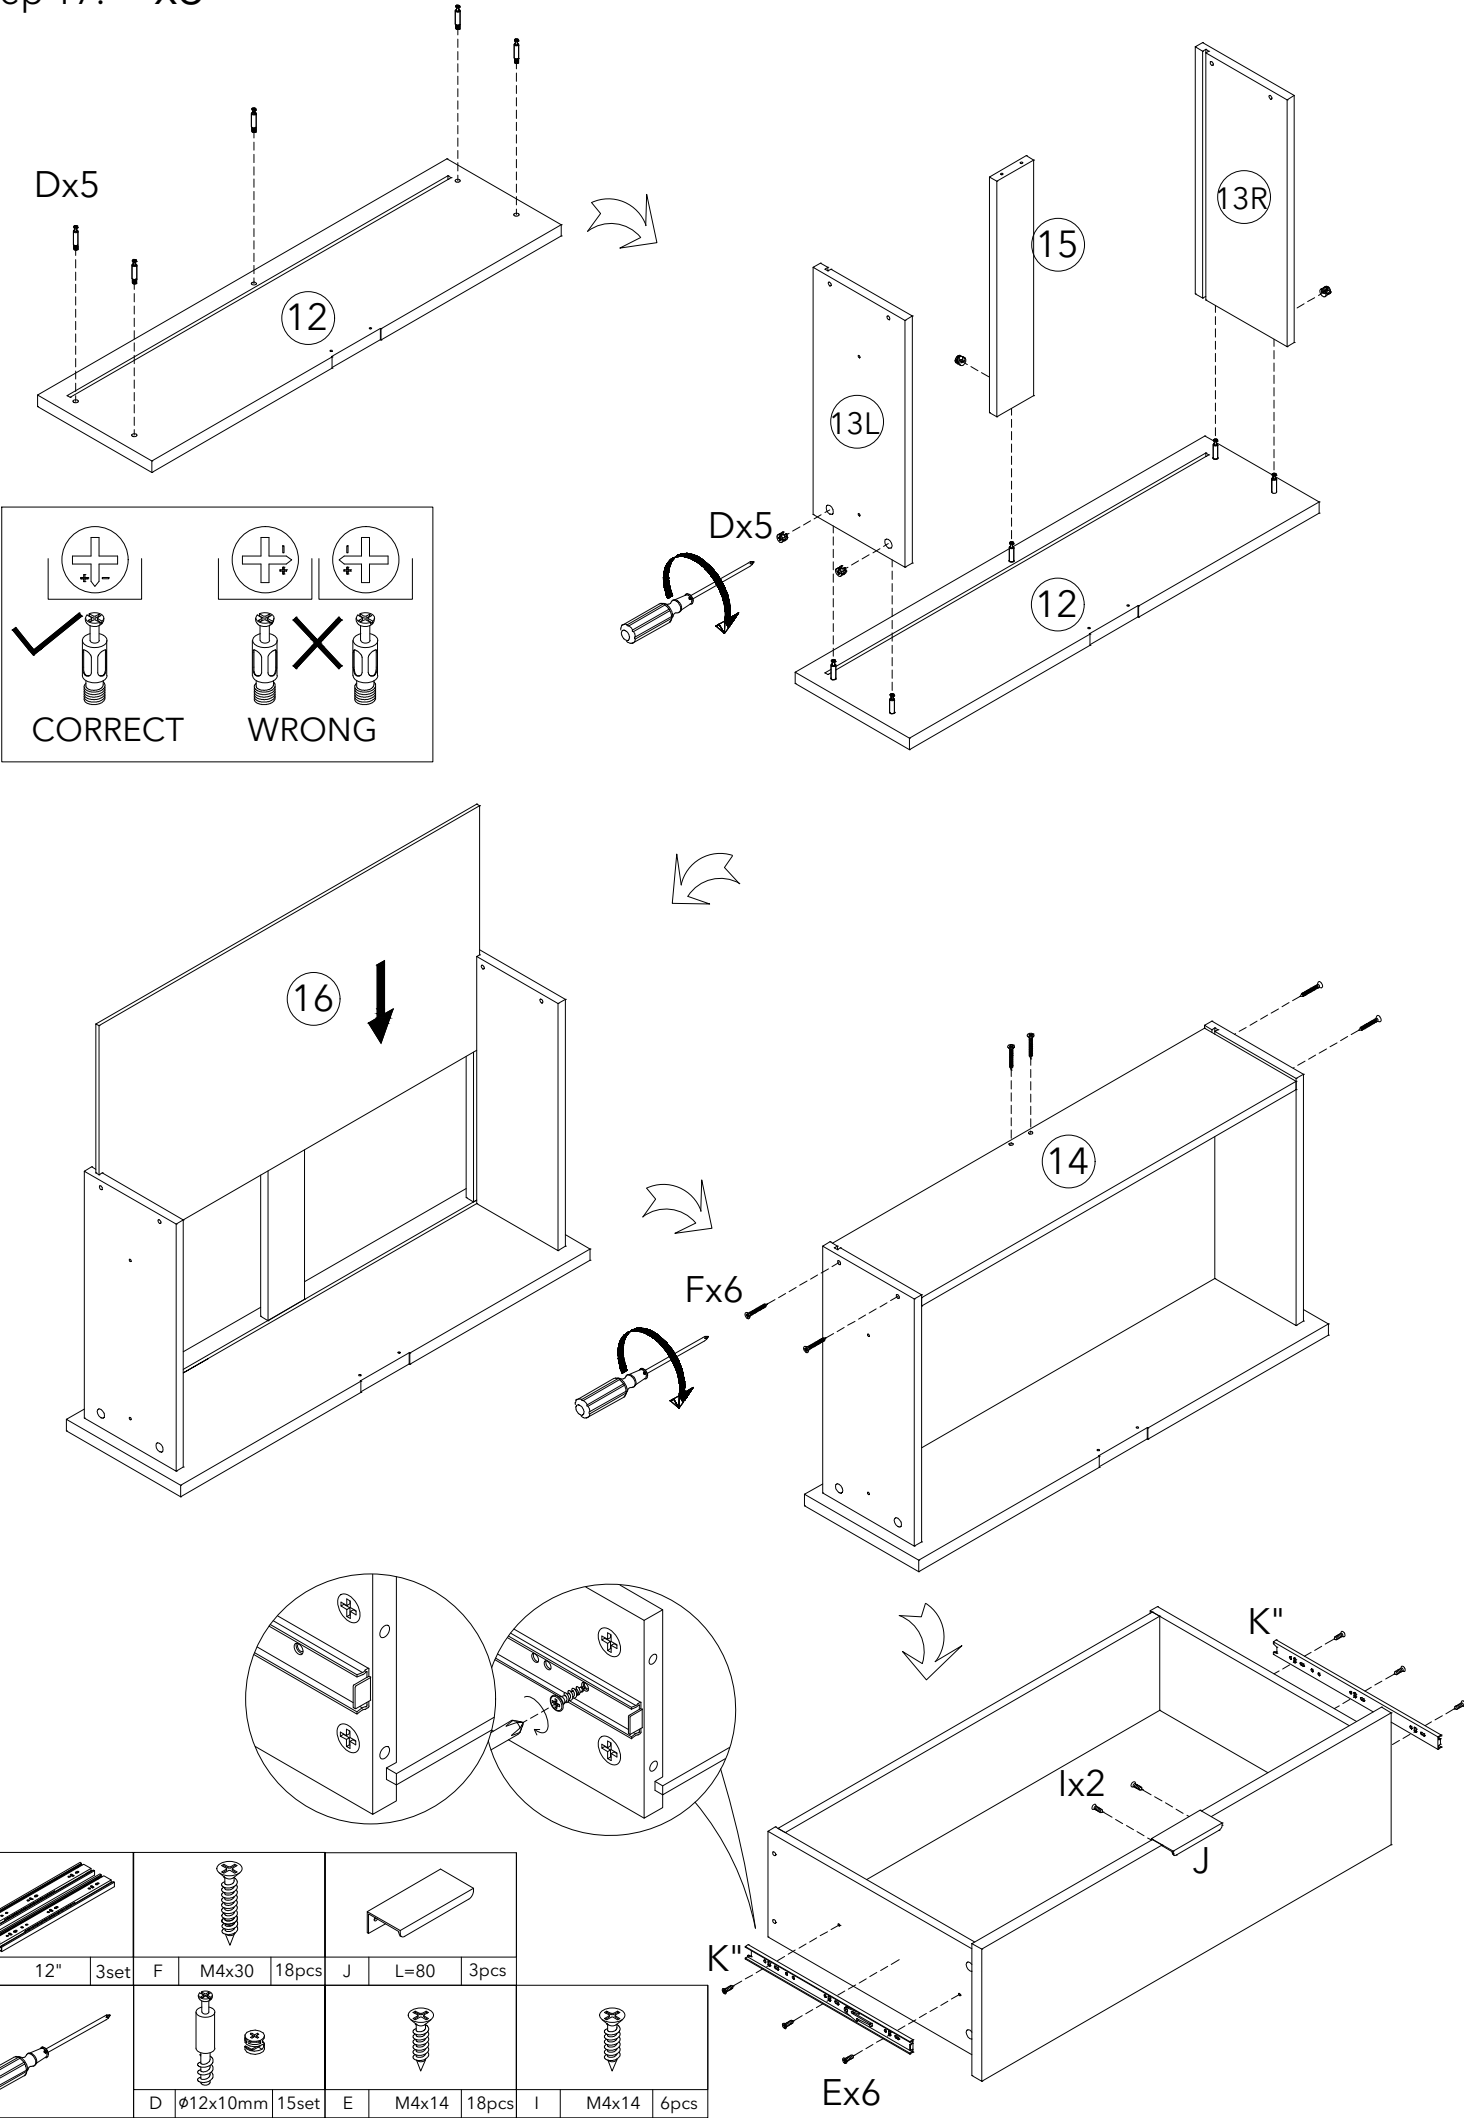


Step 18:



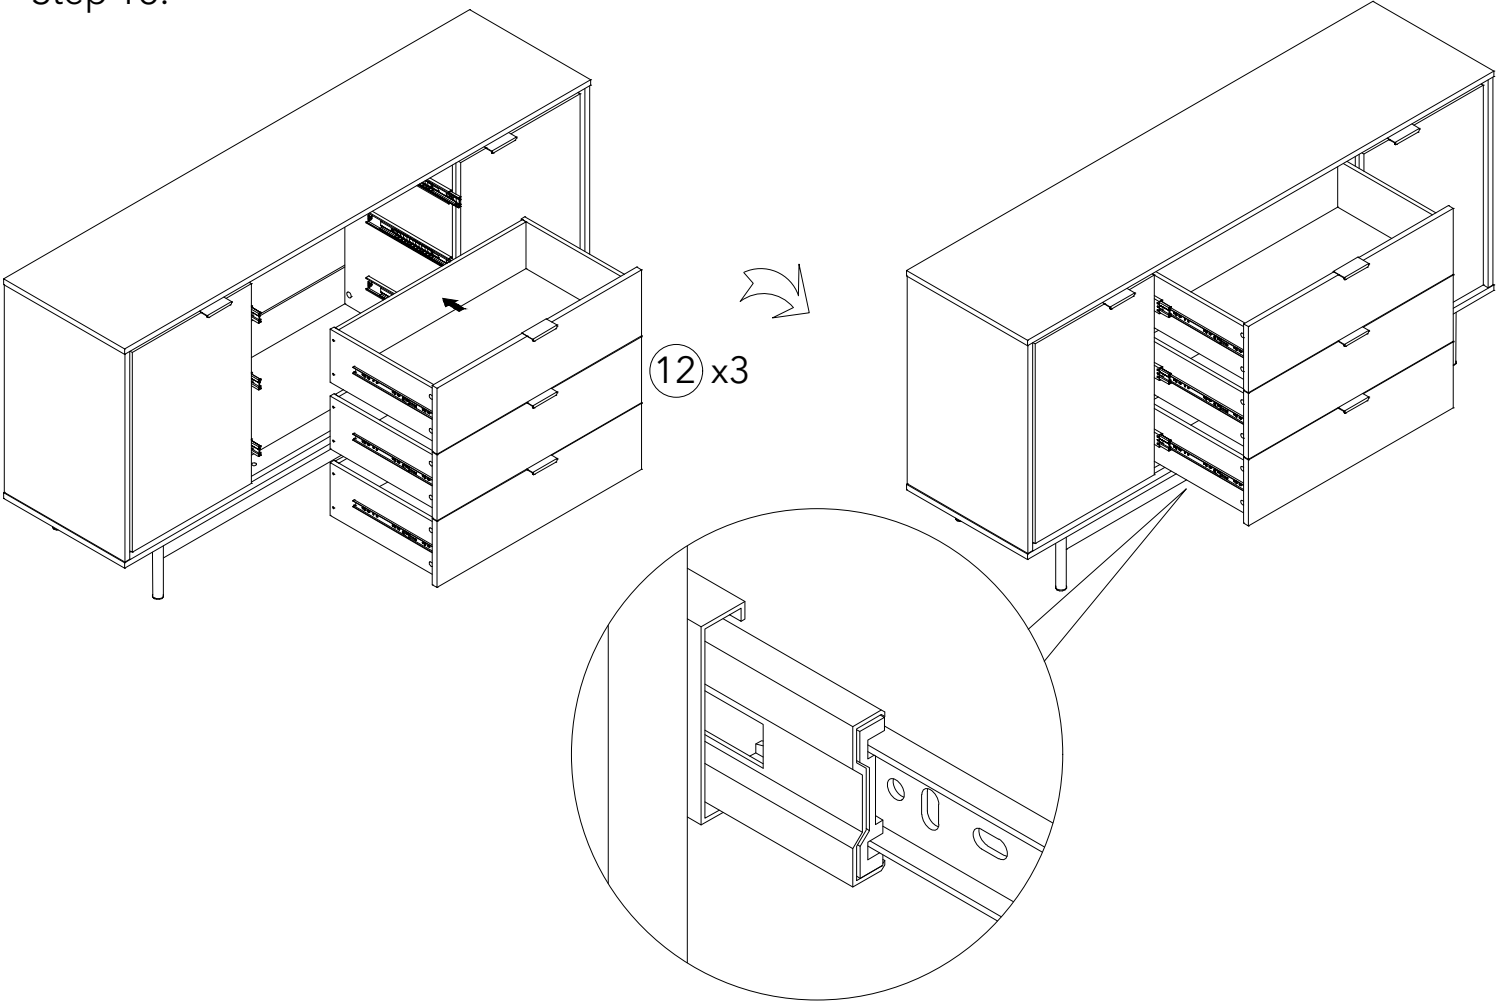


Step 19:

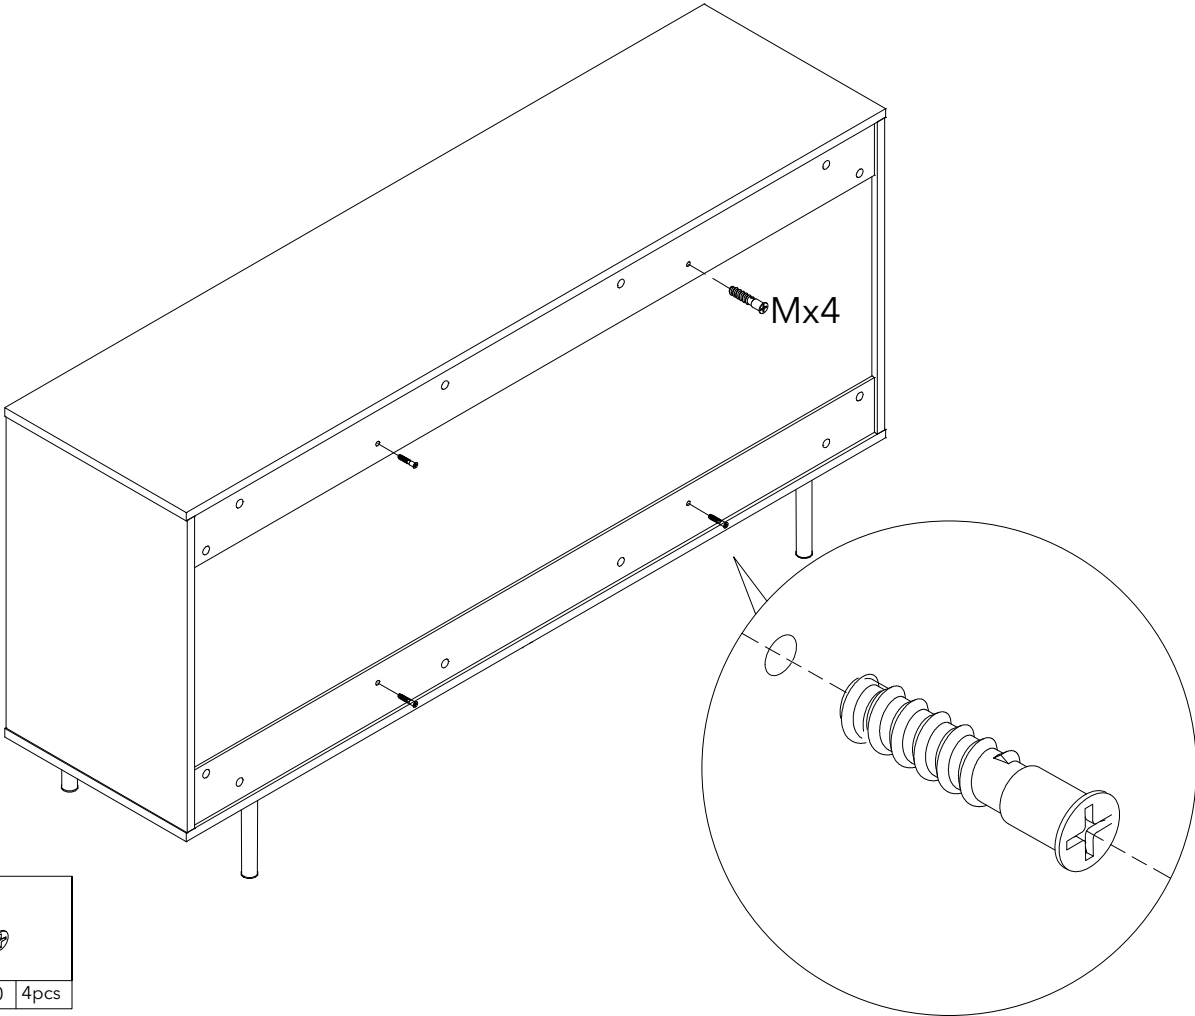


			
			
M	M7x50	4pcs	


Step 20:

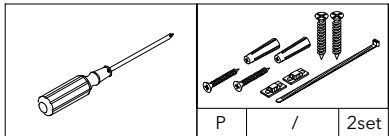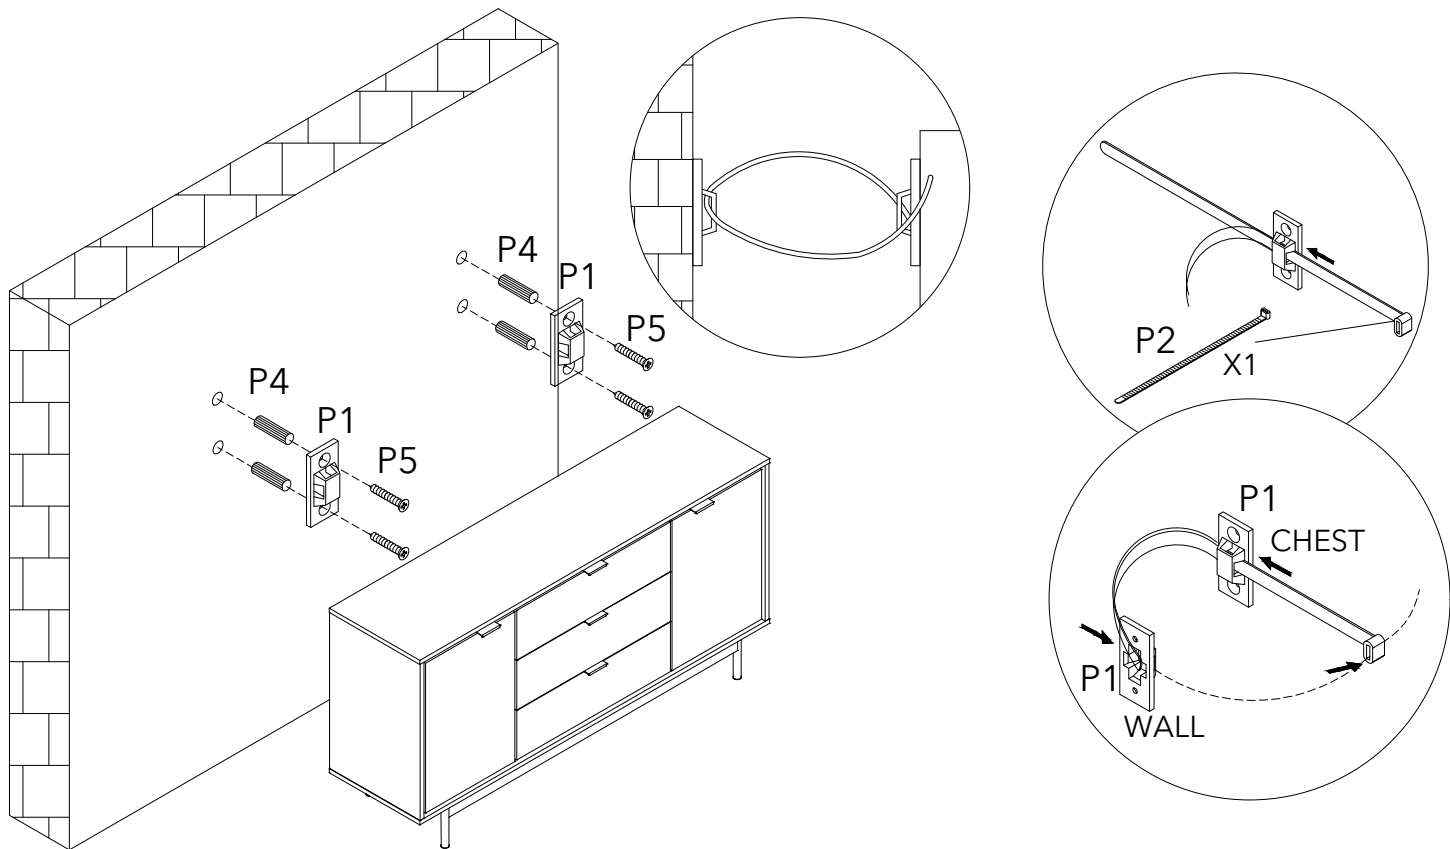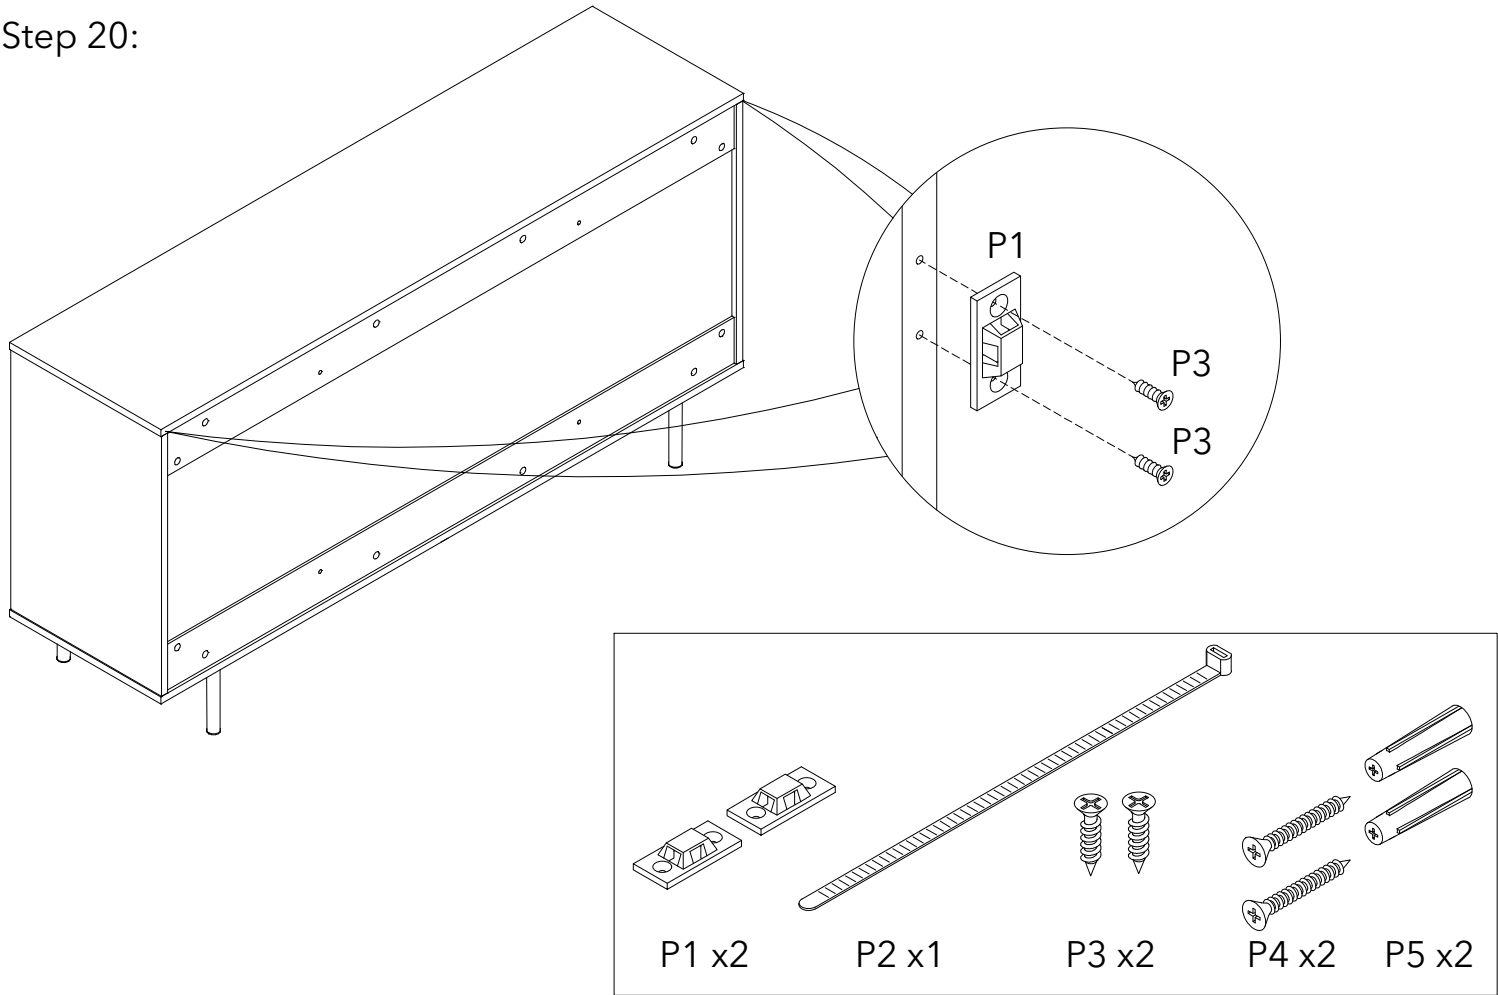

Step 21:

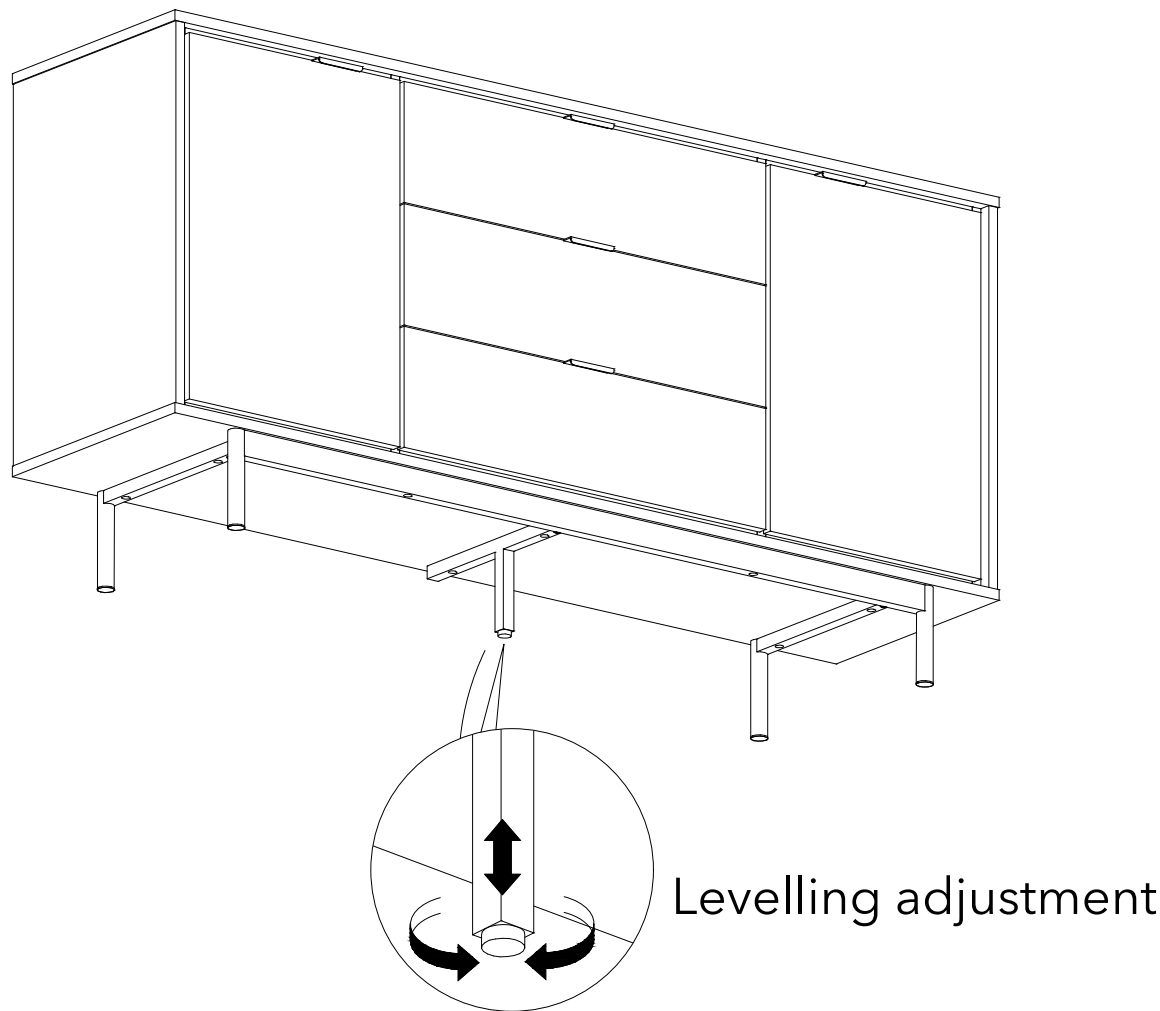

Step 22:

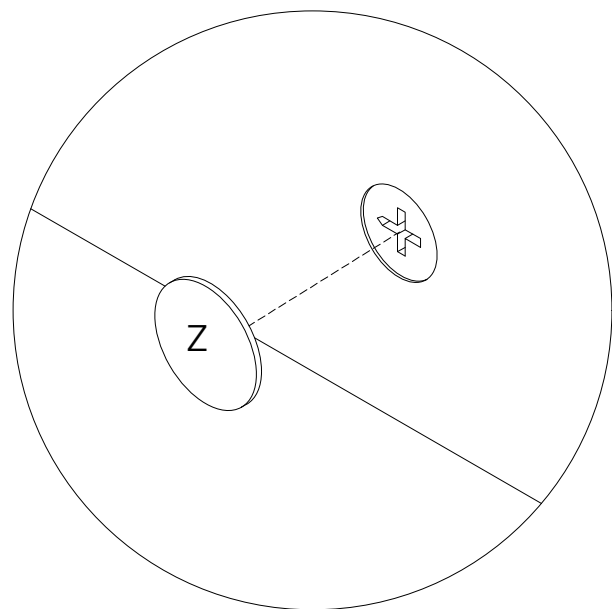

Add the screw covers
for those visible cams

		
Z	Ø20	28pcs