

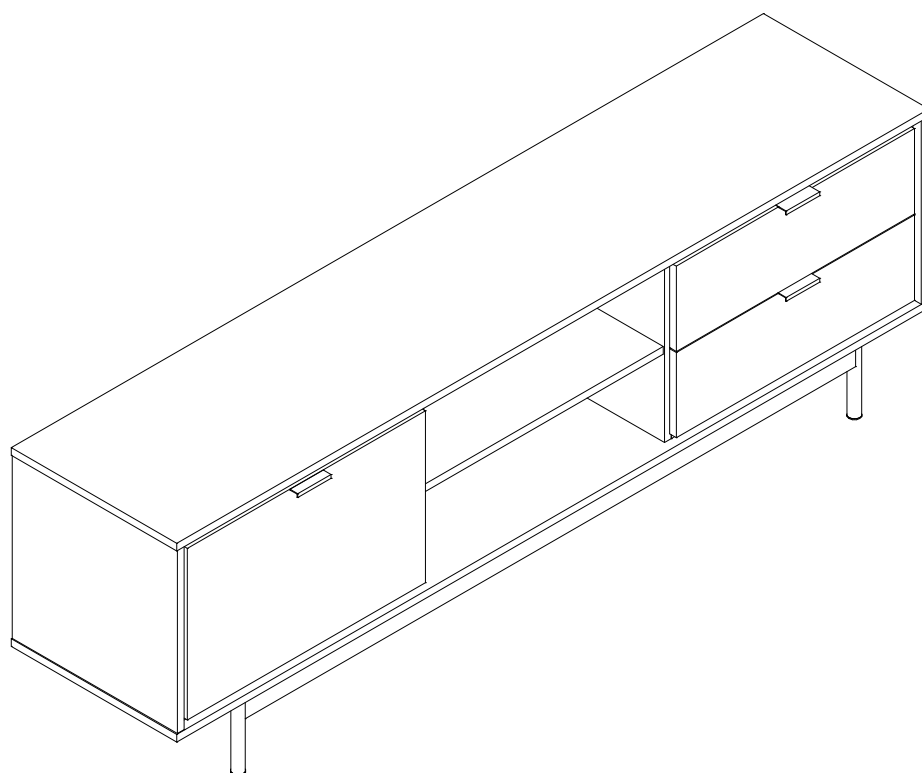
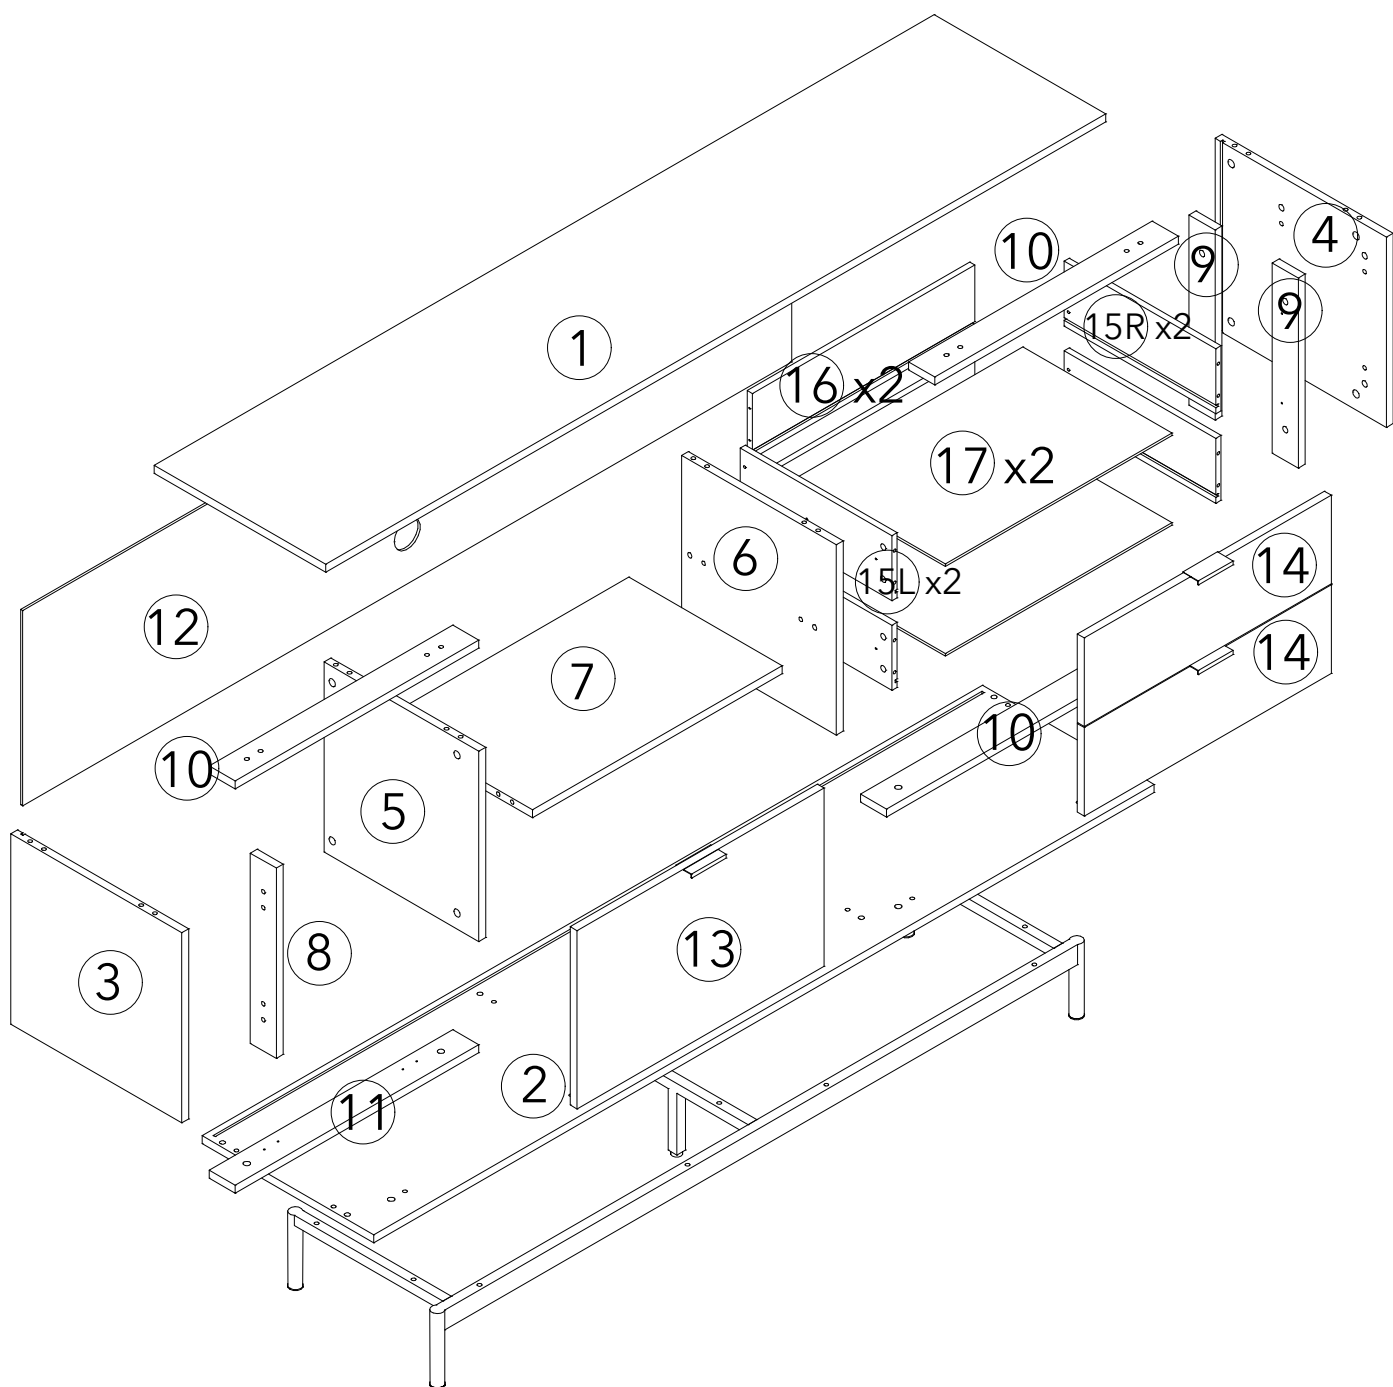
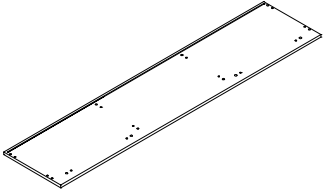
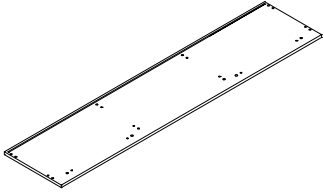
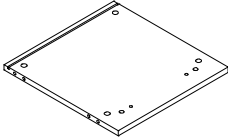
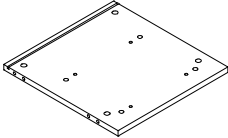
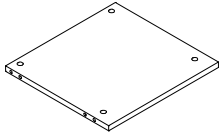
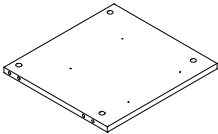
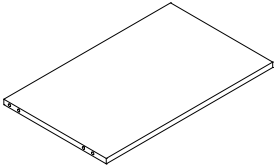


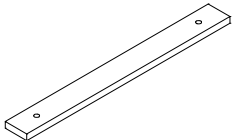
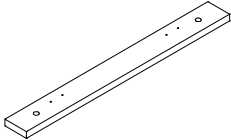
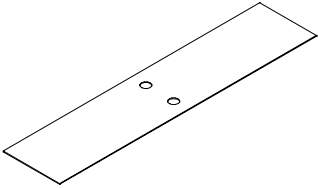
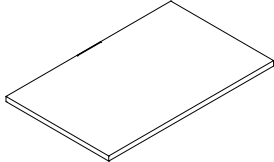
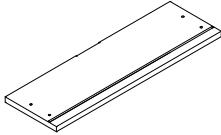
















INSTRUCTION MANUAL

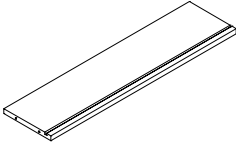

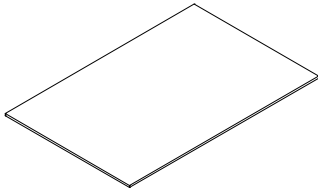


Ref	Dimensions (mm)	Visual	Qty
1	1800x396x16		1
2	1798x396x16		1
3	380x395x16		1
4	380x395x16		1
5	380x357x16		1
6	380x357x16		1
7	576x352x16		1
8	380x60x16		1
9	380x60x16		2
10	562x60x16		3

Ref	Dimensions (mm)	Visual	Qty
11	562x60x16		1
12	1774x390x5		1
13	570x356x16		1
14	570x177x16		2
15	350x130x12		4
16	513x130x12		2
17	523x344x5		2

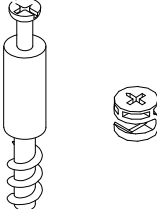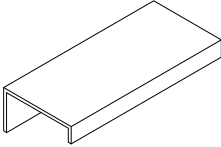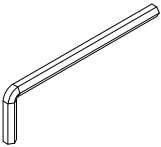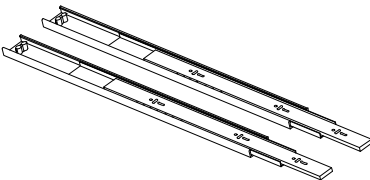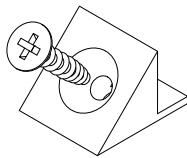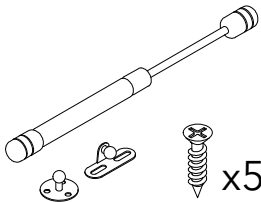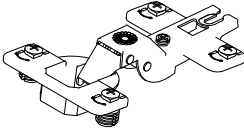
								
A	M6x40	20pcs	B	Ø15x11.5	20pcs	C	Ø8x30	20pcs
								
D	Ø12x10mm	8set	E	M4x14	20pcs	F	M4x30	8pcs
								
G	M6x12	10pcs	H	M6x20	14pcs	I	M4x14	11pcs
								
J	L=80	3pcs	O	4#	1pcs	R	M6x16	6pcs
								
N	Ø8x20	14pcs	K	12"	2set	Q	/	8pcs
								
M	60N	1pcs	L	small bend	2pcs	Z	Ø20	20pcs


Step 1:

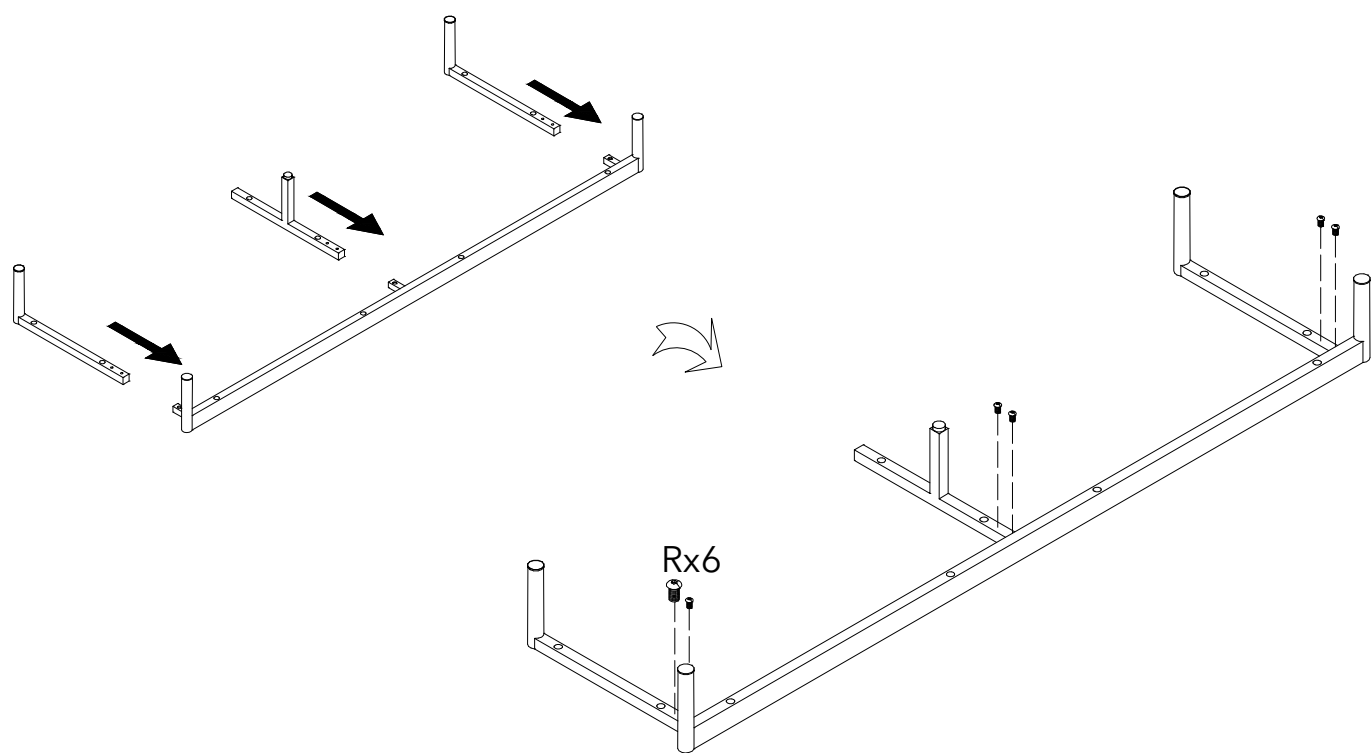


			
O	4#	1pcs	R M6x16 6pcs

Step 2:

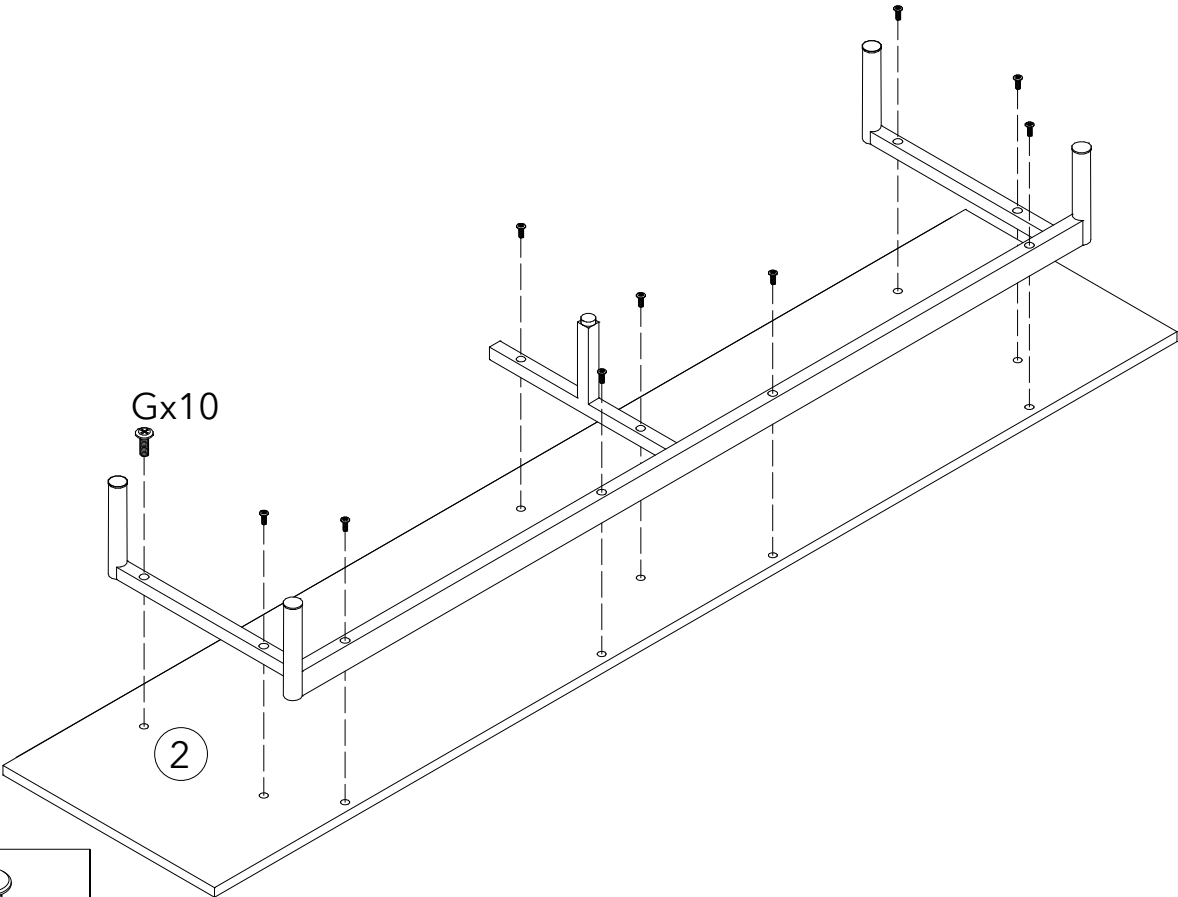


			
G	M6x12mm	10pcs	


Step 3:

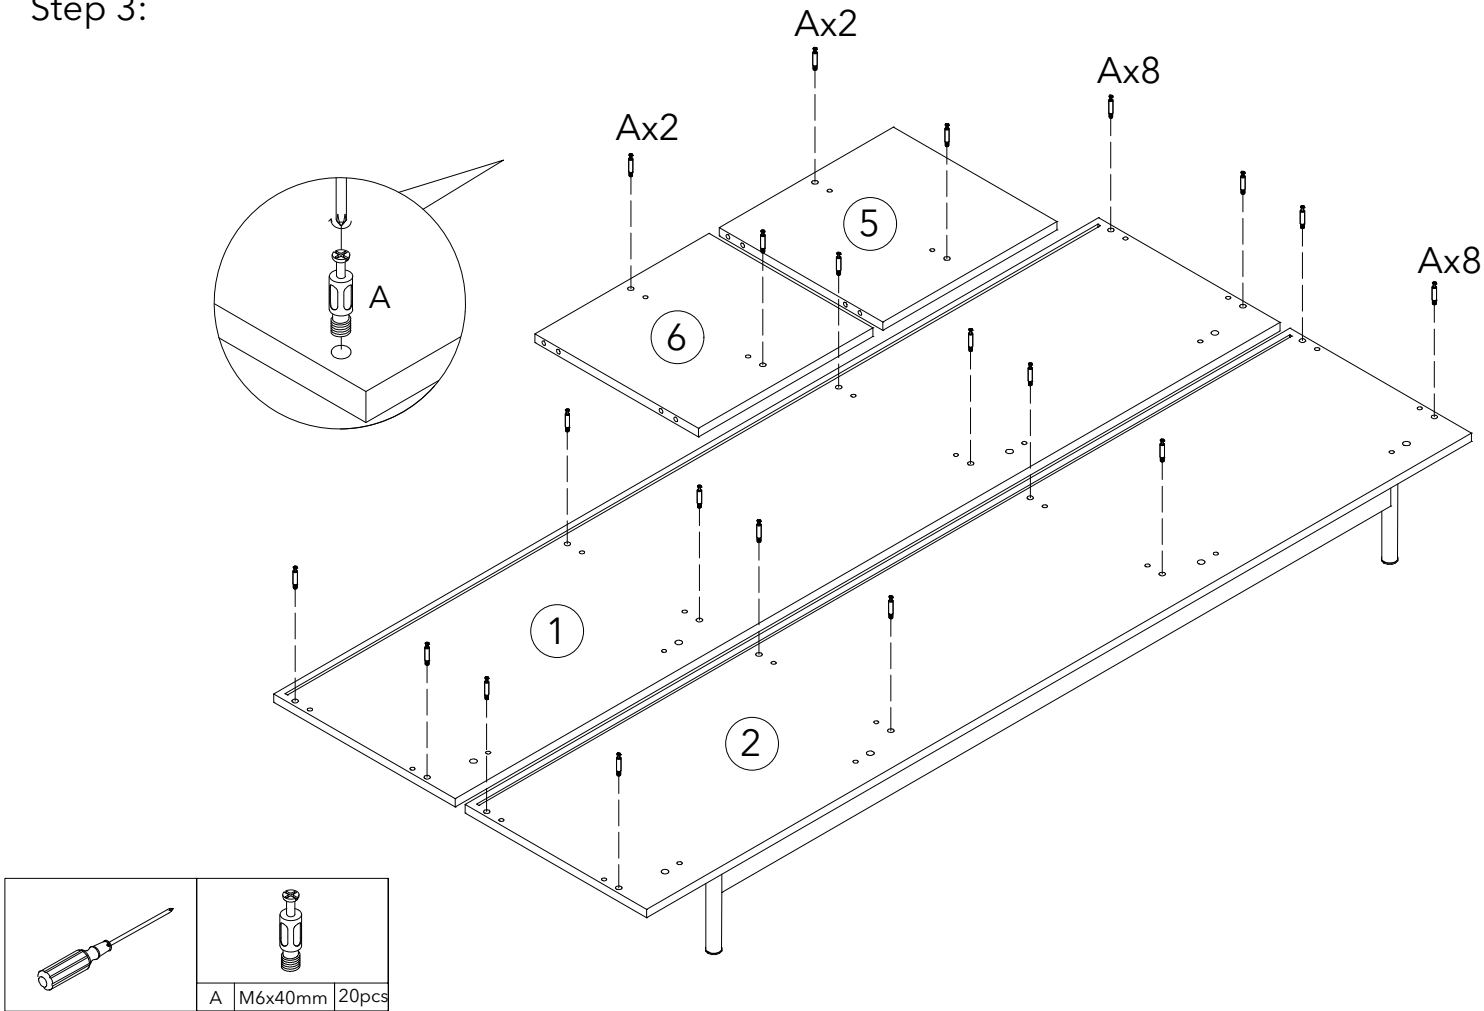


Step 4:

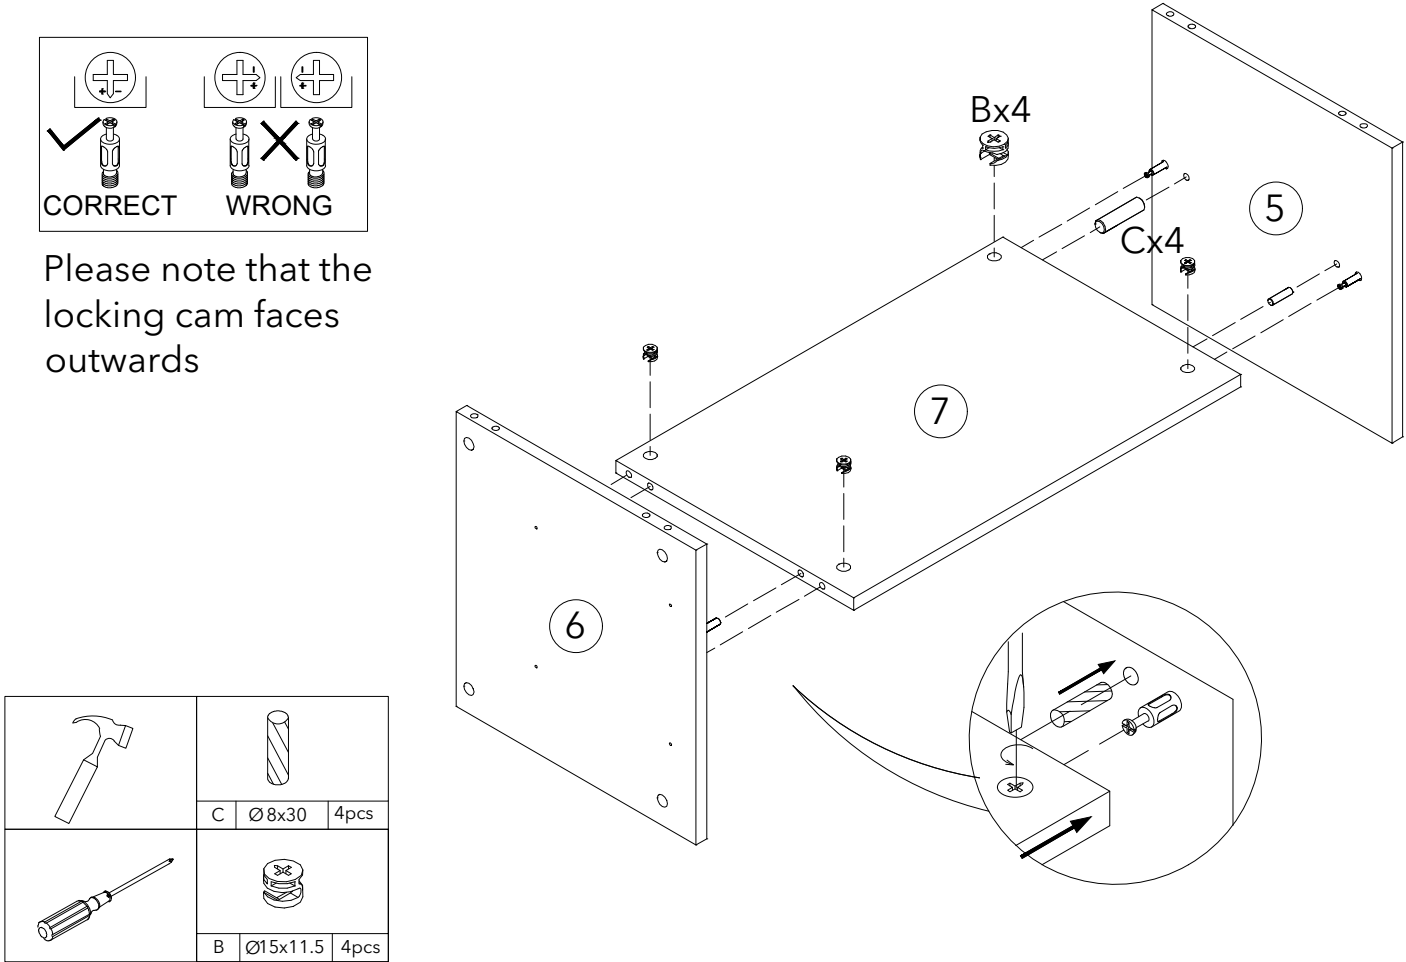



Step 5:

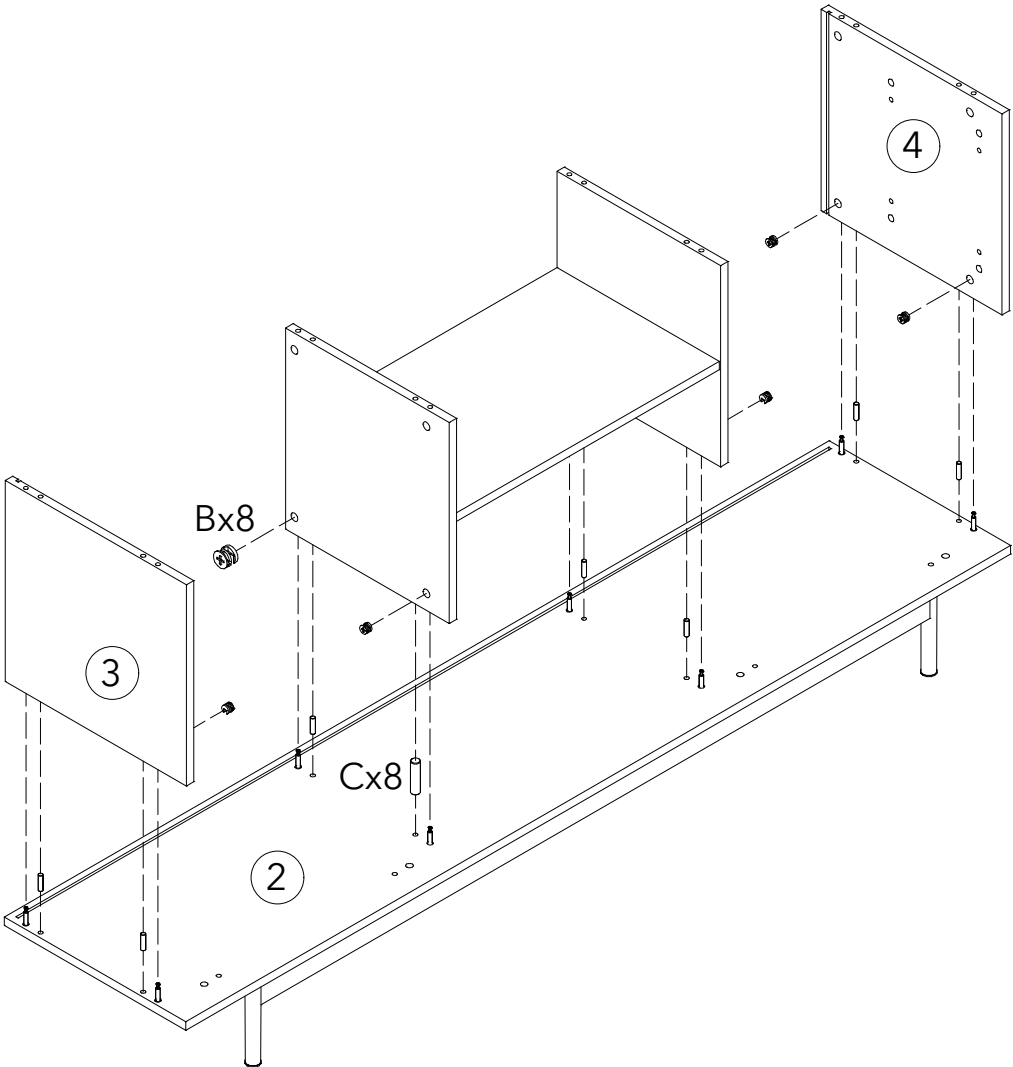


			
	C	Ø8x30	8pcs
			
	B	Ø15x11.5	8pcs

Step 6:

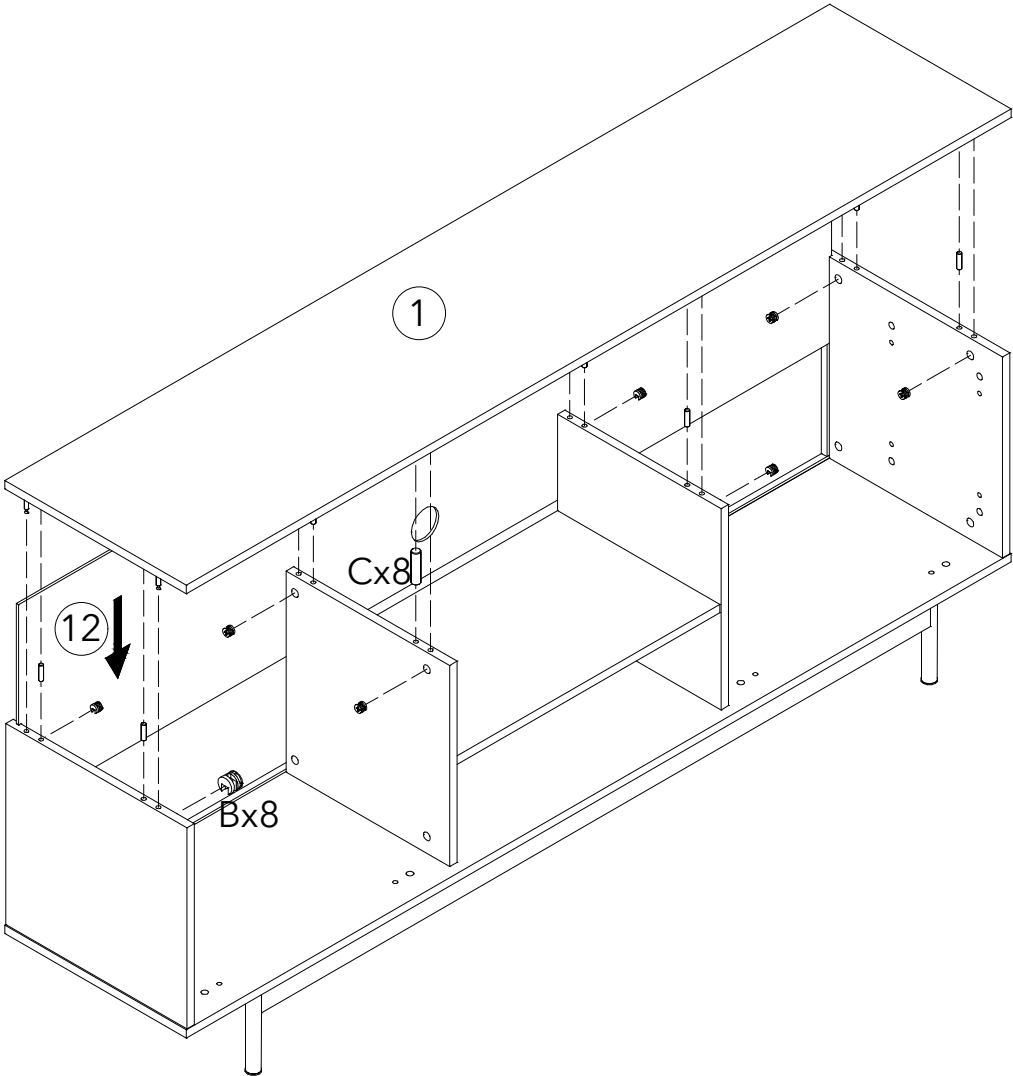


			
	C	Ø8x30	8pcs
			
	B	Ø15x11.5	8pcs


Step 7:

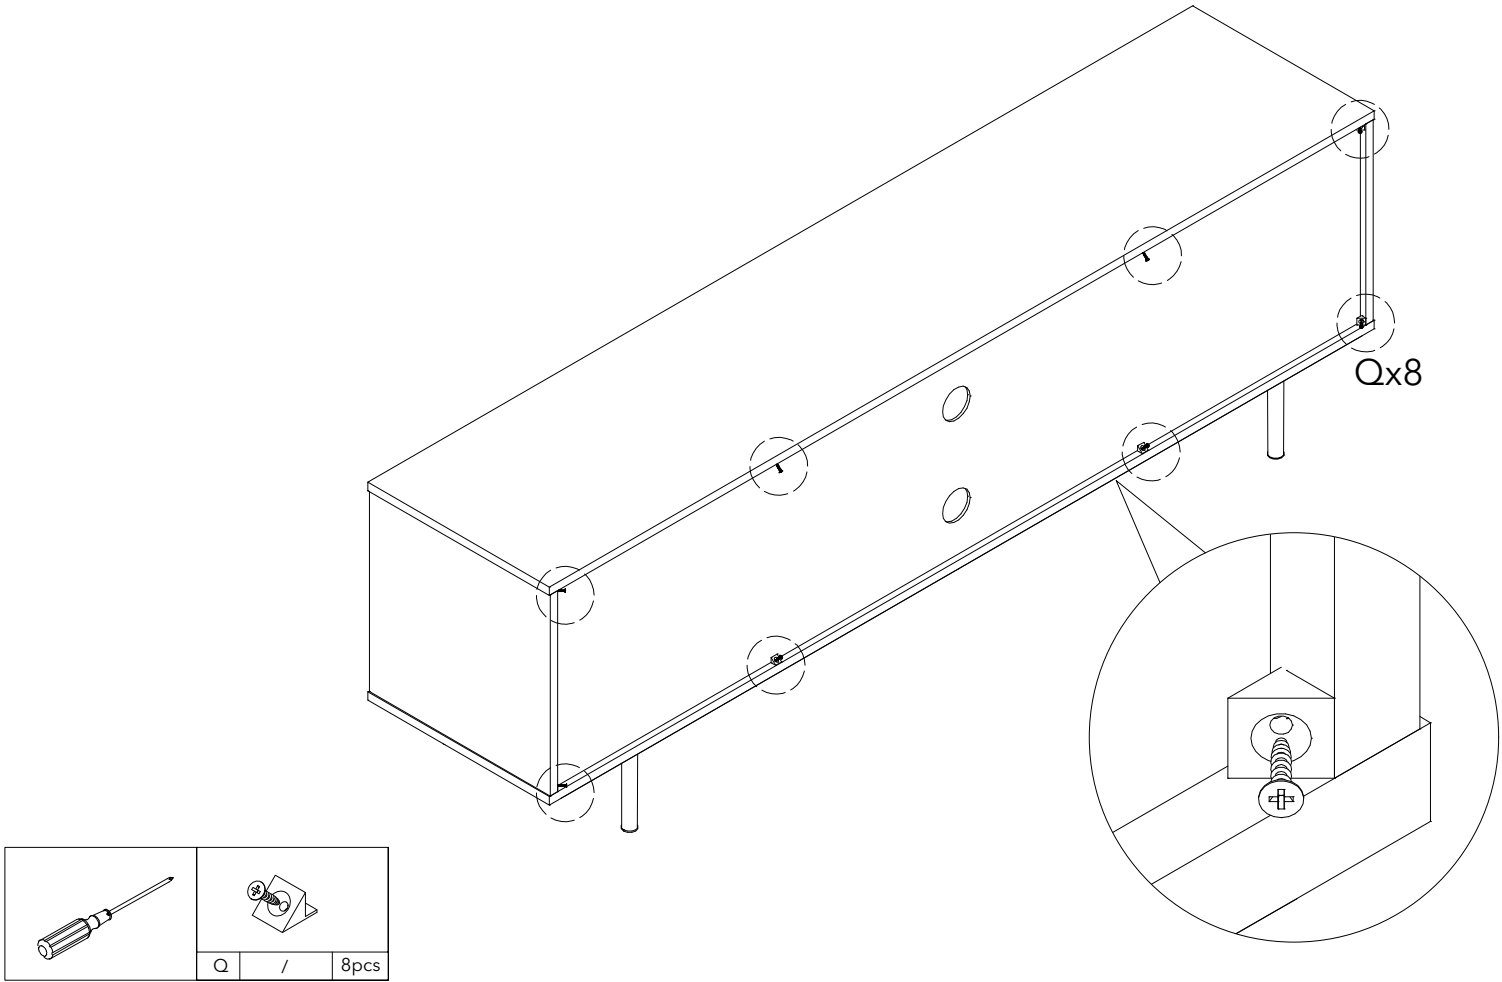


Step 8:

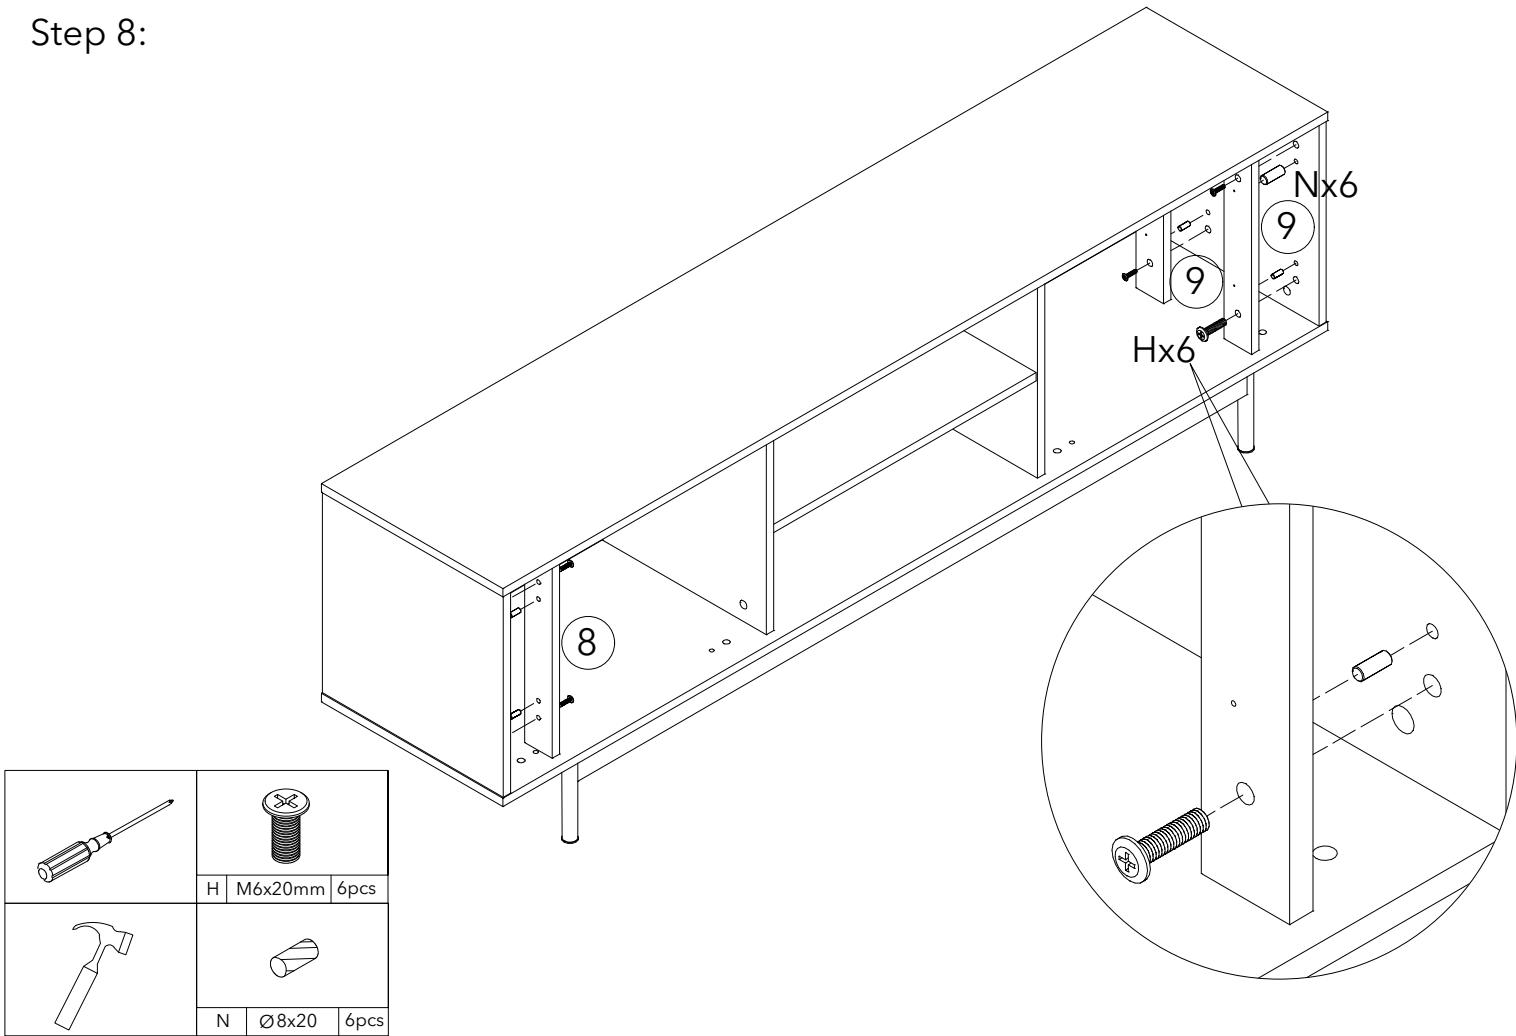


Step 9:


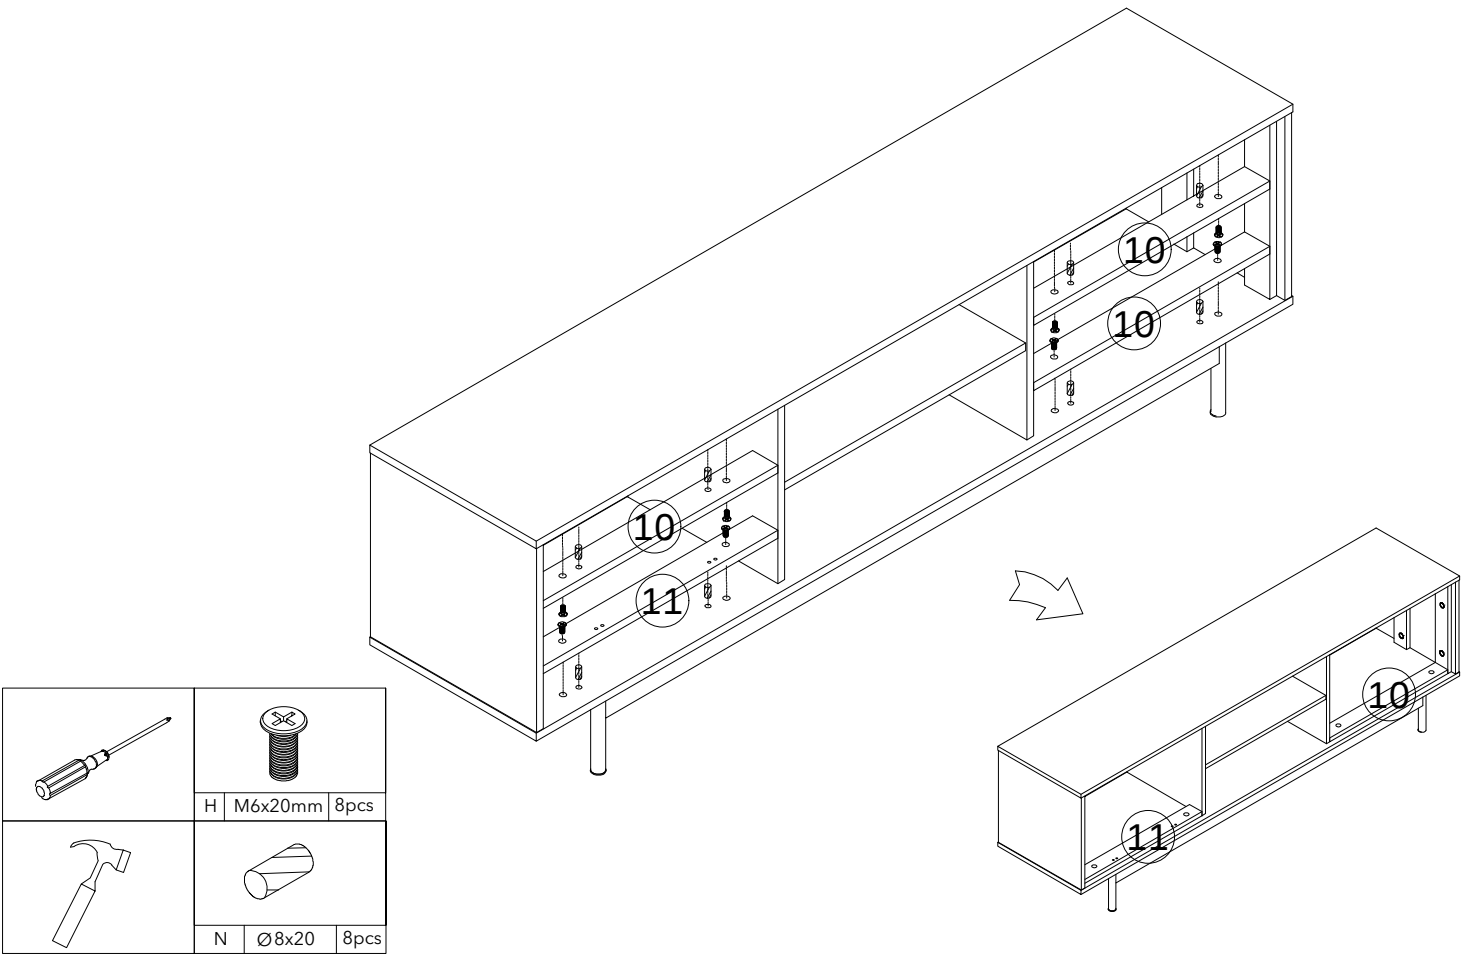



Step 10:

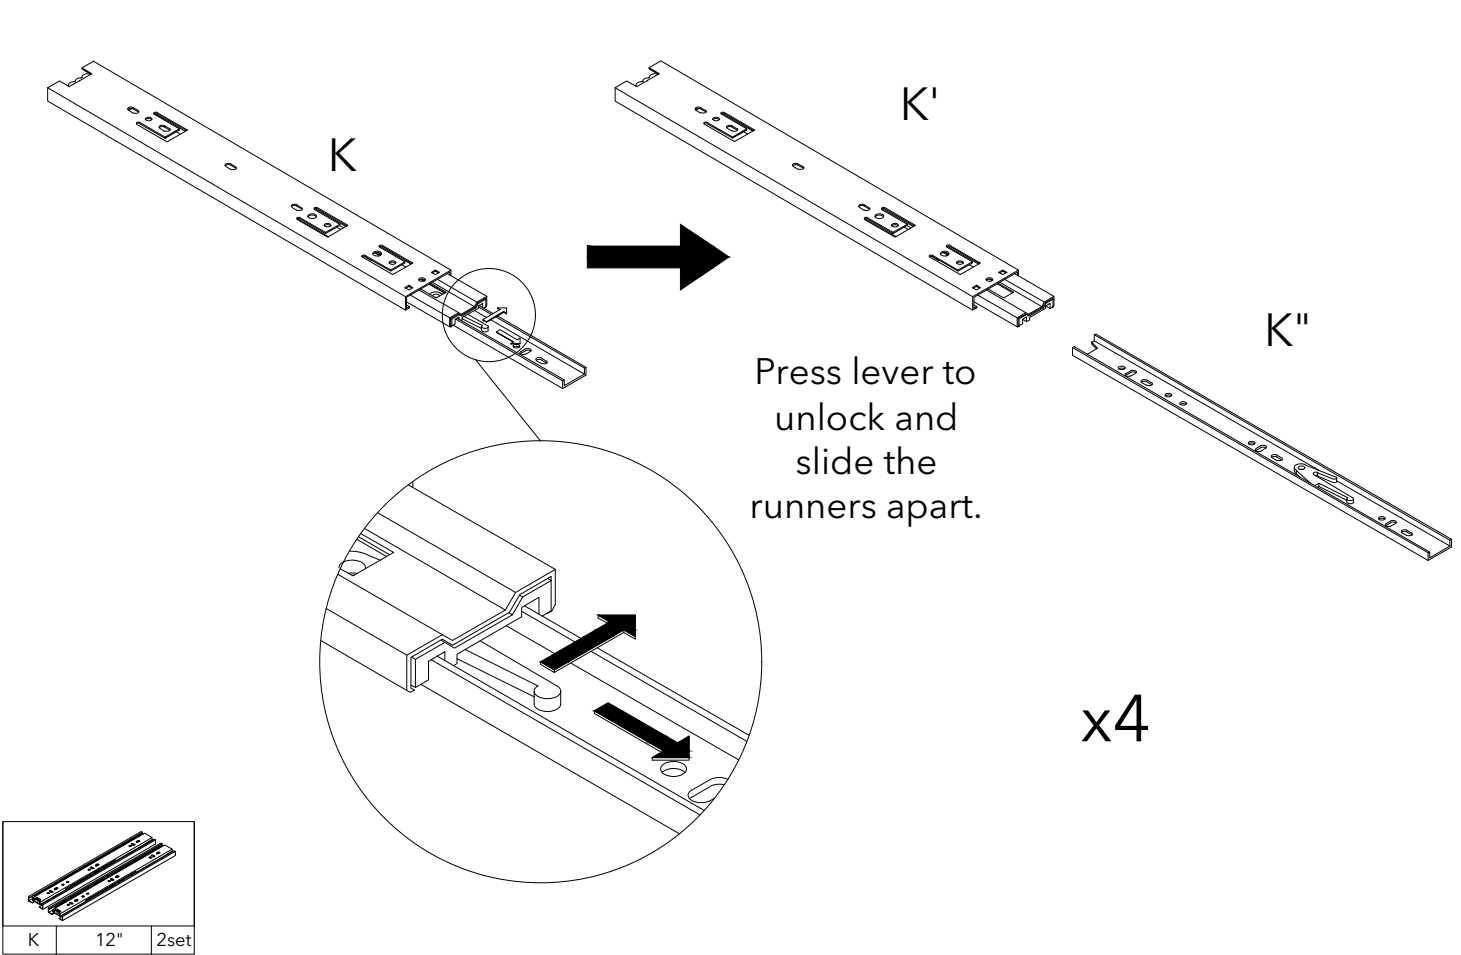



Step 11:

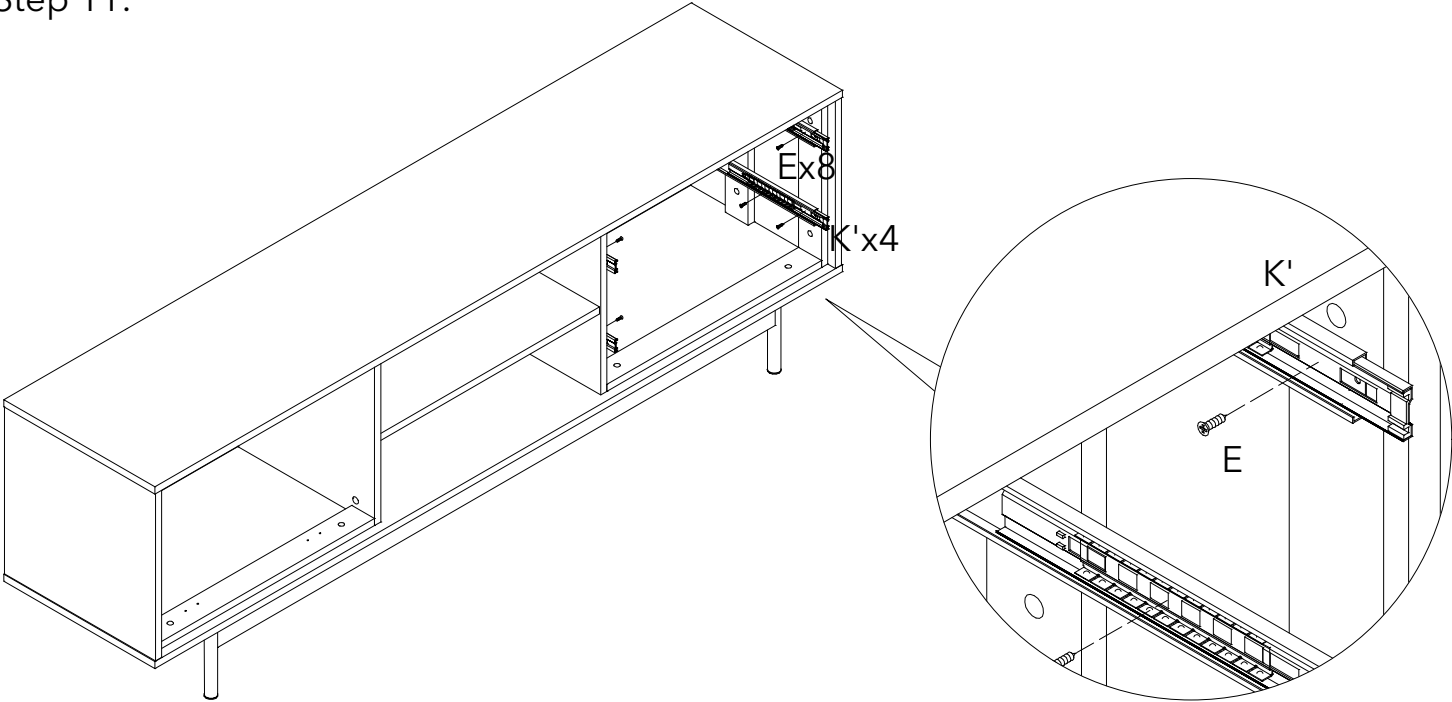


		
K	12"	2set
		
E	M4x14	8pcs

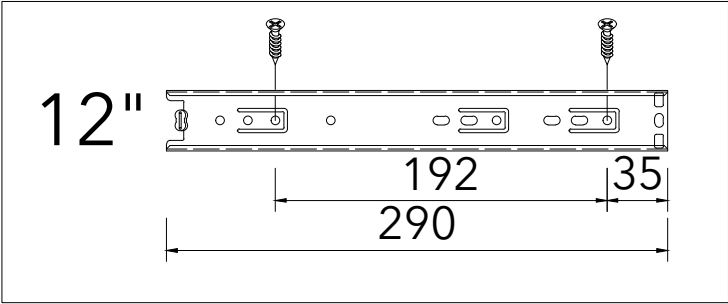




Step 12:

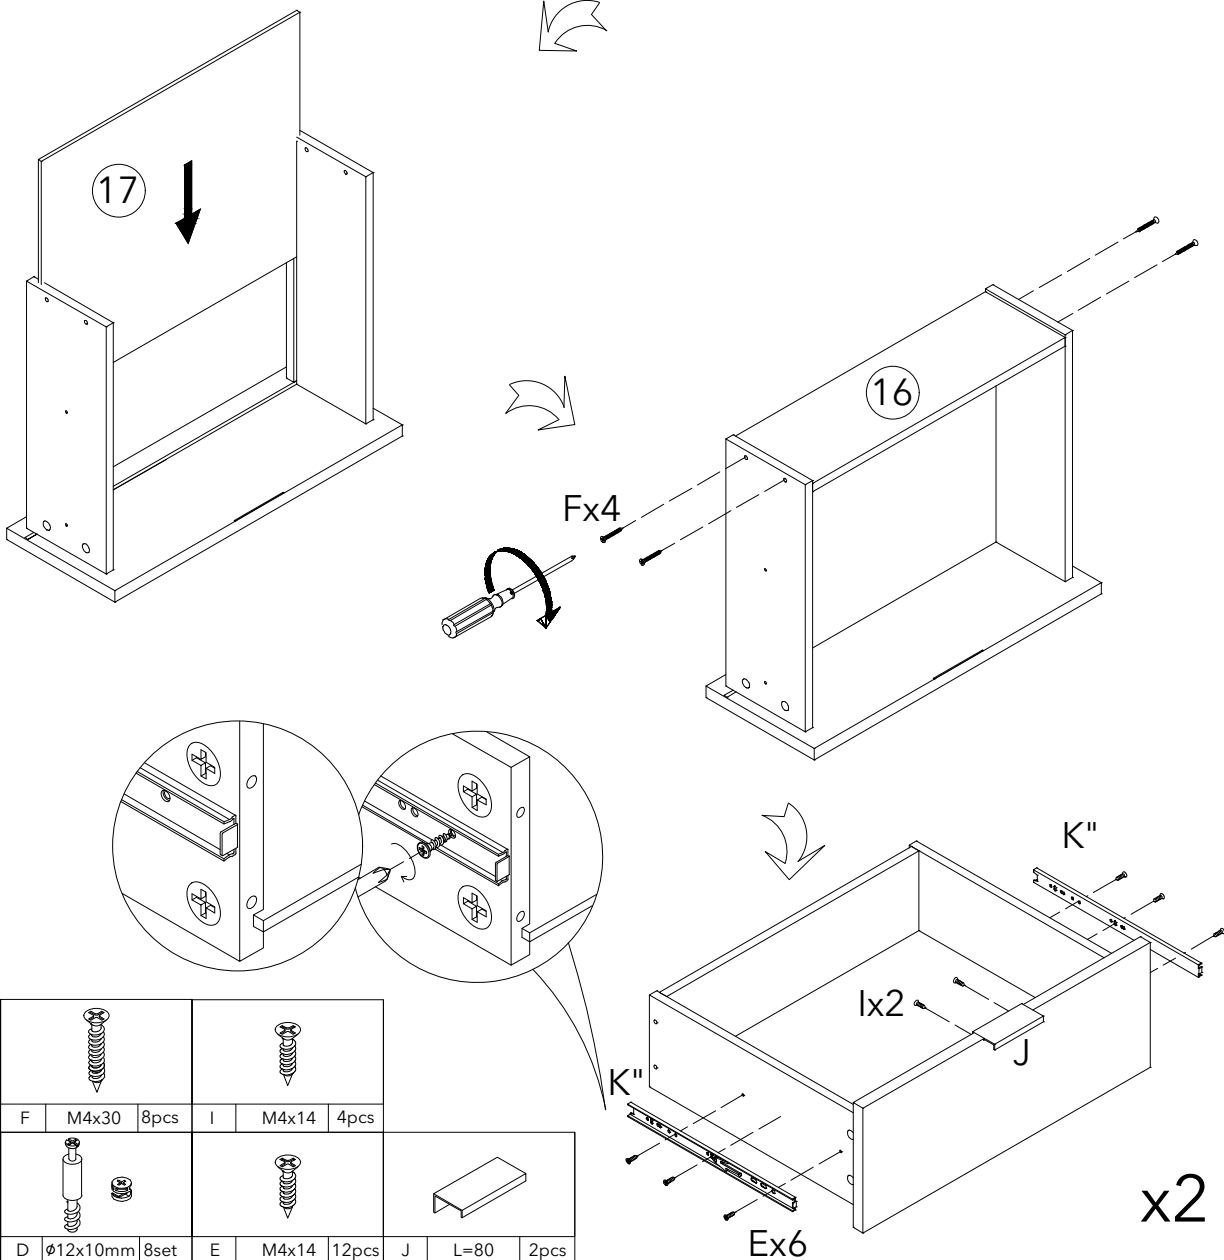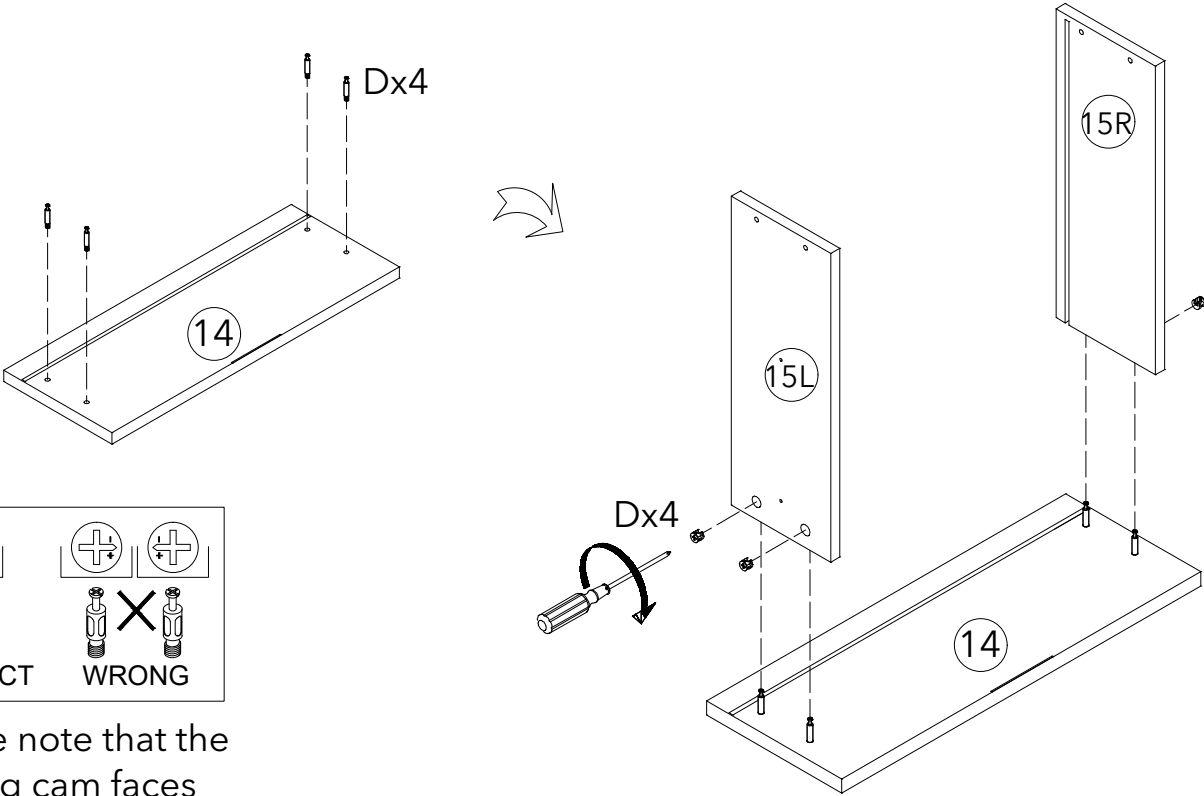

Step 13:

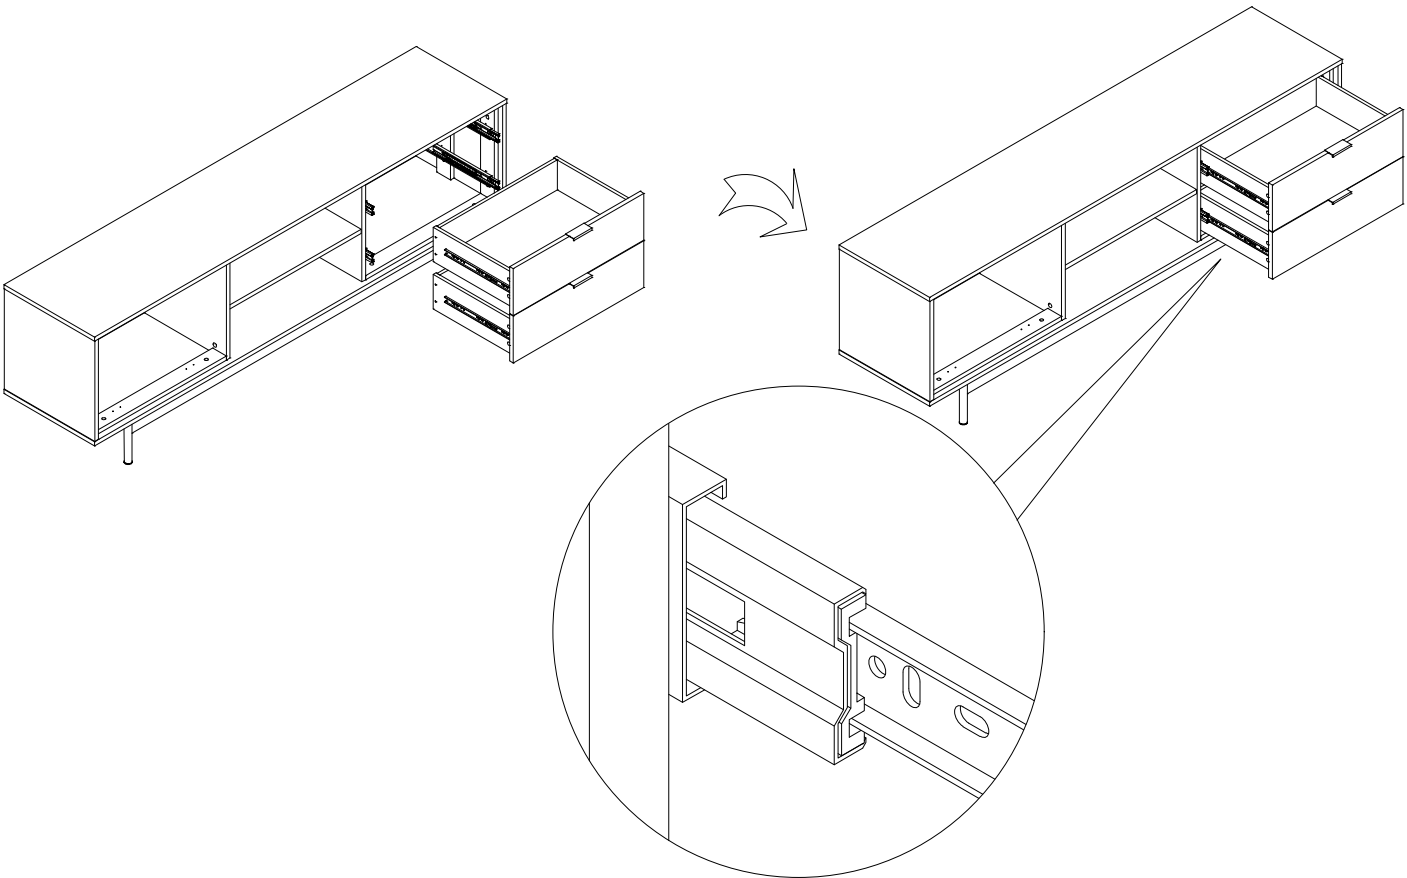


Step 14:

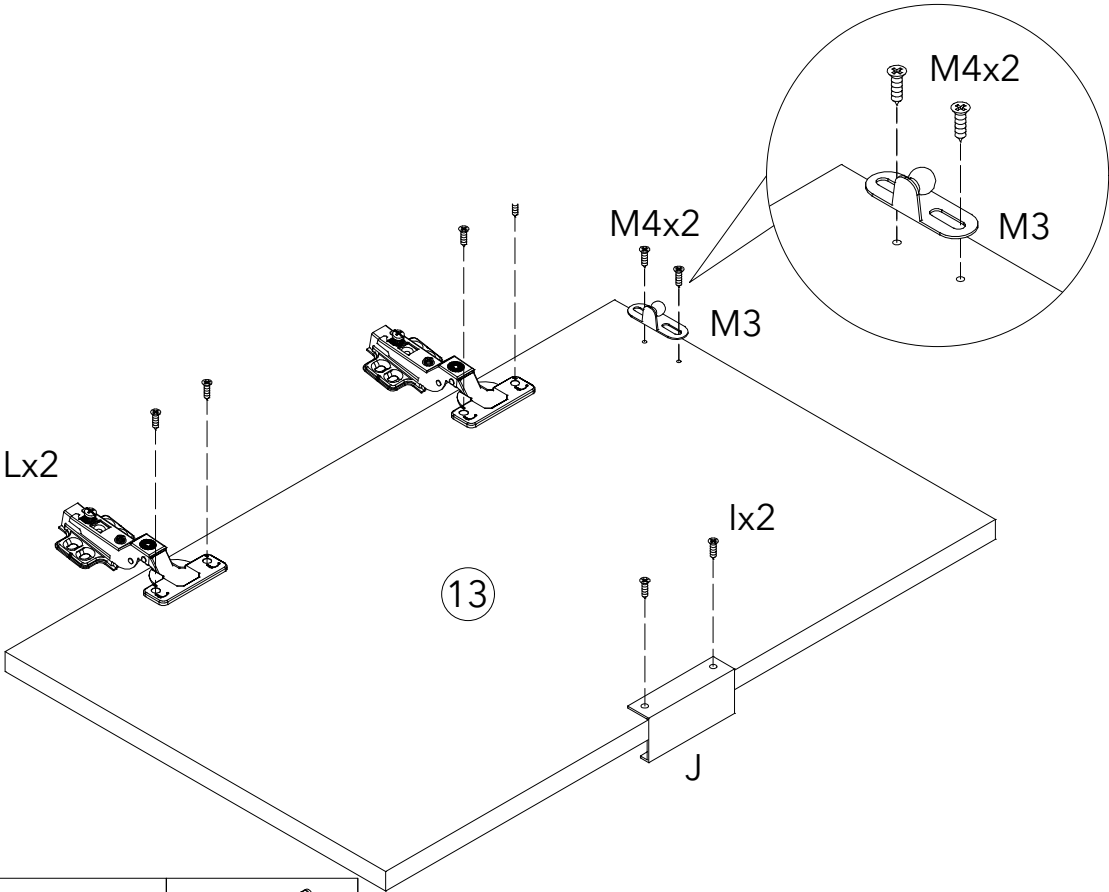
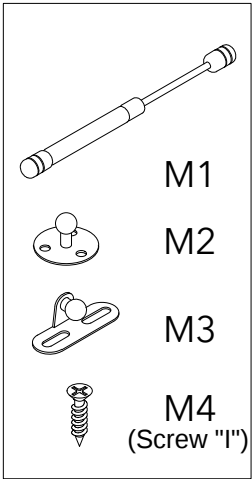


L	small bend	2pcs
I	M4x14	2pcs
J	L=80	1pcs
M	60N	1pcs


Step 15:

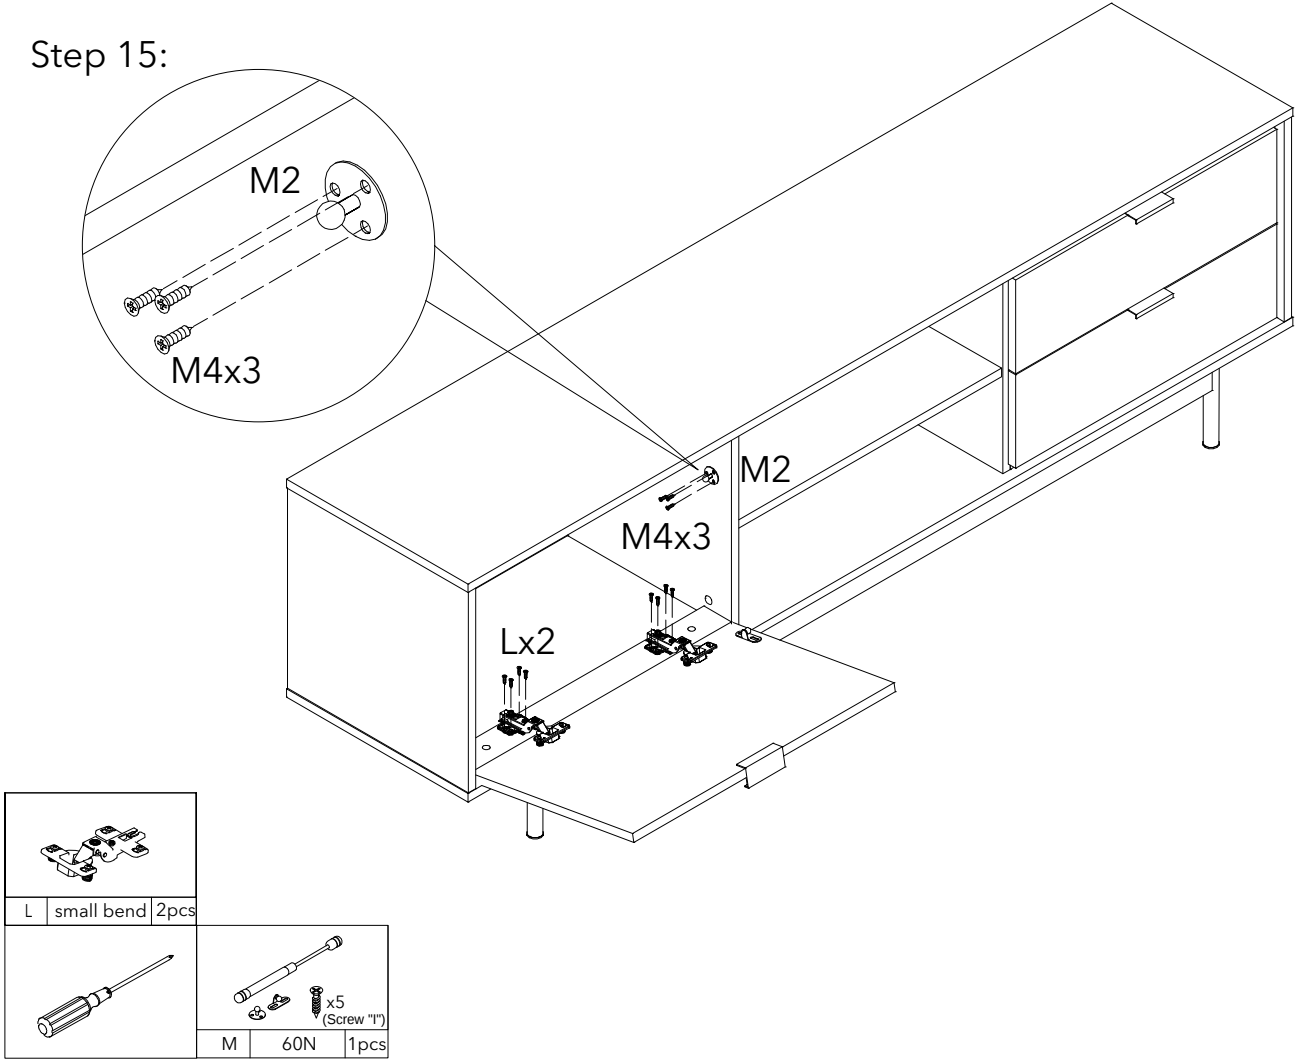

Step 16:

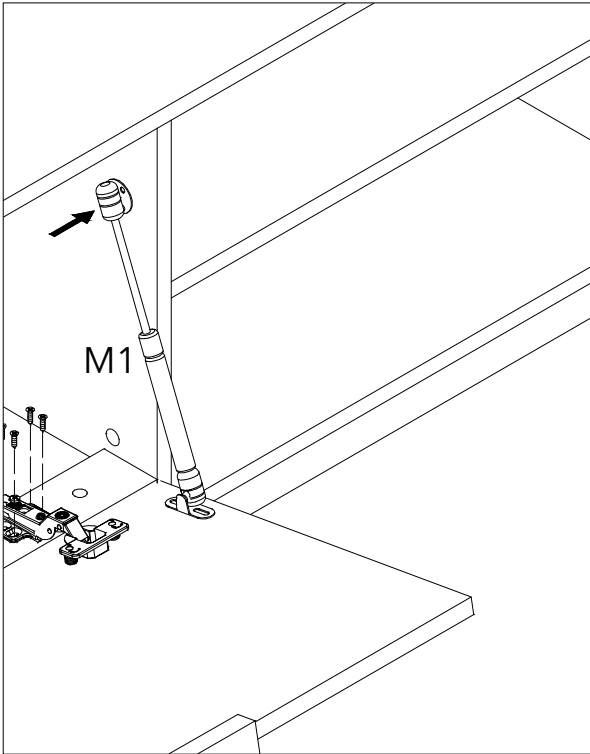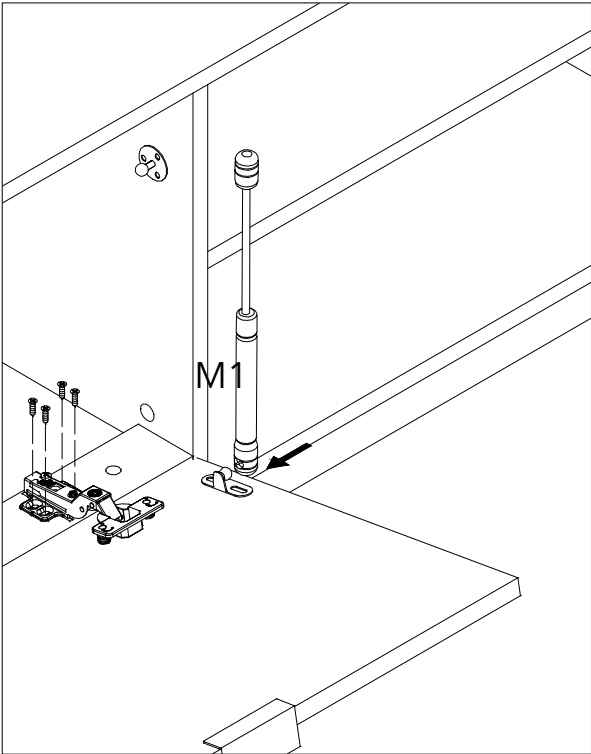

Step 17:

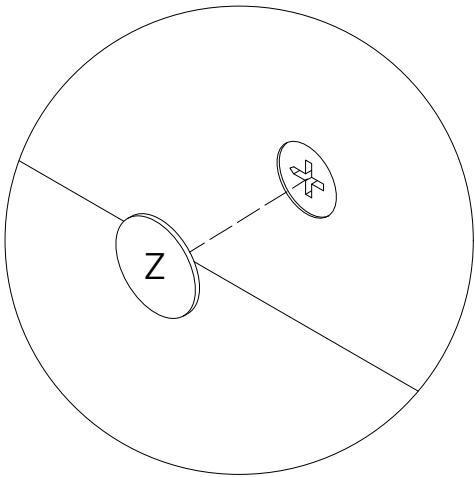

Add the screw
covers for those
visible cams

		
Z	Ø20	20pcs