

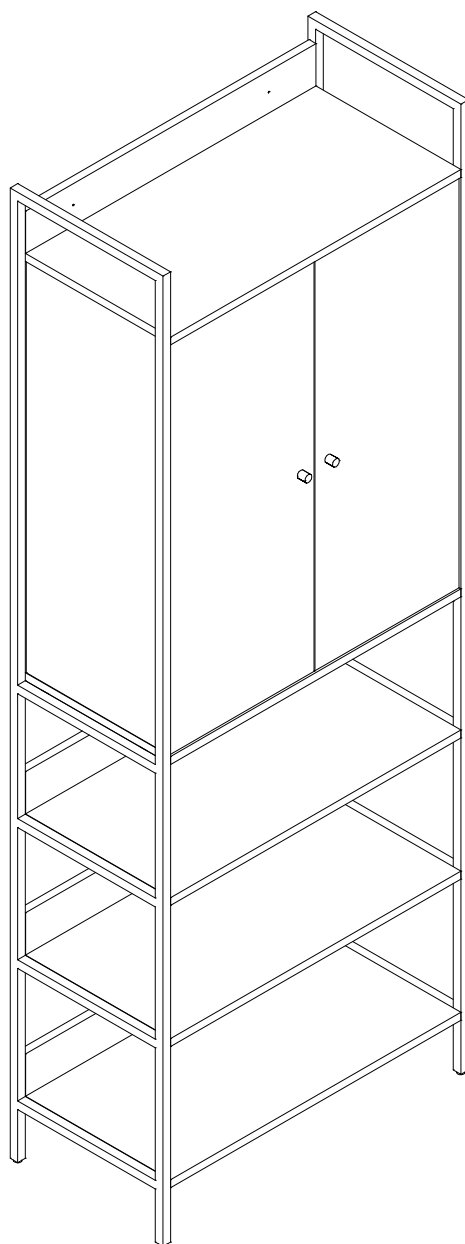
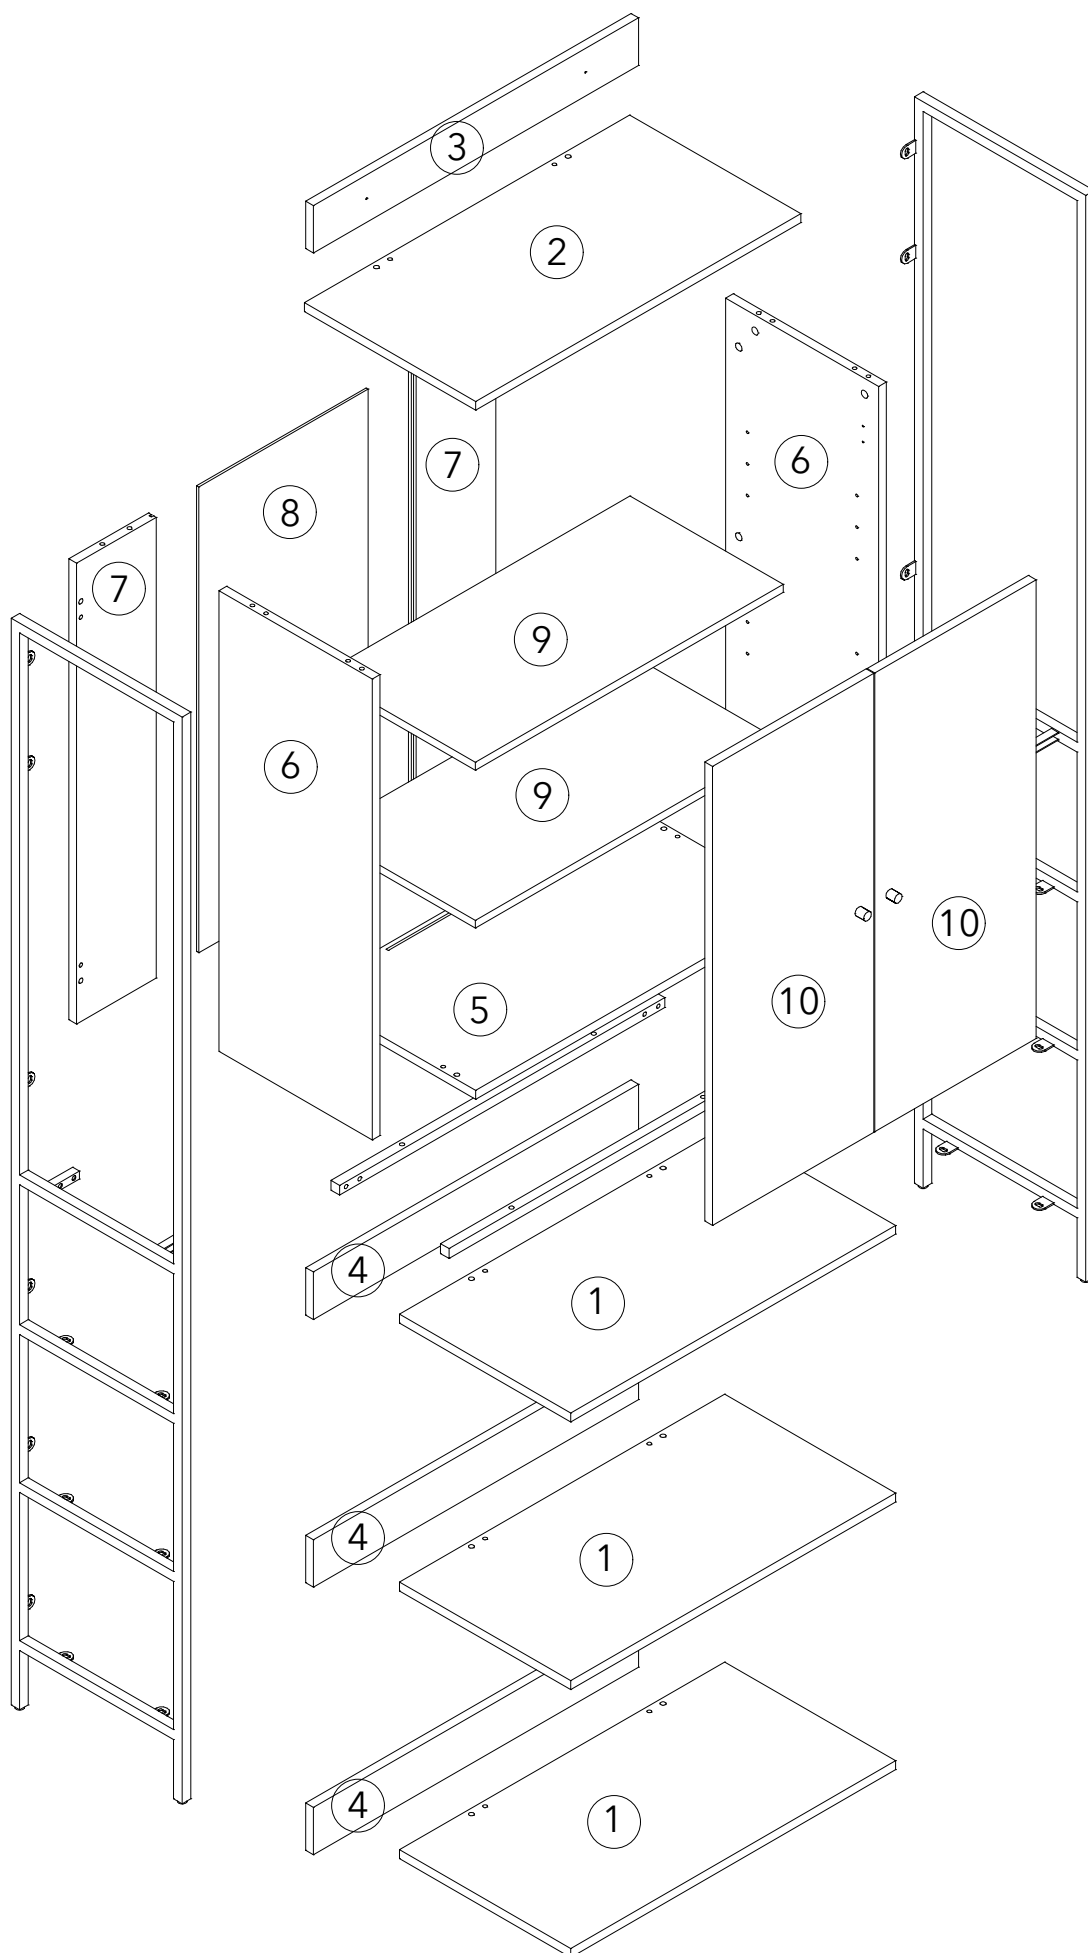
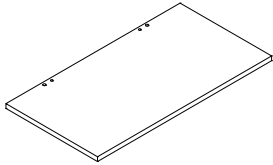
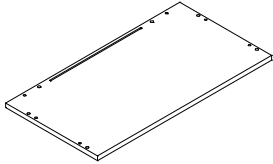
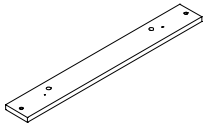
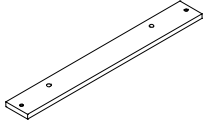
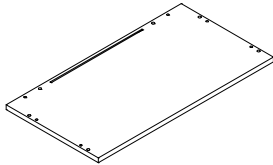
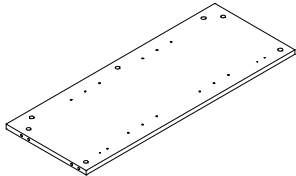
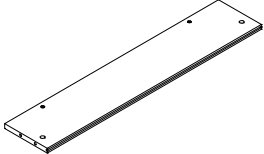
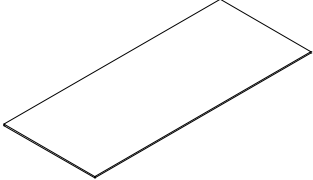
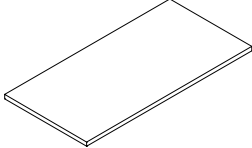
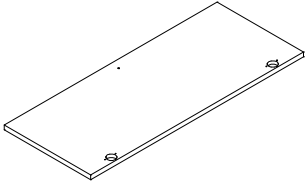


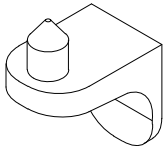
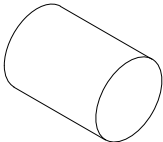
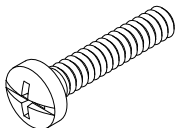
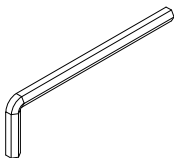
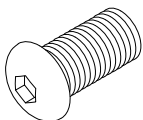
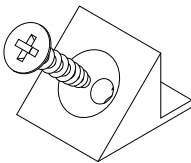
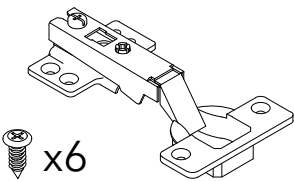
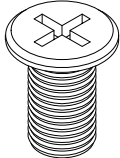
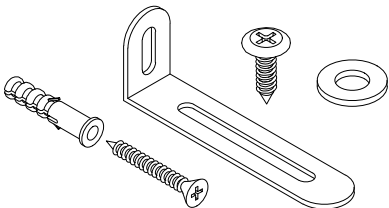


INSTRUCTION MANUAL

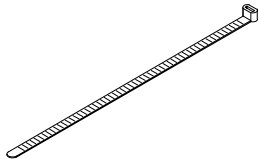


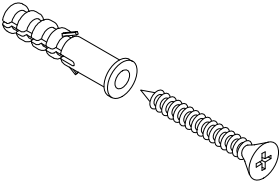



Ref	Dimensions(mm)	Visual	Qty
1	760x400x18		3
2	760x400x18		1
3	760x96x18		1
4	760x96x18		3
5	760x400x18		1
6	933x358x18		2
7	933x186x18		2
8	943x396x5		1
9	721x356x18		2
10	929x377x18		2


								
A	M6x40mm	26pcs	B	Ø15x11.5	26pcs	C	Ø8x30	24pcs
								
D	/	8pcs	H	/	2pcs	N	M4x22	2pcs
								
O	4#	1pcs	R	M6x16	8pcs	J	/	4pcs
								
K	/	4set	G	M6x12mm	28pcs	P	/	2set
								
I	/	4pcs	L	M4x50	2set	Z	Ø20	26pcs

Step 1: x2


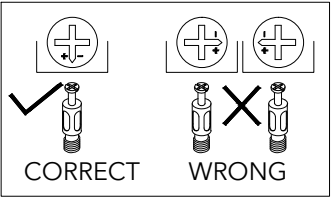



Please note that the locking cam faces outwards

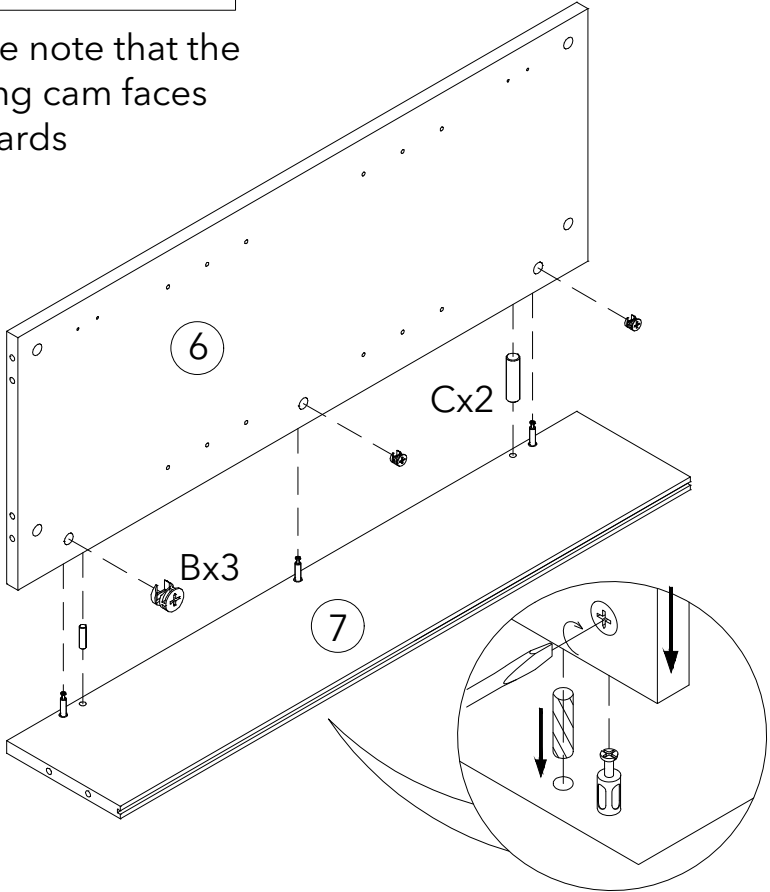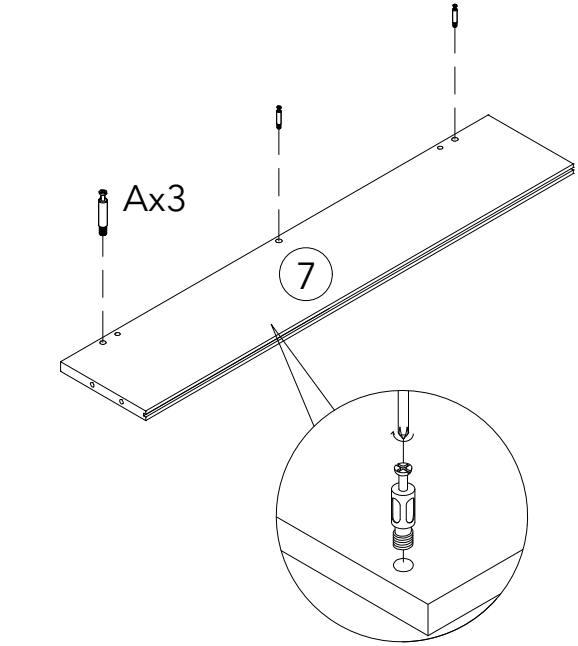


			
	C	Ø 8x30	4pcs
		A	M6x40mm 6pcs
		B	Ø15x11.5 6pcs


Step 2:

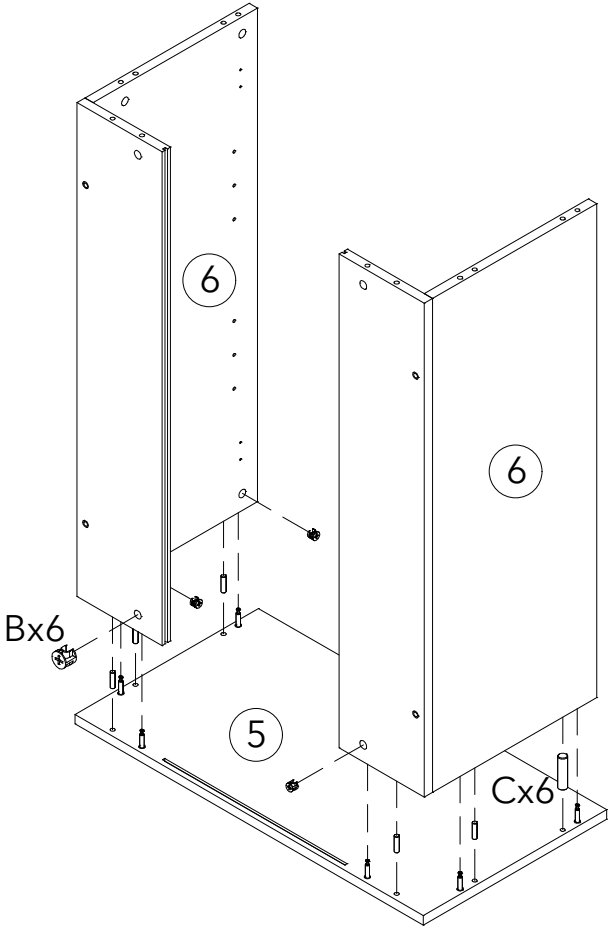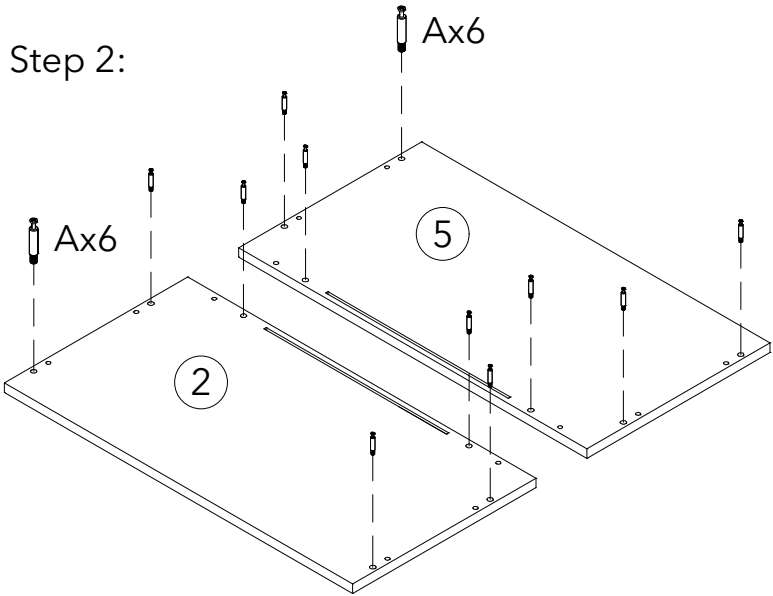



			
	C	Ø 8x30	6pcs
		A	M6x40mm 12pcs
		B	Ø15x11.5 6pcs


Step 3:

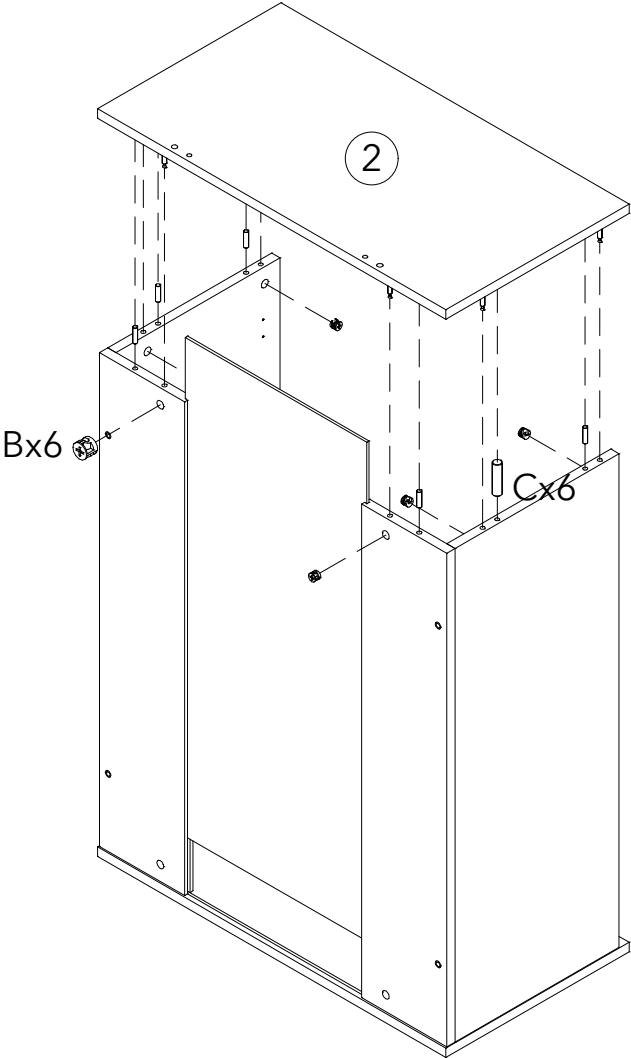


			
	C	Ø 8x30	6pcs
			
	B	Ø 15x11.5	6pcs


Step 4:

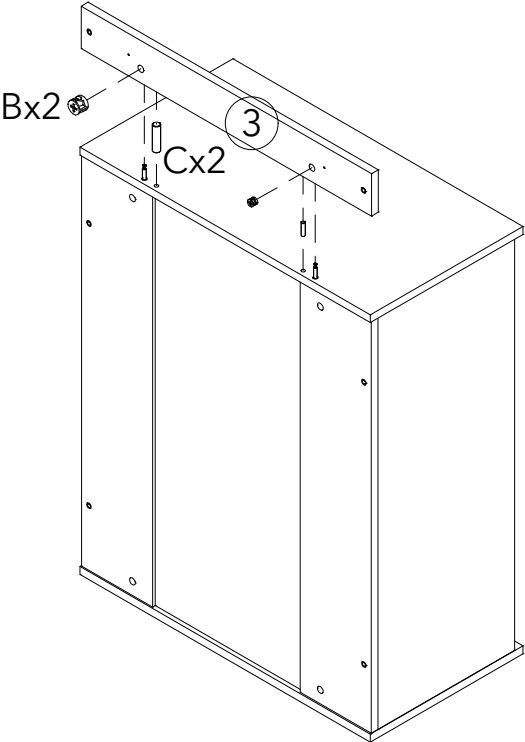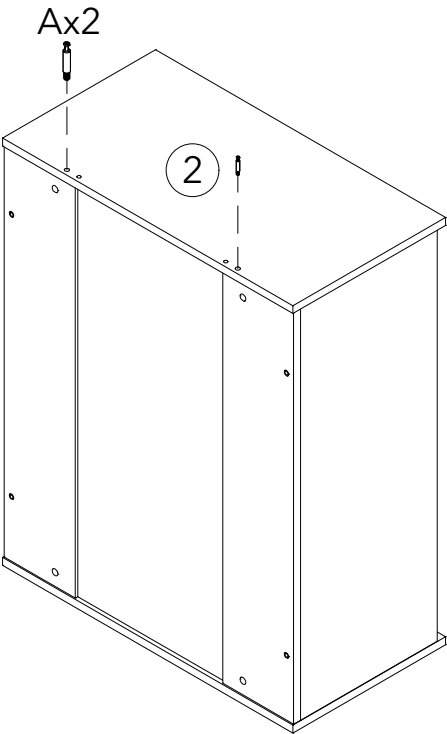


			
	C	Ø 8x30	2pcs
			
	A	M6x40mm	2pcs
			
		B	Ø 15x11.5 2pcs

Step 5:

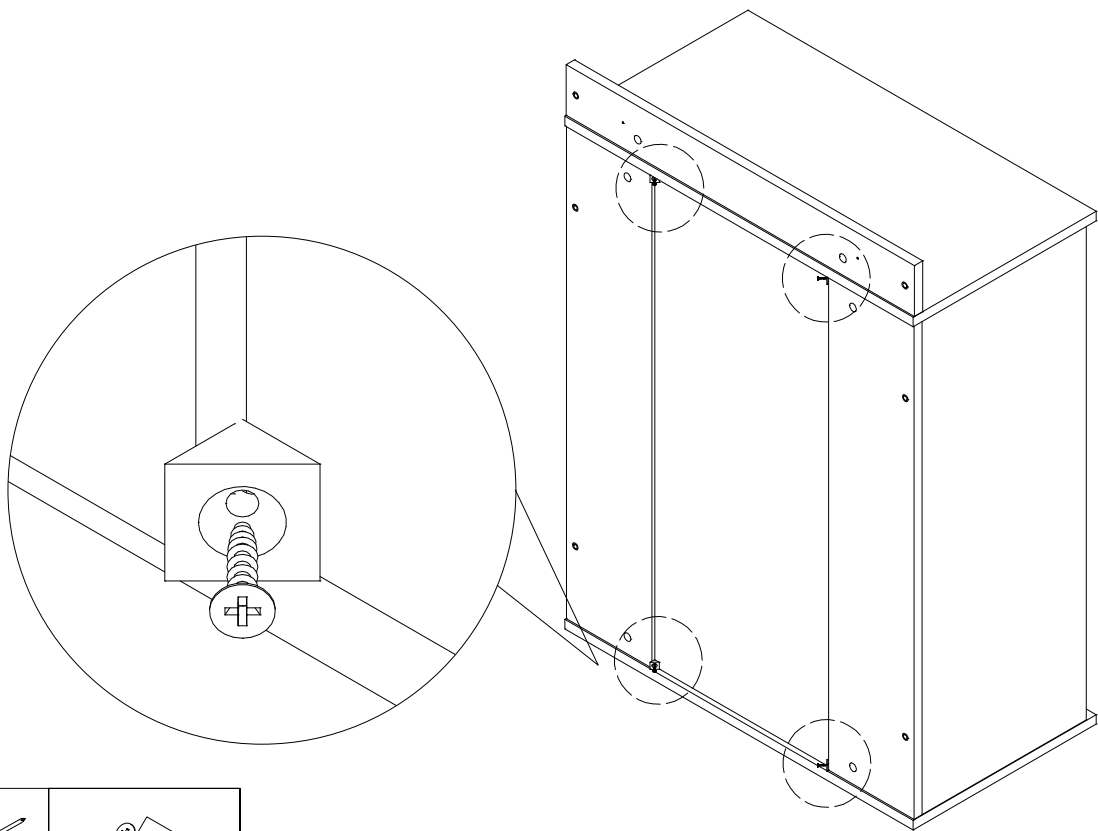


			
J	/	4pcs	

Step 6:

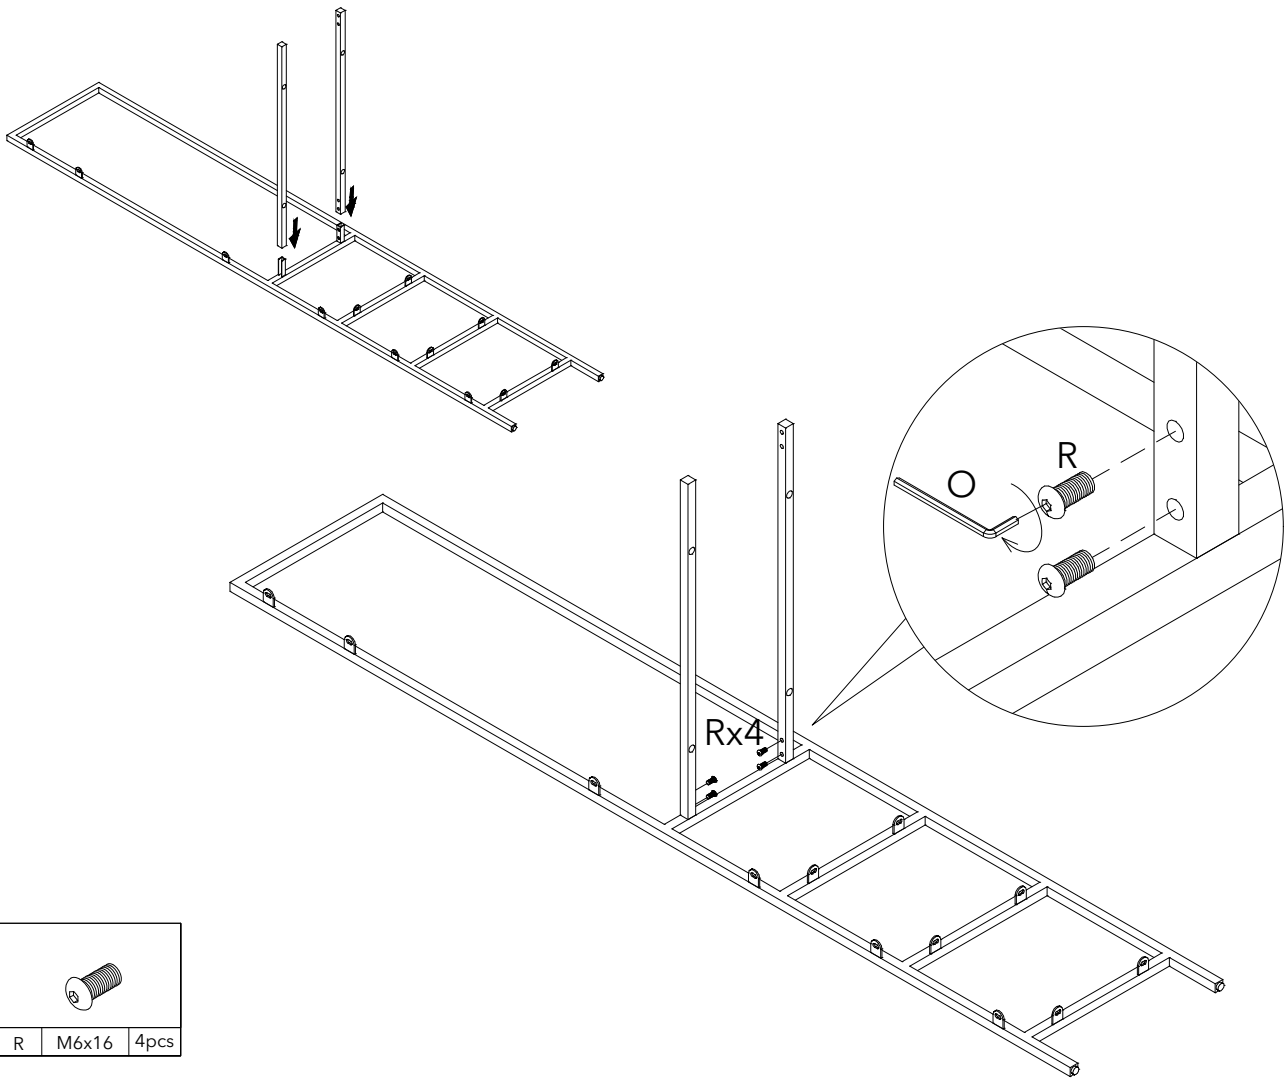


					
O	4#	1pc	R	M6x16	4pcs

Step 7:

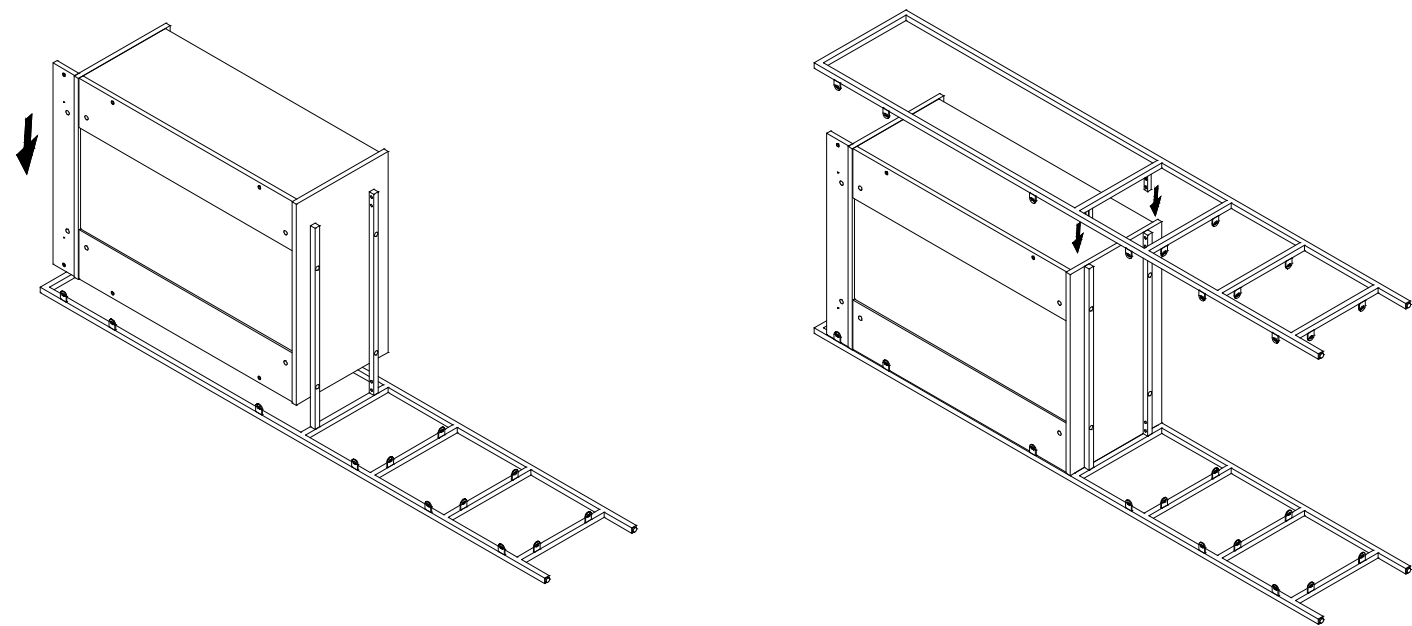



Step 8:

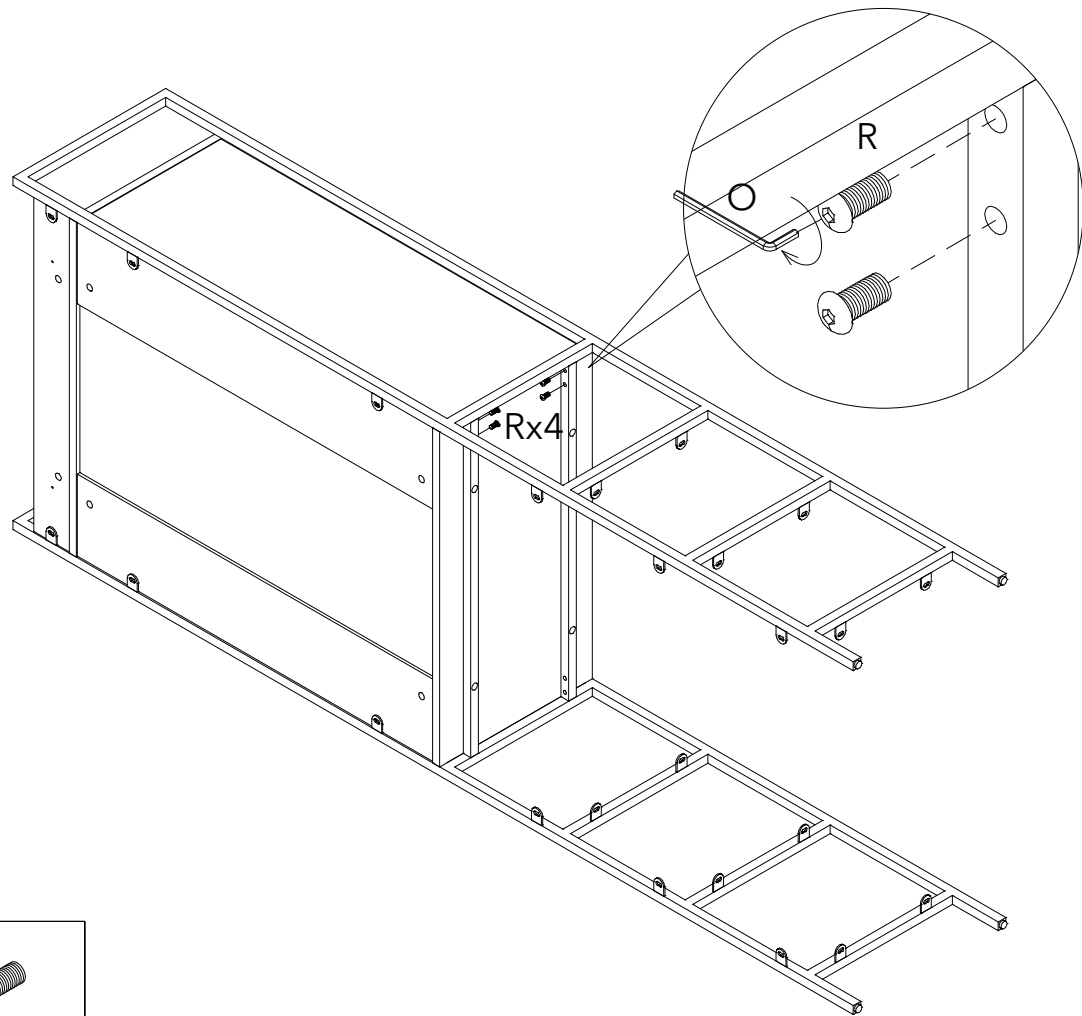



					
O	4#	1pc	R	M6x16	4pcs


Step 9:

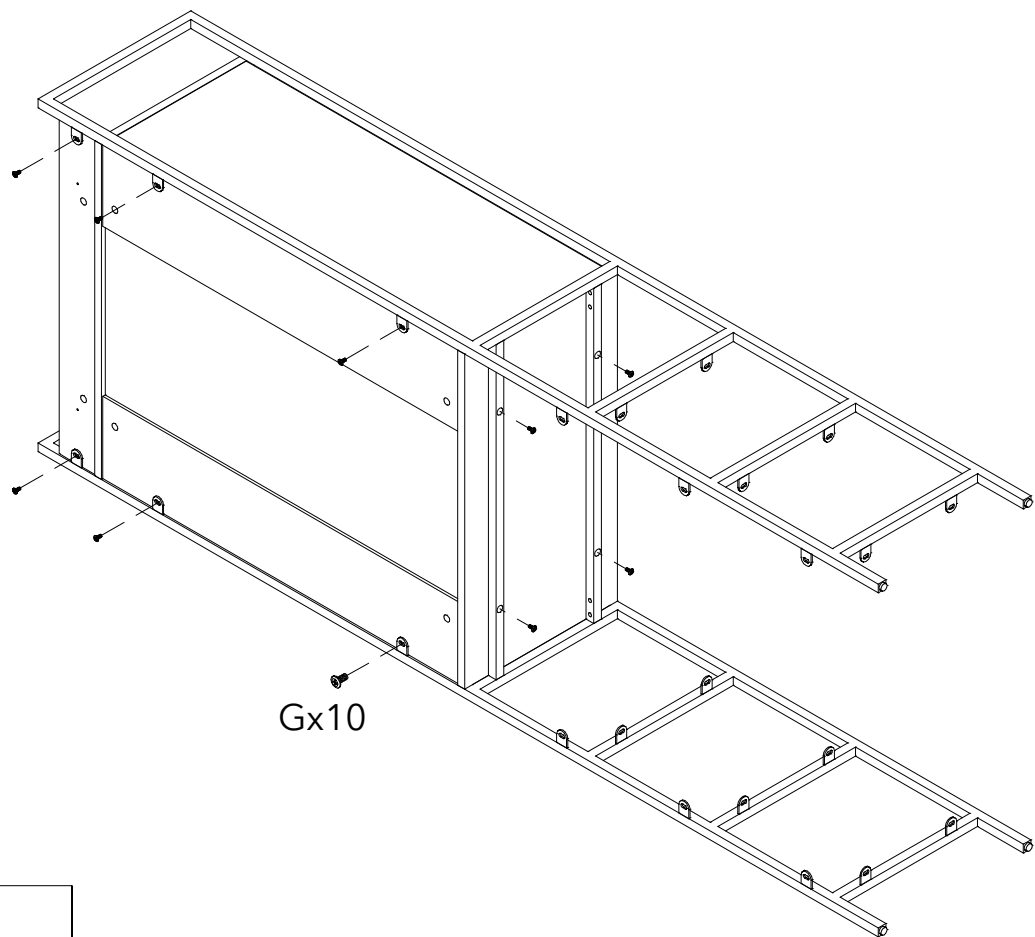


			
	G	M6x12mm	10pcs

Step 10: x3

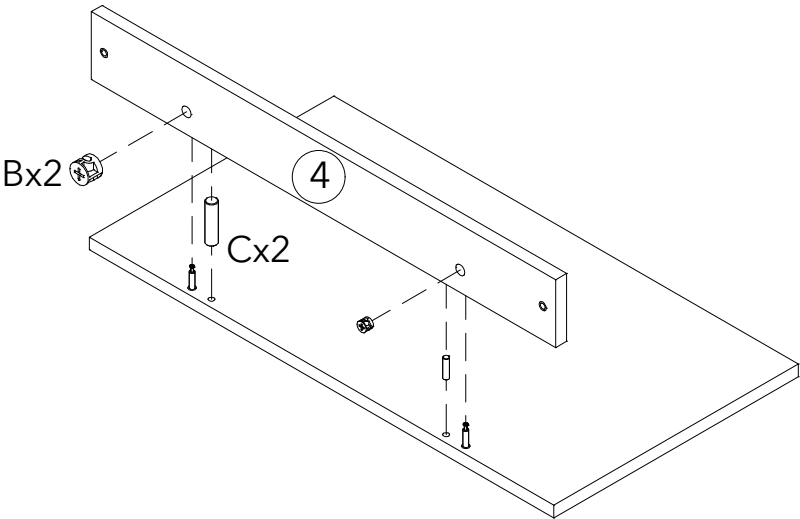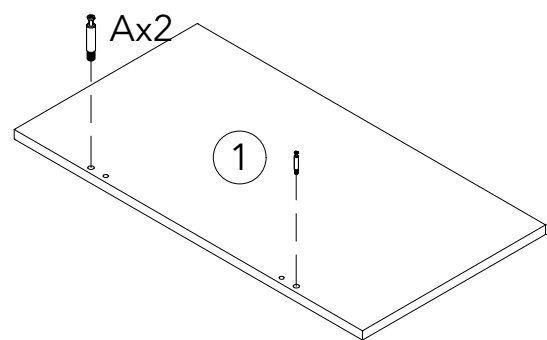



			
	C	Ø8x30	6pcs
			
	A	M6x40mm	6pcs
			
		B	Ø15x11.5 6pcs

Step 11:

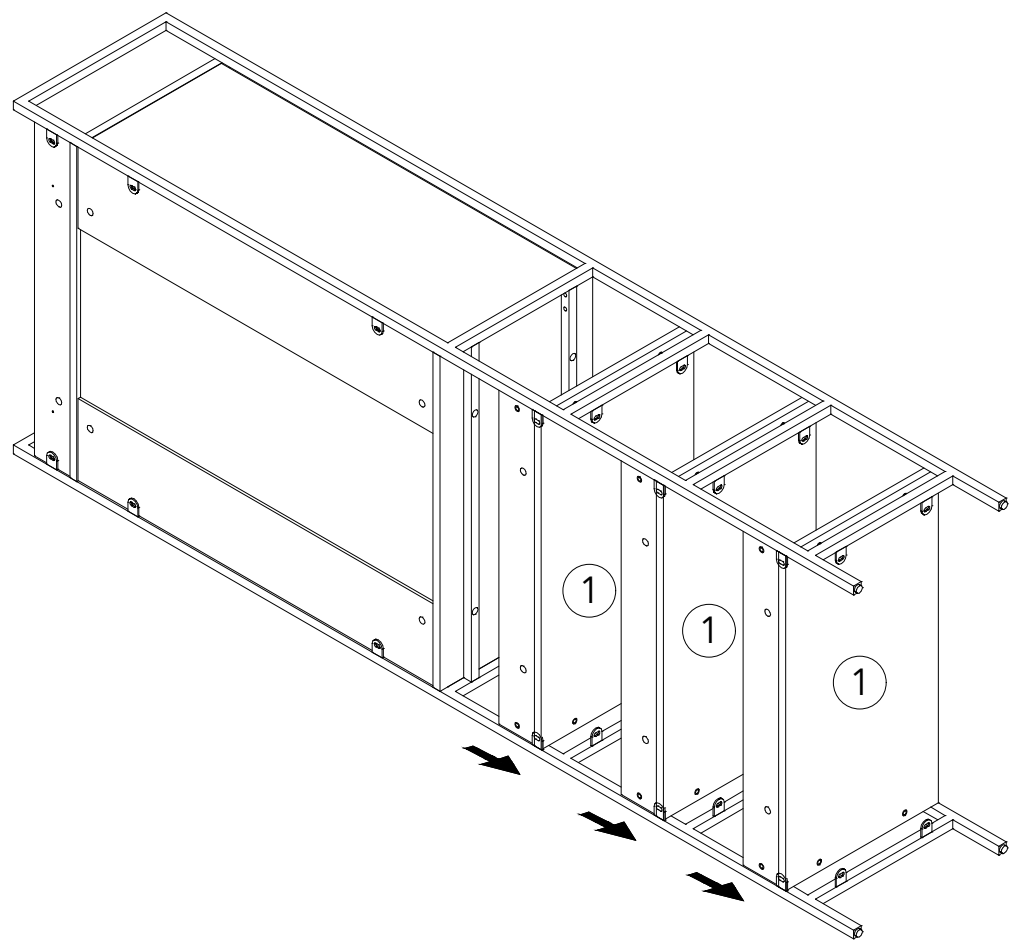


Step 12:


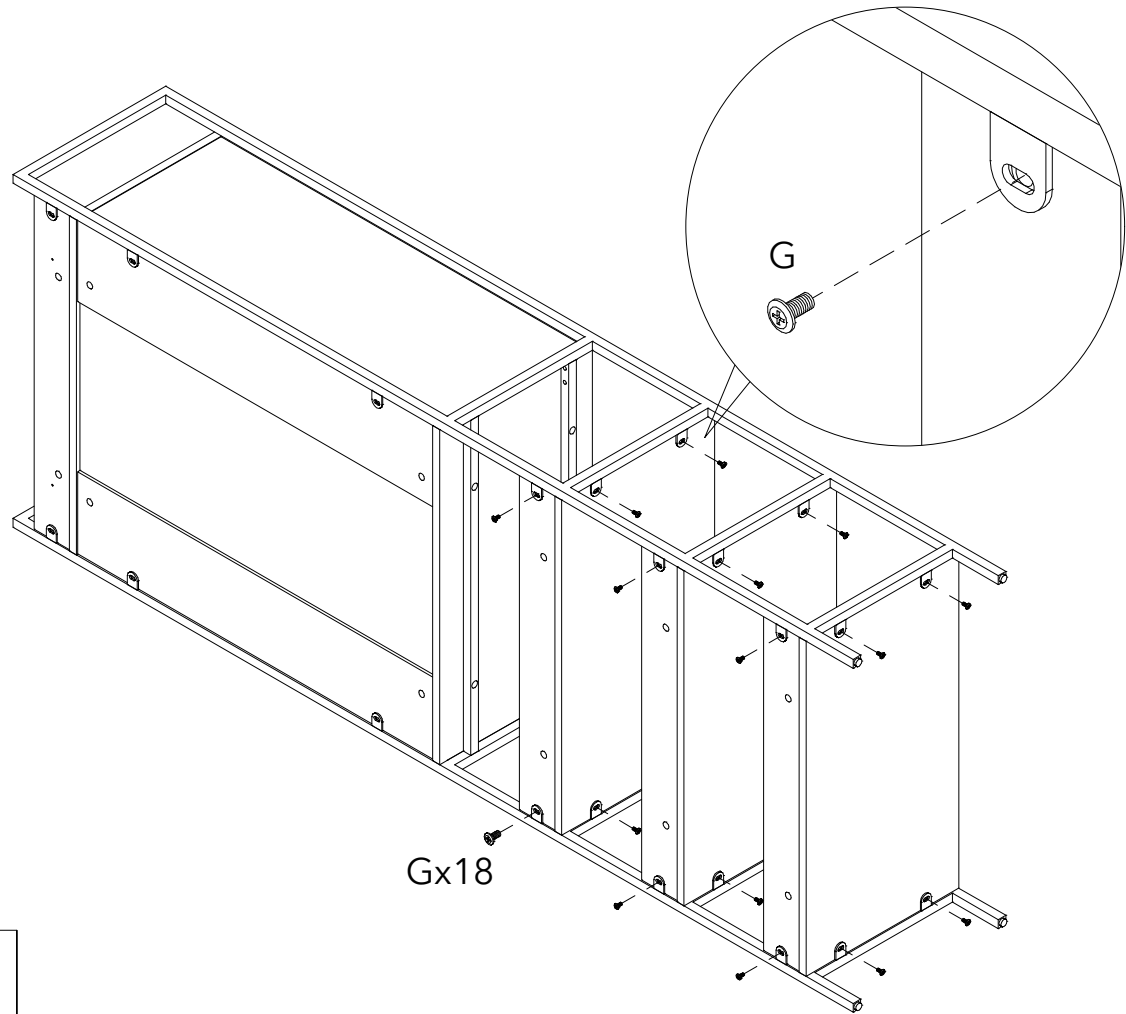


	 G M6x12mm 18pcs
--	--

Step 13:


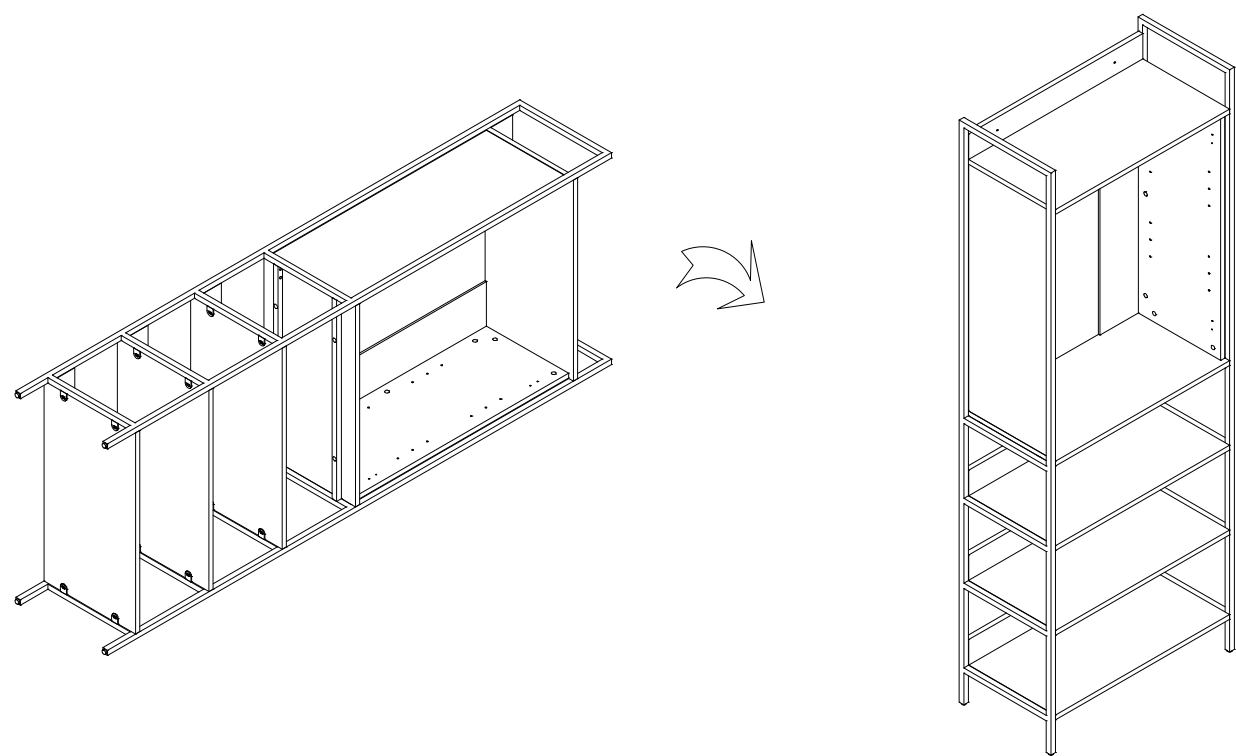


Step 14:

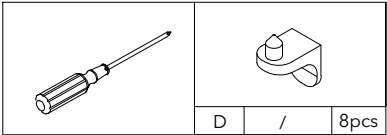
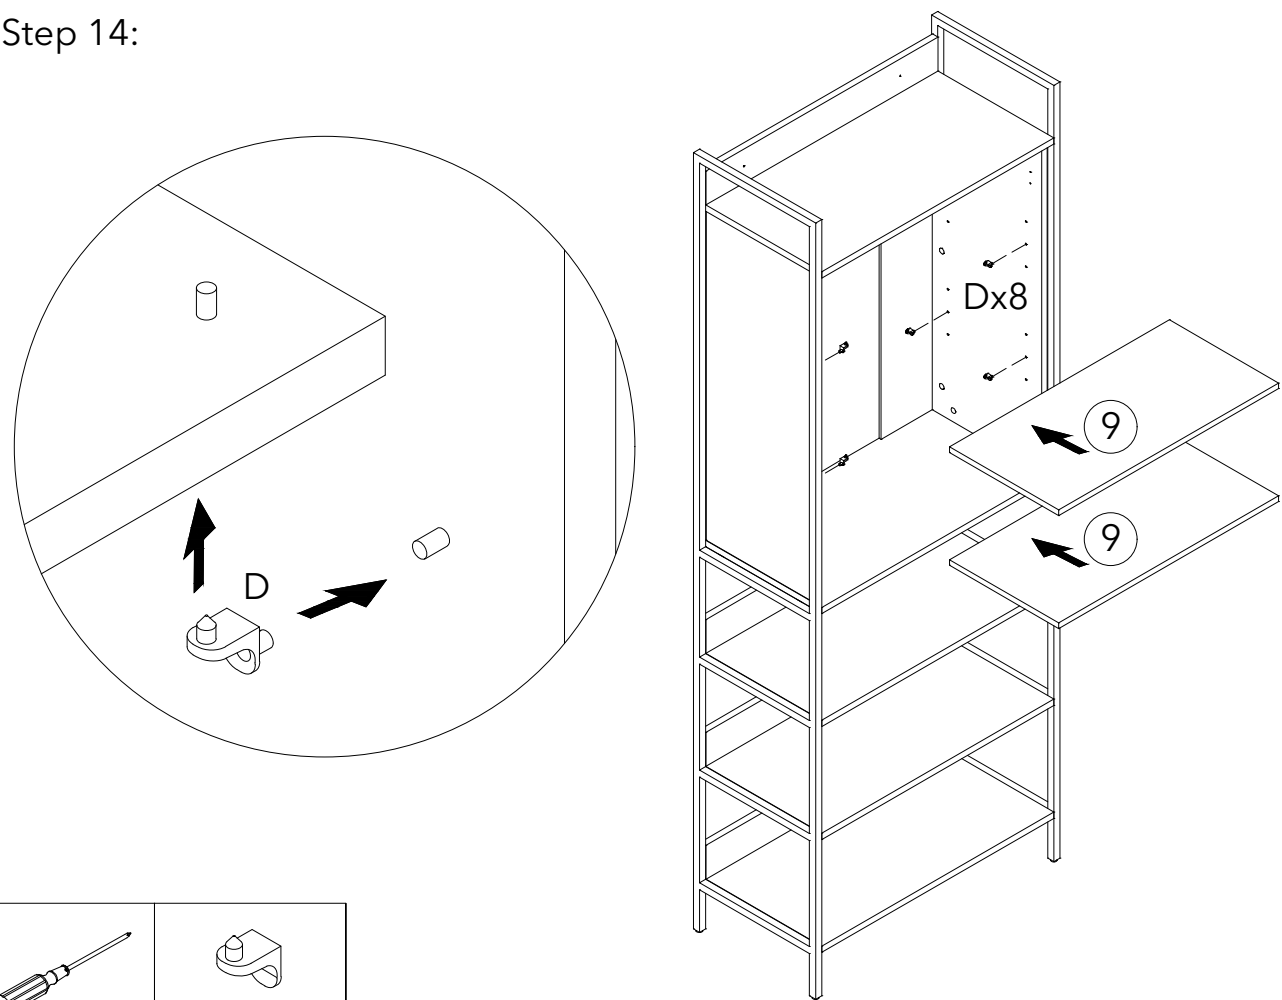


D / 8pcs


Step 15:

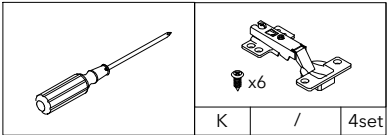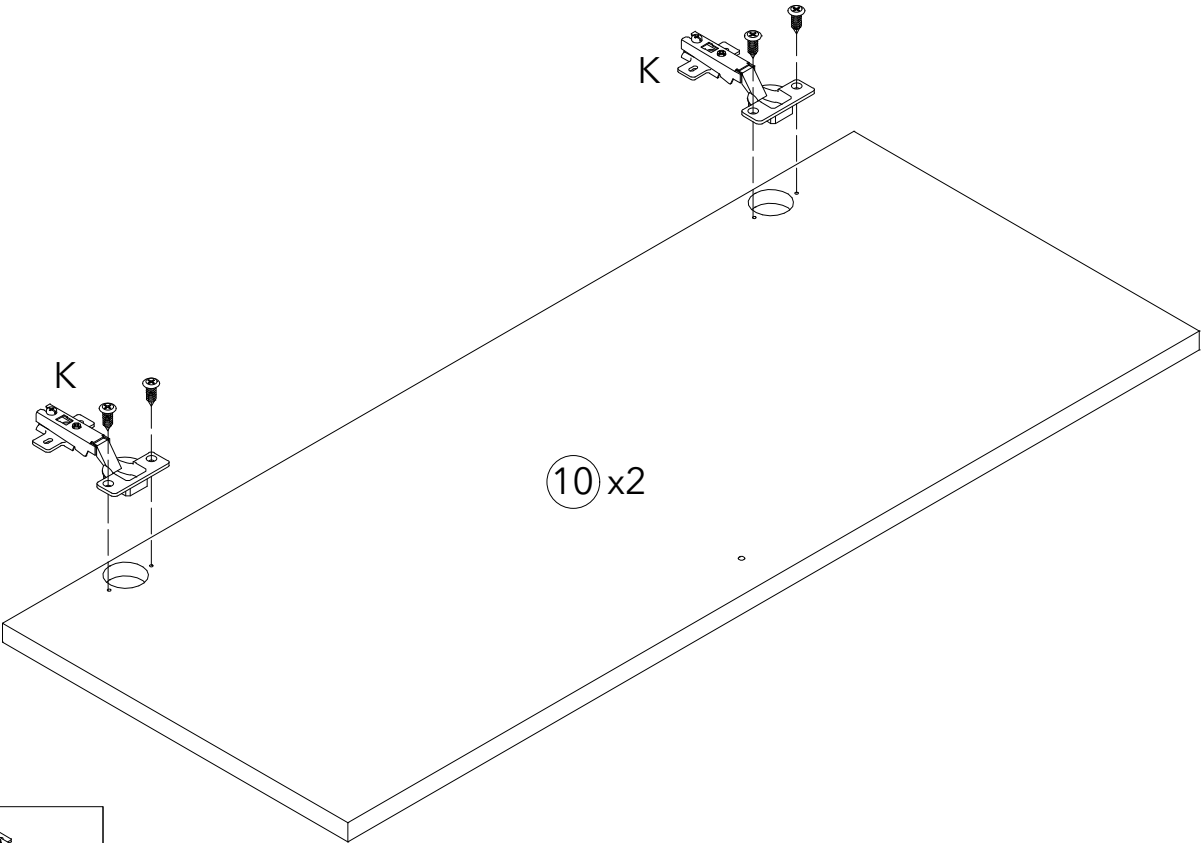

Step 16:

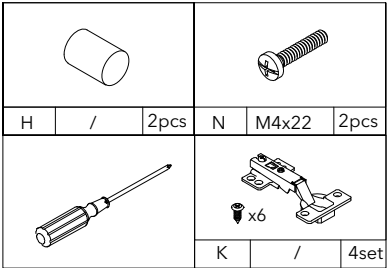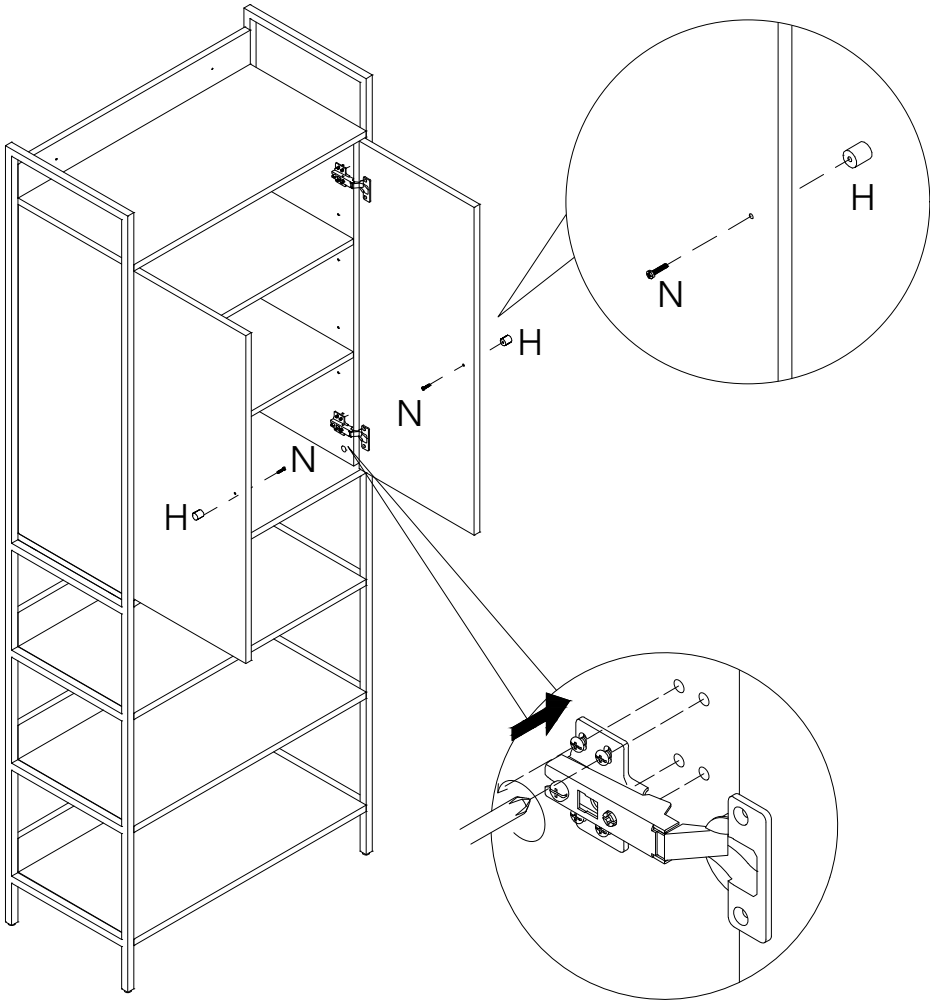


Step 17:

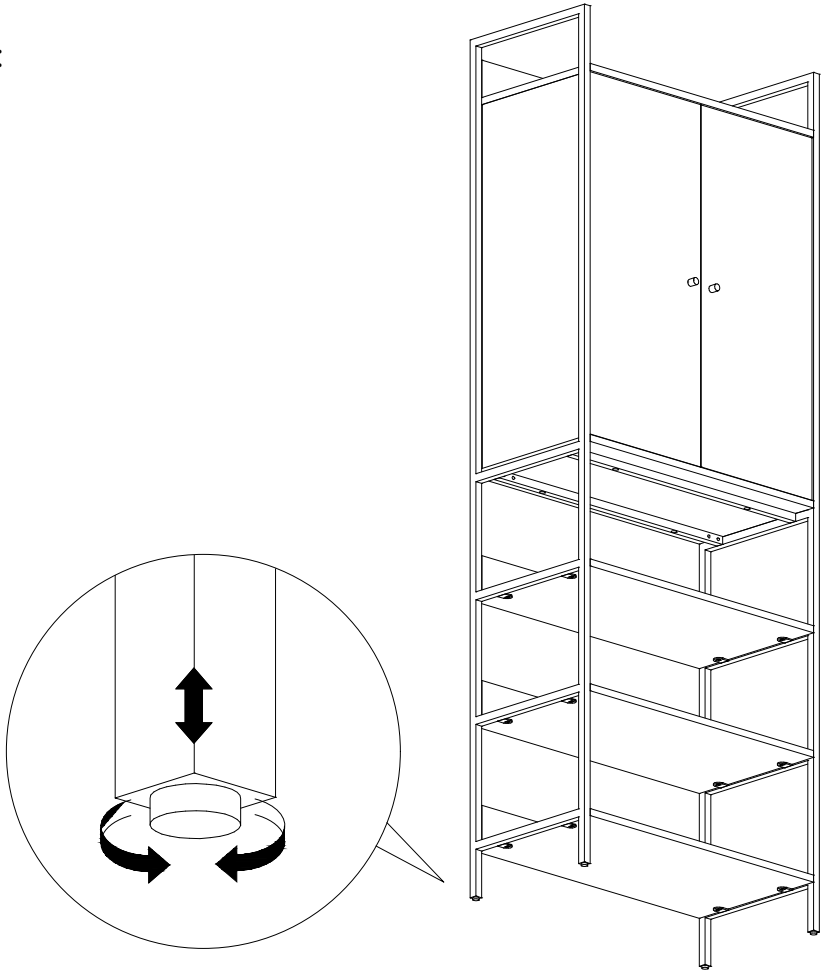

Levelling adjustment


Step 18:

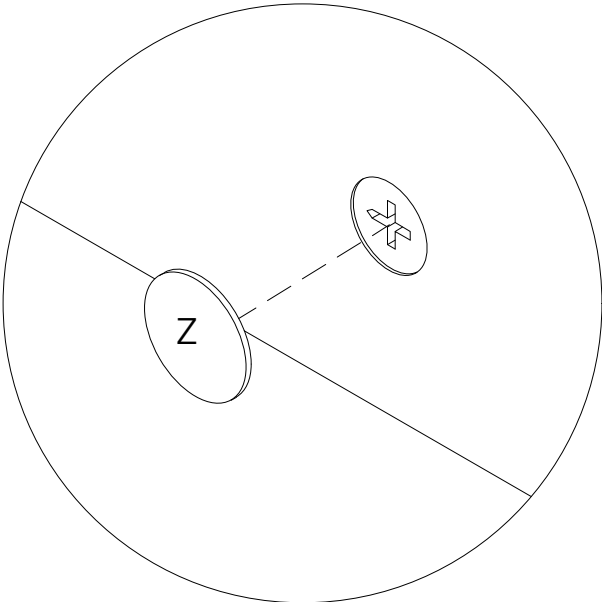


Add the screw covers
for those visible cams

Z	Ø20	26pcs



Step 19:

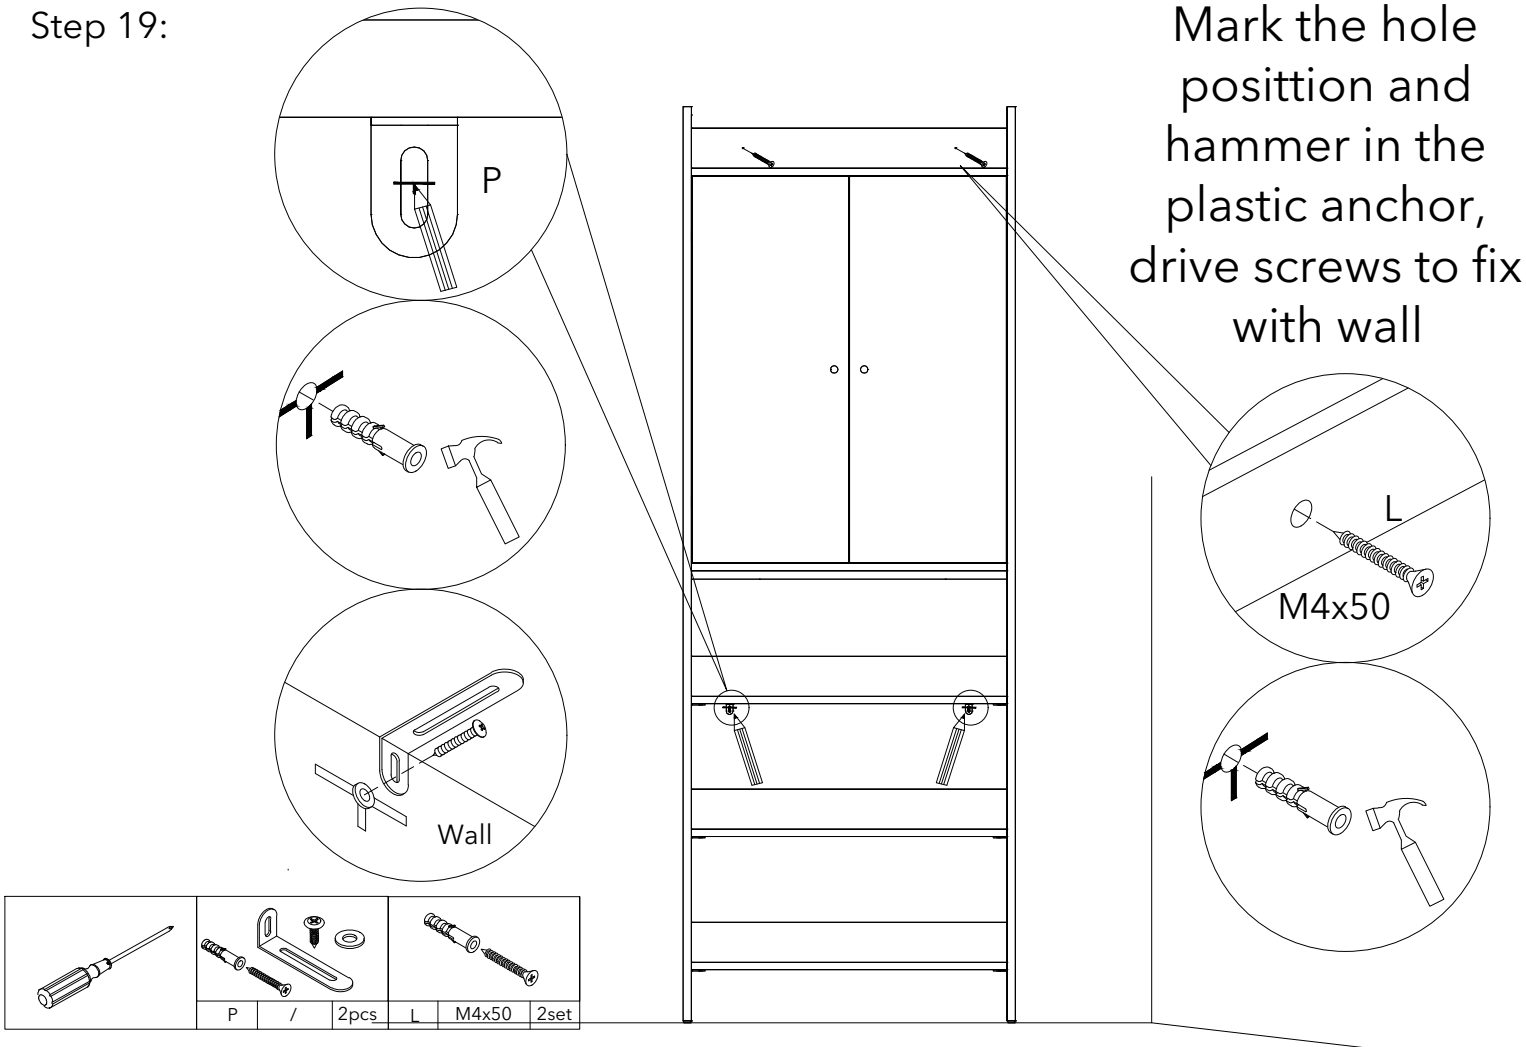



Step 20:

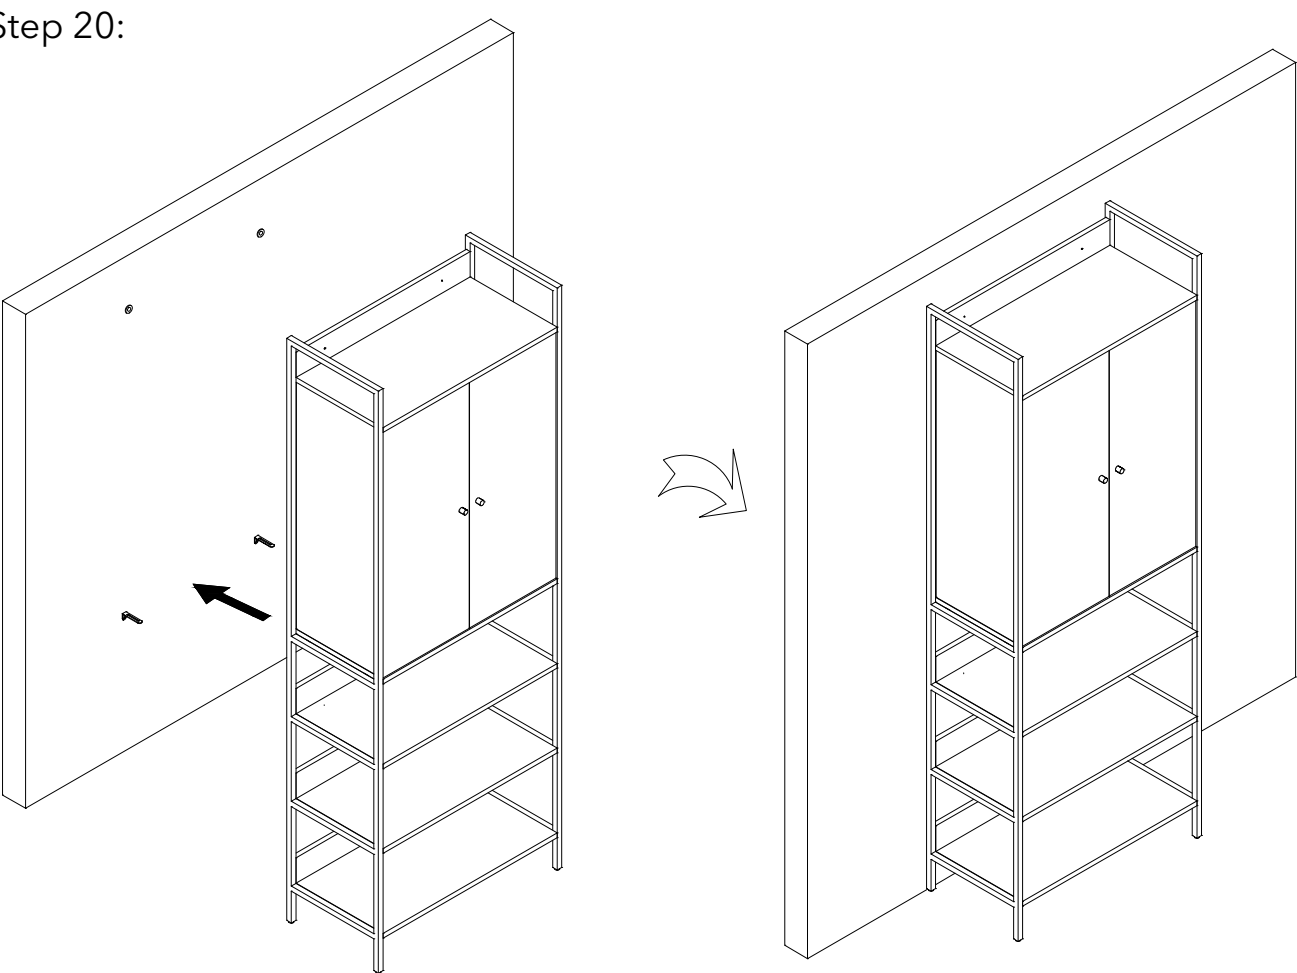



Step 21:

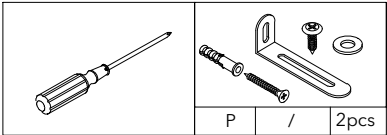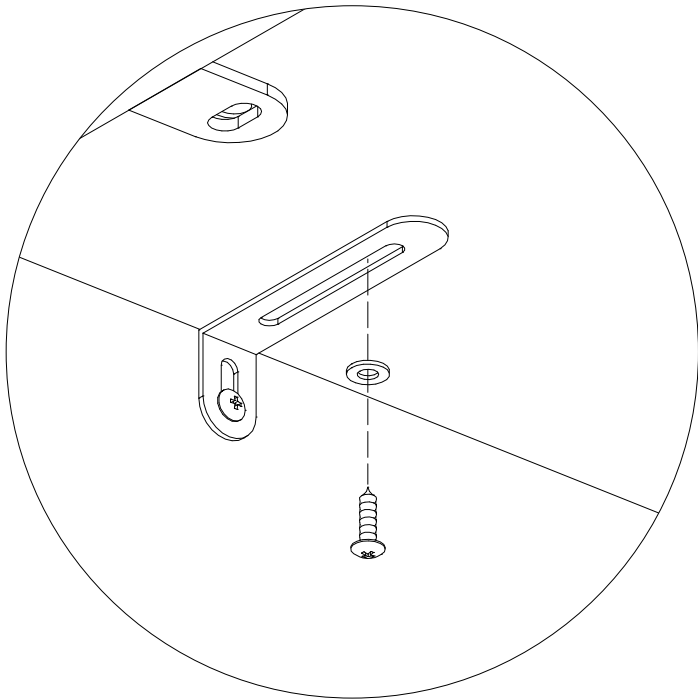


Step 22:

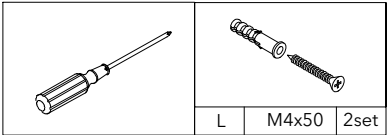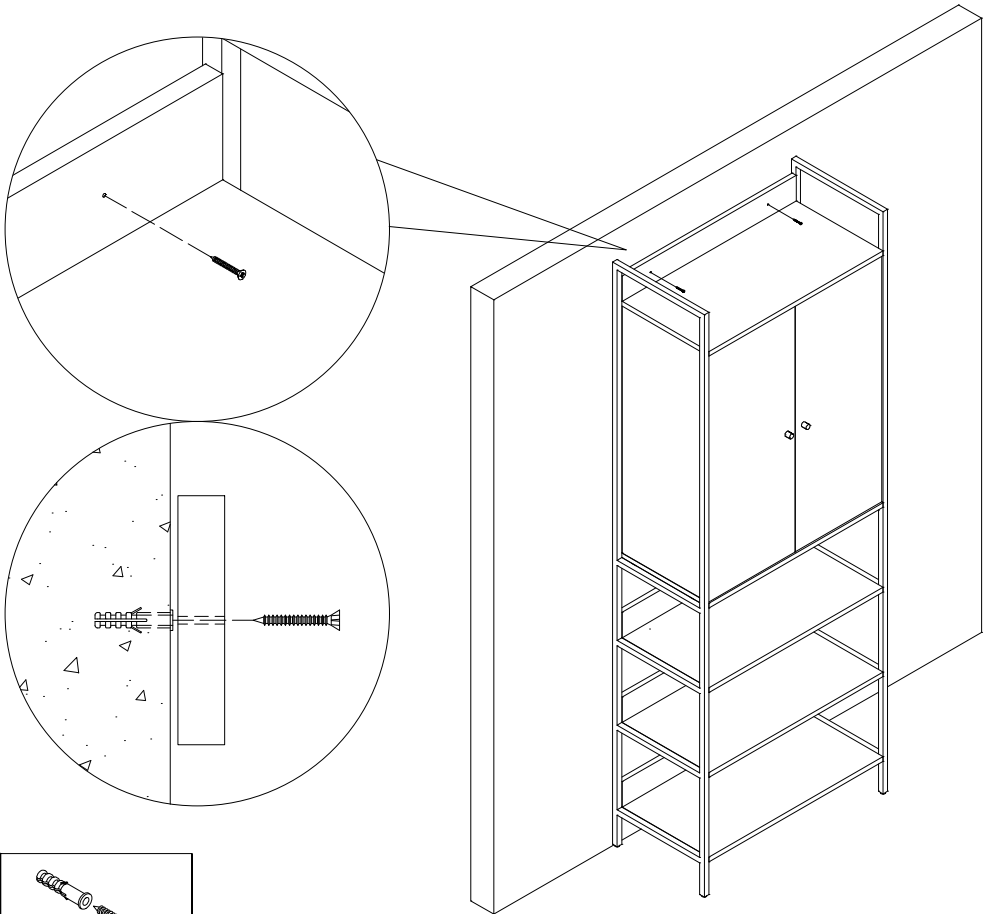

Step 23:

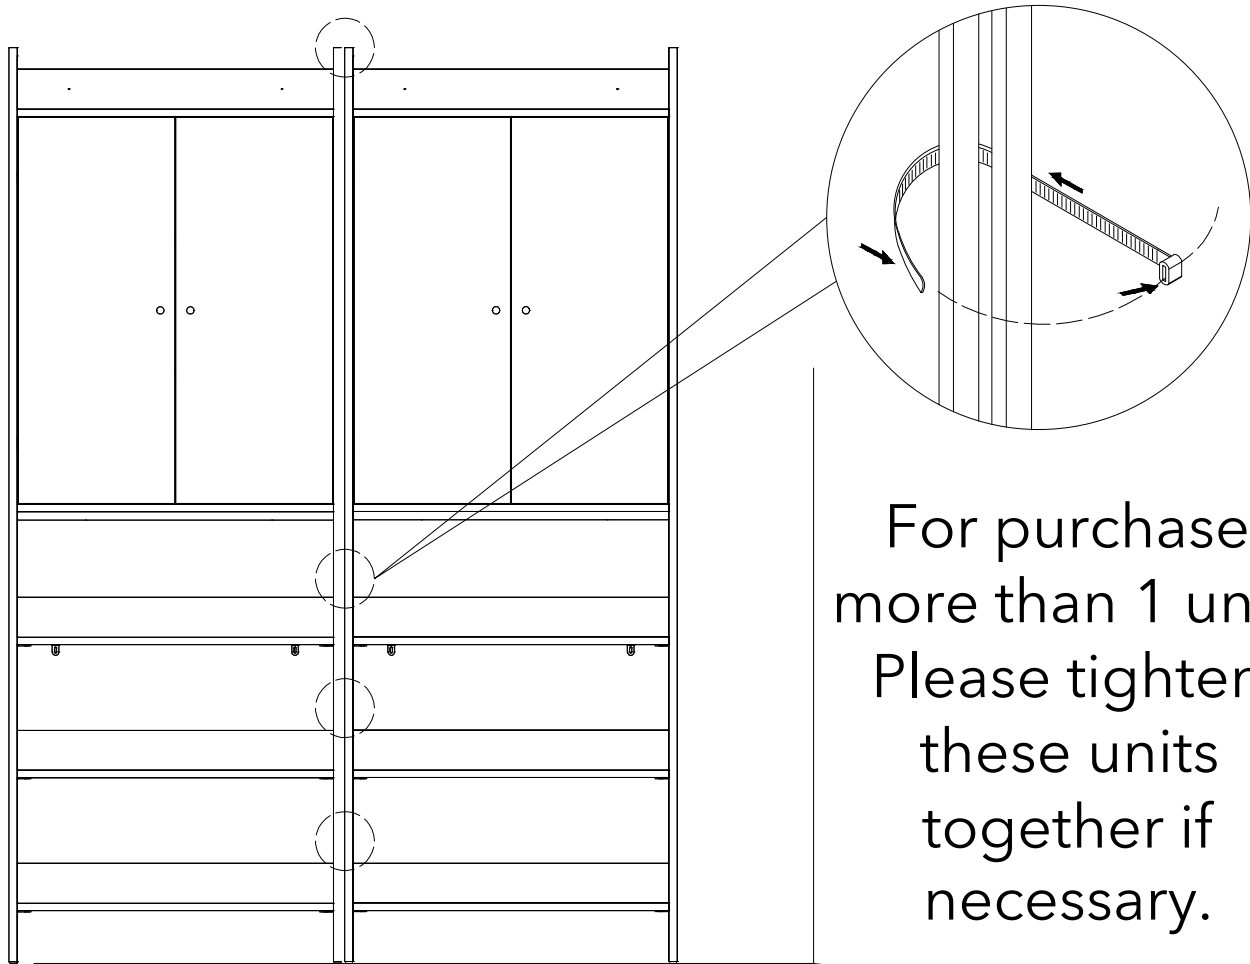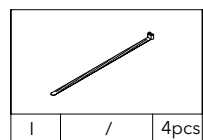

For purchase more than 1 unit, Please tighten these units together if necessary.

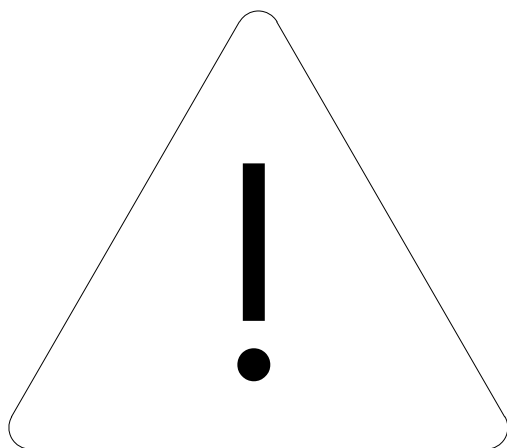

Please note that you may need different Wall fixing hardware due to different wall types. Consult your furniture seller when necessary