

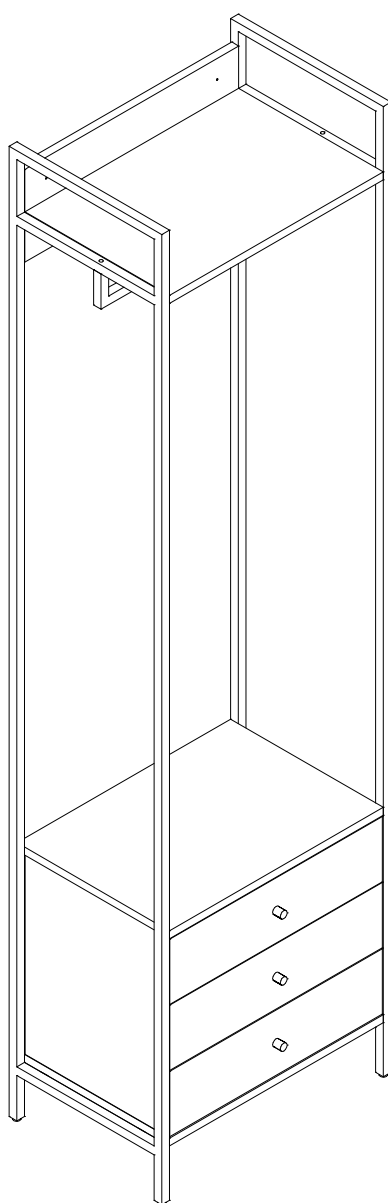
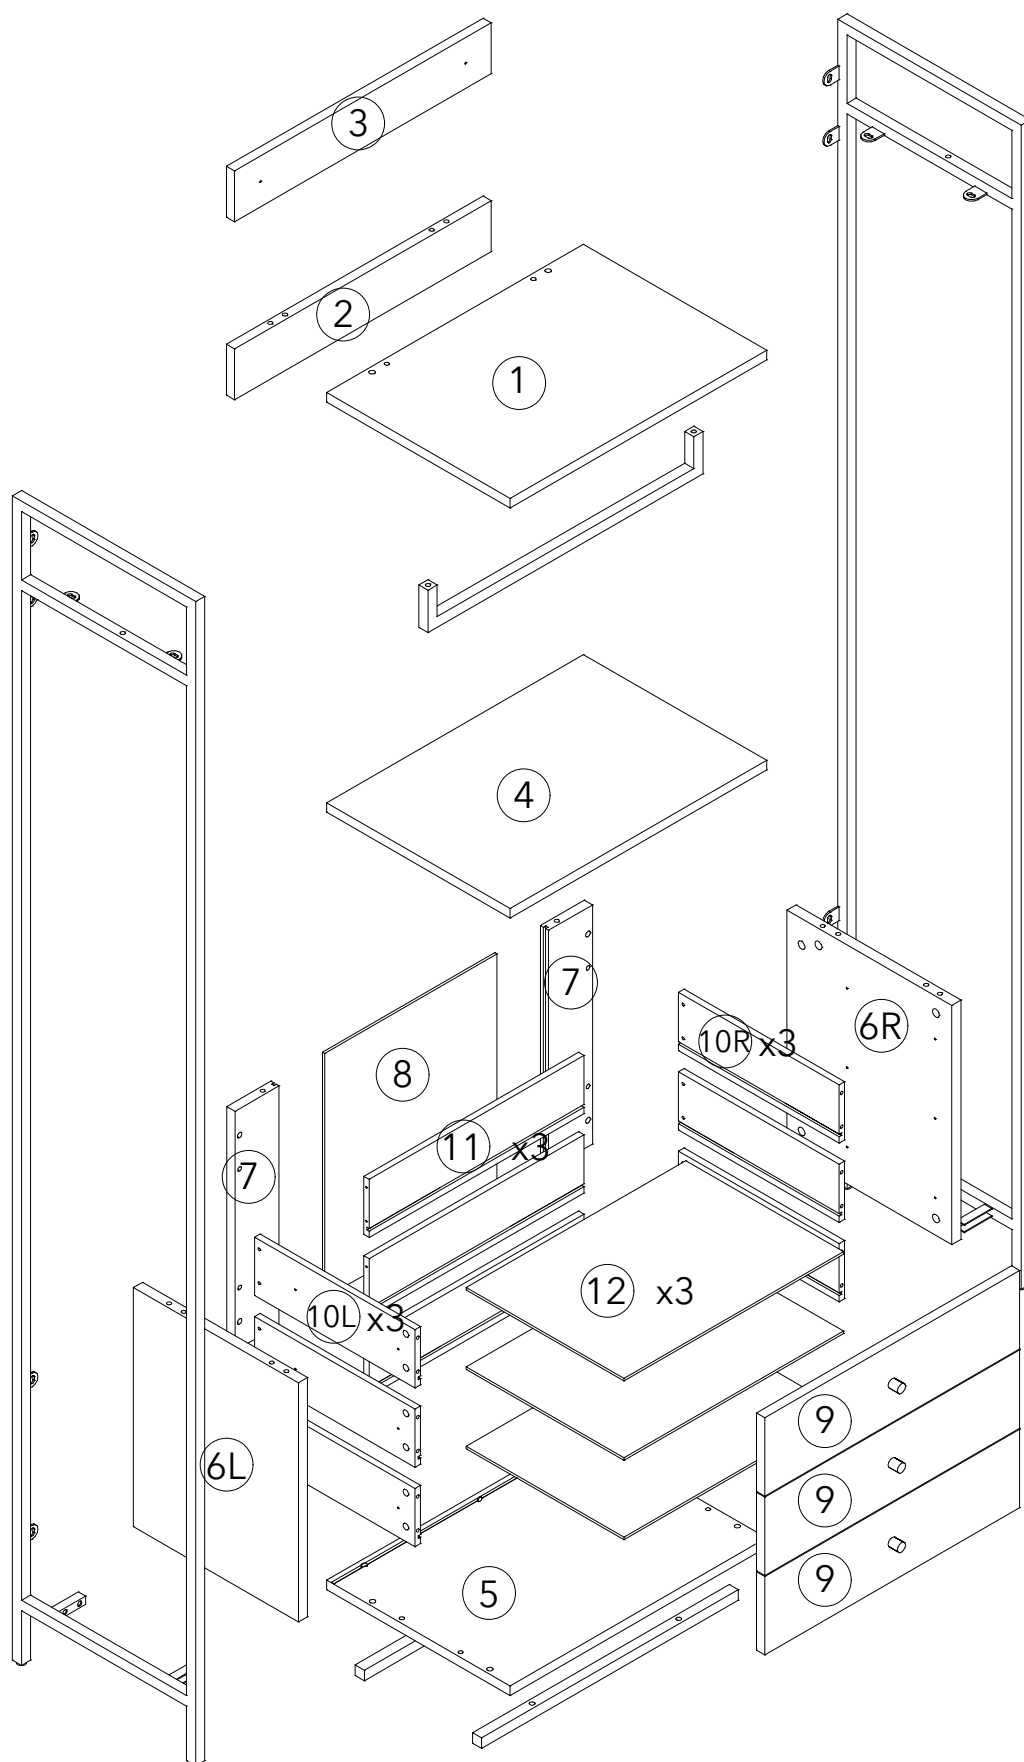
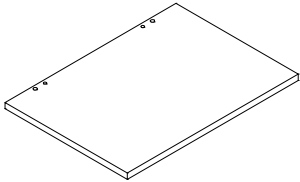
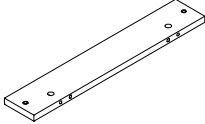
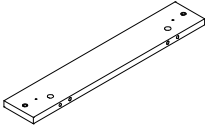
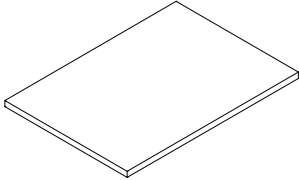
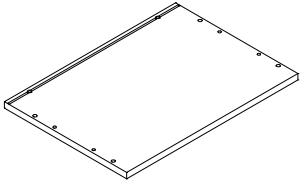
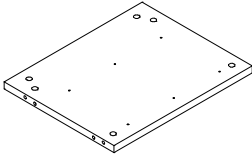

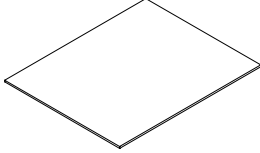
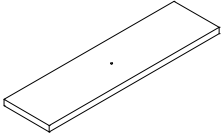




INSTRUCTION MANUAL


















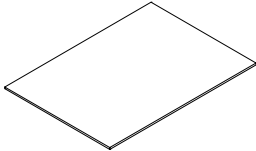


Ref	Dimensions(mm)	Visual	Qty
1	560x400x18		1
2	560x96x18		1
3	560x96x18		1
4	560x400x18		1
5	560x400x18		1
6	452x358x18		2

Ref	Dimensions(mm)	Visual	Qty
7	452x96x18		2
8	462x376x5		1
9	556x148x18		3
10	350x110x12		6
11	473x110x12		3
12	483x344x5		3



								
A	M6x40mm	20pcs	B	Ø15x11.5	20pcs	C	Ø8x30	16pcs

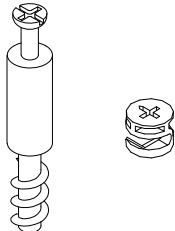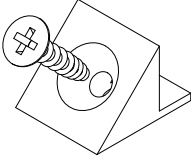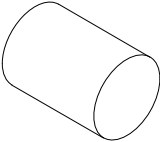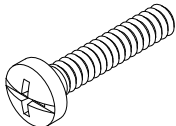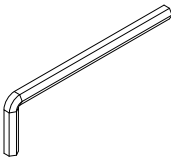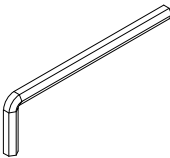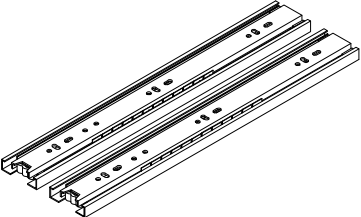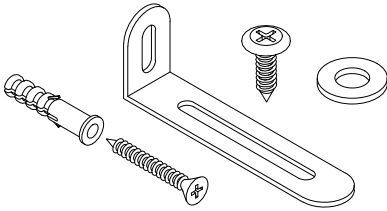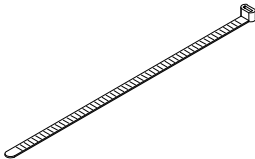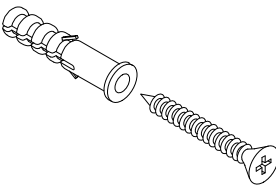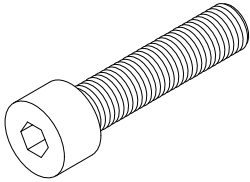
								
D	φ12x10mm	12set	E	M4x14	36pcs	F	M4x30	12pcs
								
J	/	4pcs	H	/	3pcs	N	M4x22	3pcs
								
S	6#	1pc	O	4#	1pc	R	M6x16	8pcs
								
K	12"	3set	G	M6x12mm	16pcs	P	/	2set
								
I	/	4pcs	L	M4x50	2set	Q	M8x35	2pcs
								
Z	Ø20	20pcs						

Step 1:


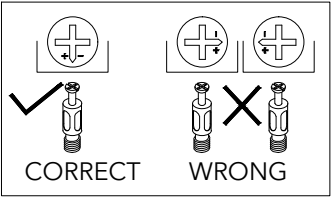



Please note that the locking cam faces outwards

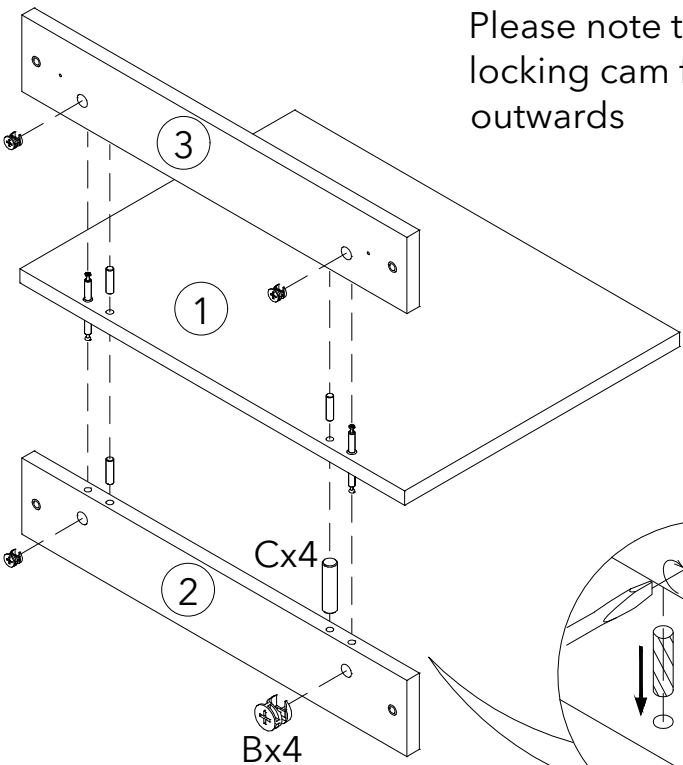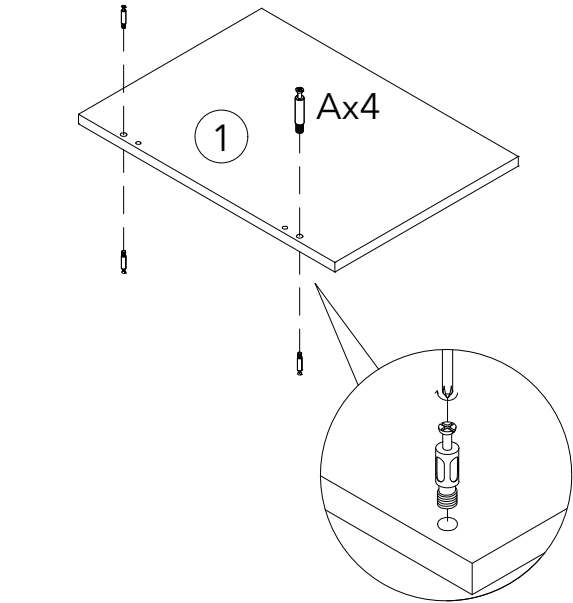


			
	C	Ø8x30	4pcs
		A	M6x40mm 4pcs
		B	Ø15x11.5 4pcs

Step 2:

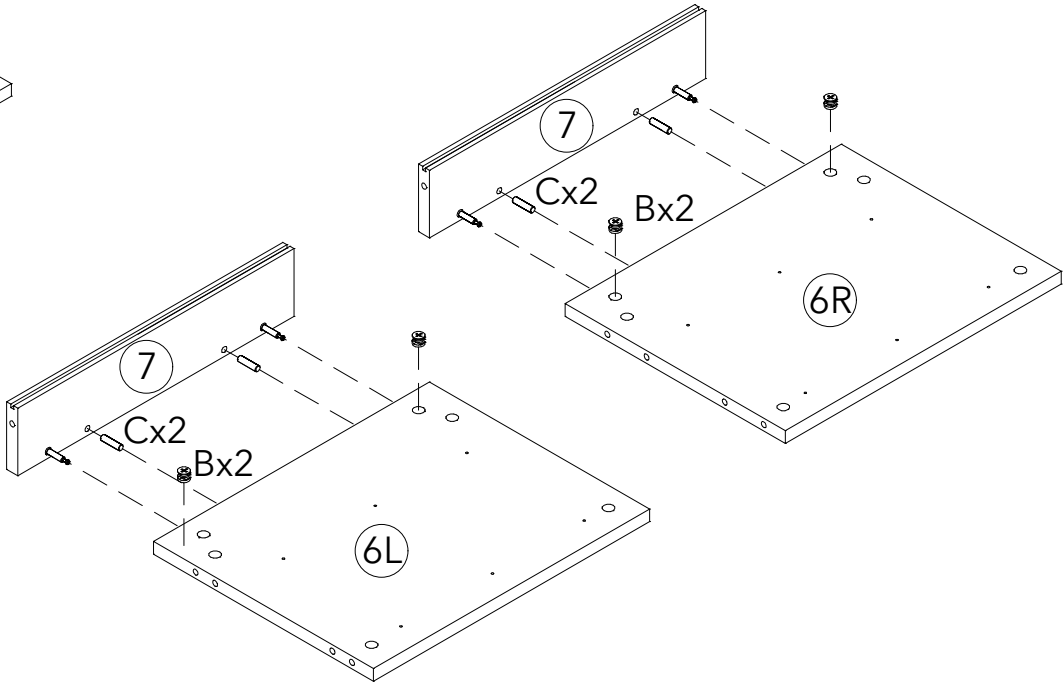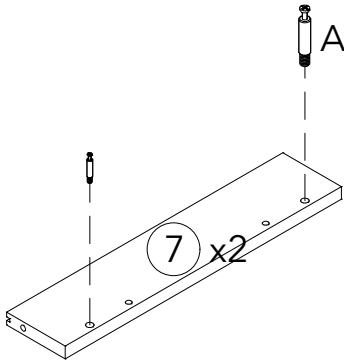


			
	C	Ø8x30	4pcs
		A	M6x40mm 4pcs
		B	Ø15x11.5 4pcs



Step 3:

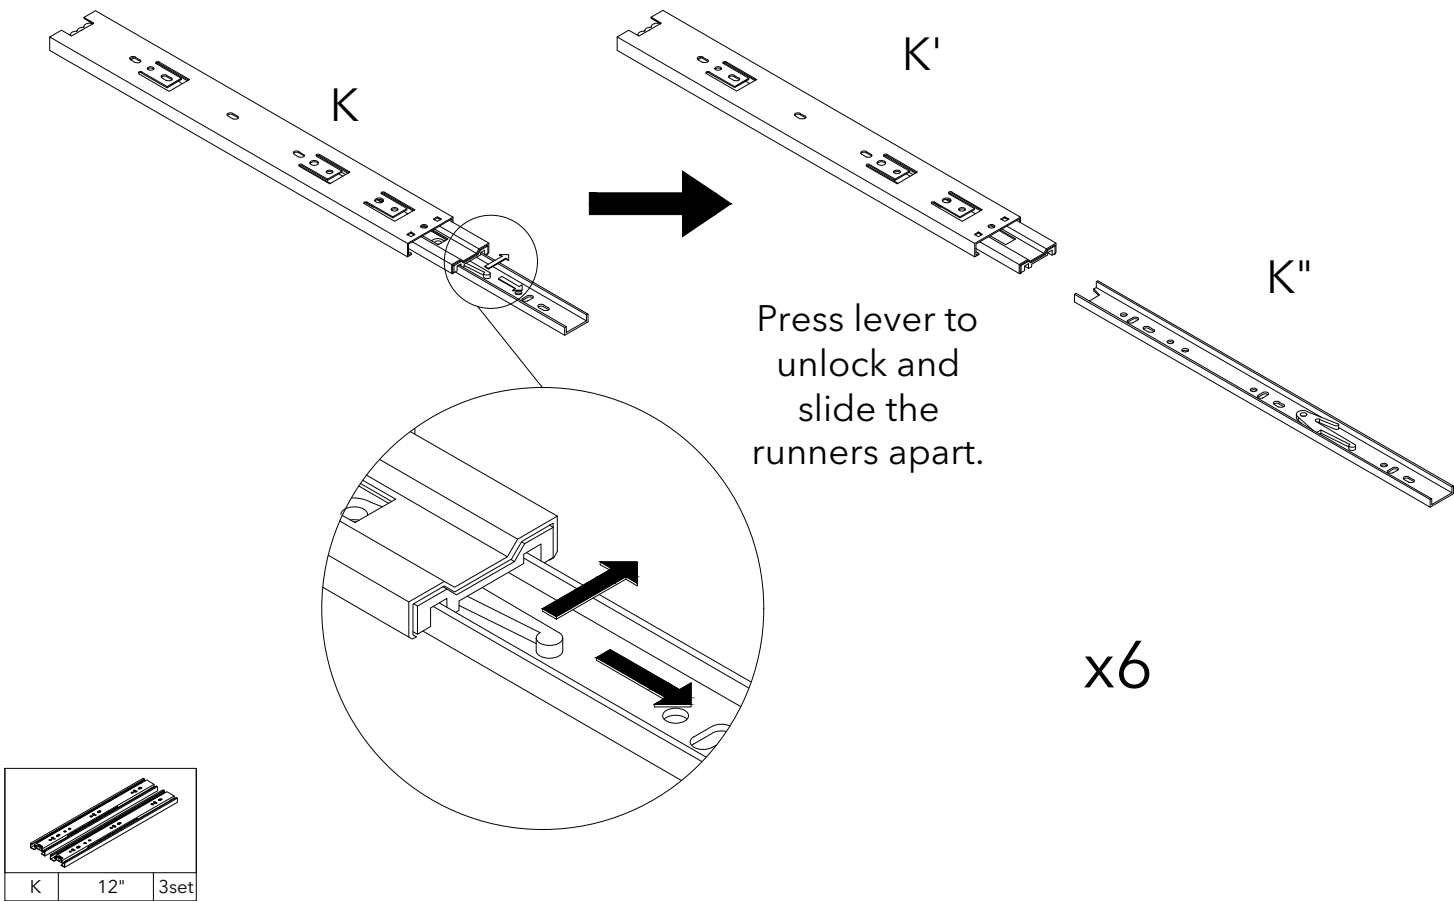


Step 4:


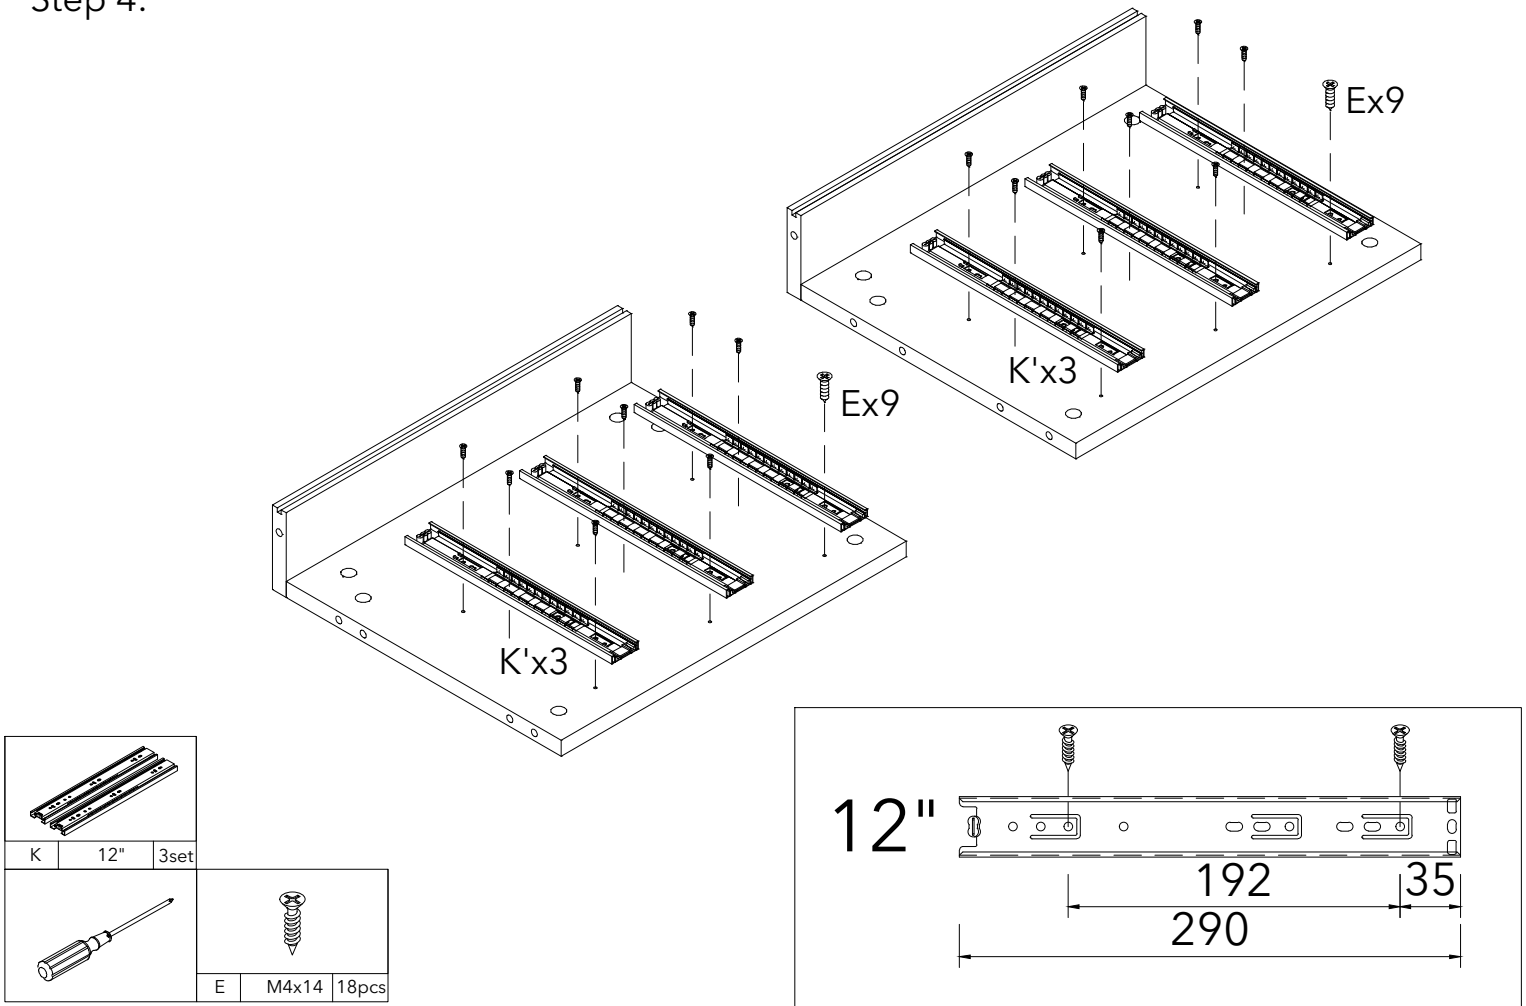



Step 5:

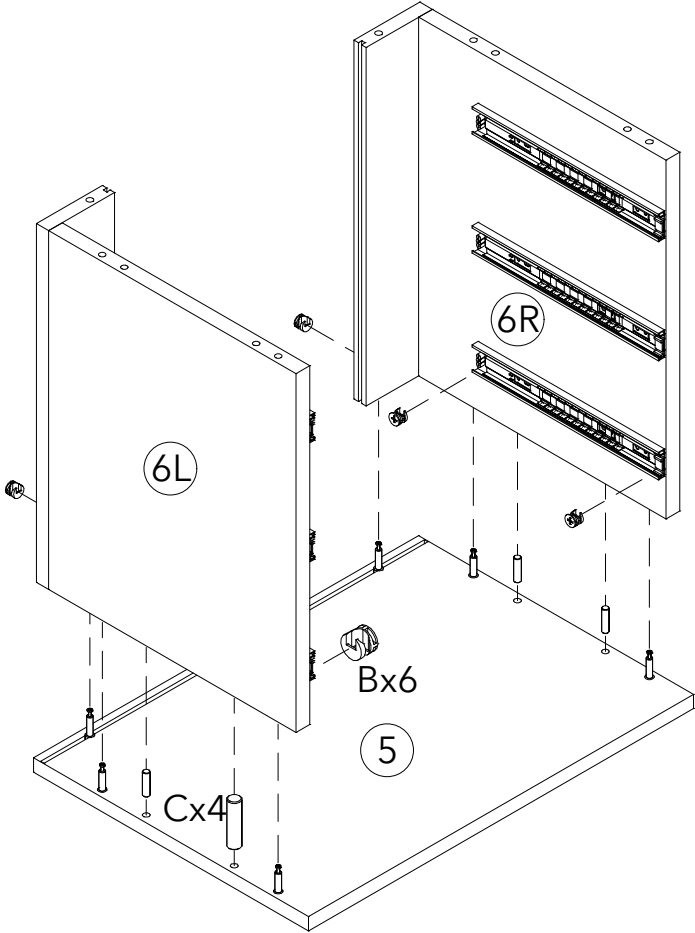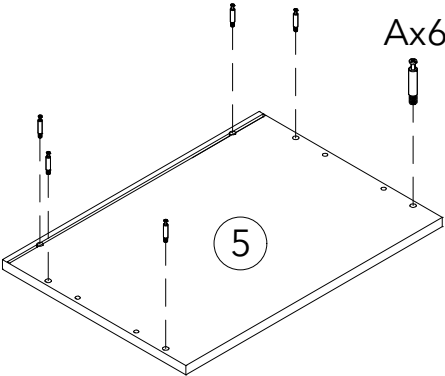



			
	C	Ø 8x30	4pcs
		A	M6x40mm 6pcs
		B	Ø15x11.5 6pcs



Step 6:

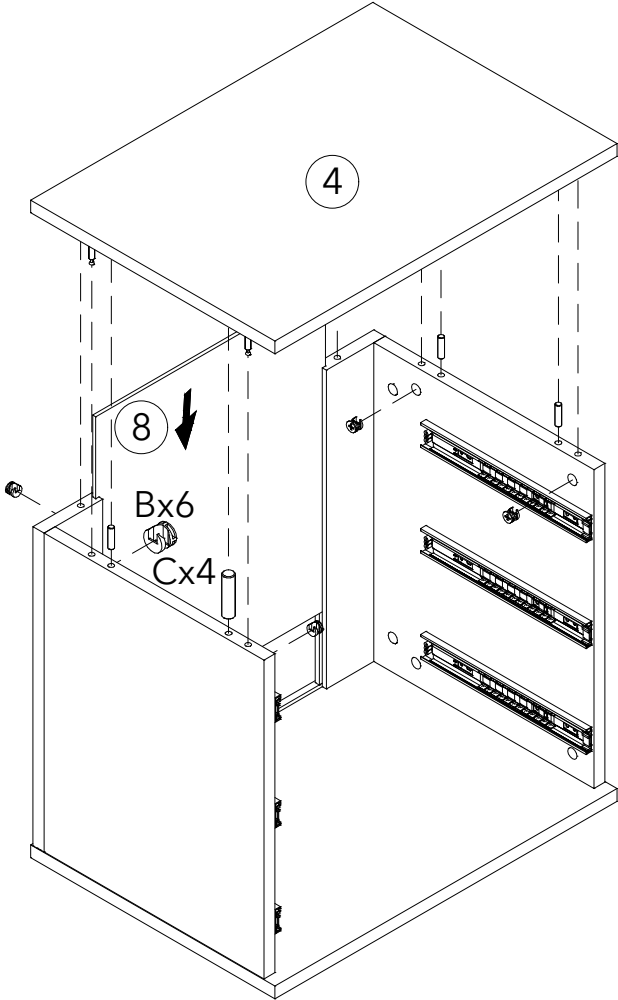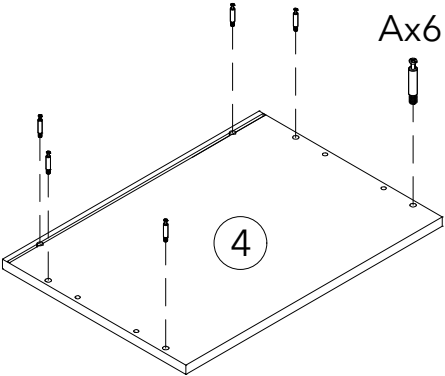



			
	C	Ø 8x30	4pcs
		A	M6x40mm 6pcs
		B	Ø15x11.5 6pcs

Step 7: x3

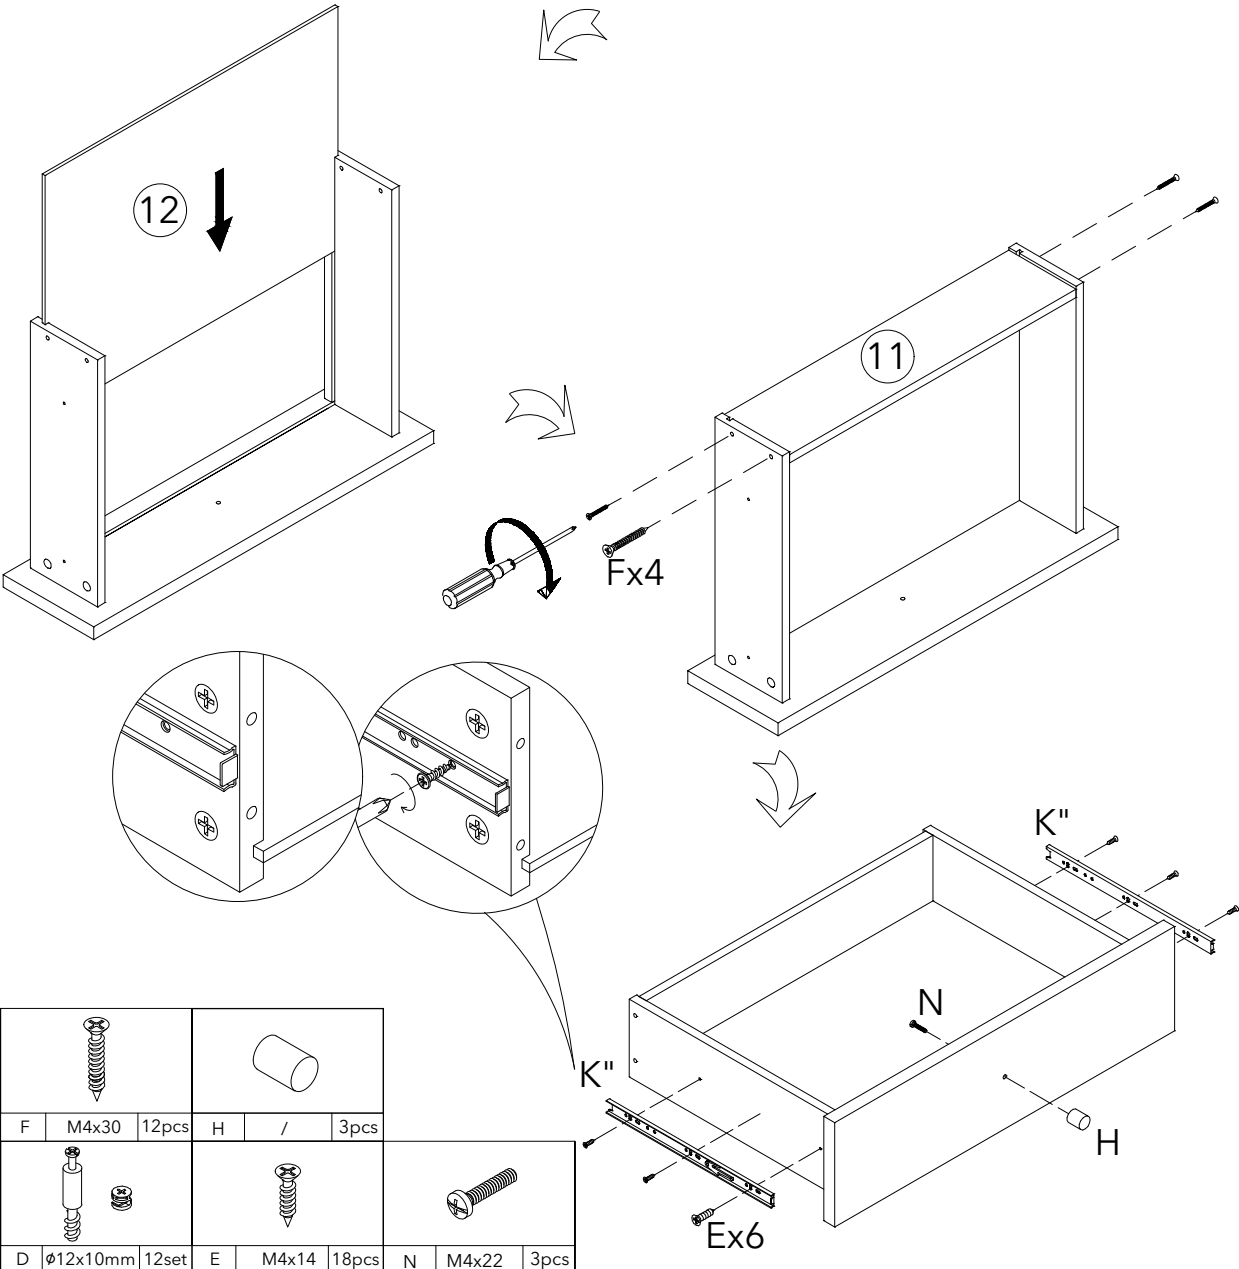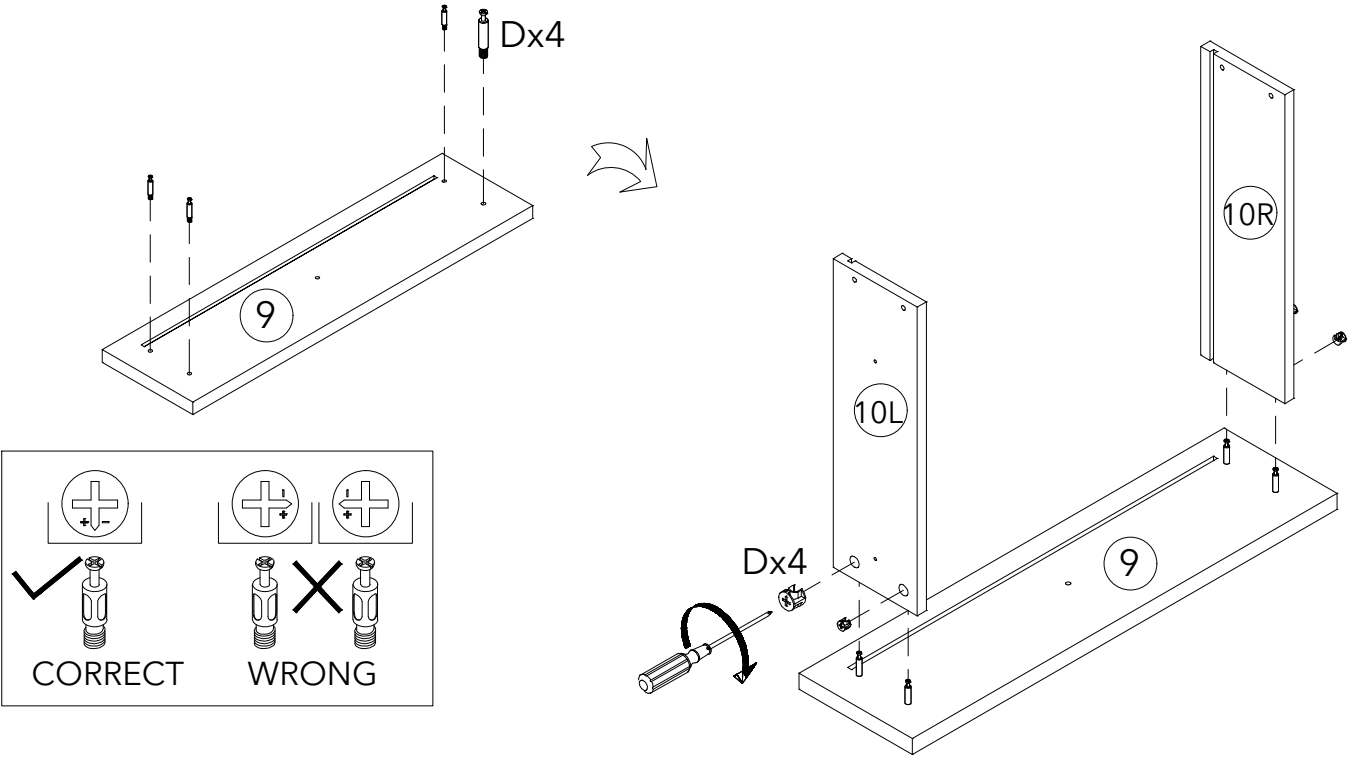


								
K	12"	3set	F	M4x30	12pcs	H	/	3pcs
								
D			E			N		
φ12x10mm			M4x14			M4x22		
12set			18pcs			3pcs		


Step 8:

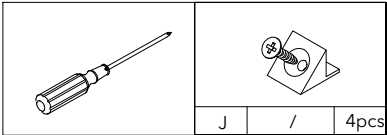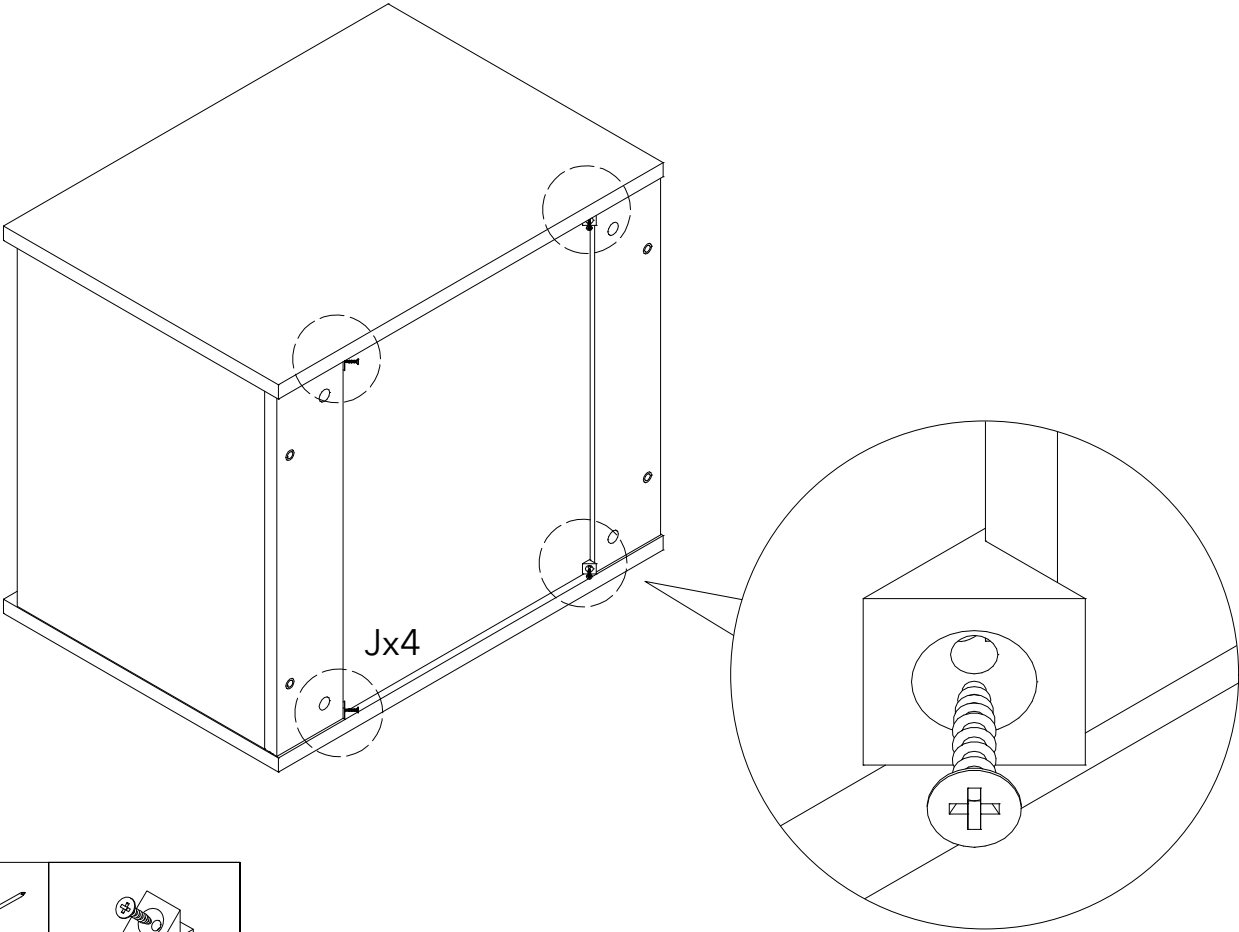


Step 9:

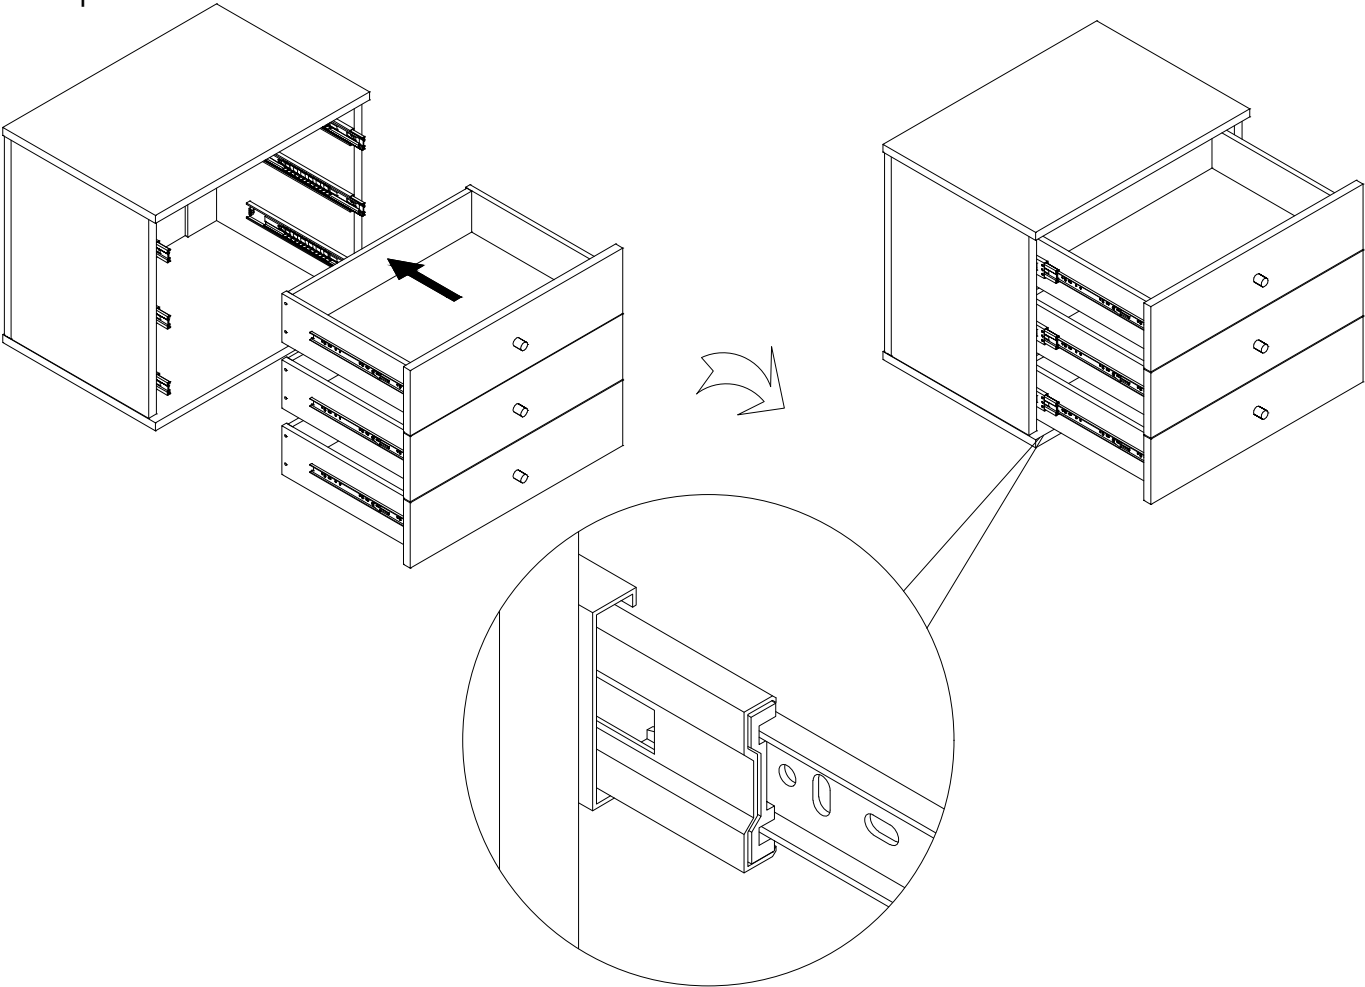


Step 10:

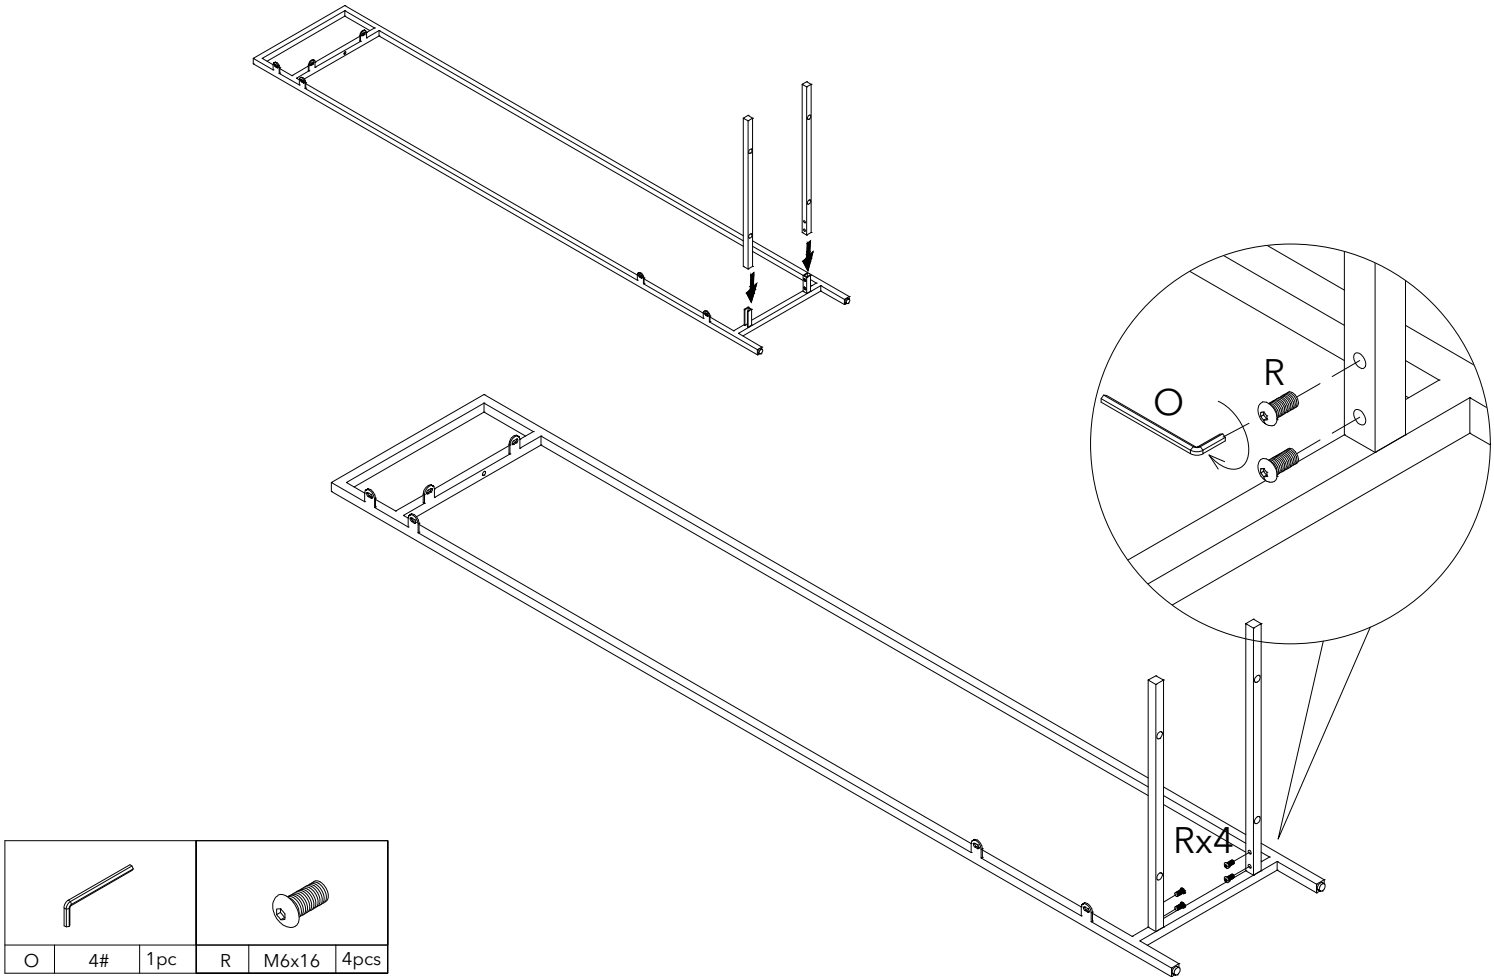


Step 11:

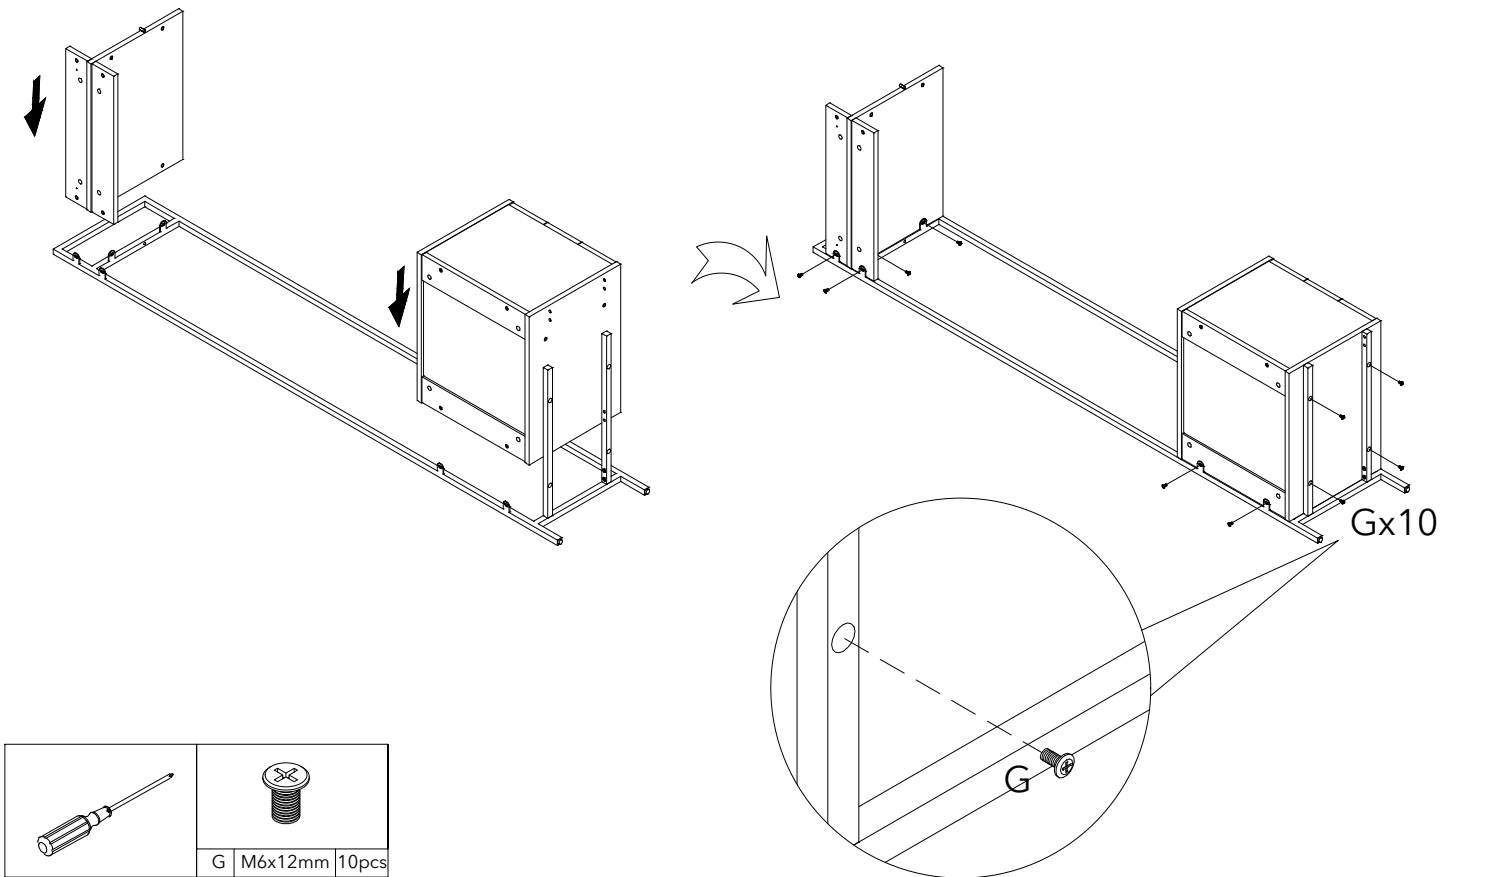


Step 12:

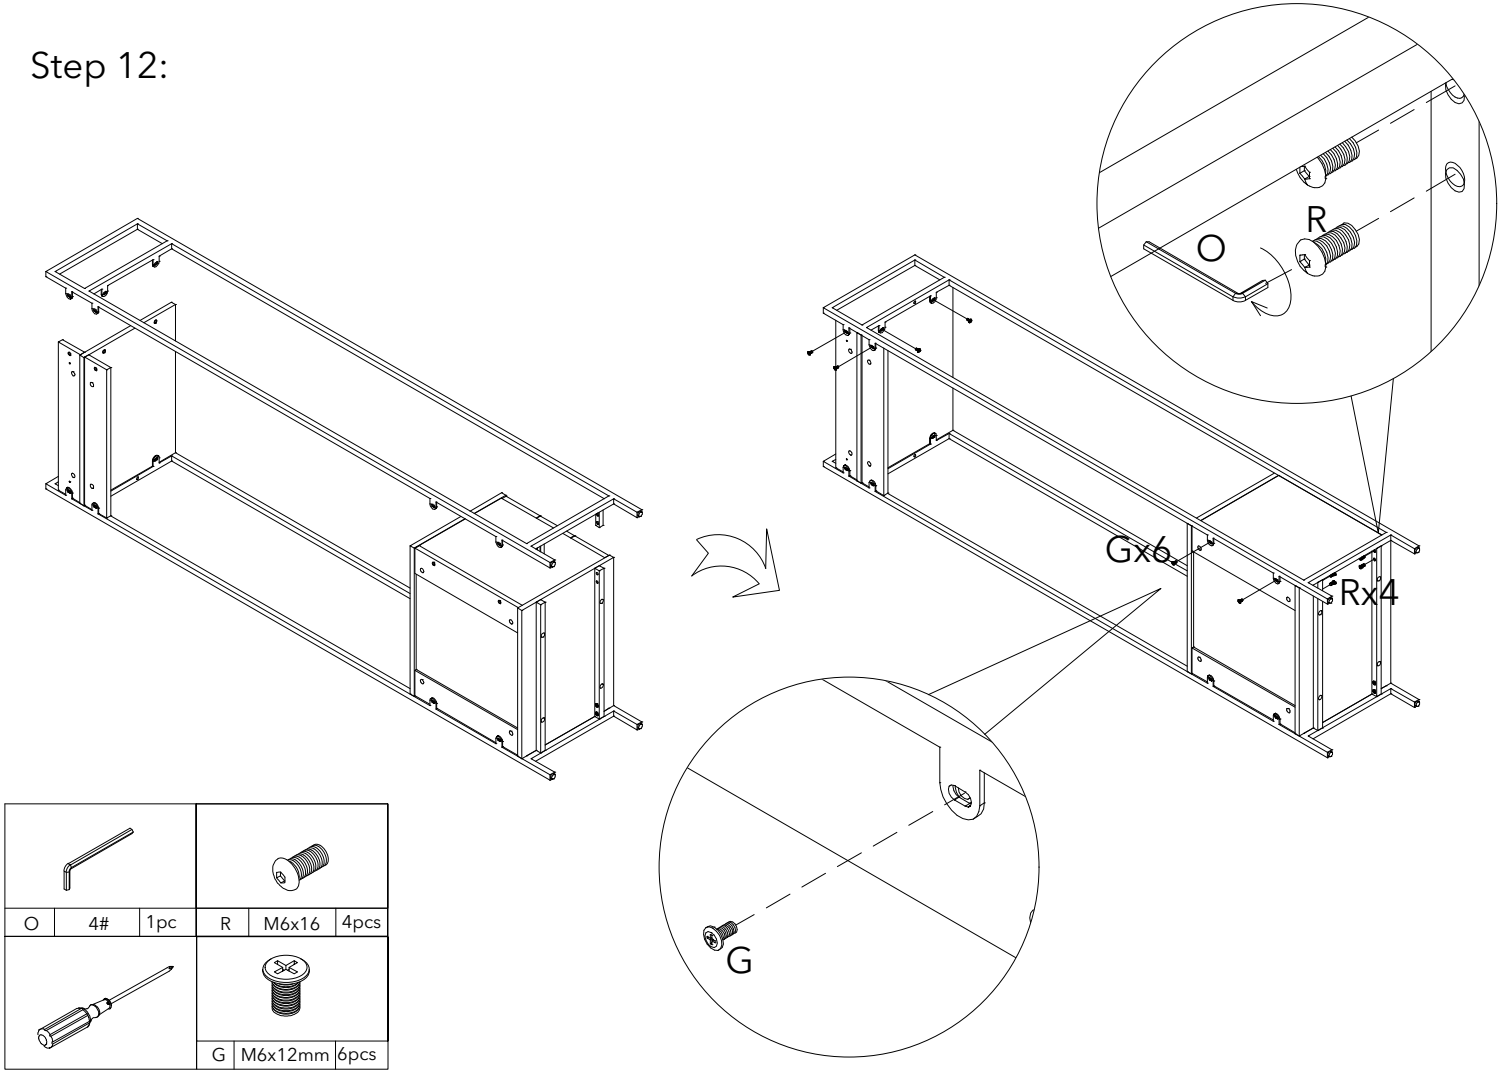


Step 13:

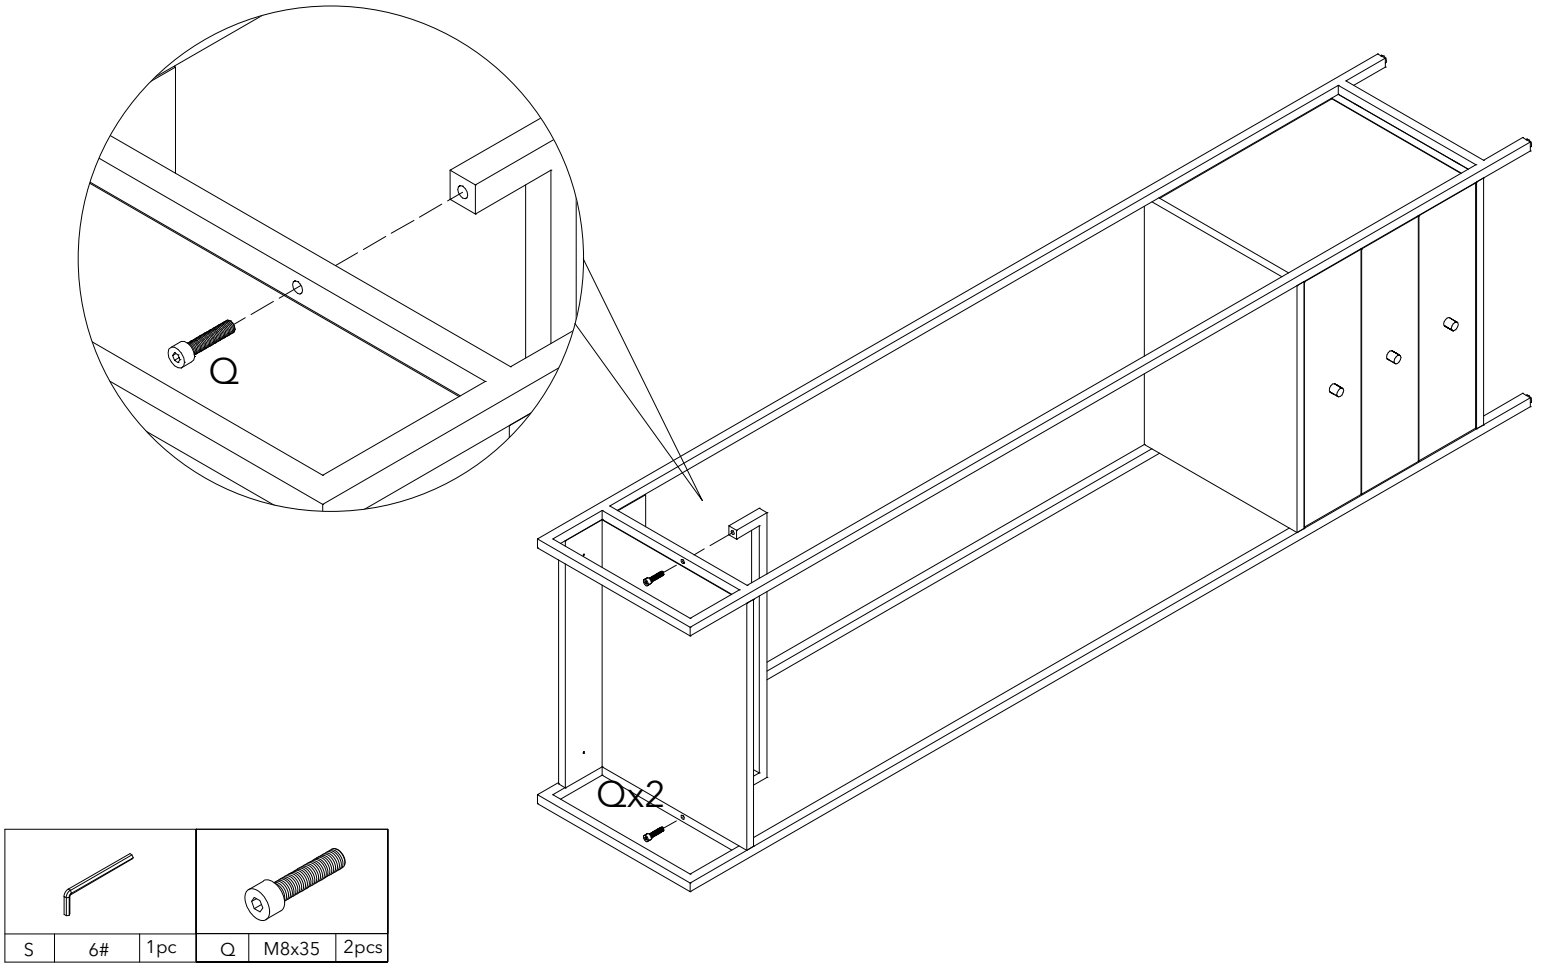

Step 14:

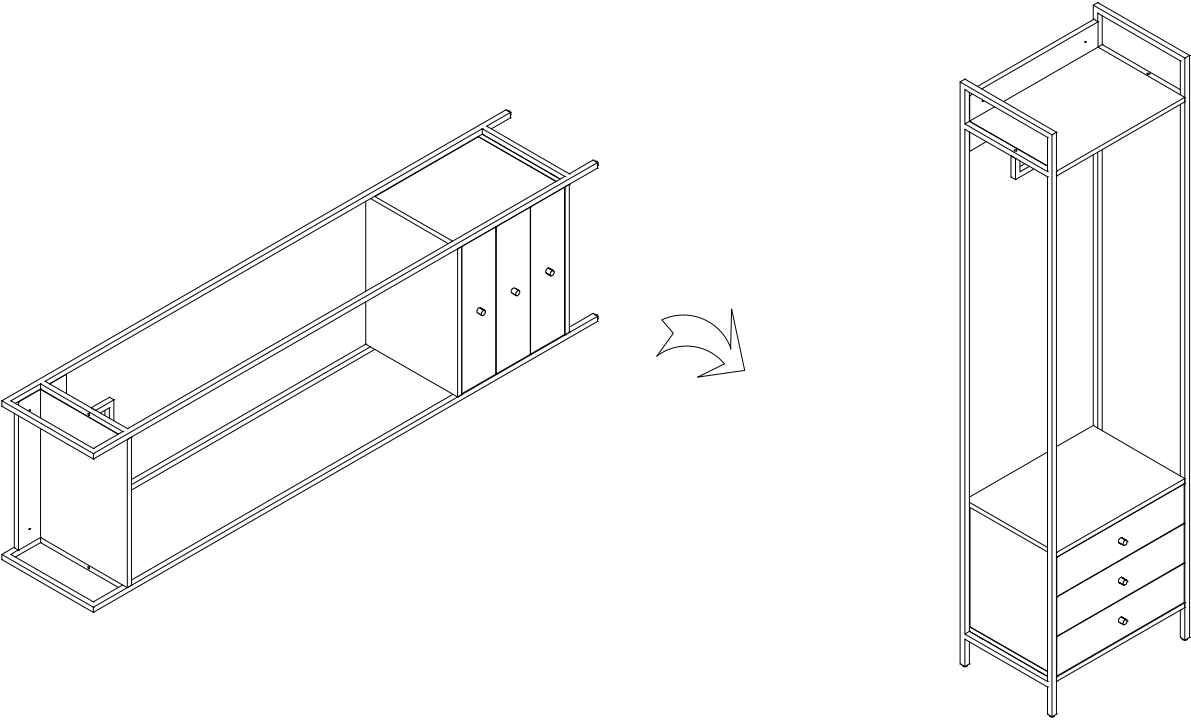


Step 15:

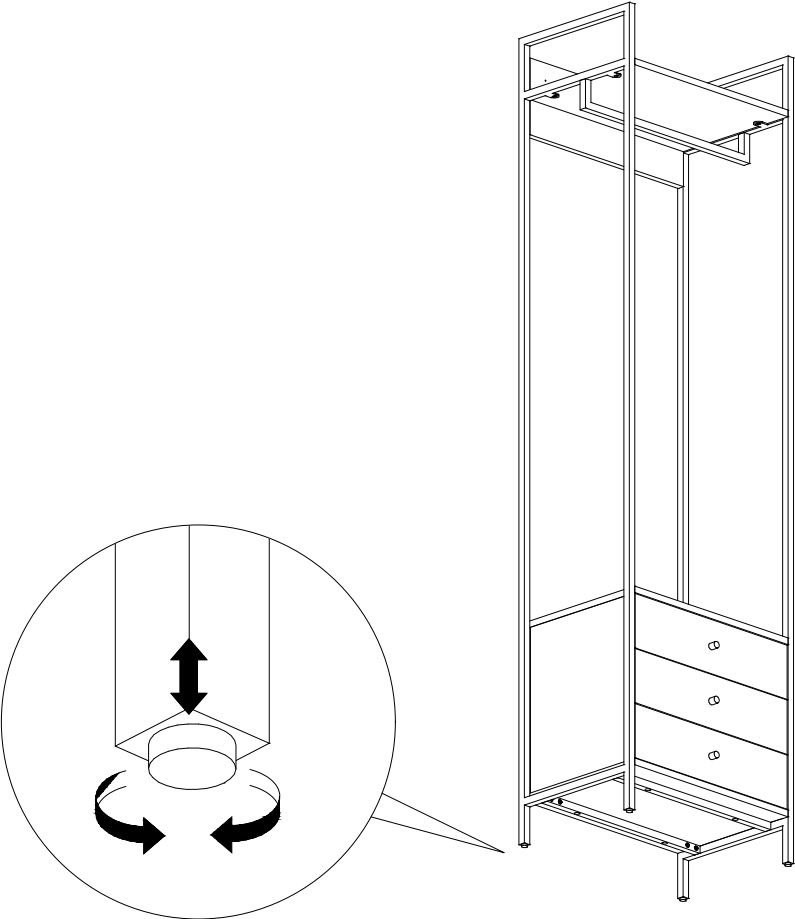

Levelling adjustment


Step 16:

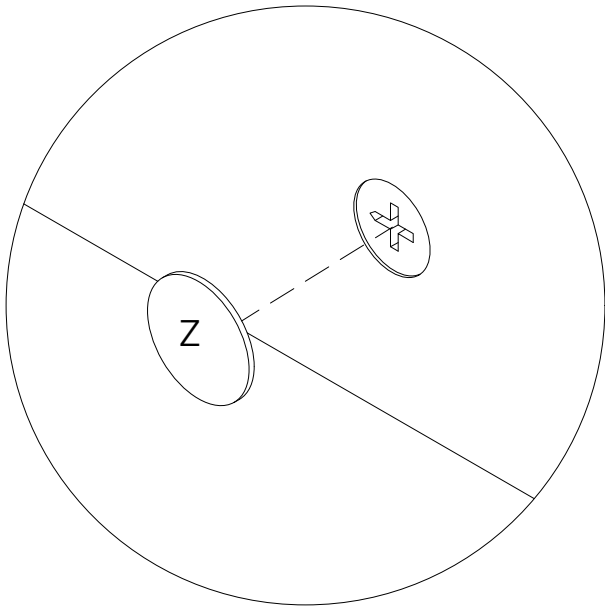

Add the screw covers
for those visible cams

Z	Ø20	20pcs


Step 17:

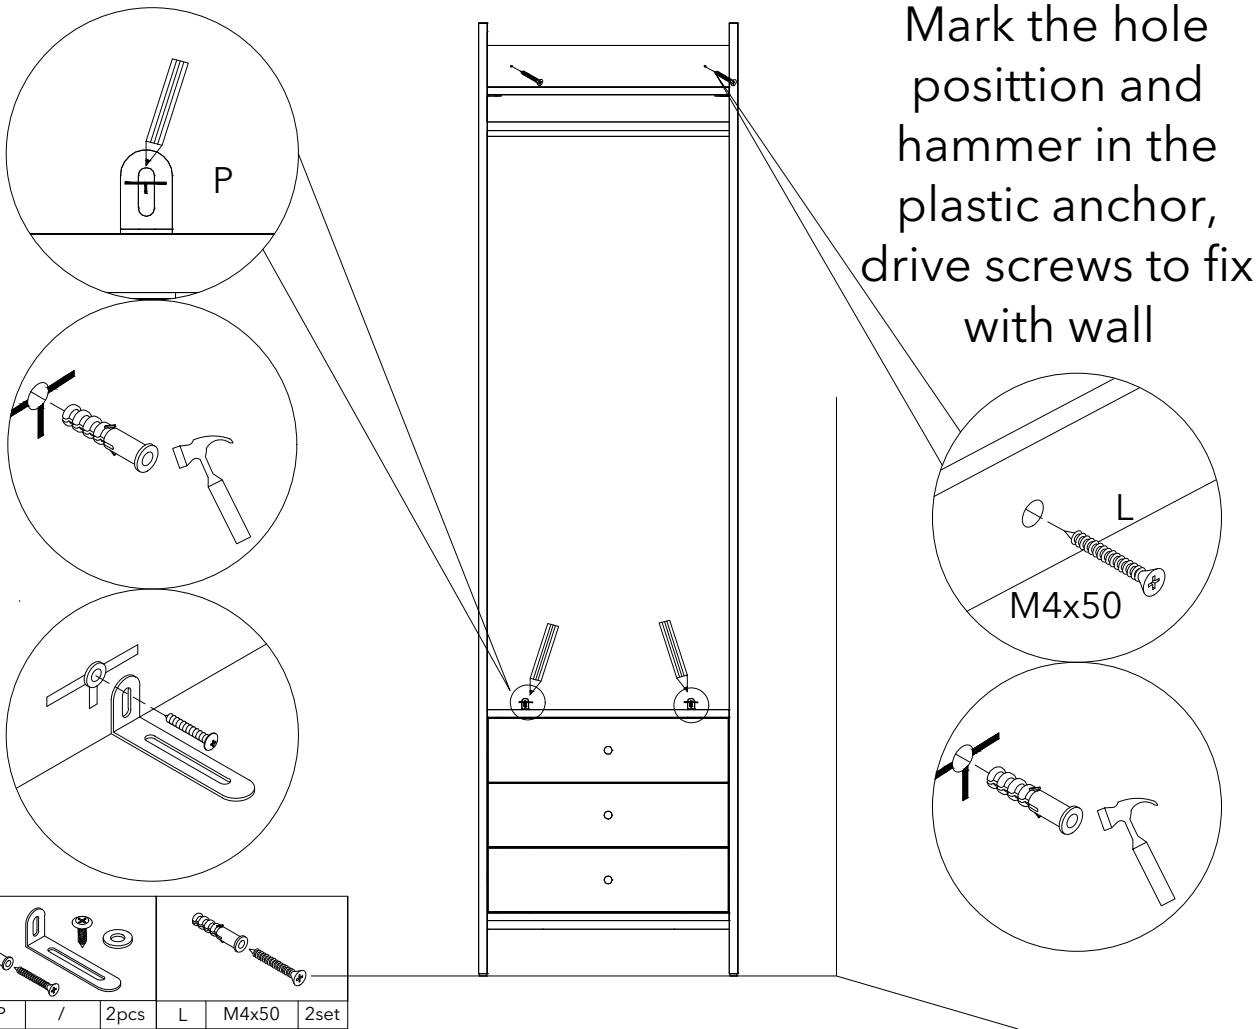



Mark the hole
position and
hammer in the
plastic anchor,
drive screws to fix
with wall

P	/	2pcs	L	M4x50	2set			


Step 18:

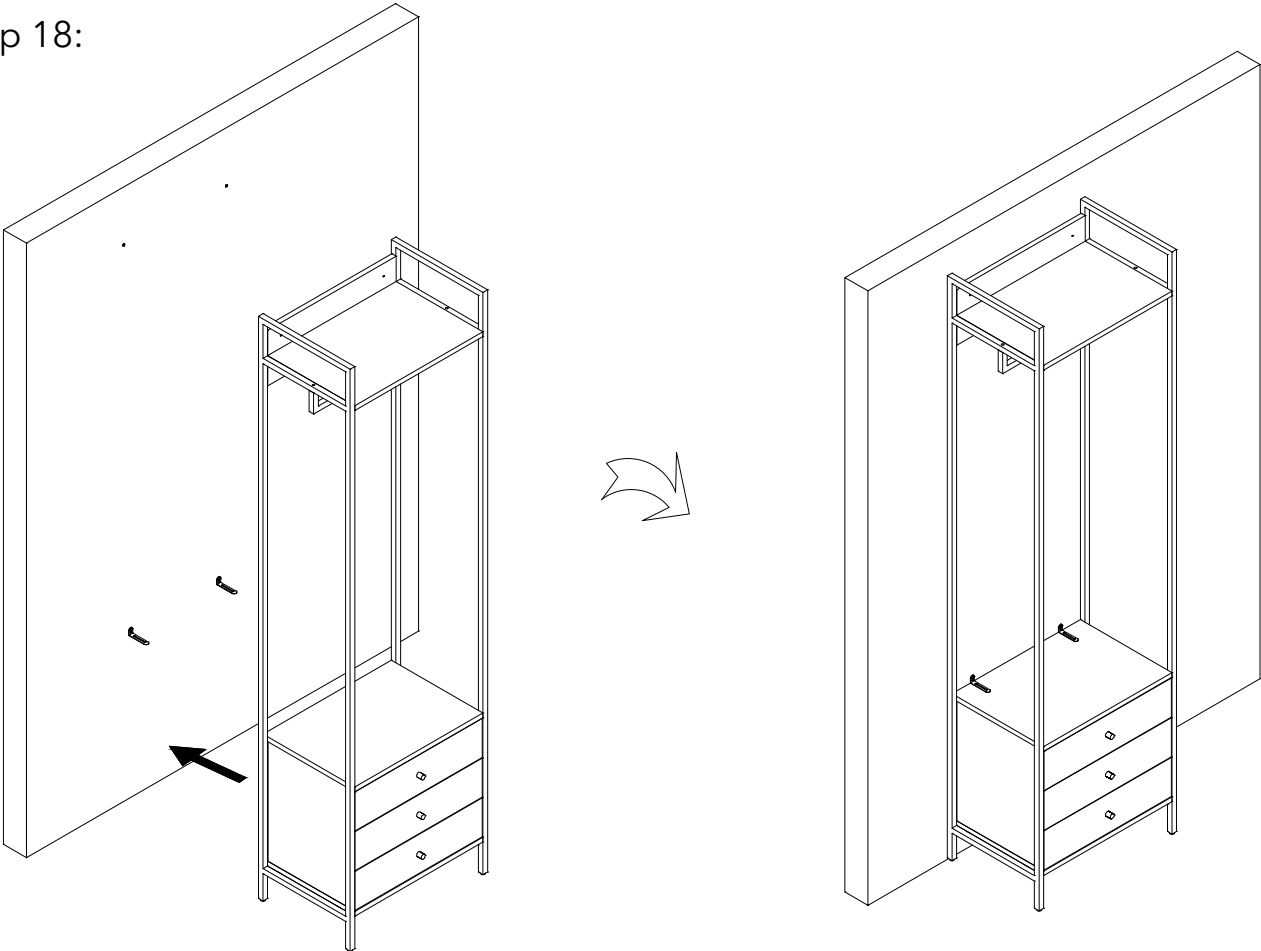


Step 19:

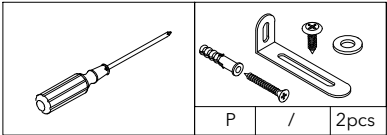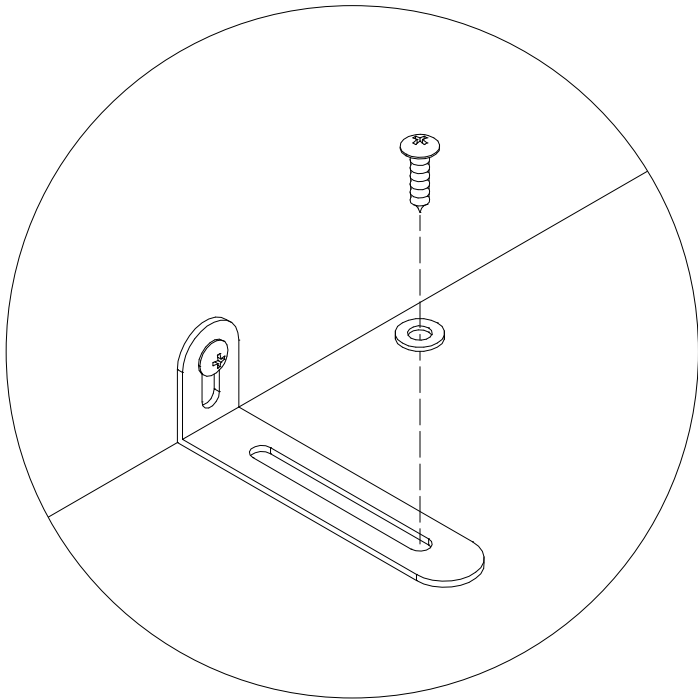


Step 20:

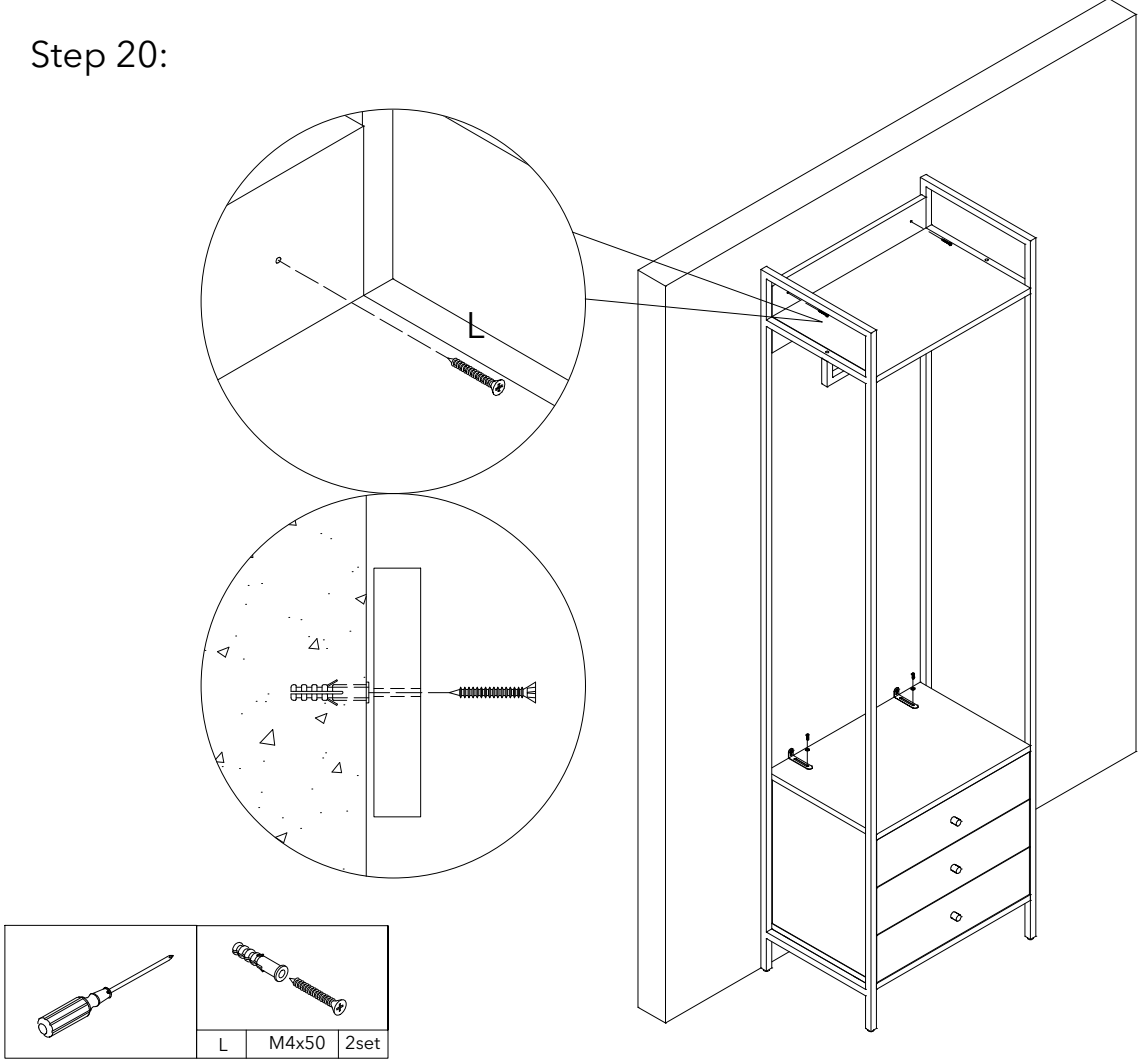

Step 21:

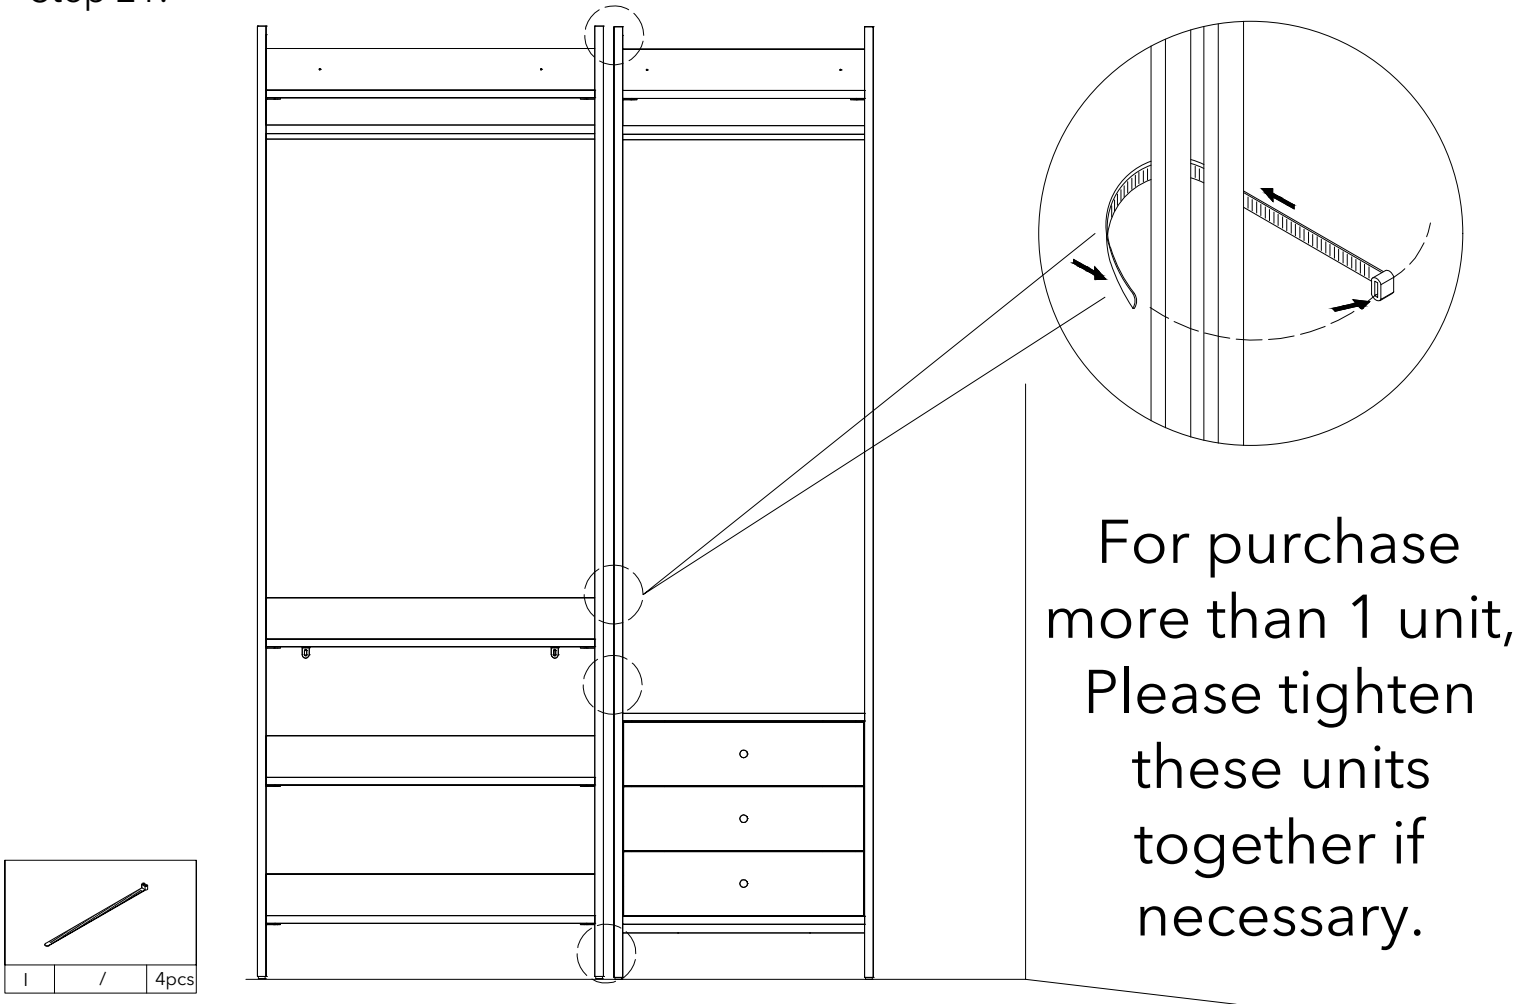

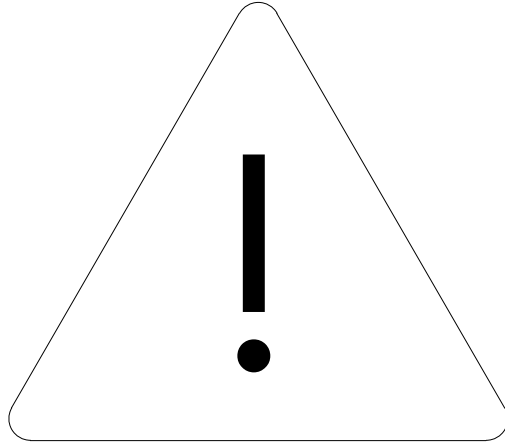

Please note that you may need different Wall fixing hardware due to different wall types. Consult your furniture seller when necessary