

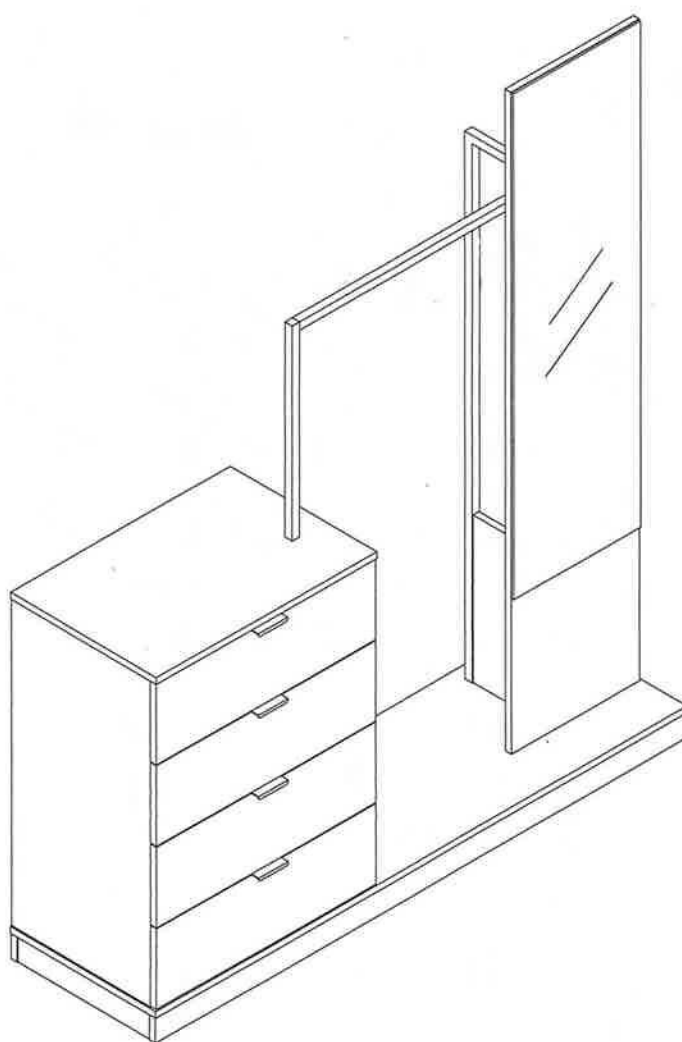
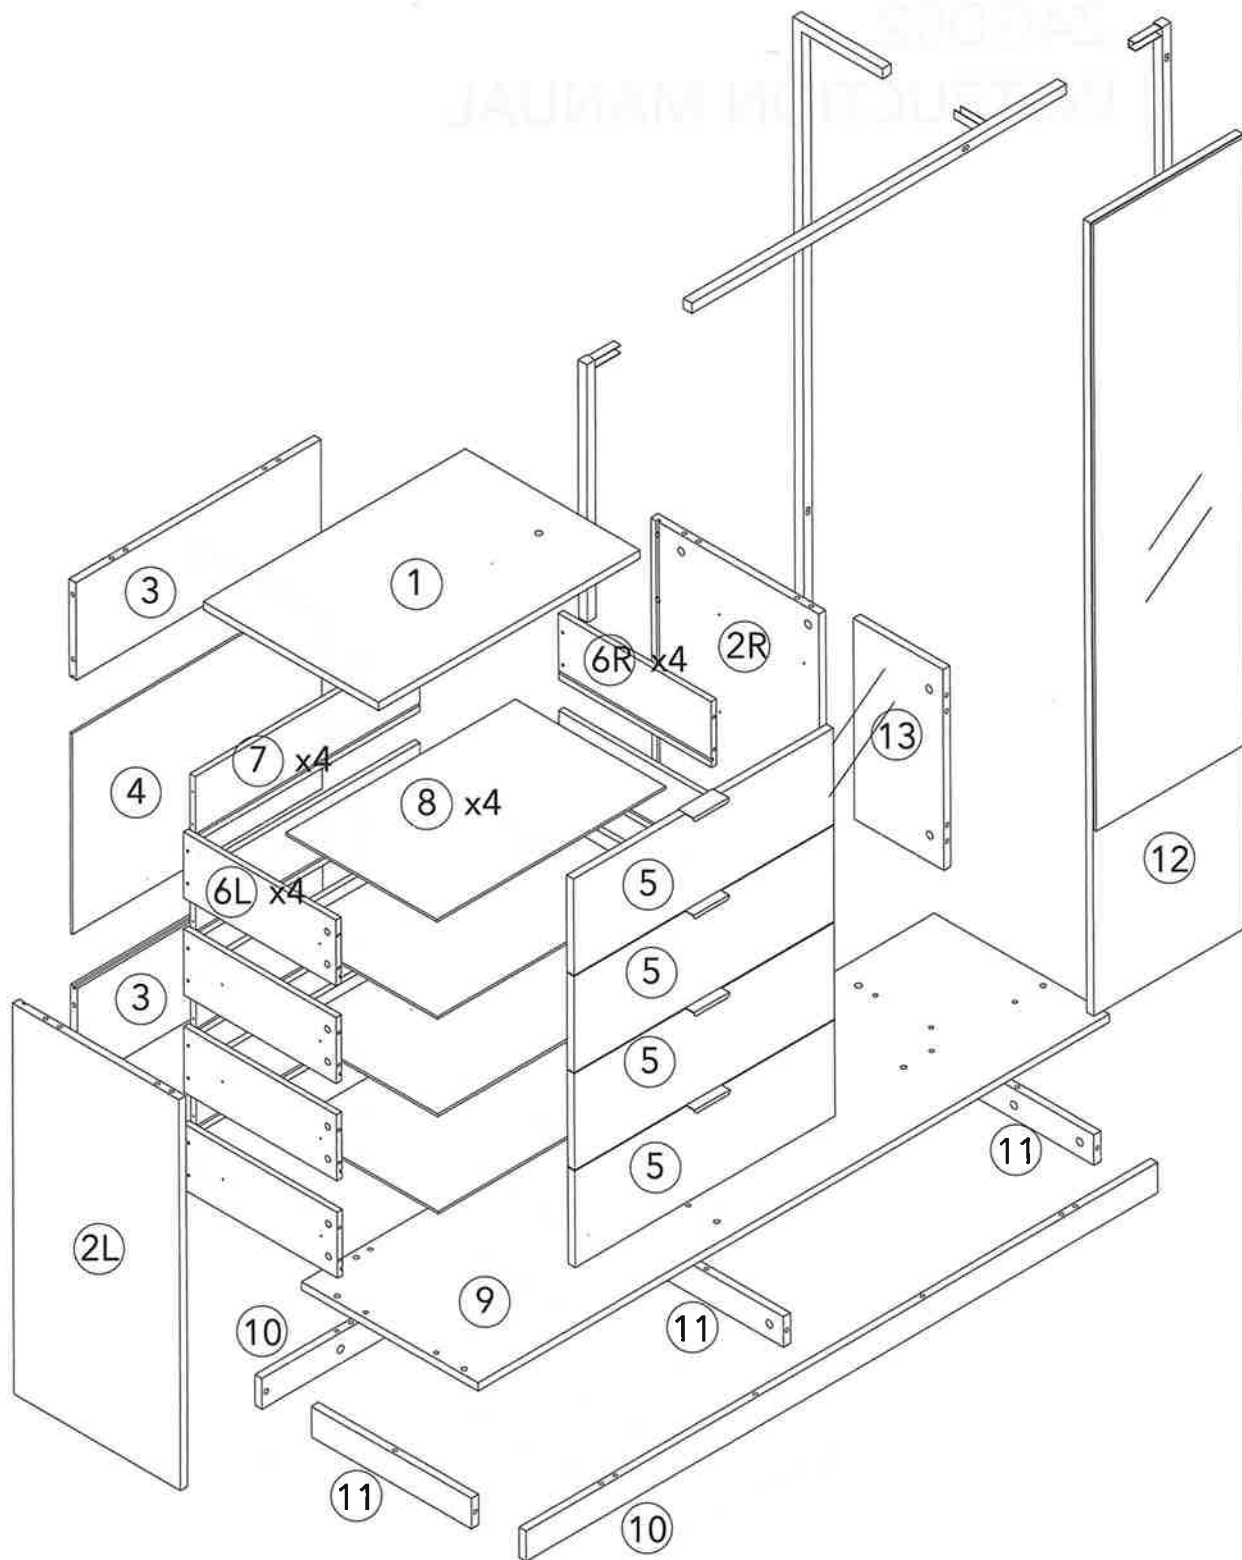

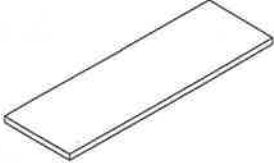
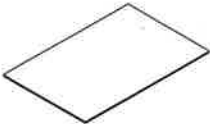
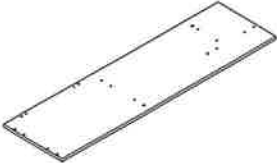
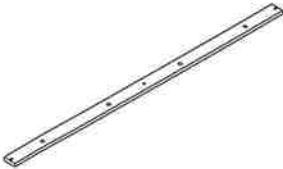
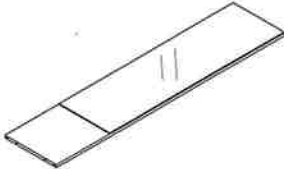
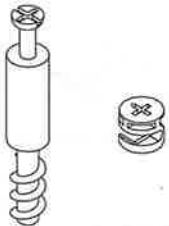
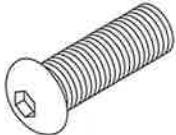
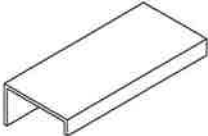


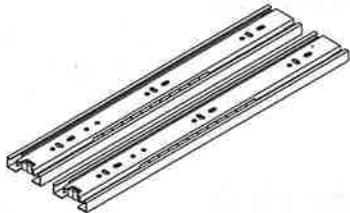


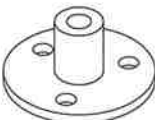


Ref	Dimensions(mm)	Visual	Qty
1	600x400x16		1
2	770x382x16		2
3	564x192x16		2
4	574x396x5		1
5	596x190x16		4
6	350x130x12		8
7	515x130x12		4
8	525x344x5		4
9	1450x400x16		1
10	1448x60x16		2



Ref	Dimensions(mm)	Visual	Qty
11	364x60x16		3
12	1564x350x16		1
13	396x205x16		1

								
A	M6x40mm	41pcs	B	Ø15x11.5	41pcs	C	Ø8x30	22pcs
								
D	Ø12x10mm	16set	E	M4x14	56pcs	F	M4x30	16pcs
								
O	4#	1pcs	G	M6x30	9pcs	R	M6x16	6pcs
								
N	M4x16	9pcs	H	/	4pcs	K	12"	4set
								
I	/	3pcs	Z	Ø20	41pcs			



Step 1:

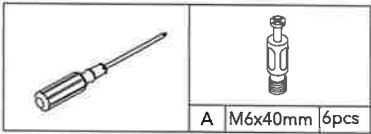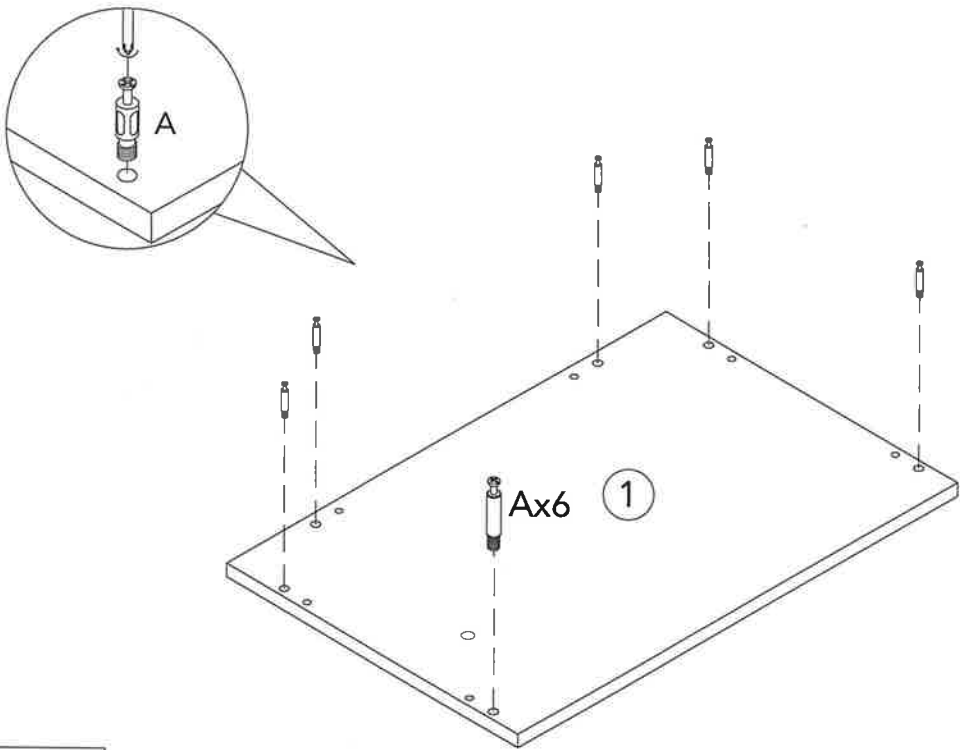


Step 2:

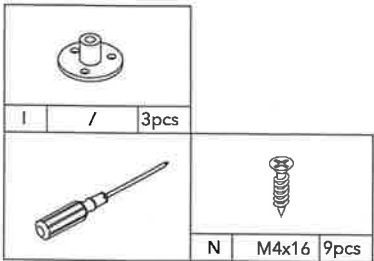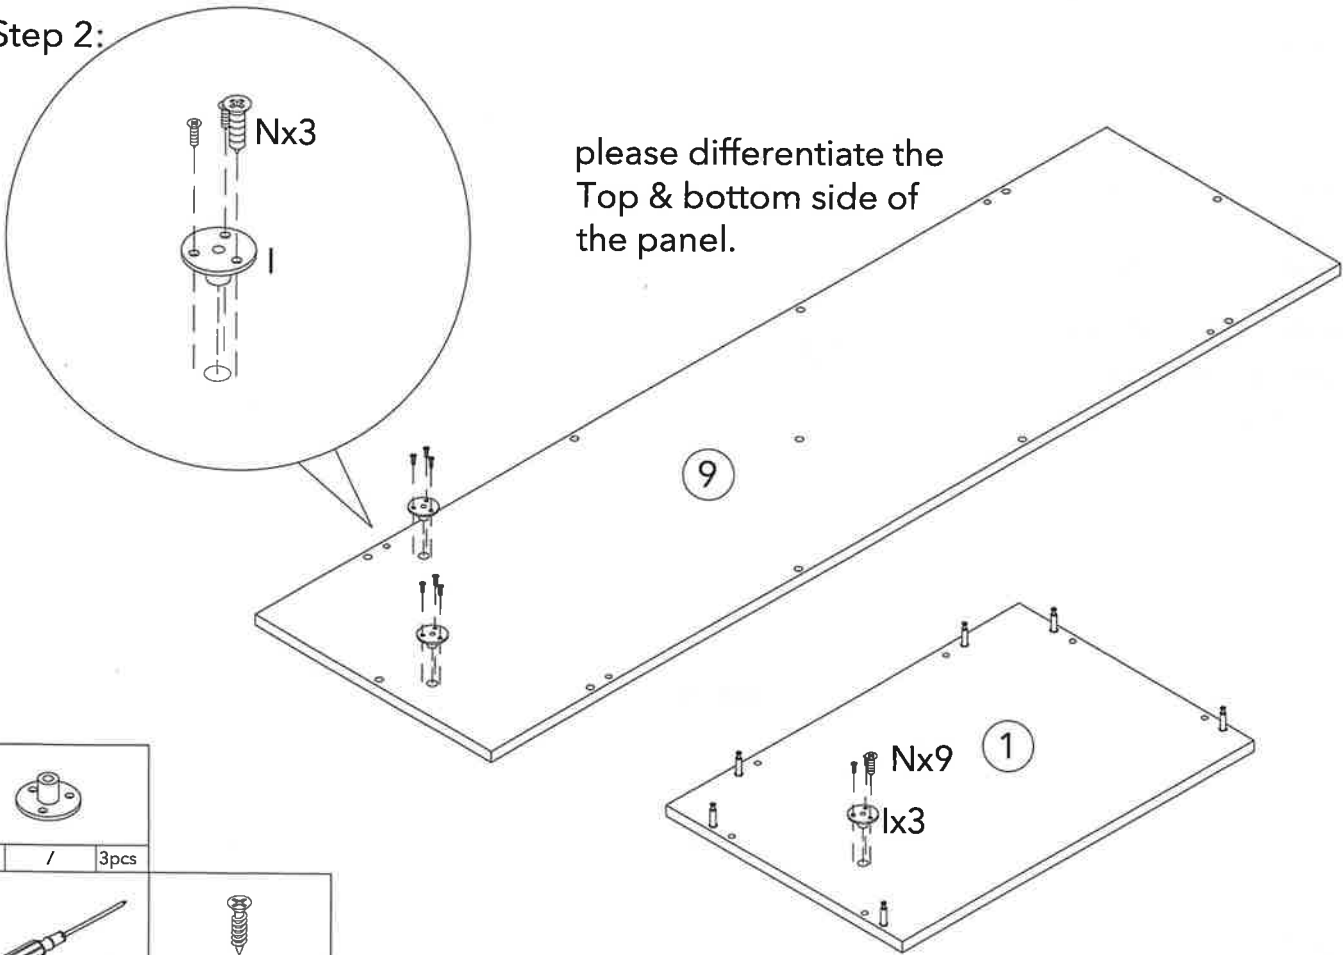



Step 3:

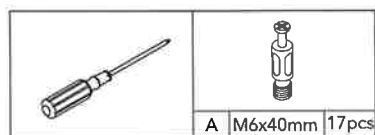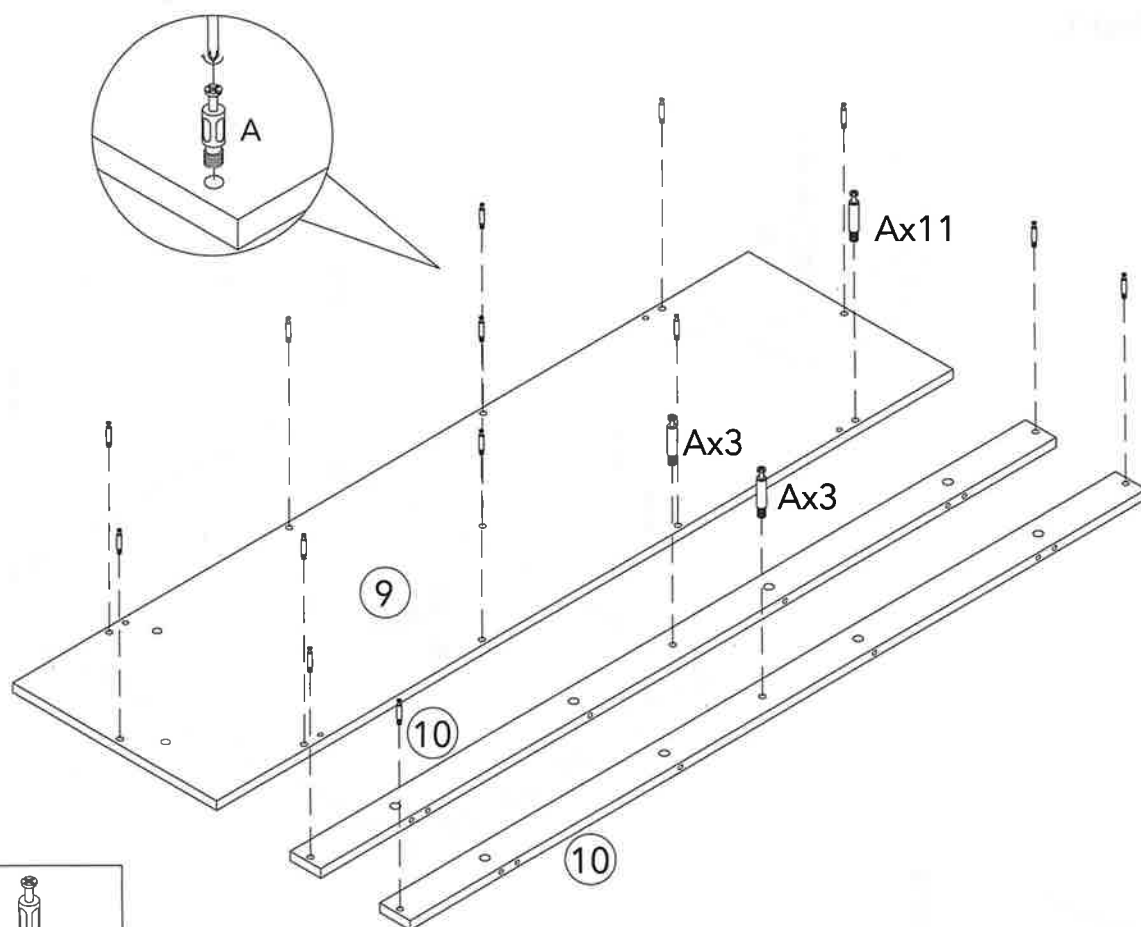


Step 4:

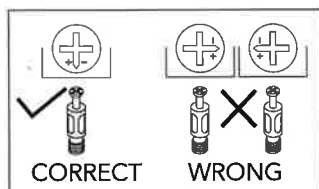


Please note that the locking cam faces outwards

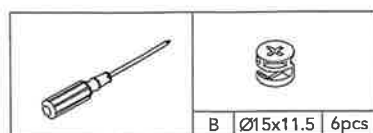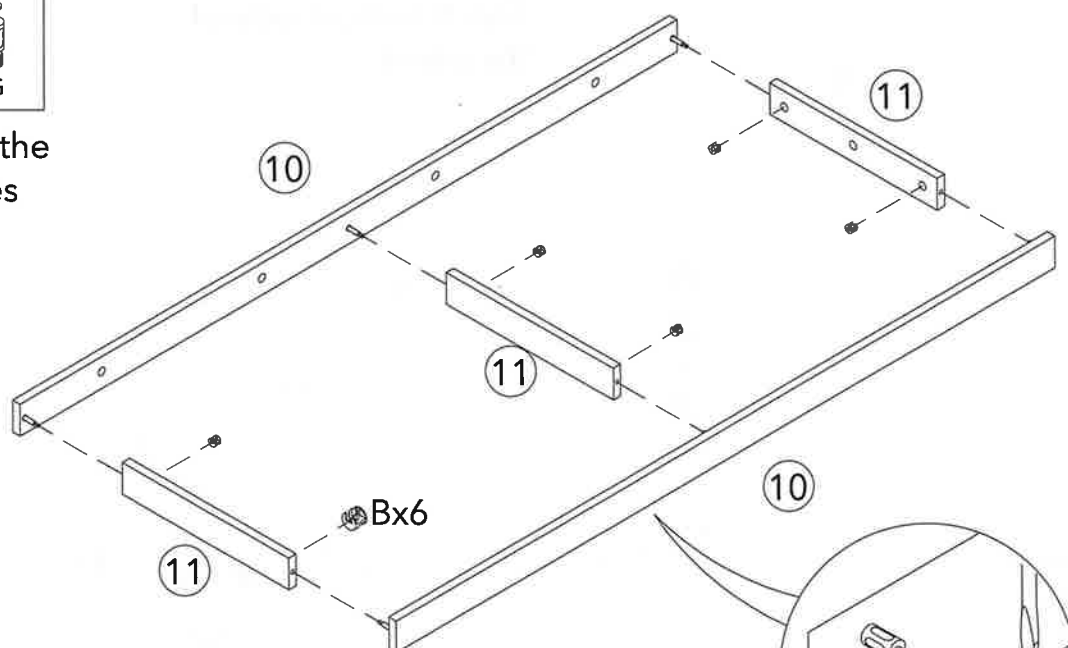


Step 5:

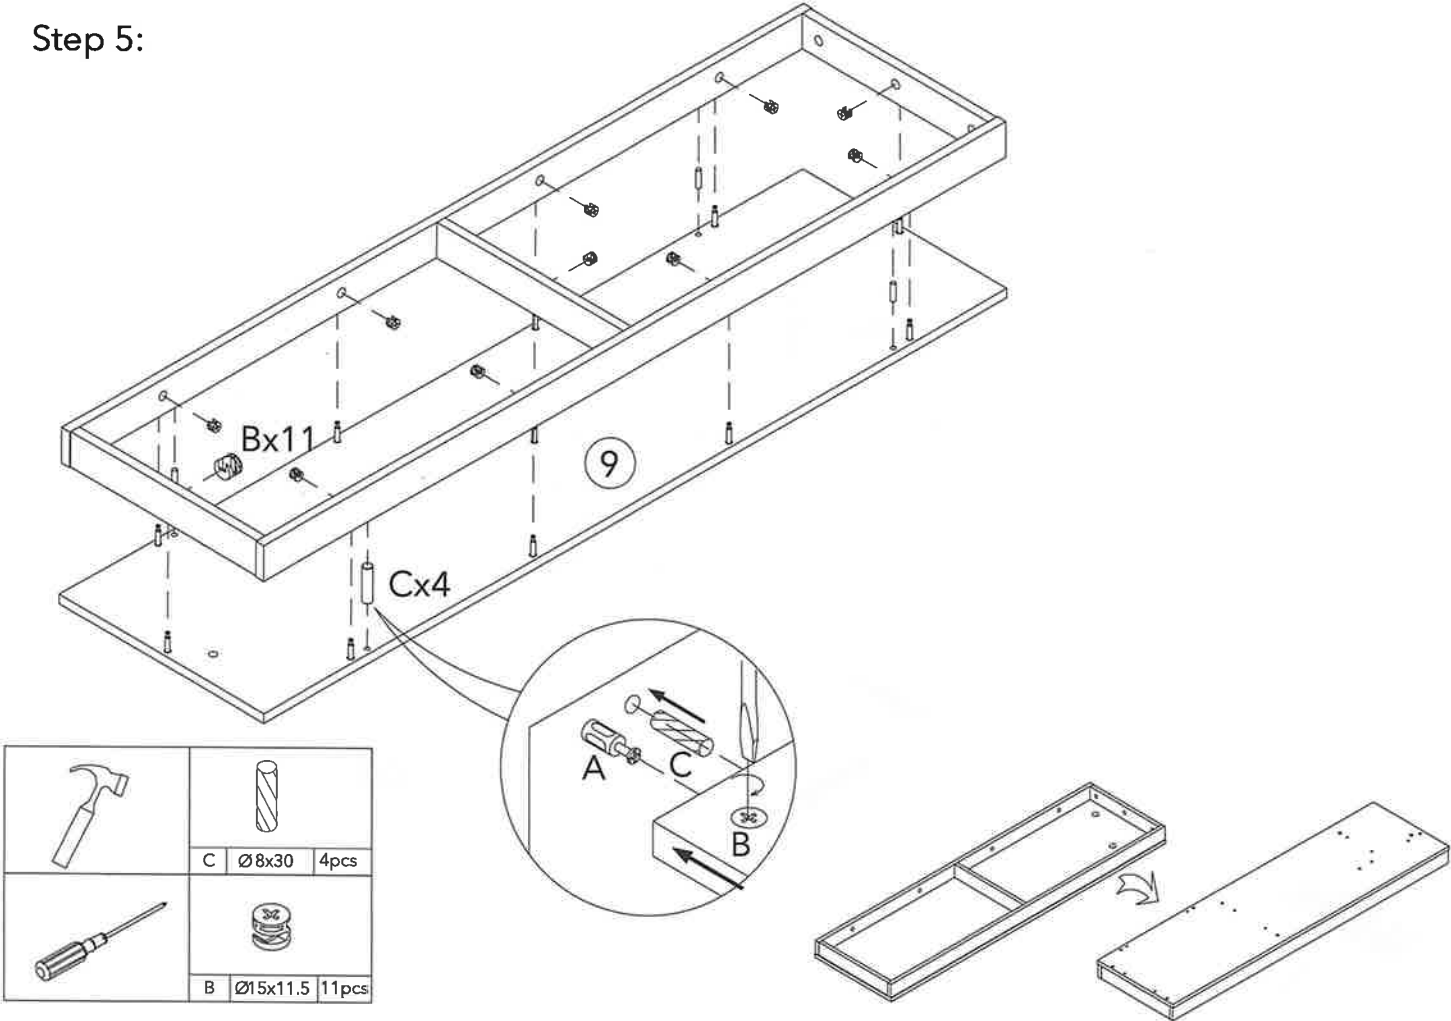


Step 6:

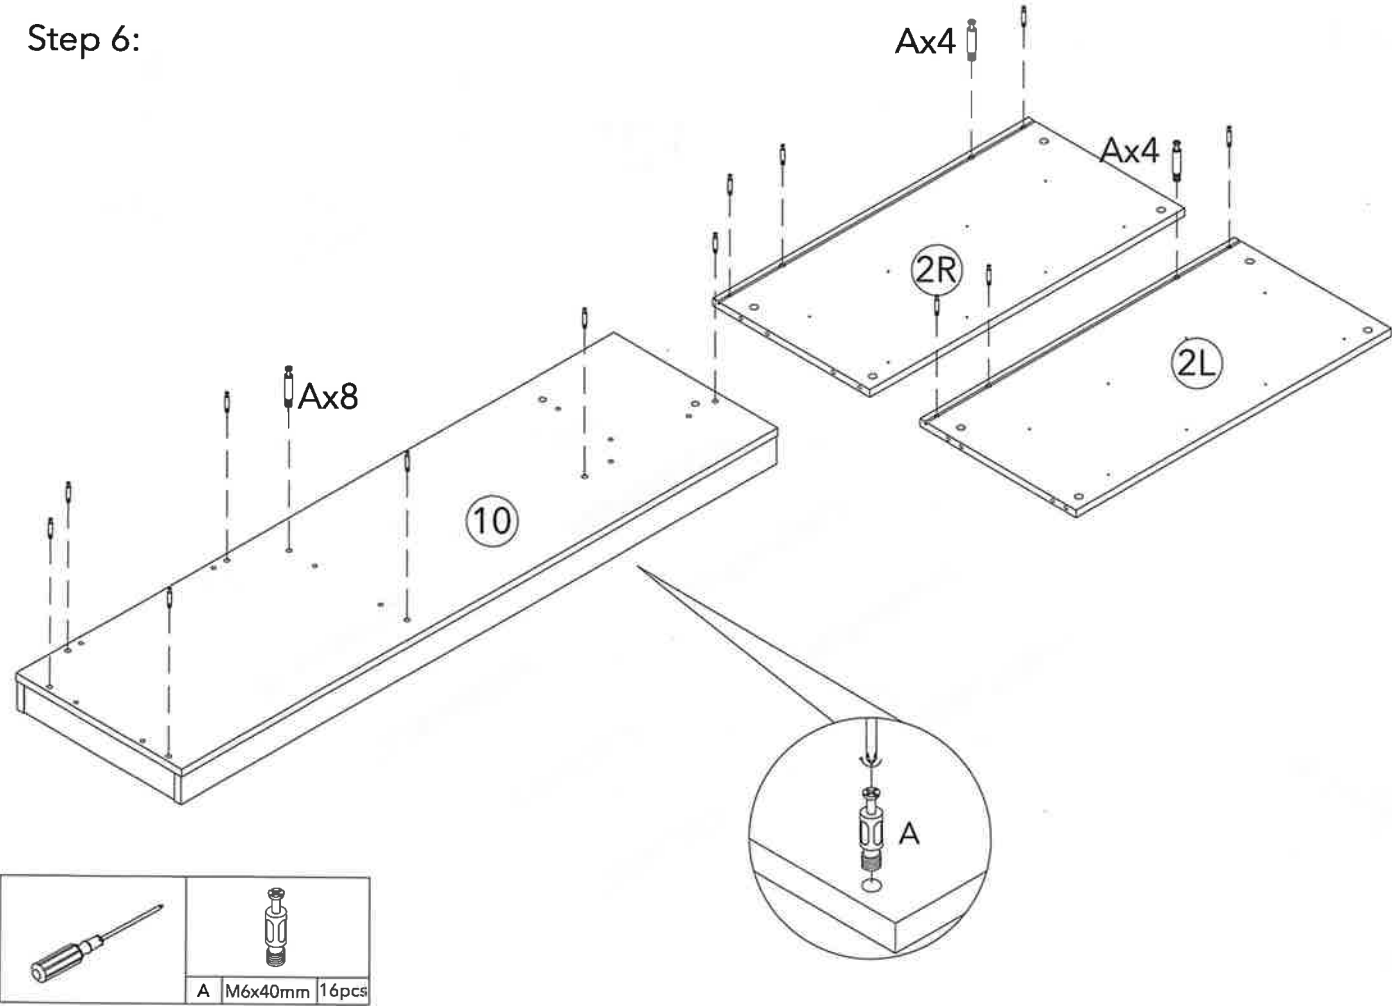



Step 7:

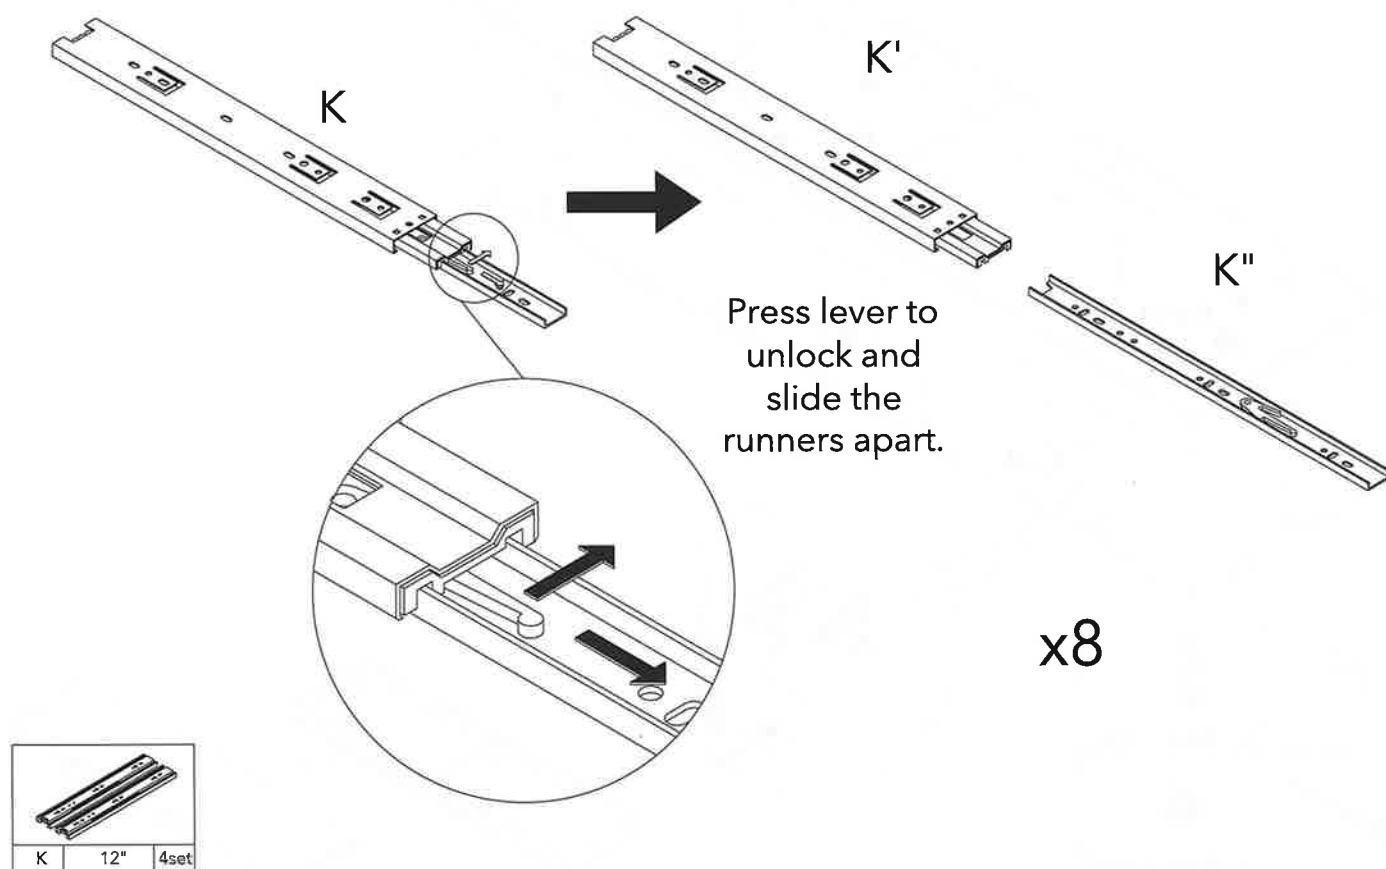



Step 8:

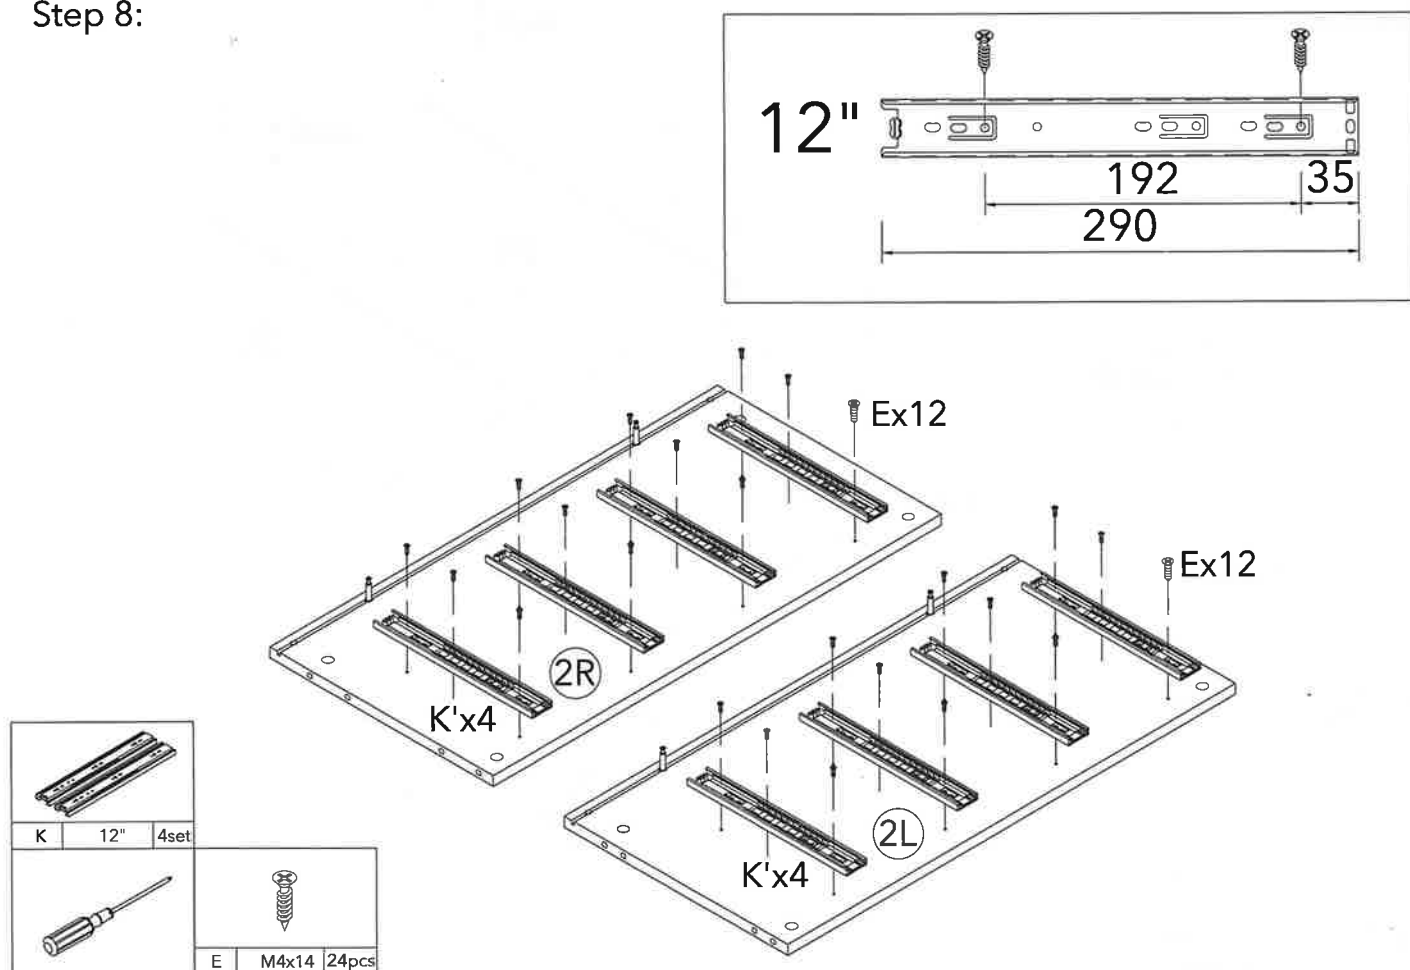


Step 9:

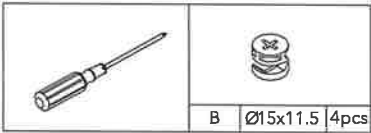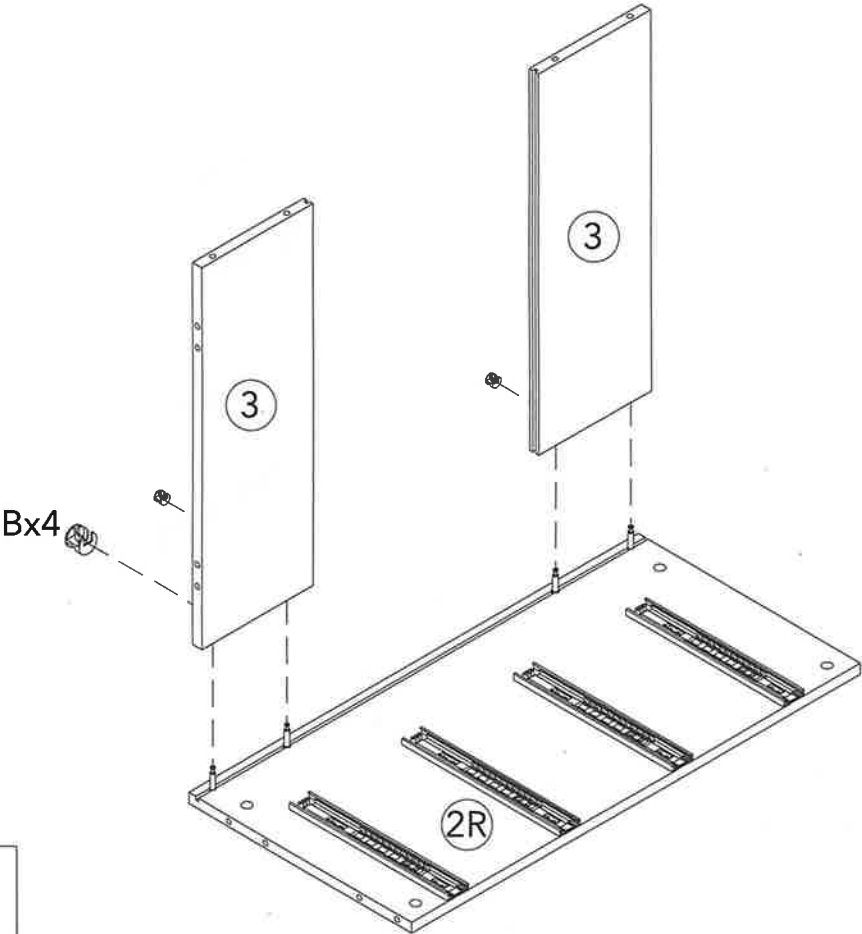


Step 10:

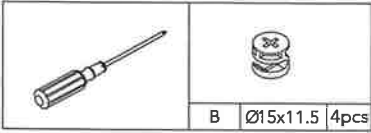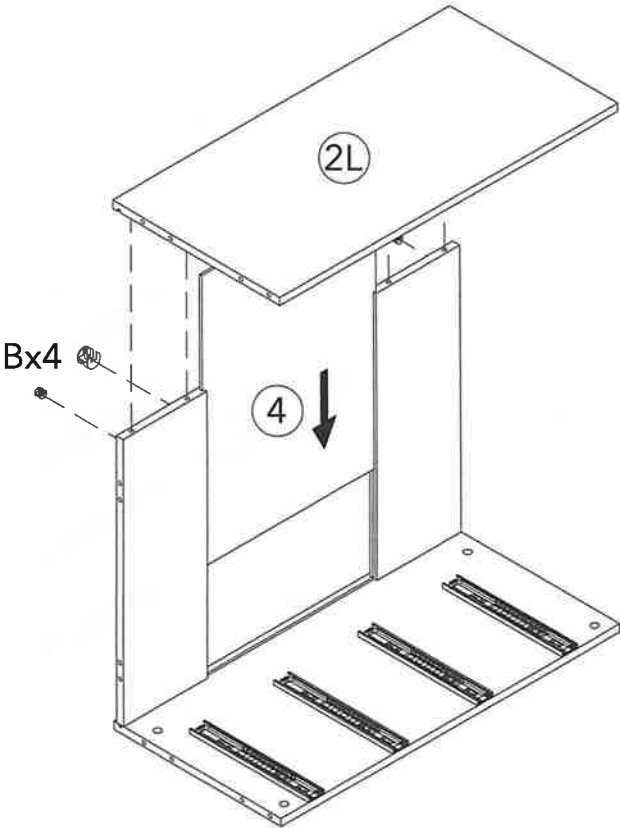


Step 11:

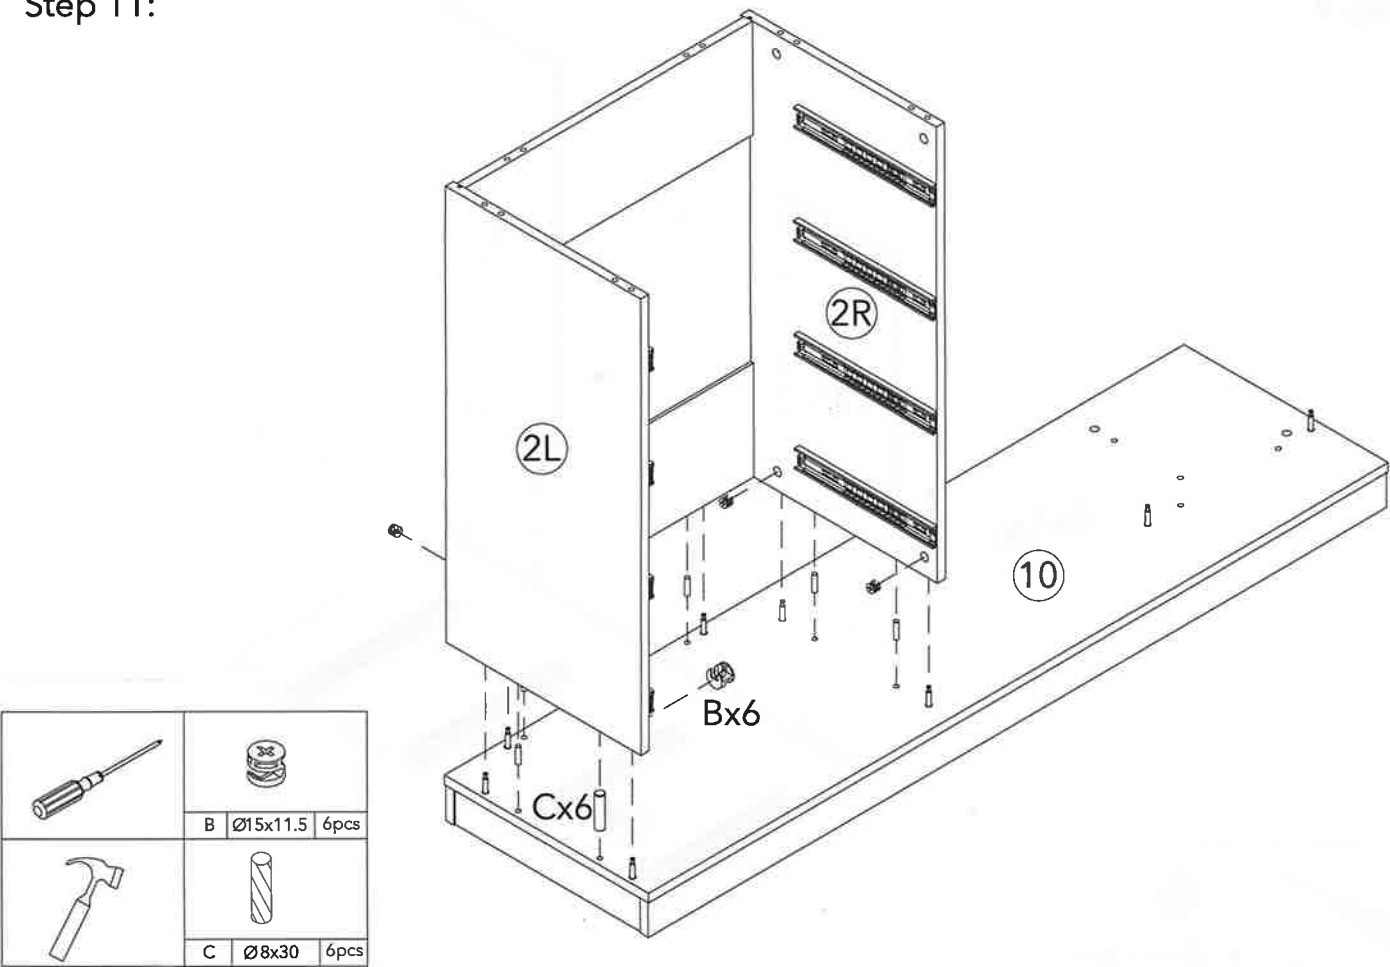


Step 12:

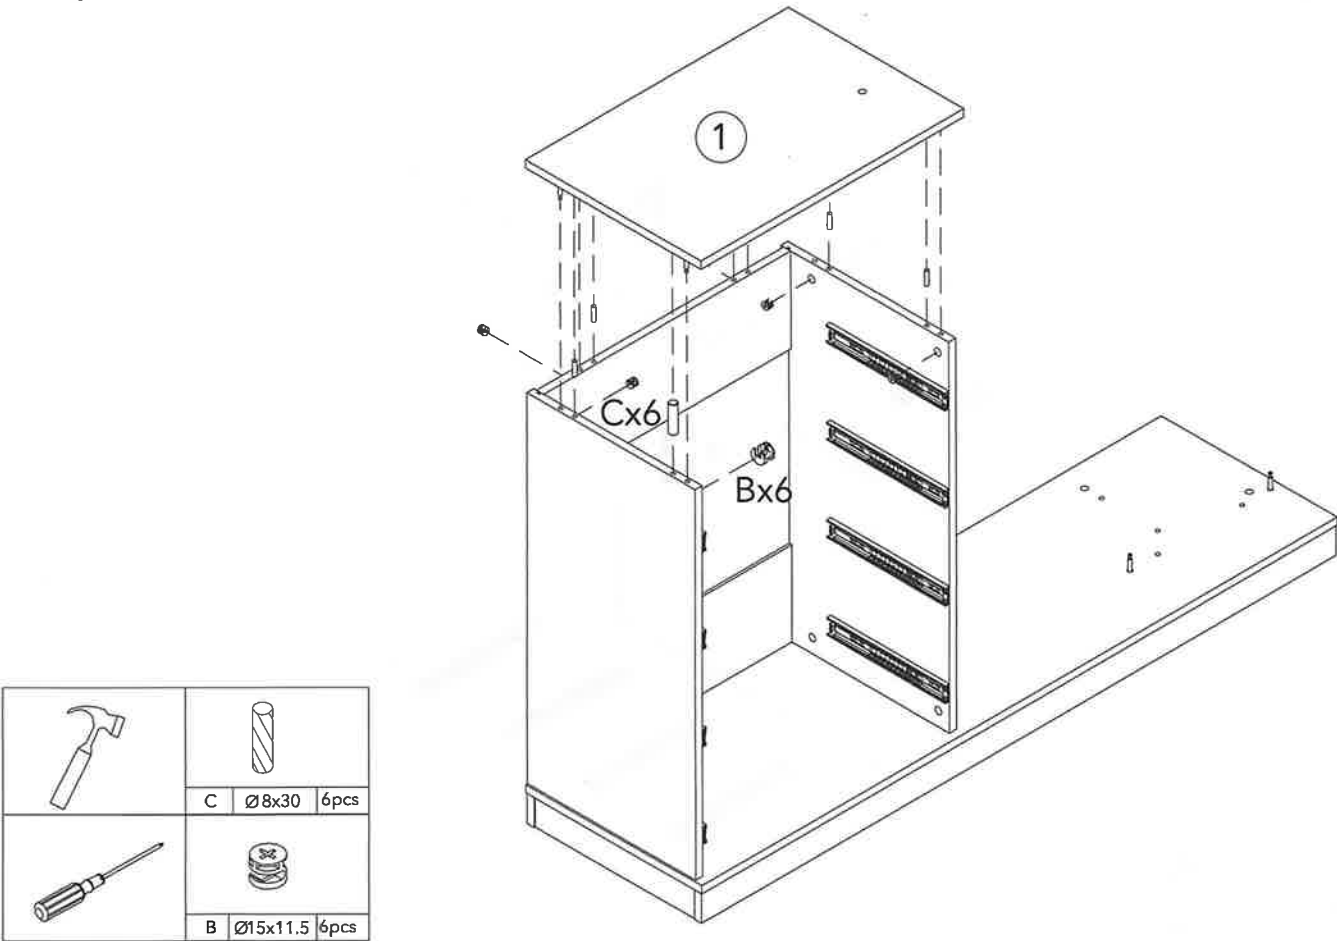


Step 13:

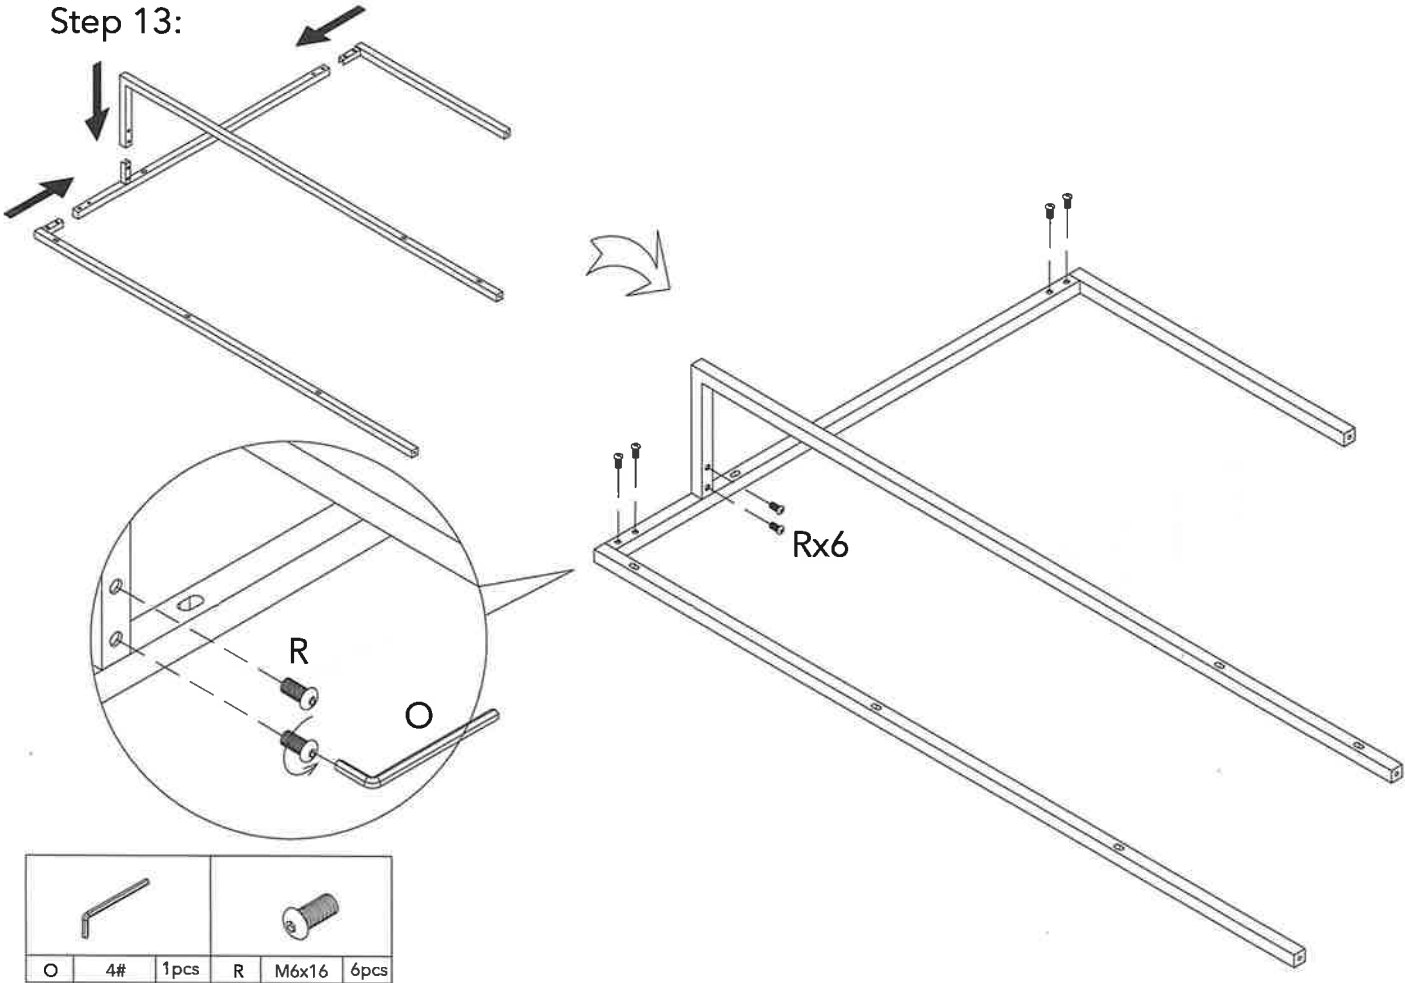


Step 14:

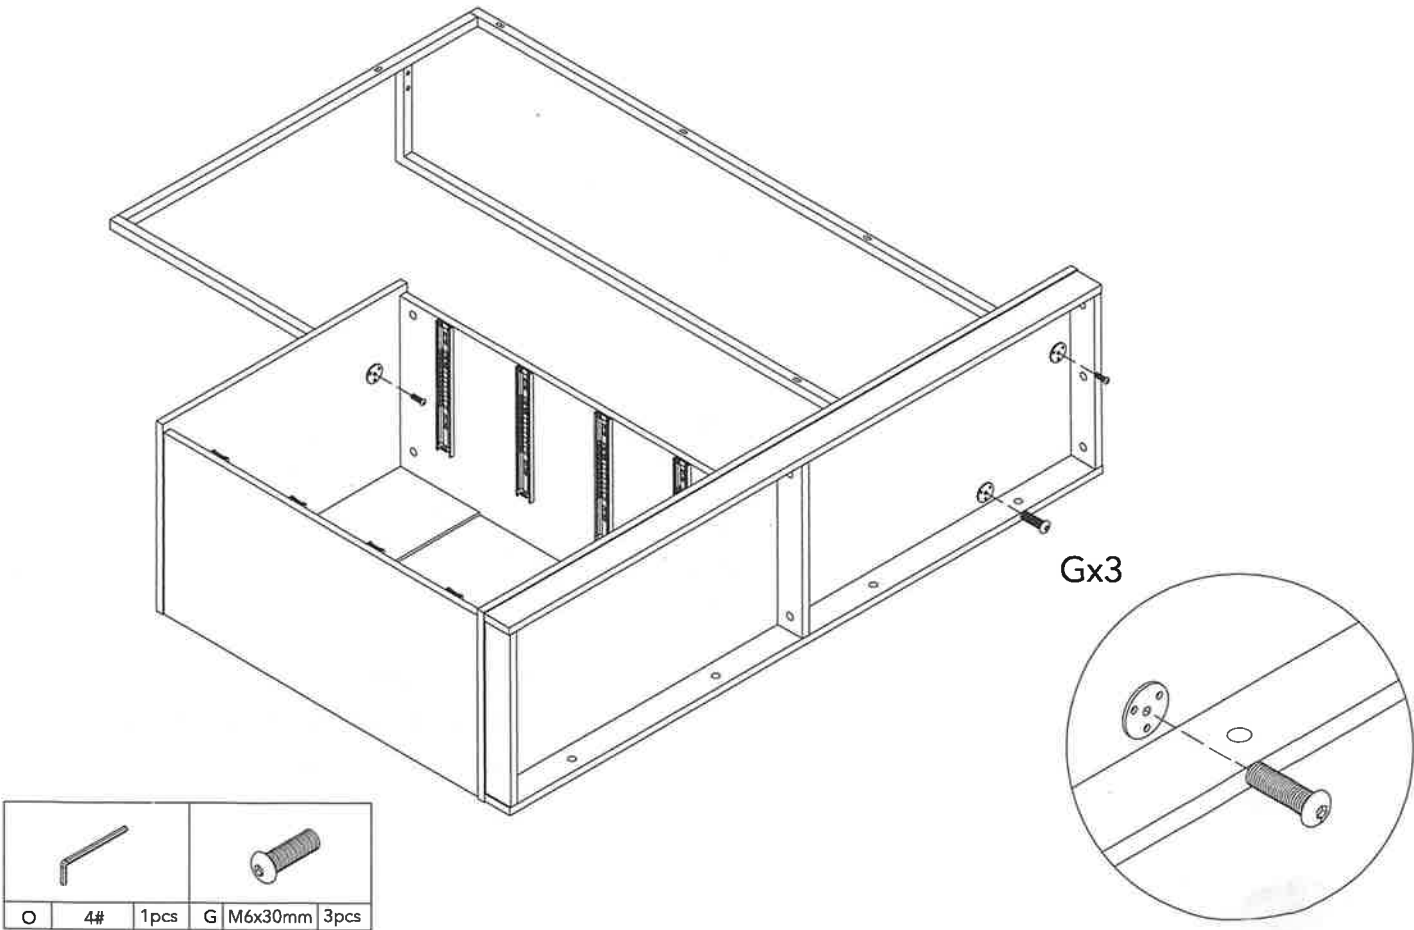

Step 15:

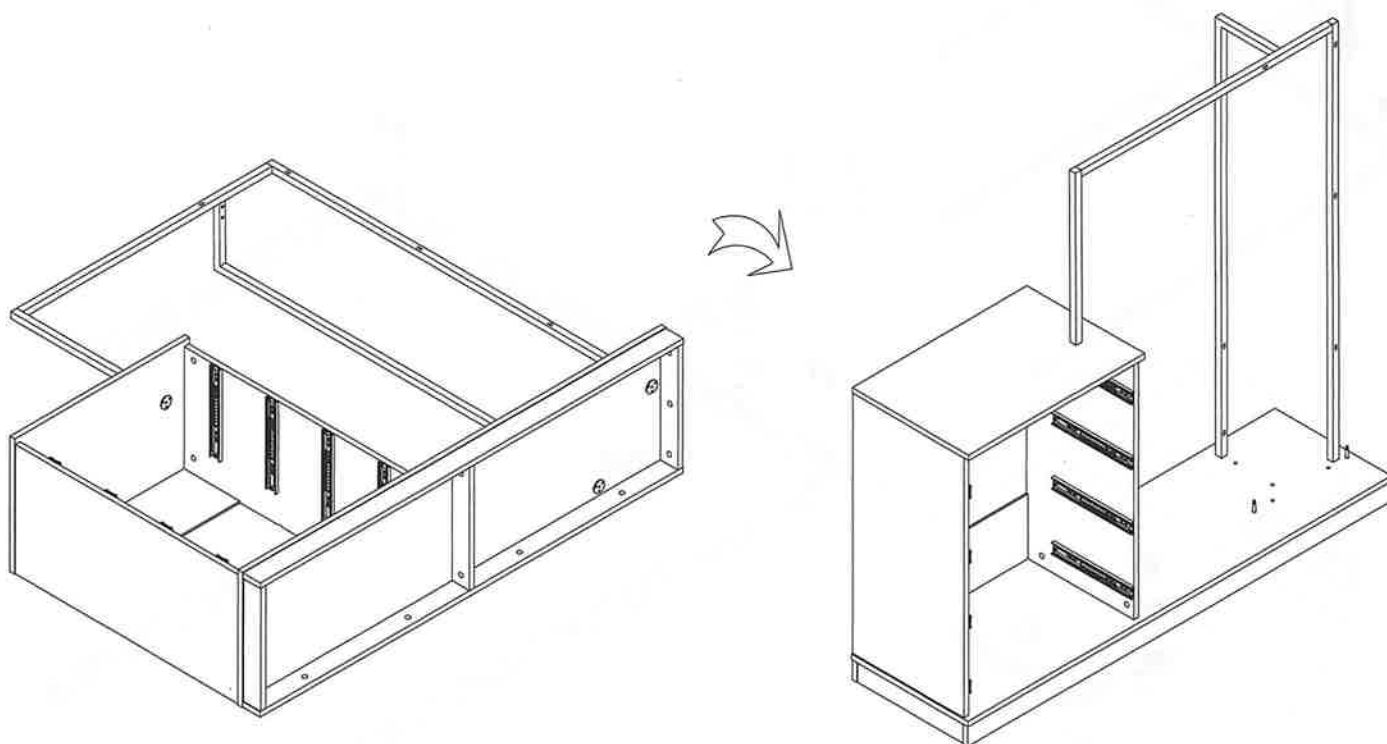


Step 16:

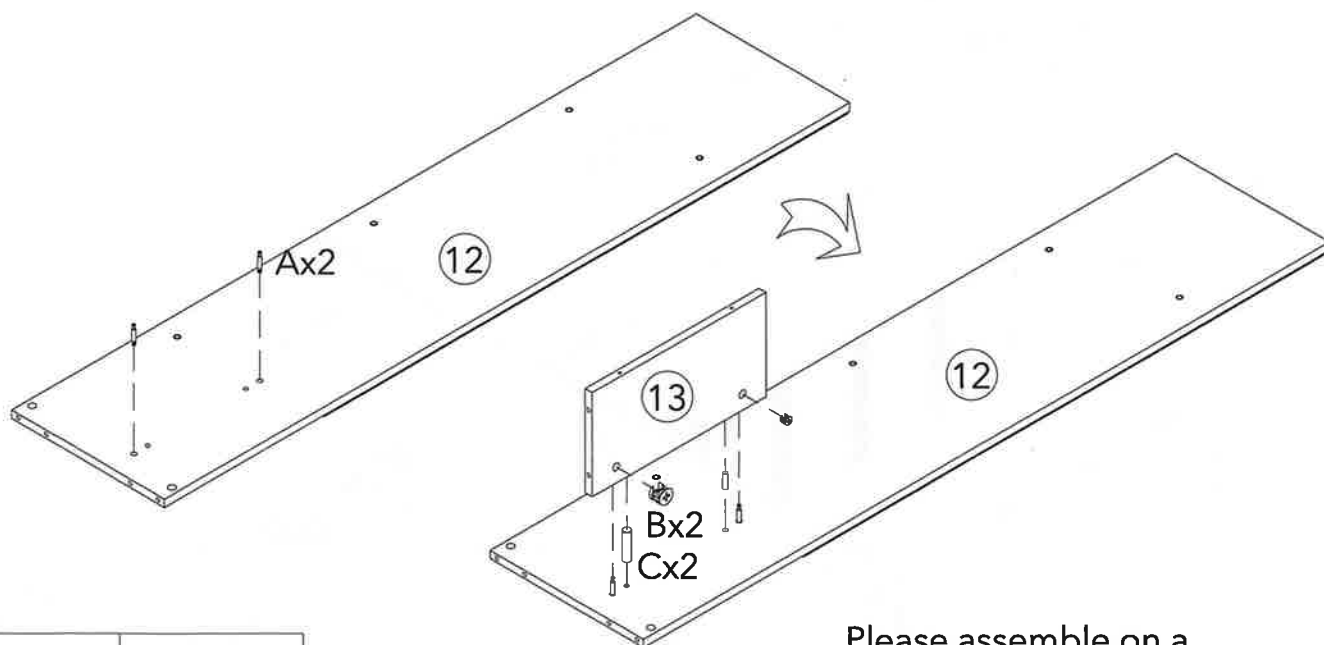

	C	Ø8x30	2pcs
	A	M6x40mm	2pcs
	B	Ø15x11.5	2pcs


Please assemble on a carpet to protect the mirror during the assembly.

Step 17:

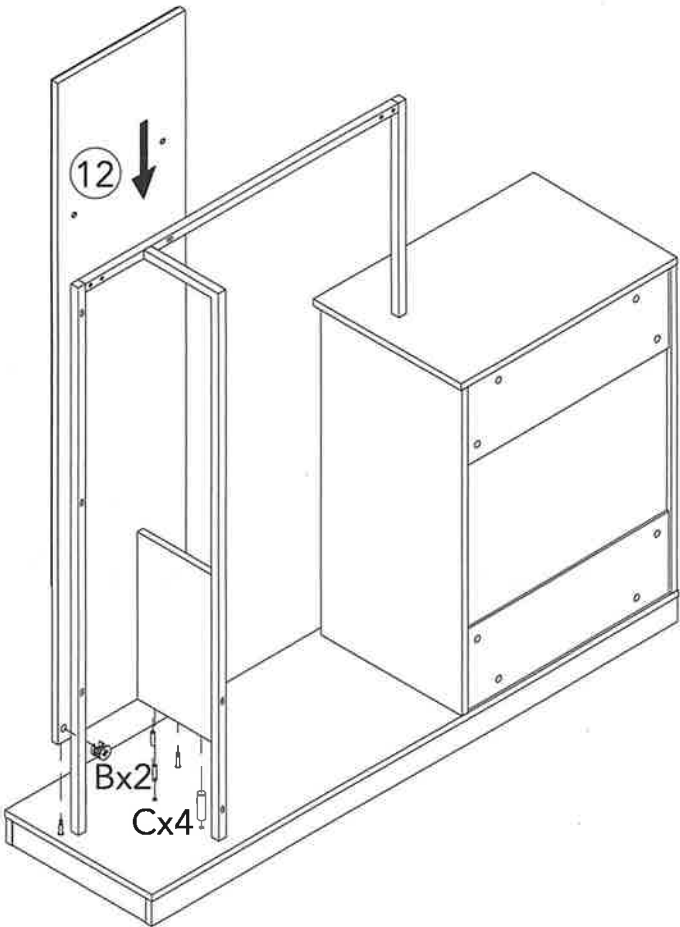








	
C	Ø8x30 4pcs
	
B	Ø15x11.5 2pcs

Step 18:

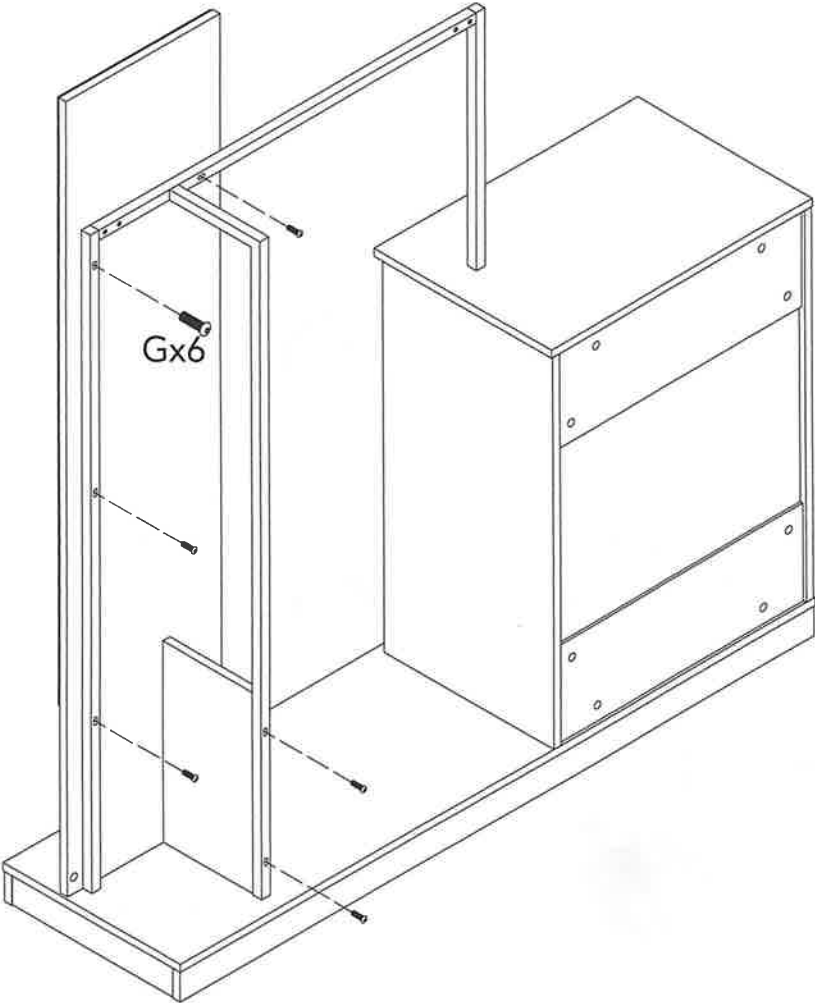


	
O	4# 1pcs
G	M6x30mm 6pcs

Step 19: x4

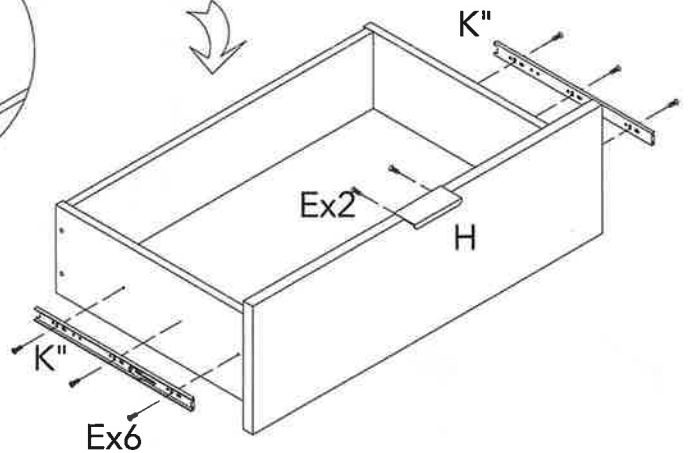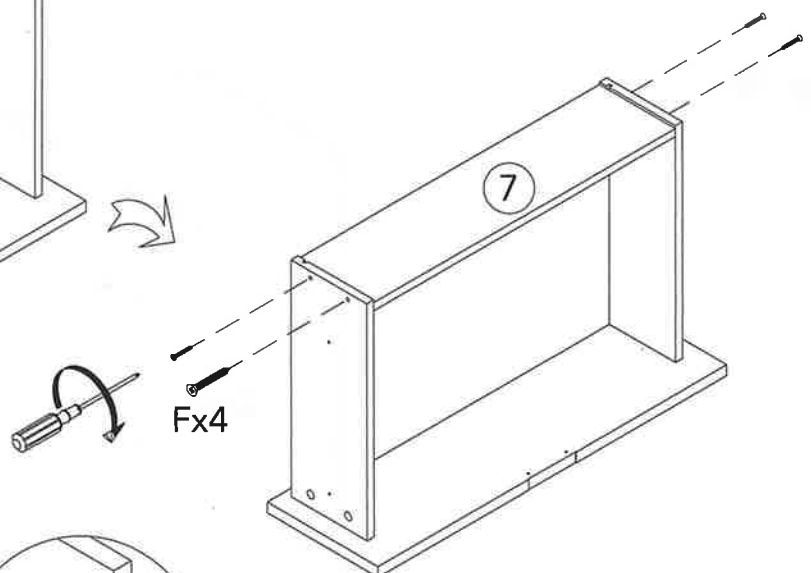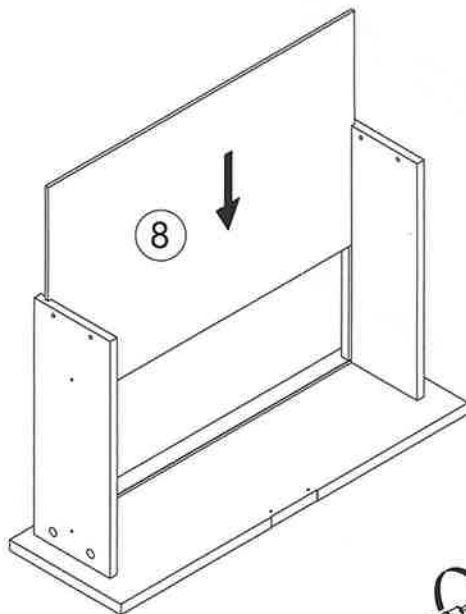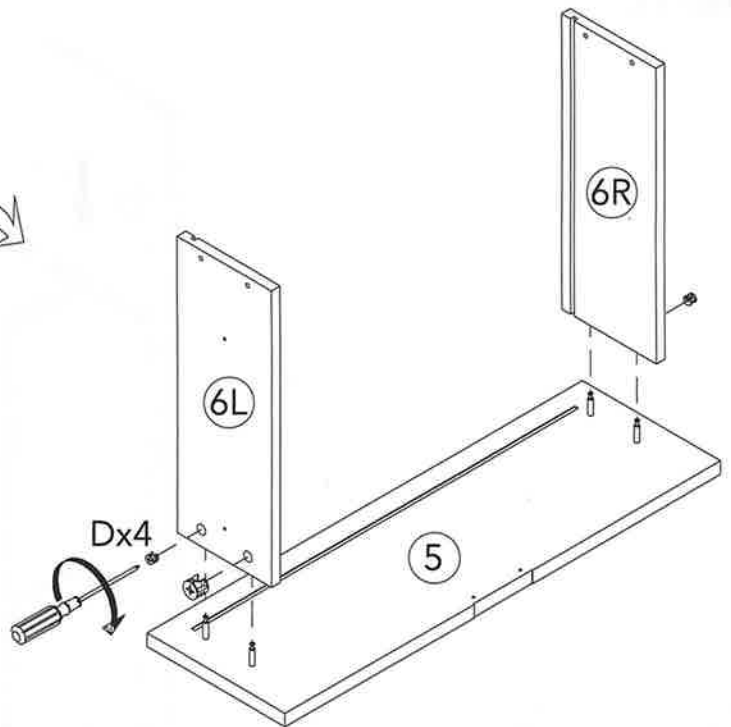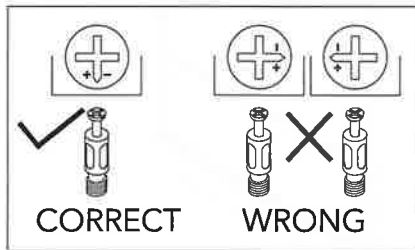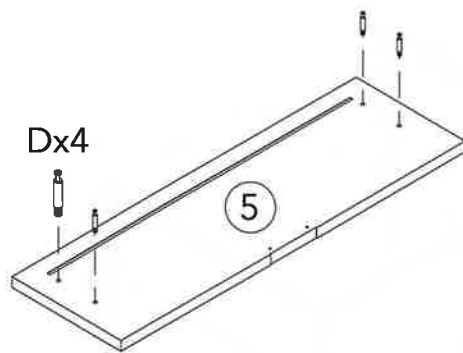


H	/	4pcs			
K	12"	4set	F	M4x30	16pcs
			D	Ø12x10mm	16set
			E	M4x14	32pcs


Step 20:

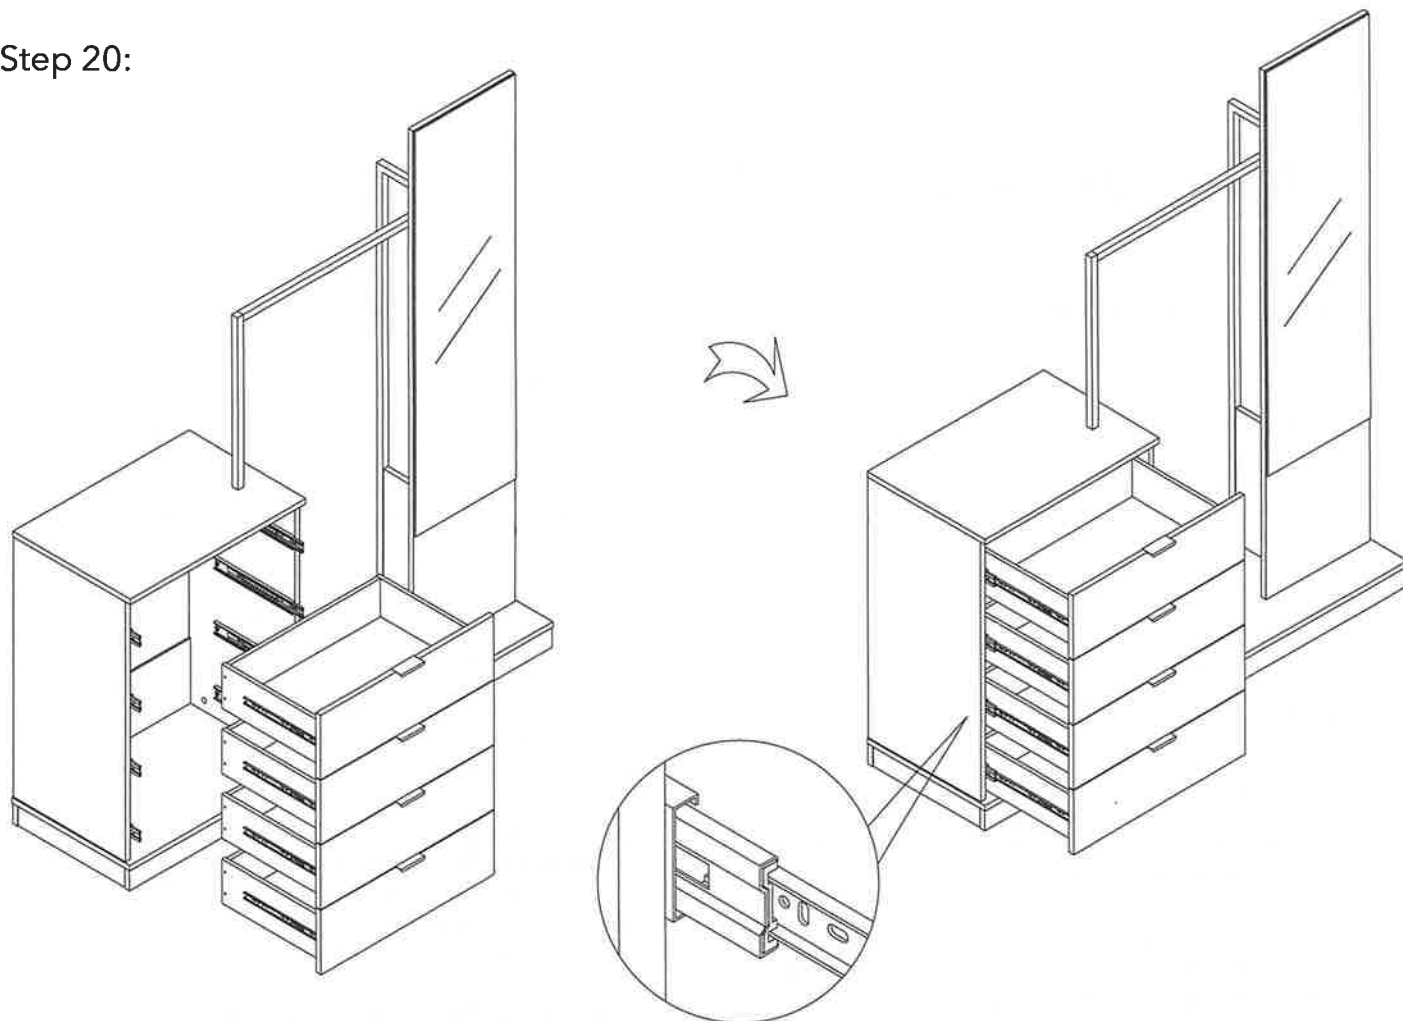

Step 21:

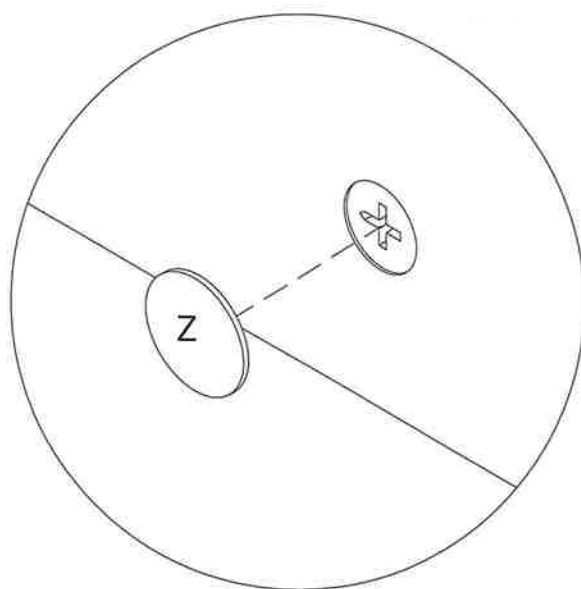

Add the screw covers
for those visible cams

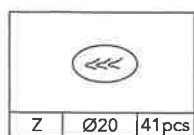

Z	Ø20	41pcs
---	-----	-------