



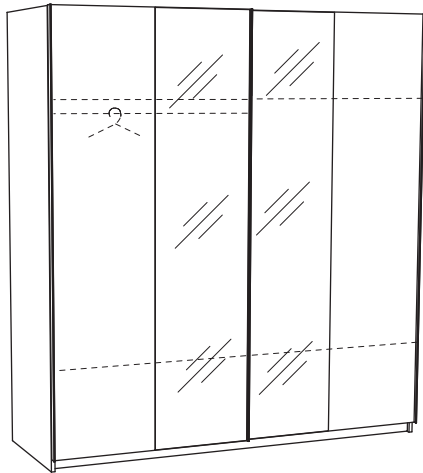

montage instructies
instructions de montage
assembly instructions
montage anleitung




TESSA

S2



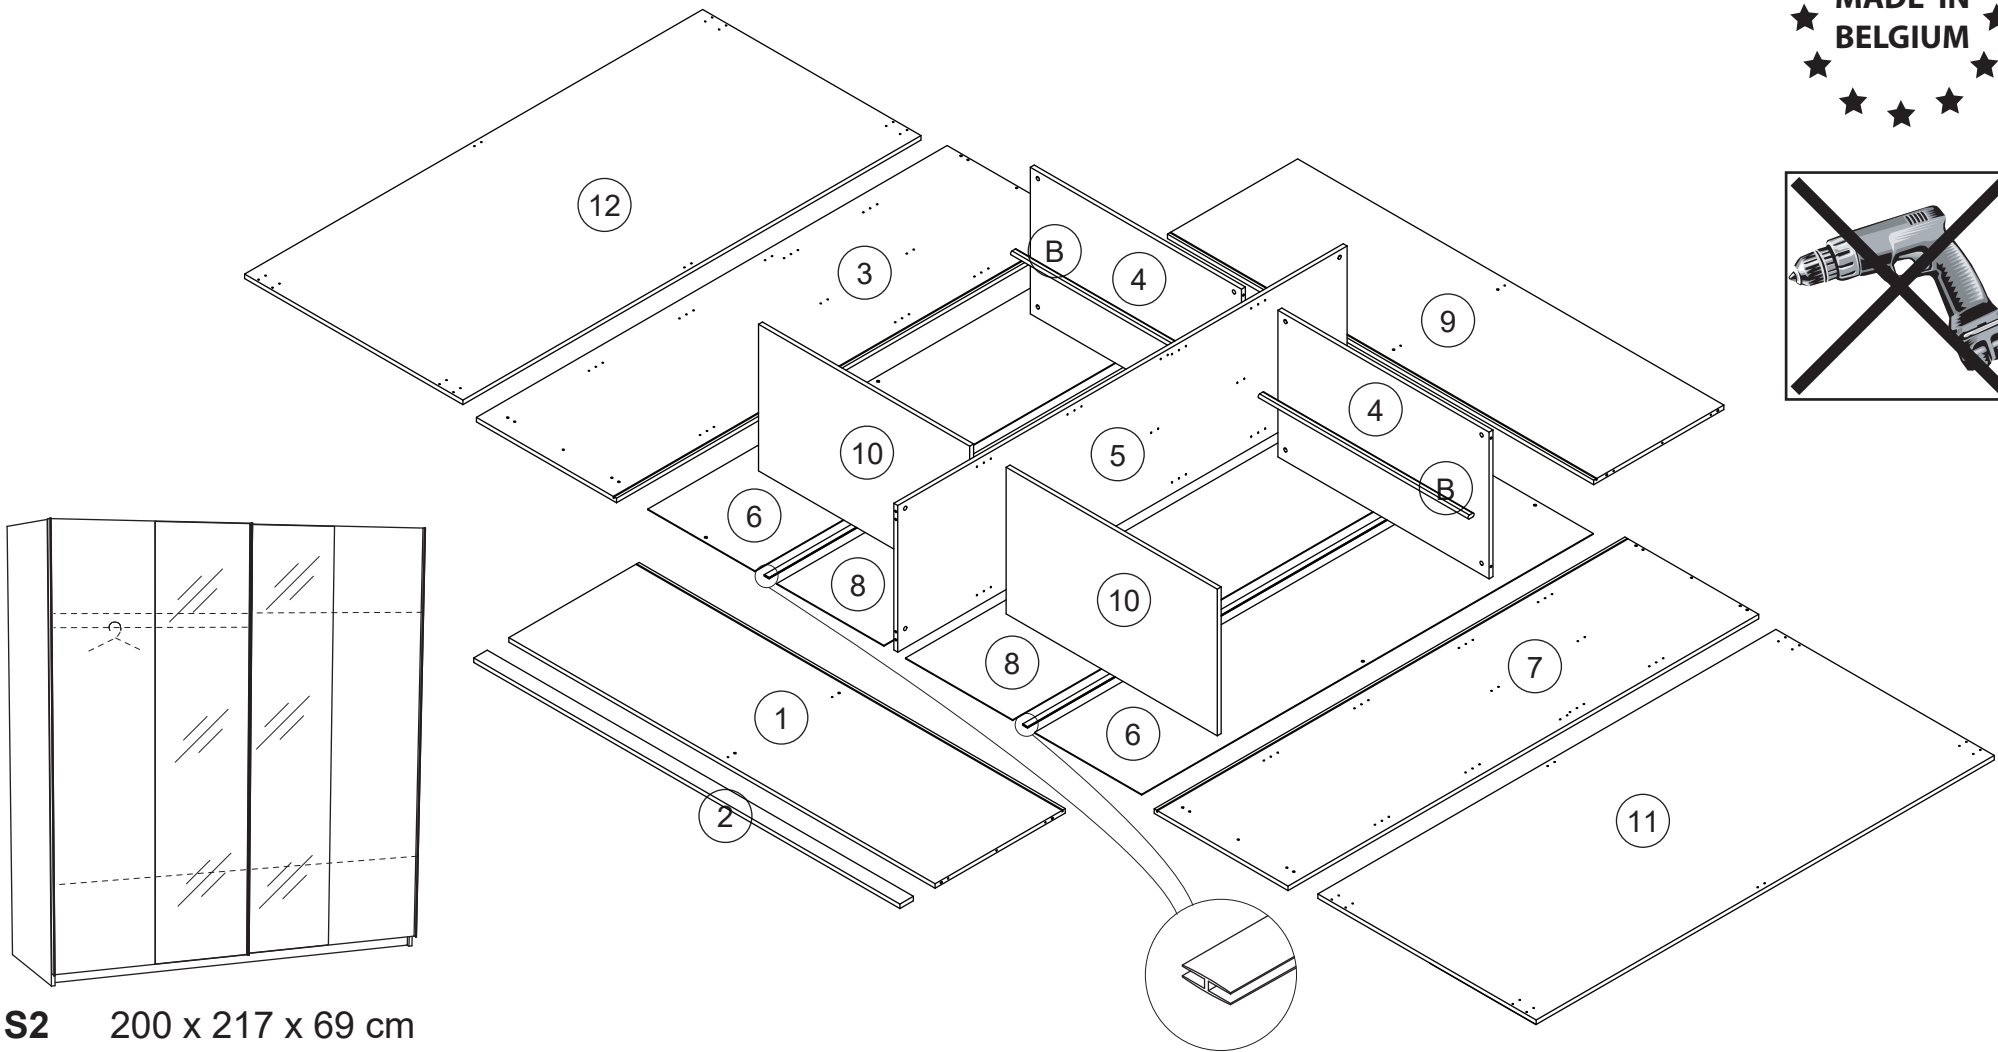


S2 200 x 217 x 69 cm

Hettich 9242681

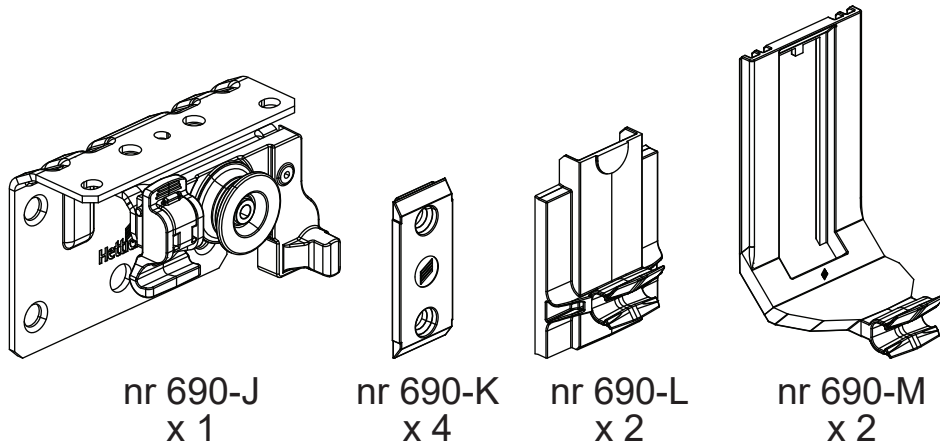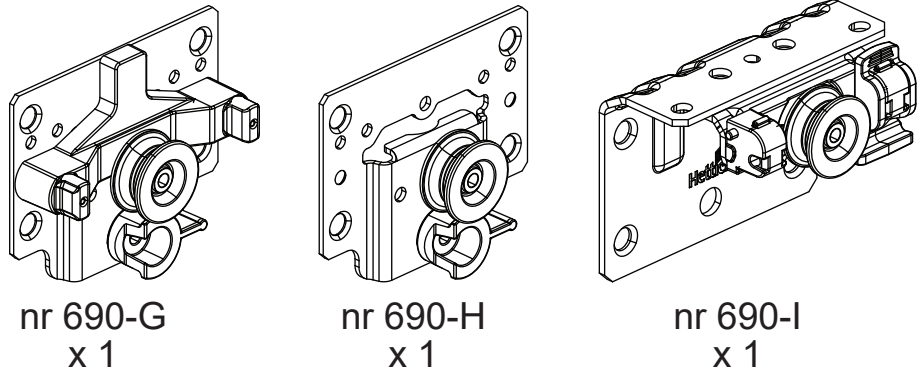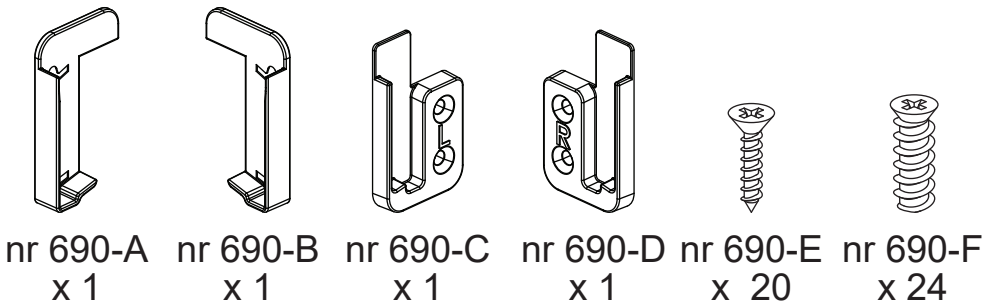













Hettich 9242219







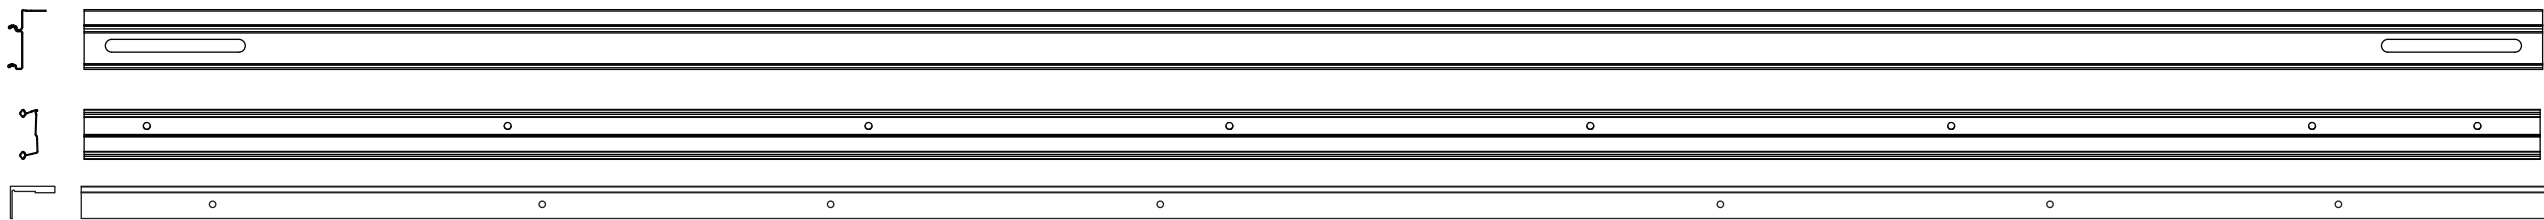
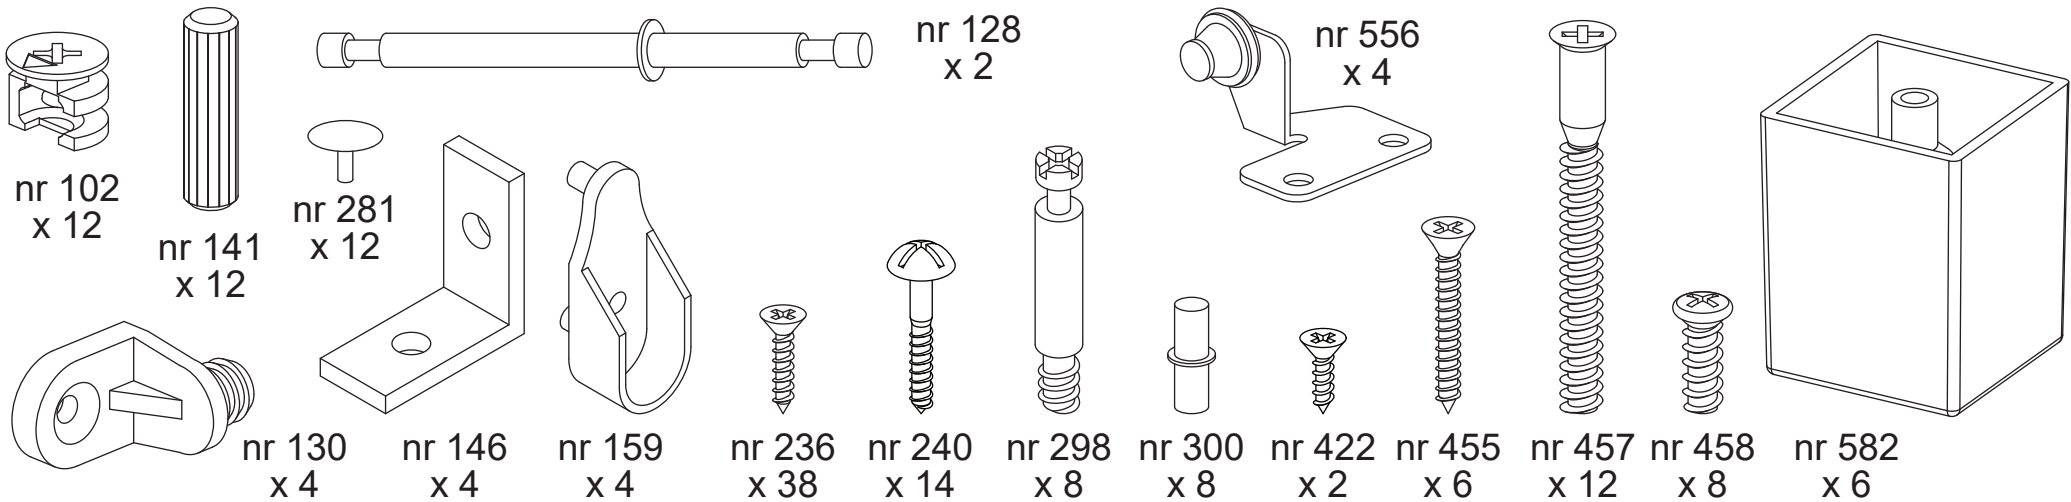
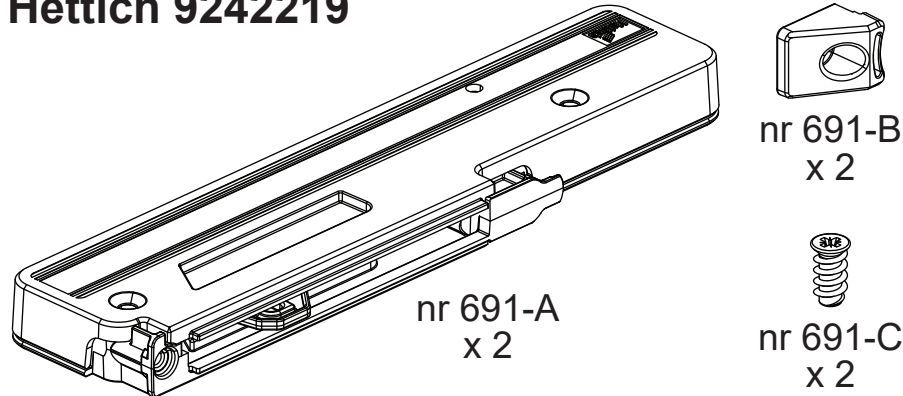


nr 688
x 1

nr 689
x 1

nr 317
x 3

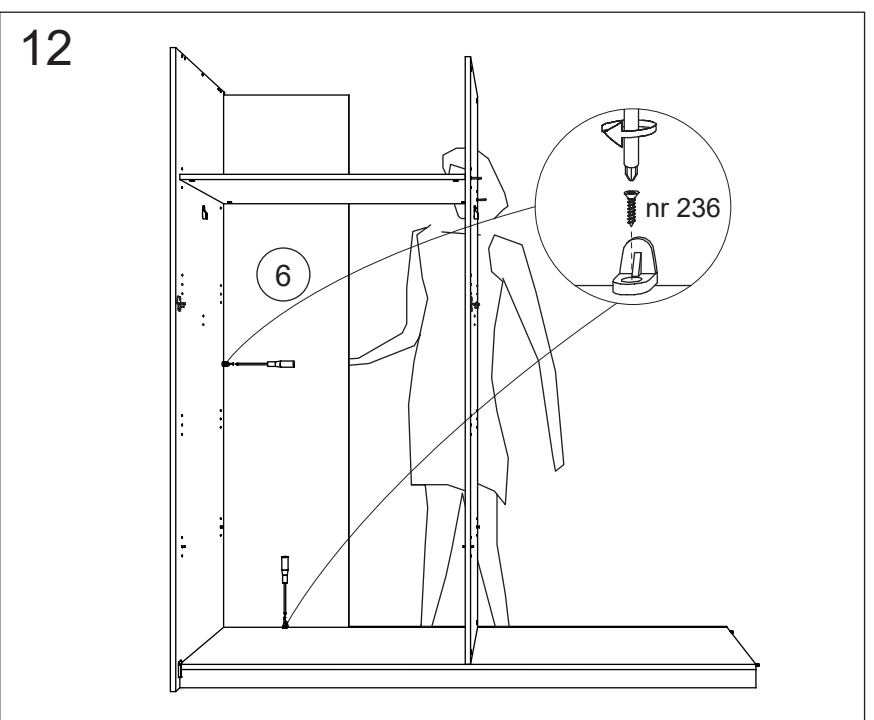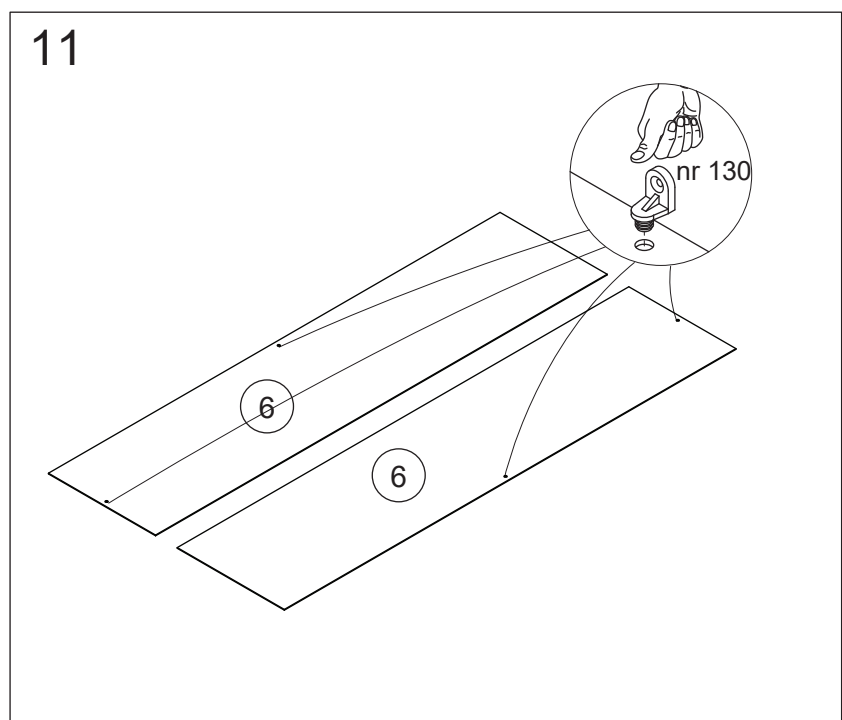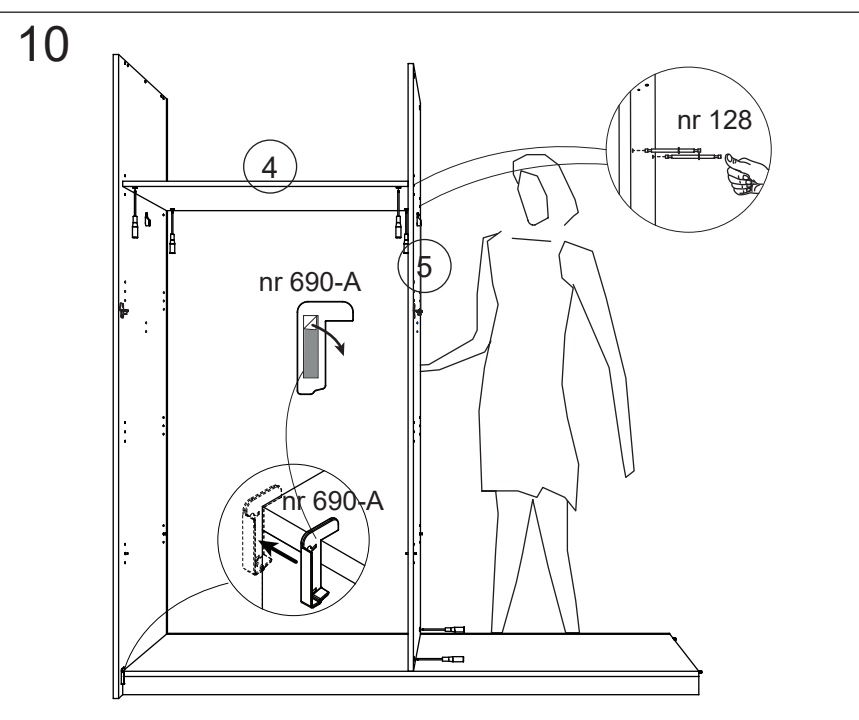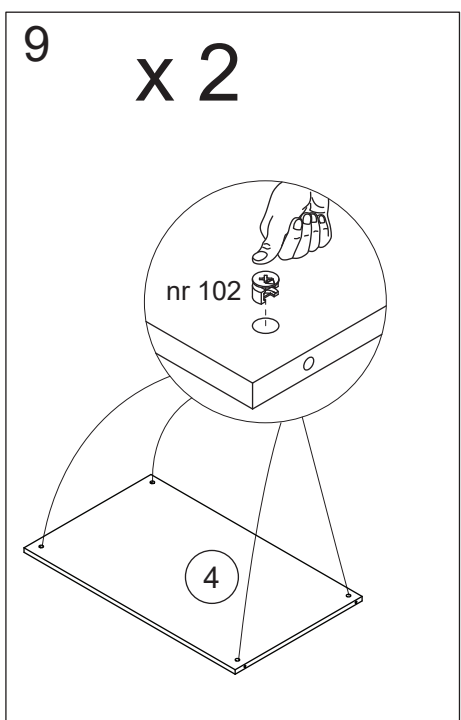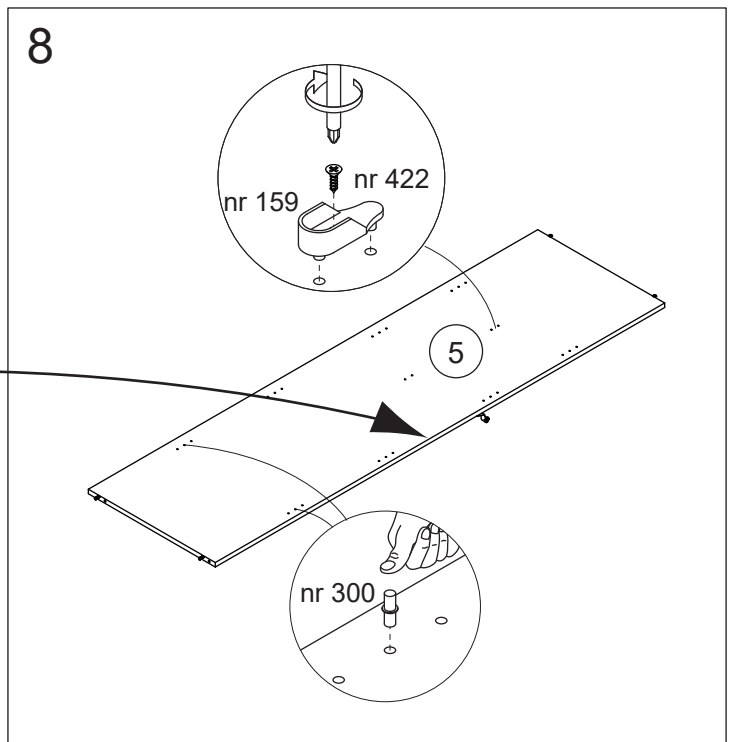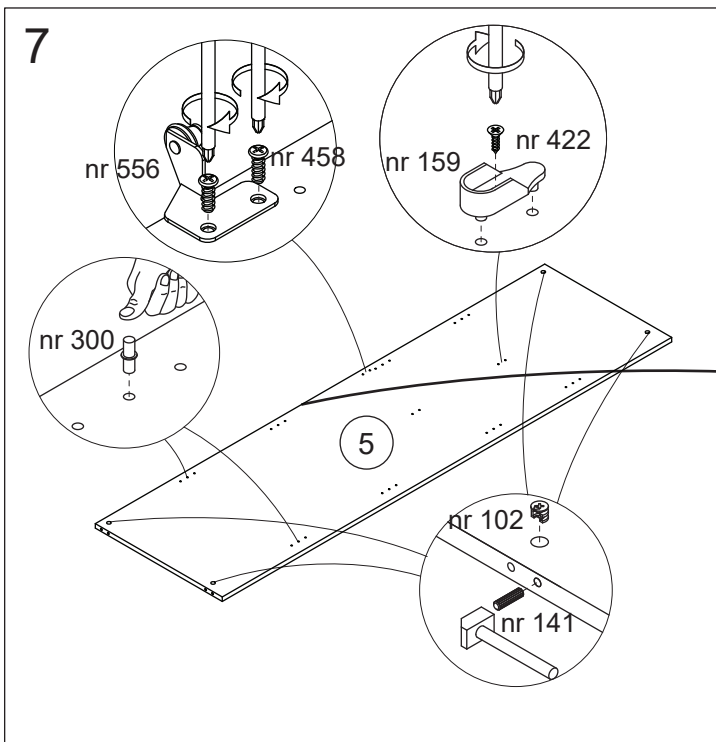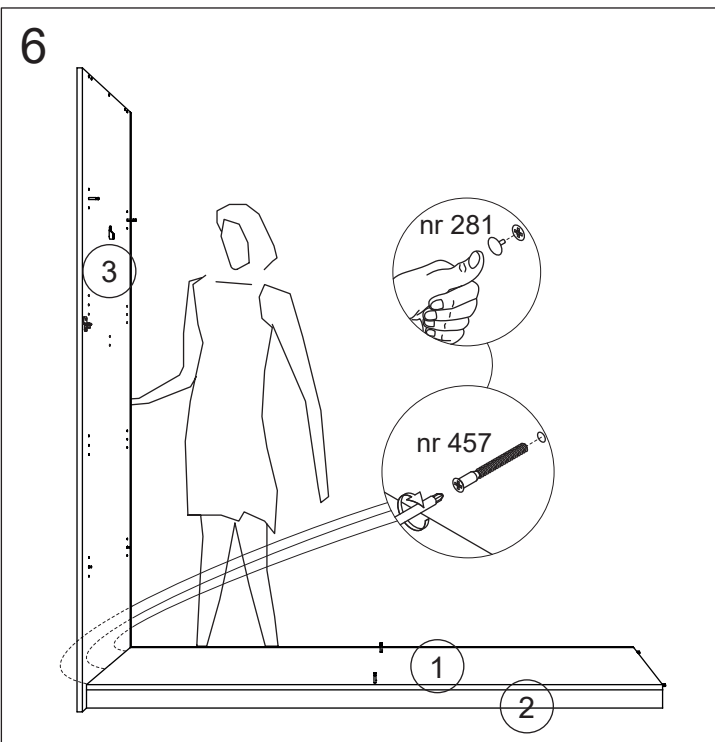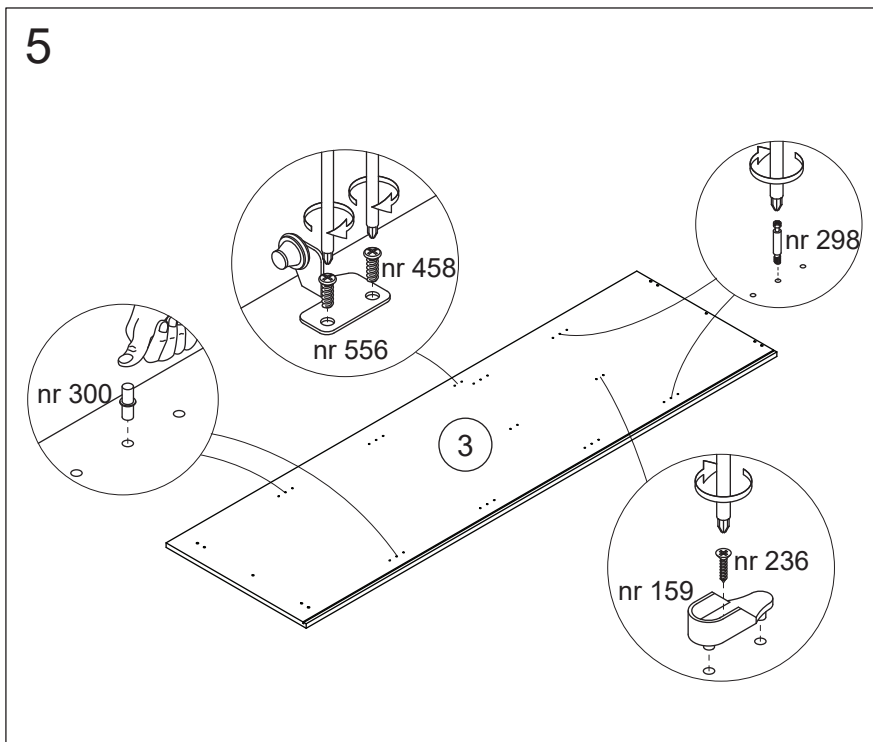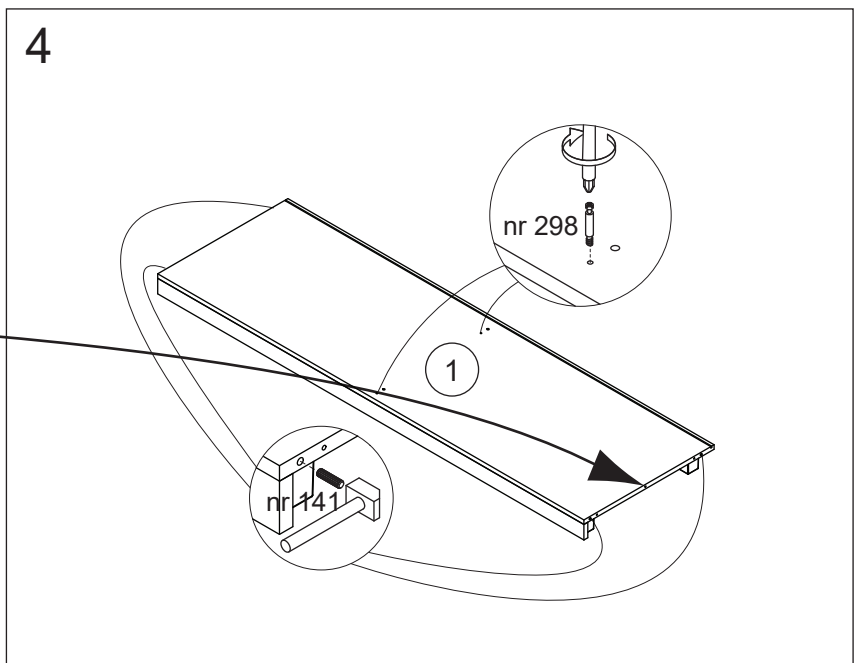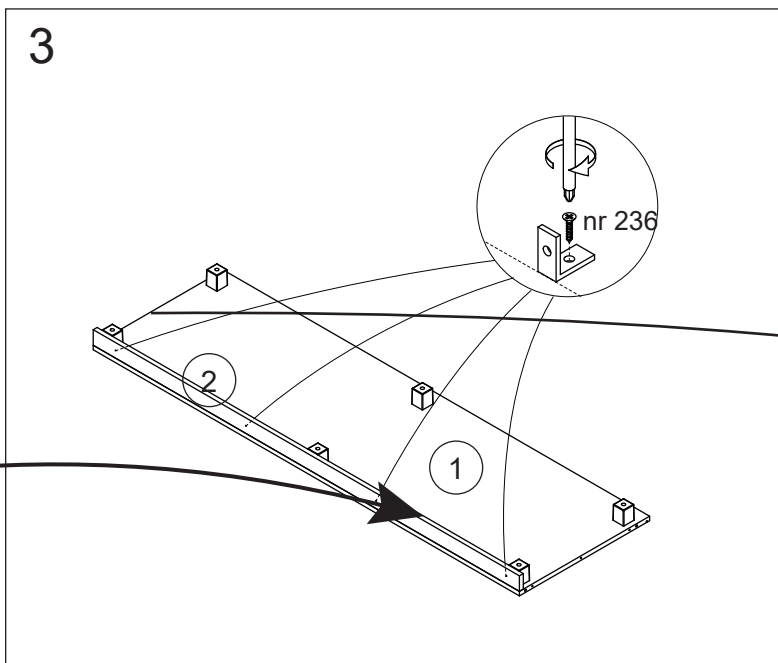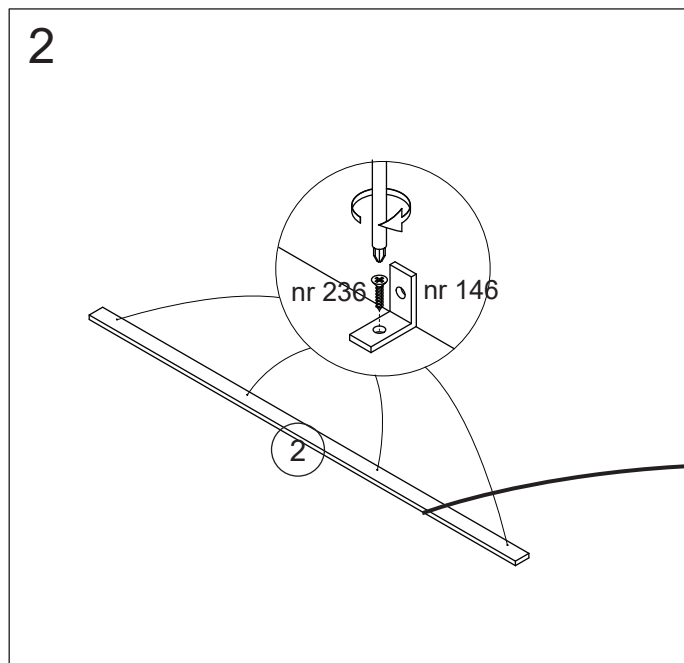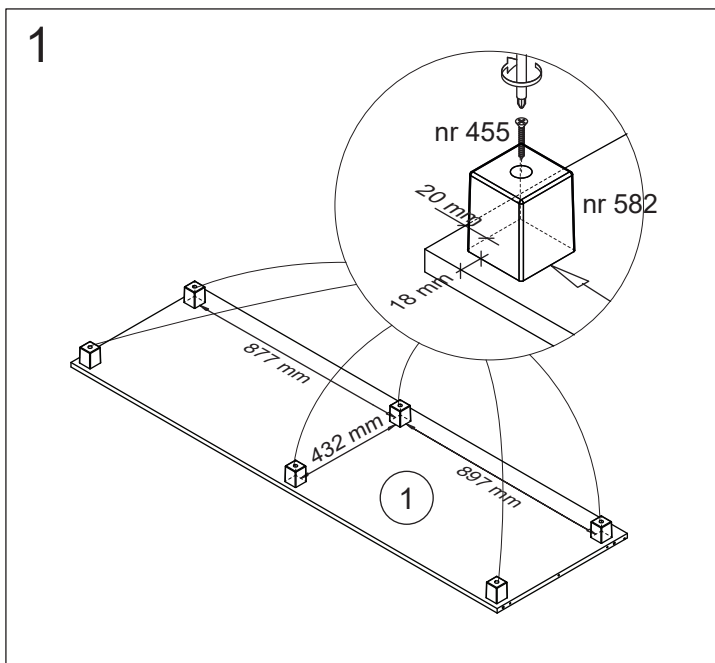

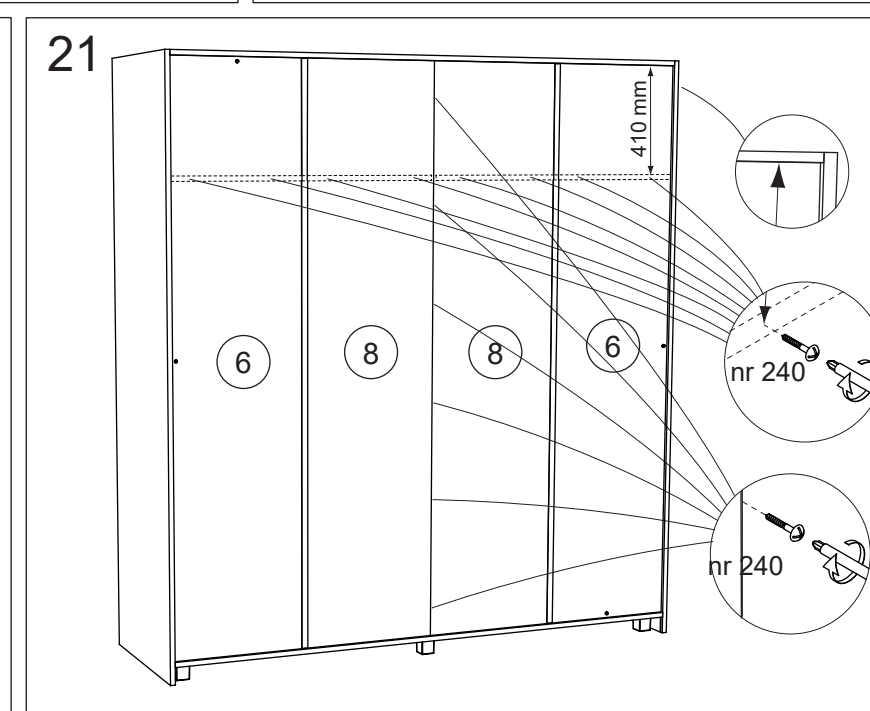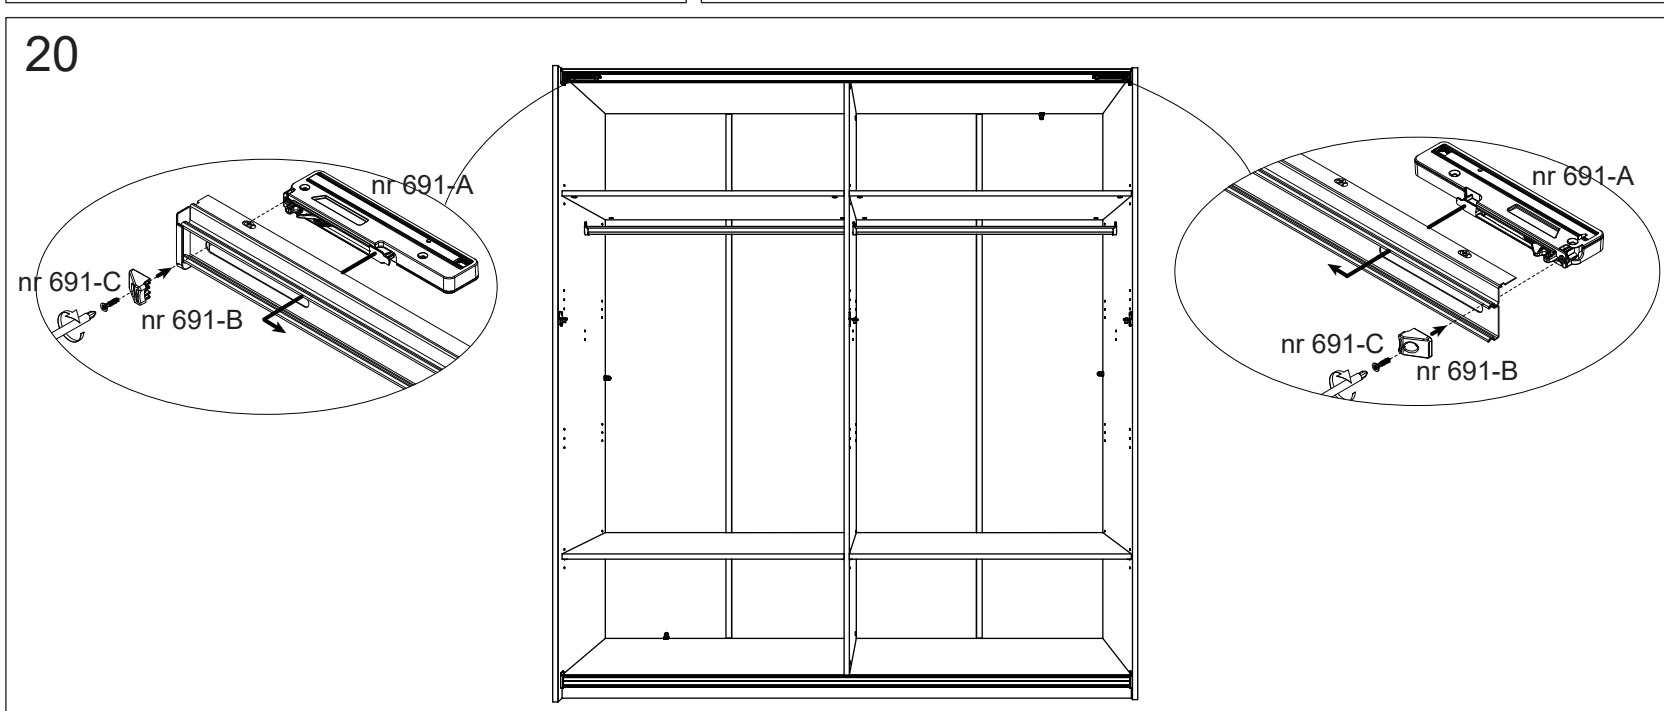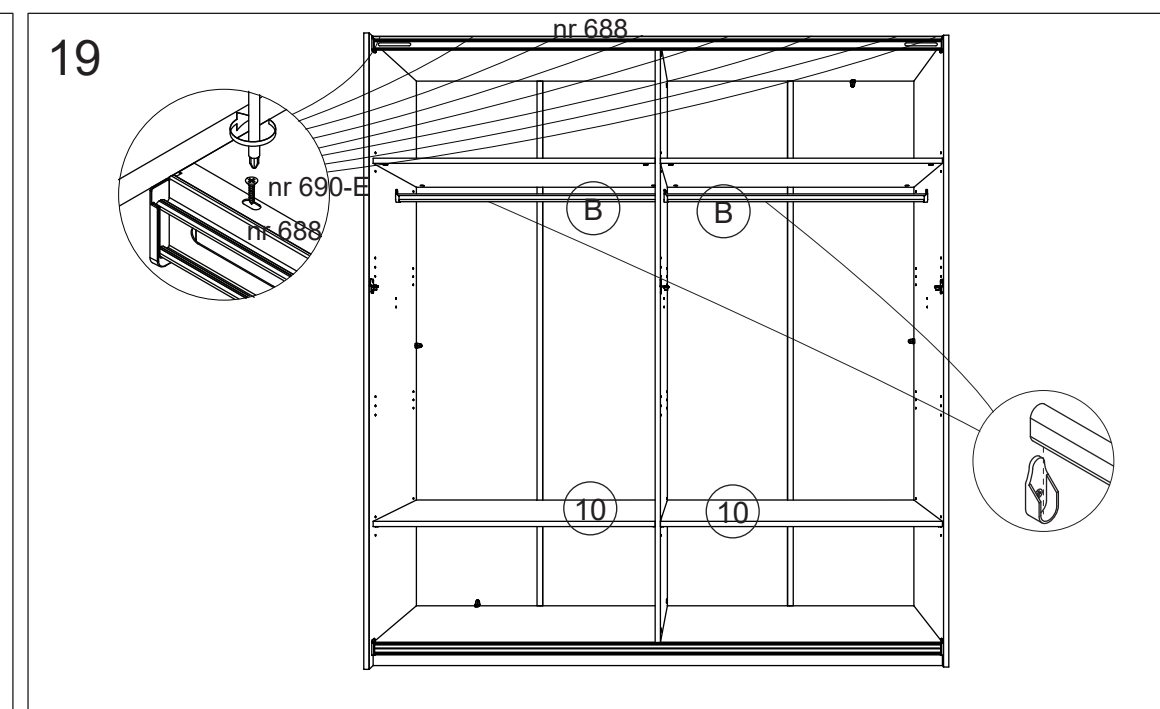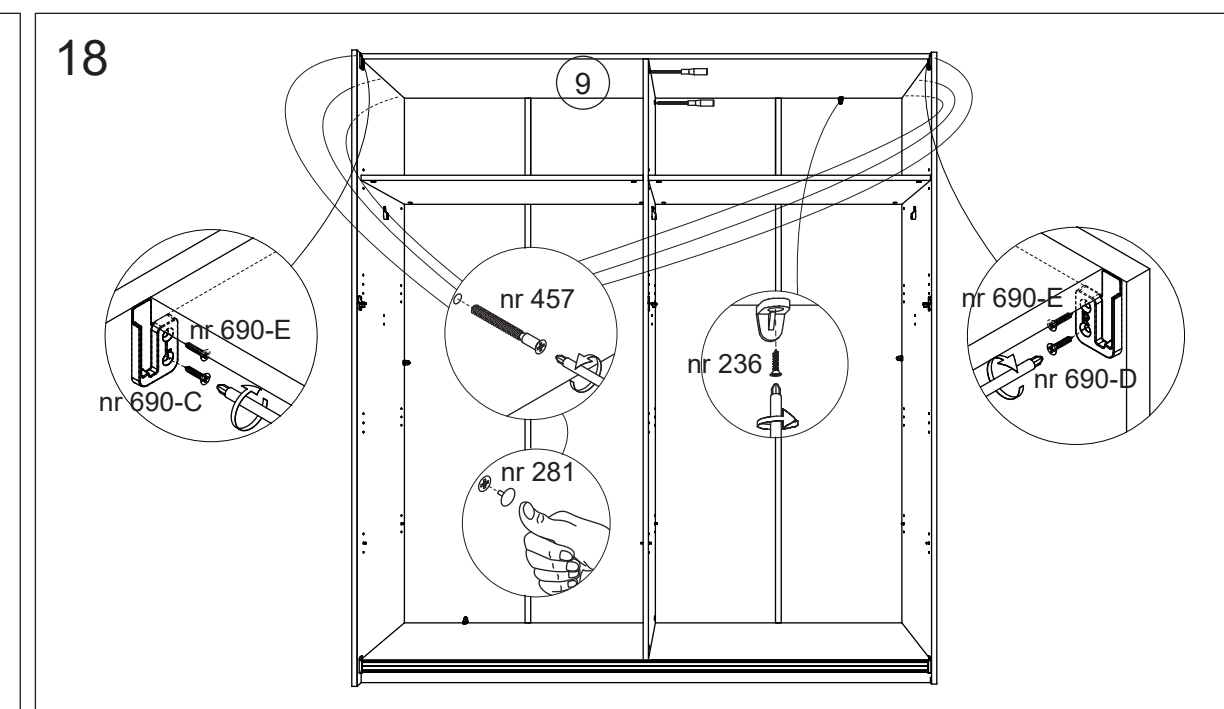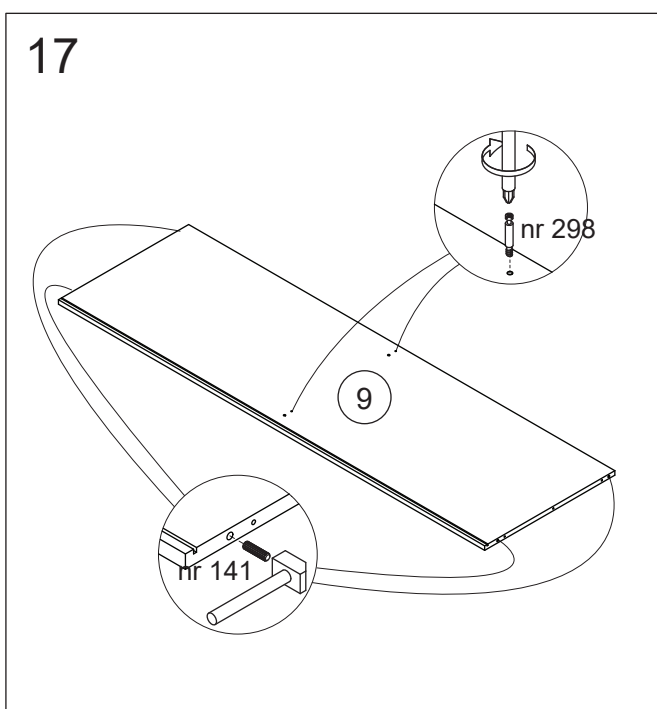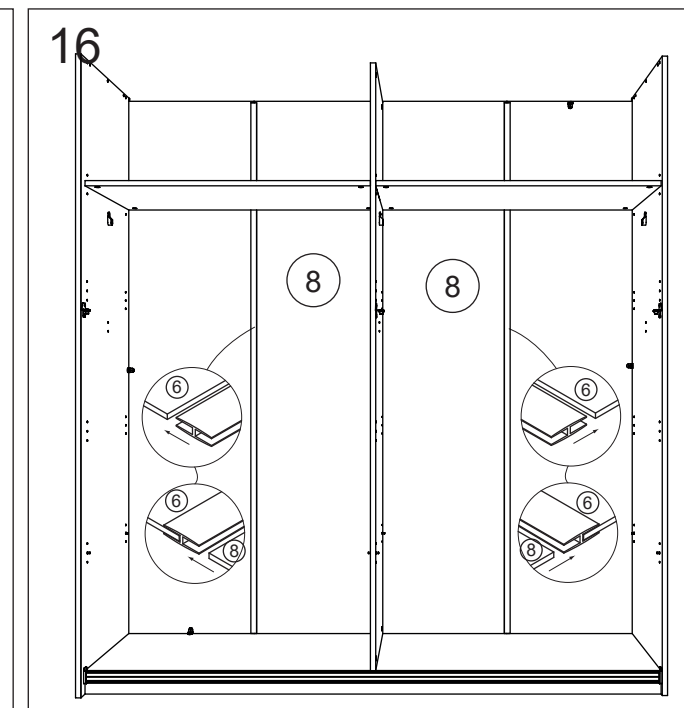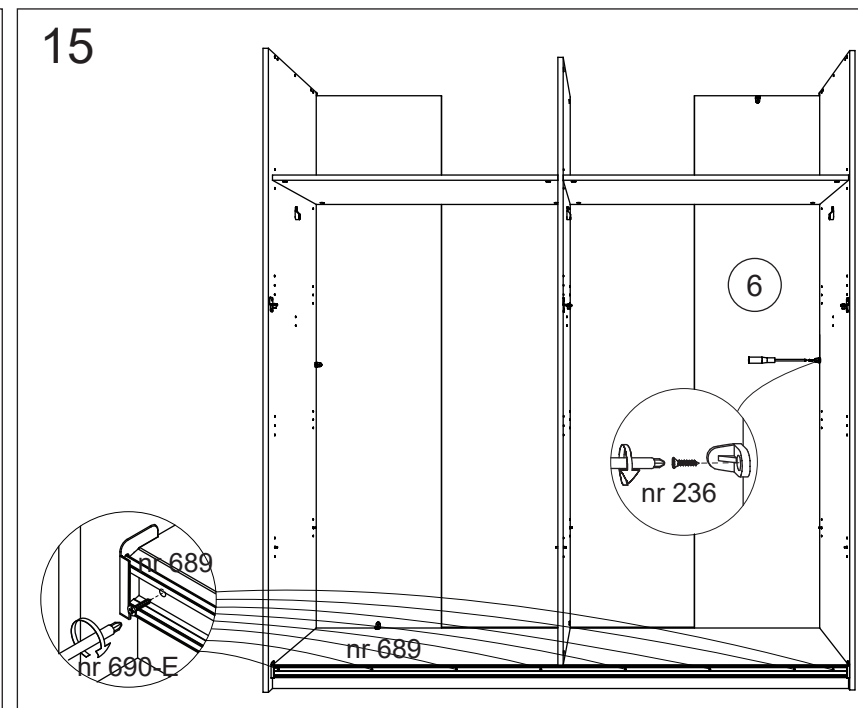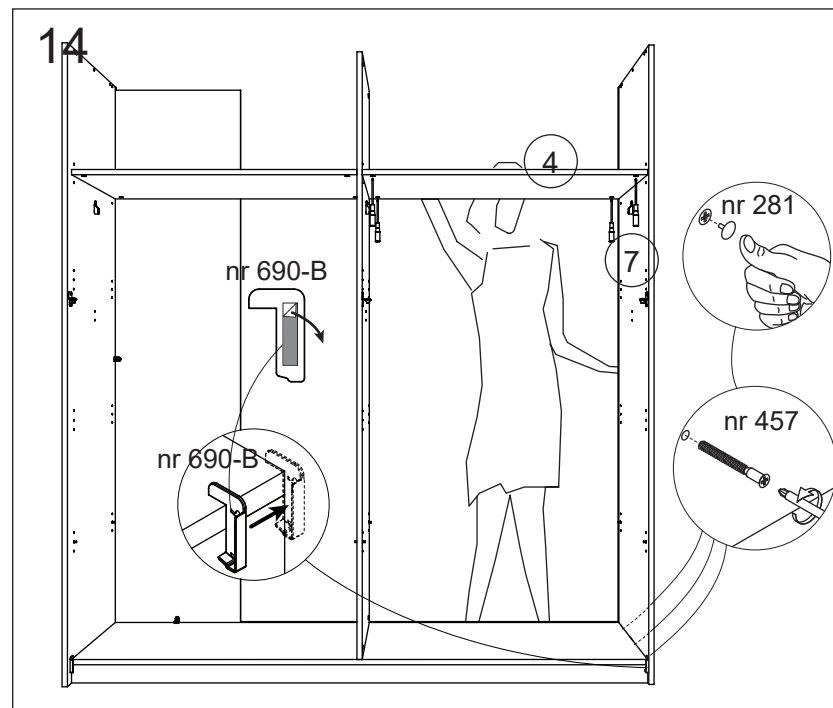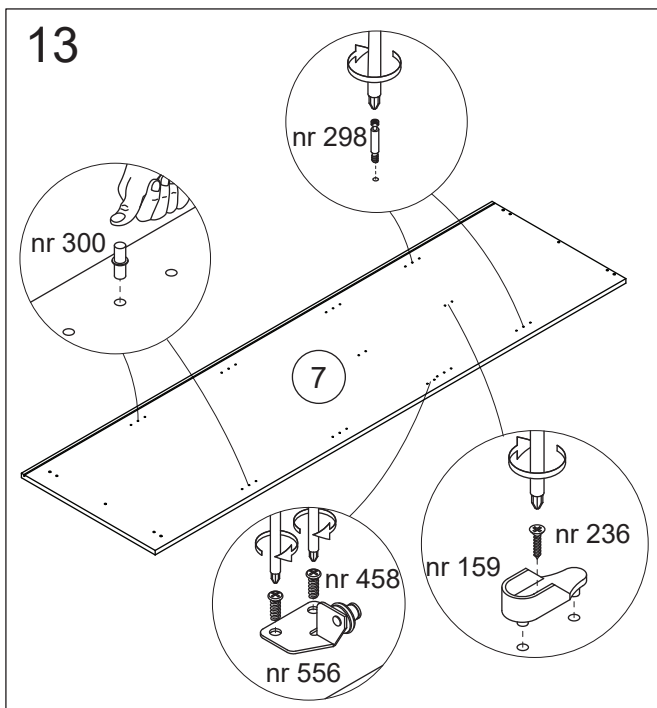


Voor de regeling van het sluiten van de deuren, moet u nu de kast goed waterpas zetten.

Pour le règlement de fermeture des portes, il faut mettre l'armoire de niveau maintenant.


To adjust the closing of the doors, you have to put the robe at level now.

Der Schrank soll jetzt waagrecht stehen, für die Reglung des Schliessens der Türe


22

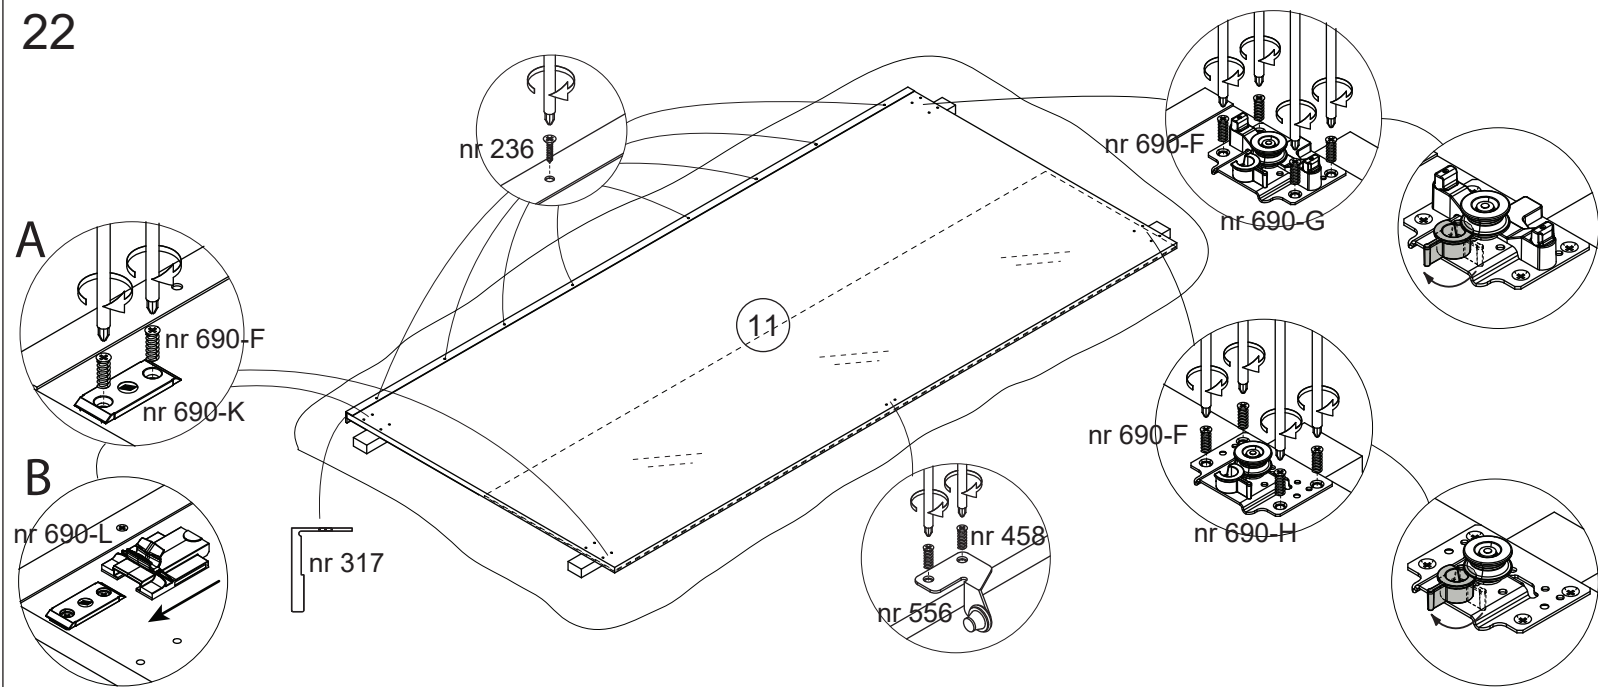


23

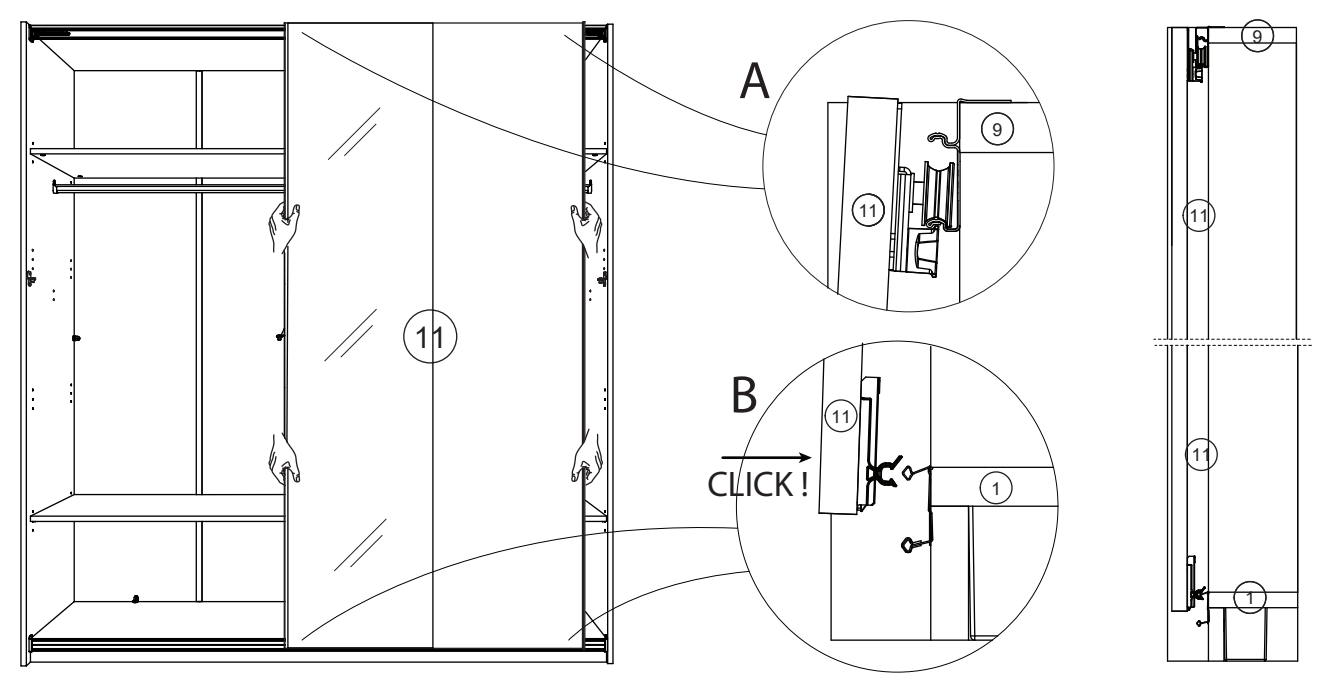

24

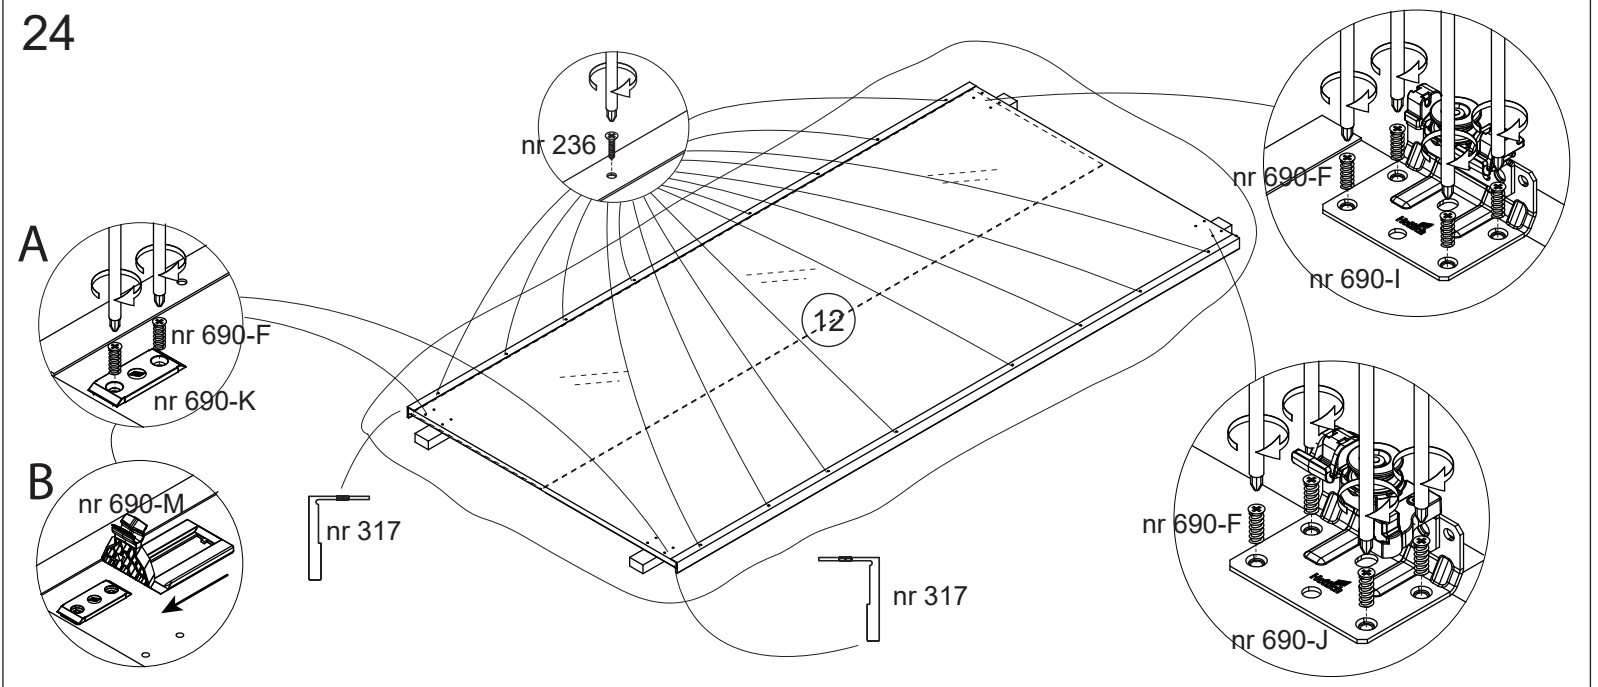

25

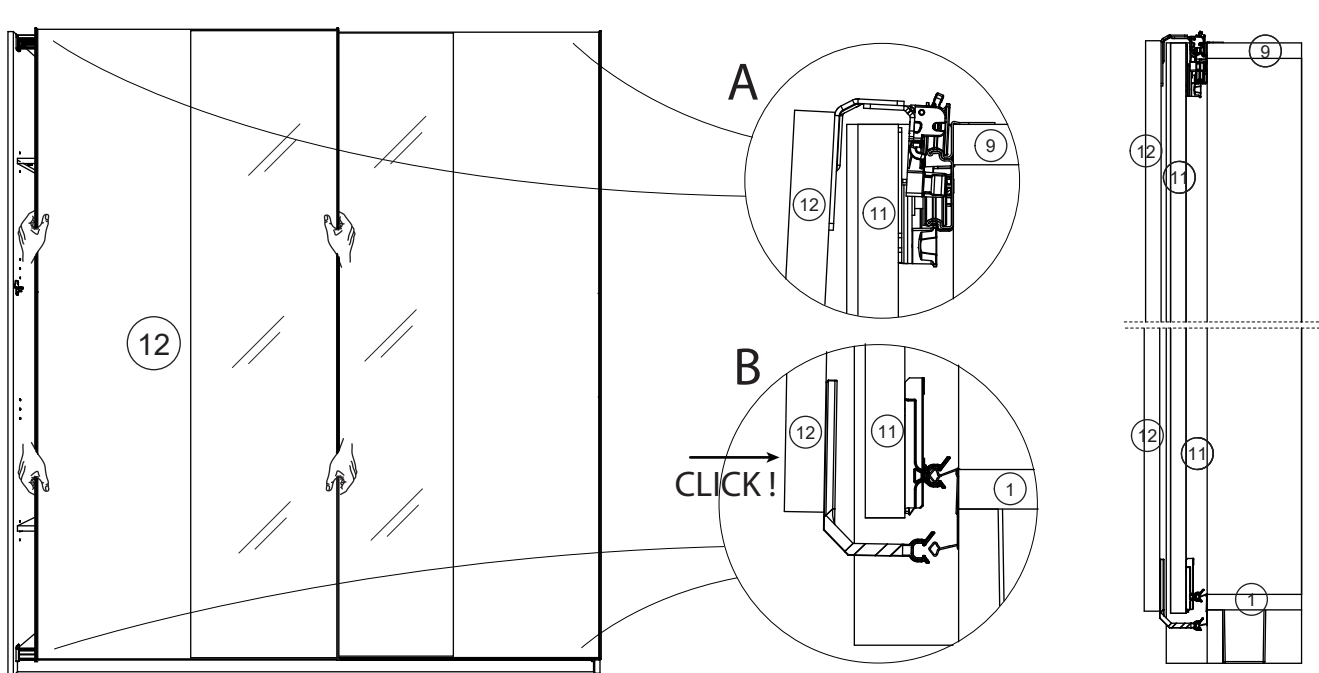

26

