






montage instructies
instructions de montage
assembly instructions
montage anleitung

TESSA


S3

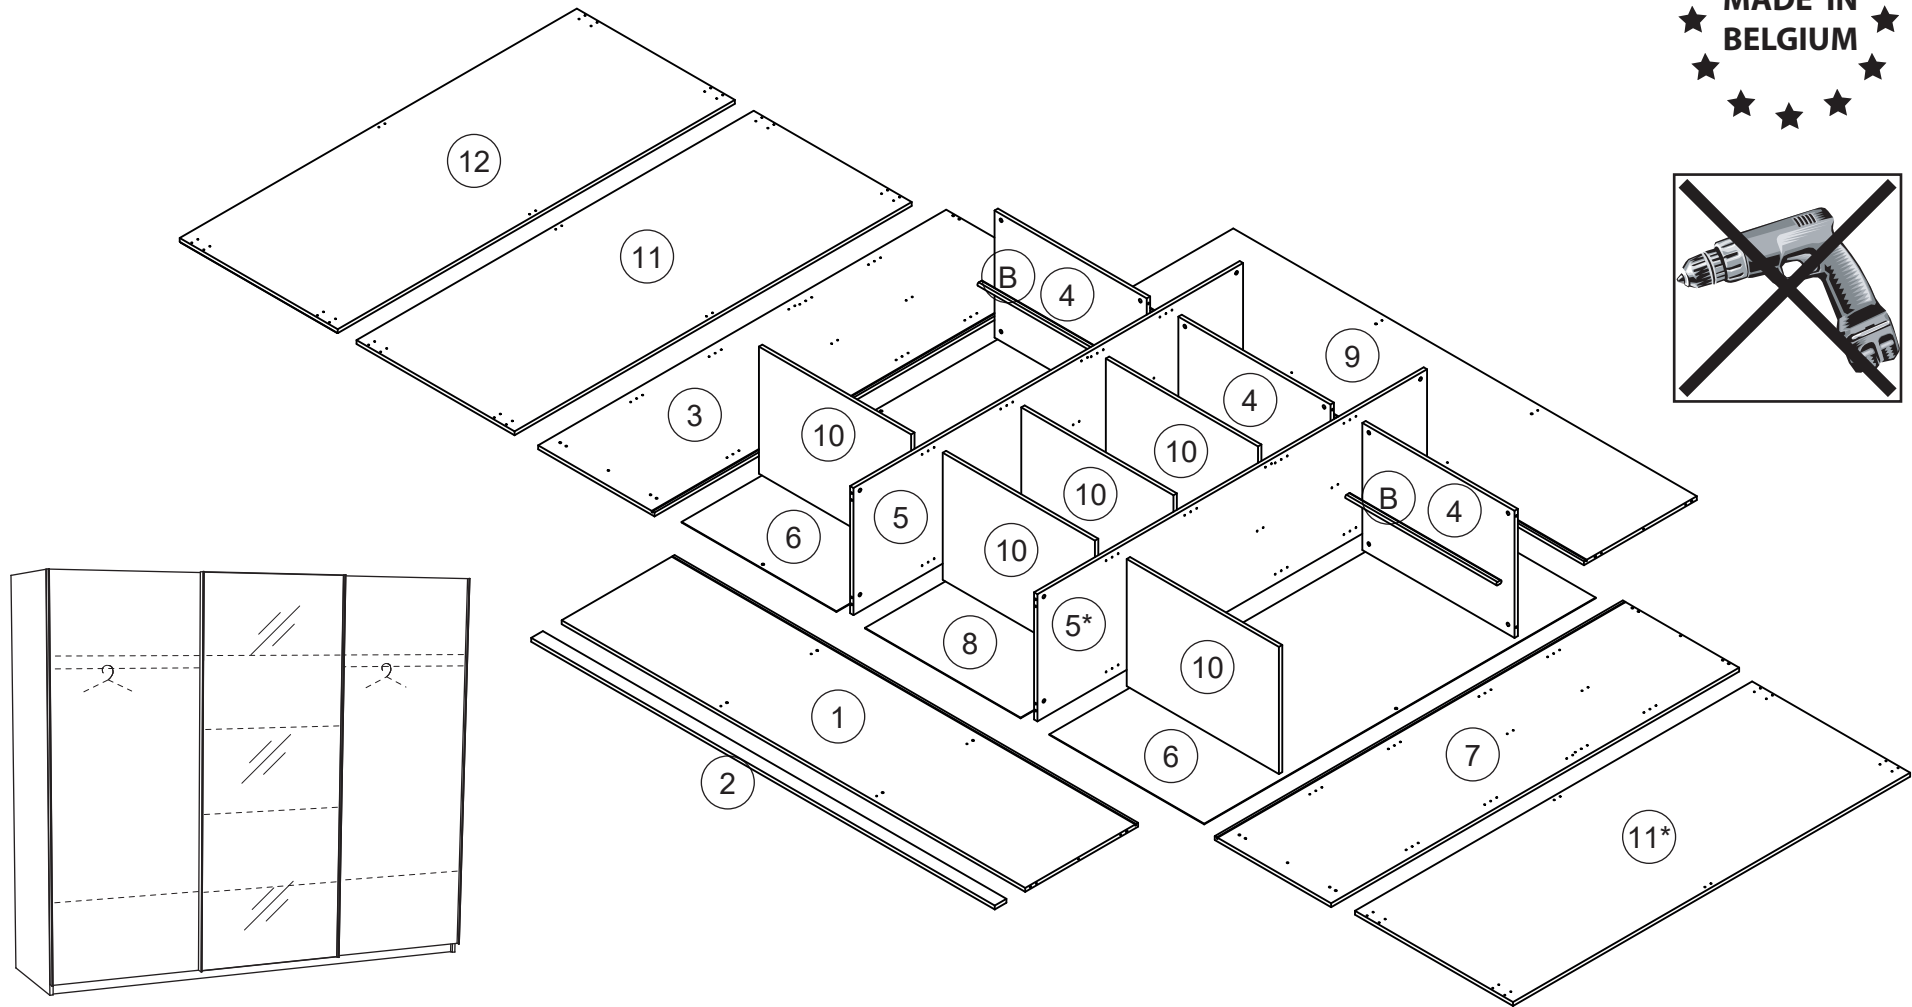


S3 250 x 217 x 69 cm











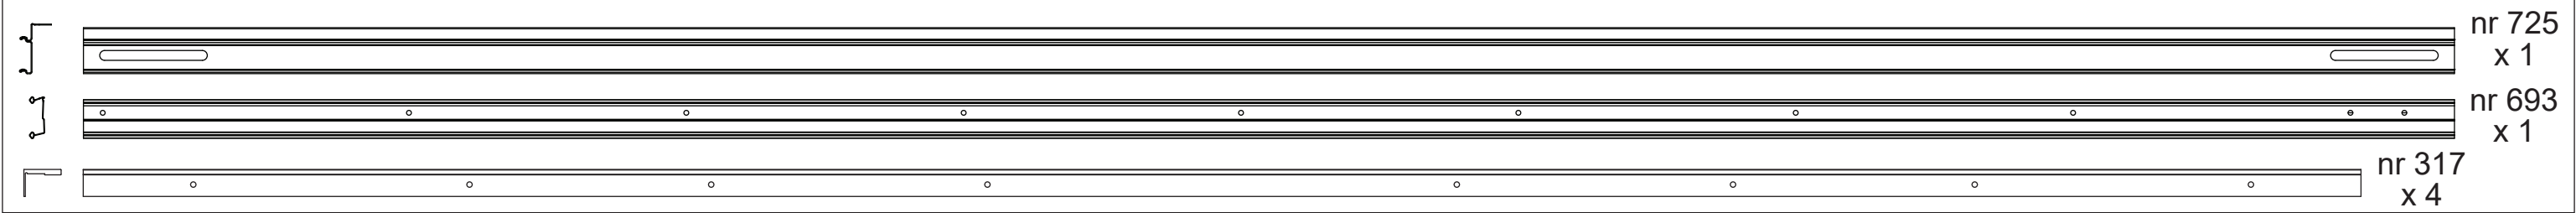
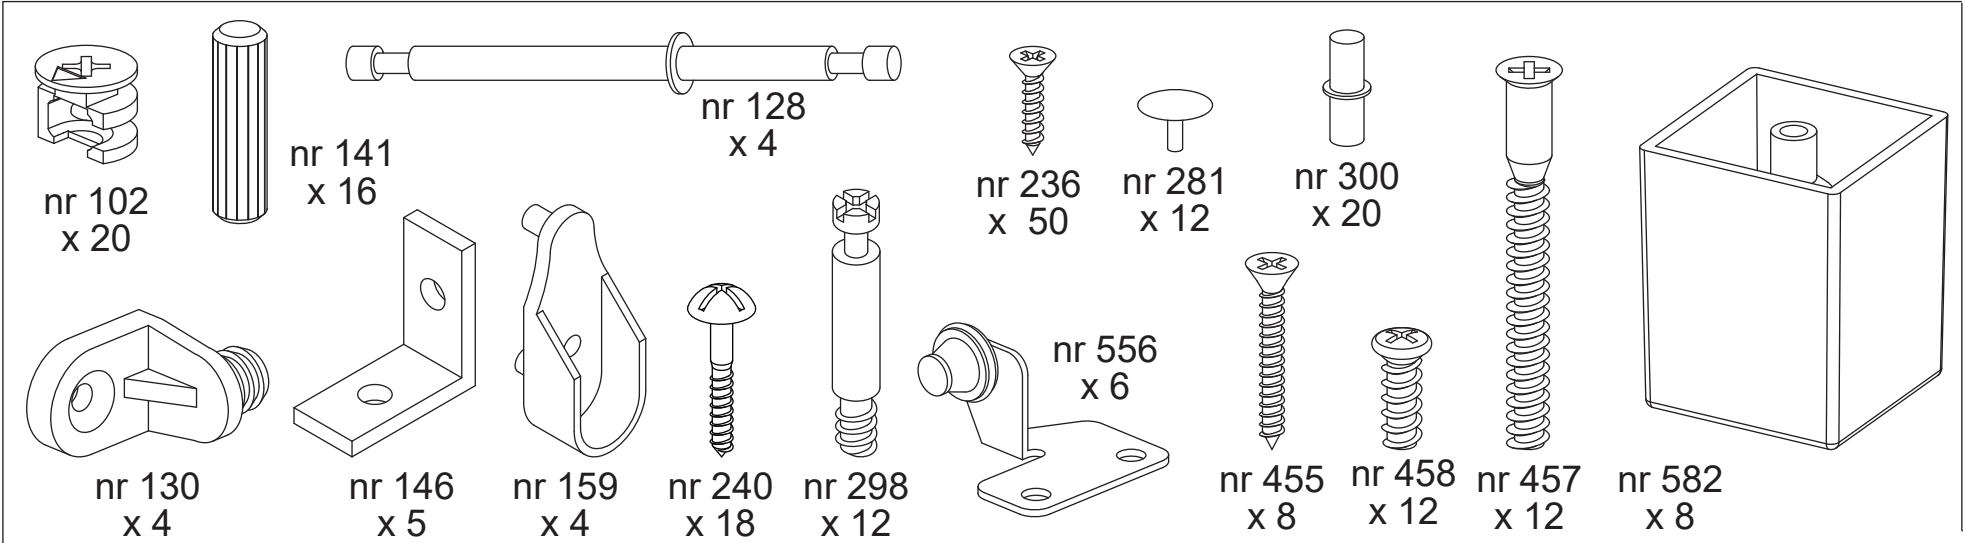












Hettich 9242740

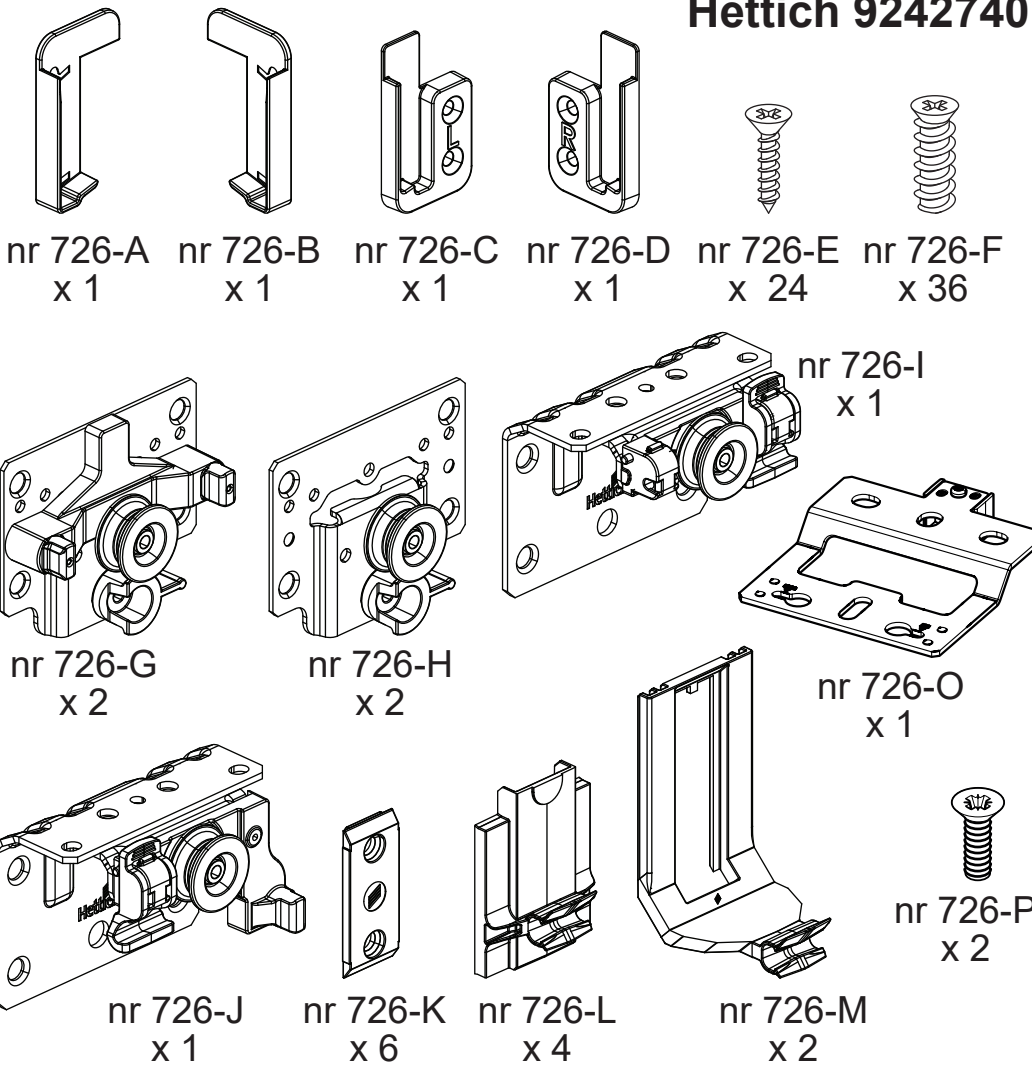


Hettich 9242221

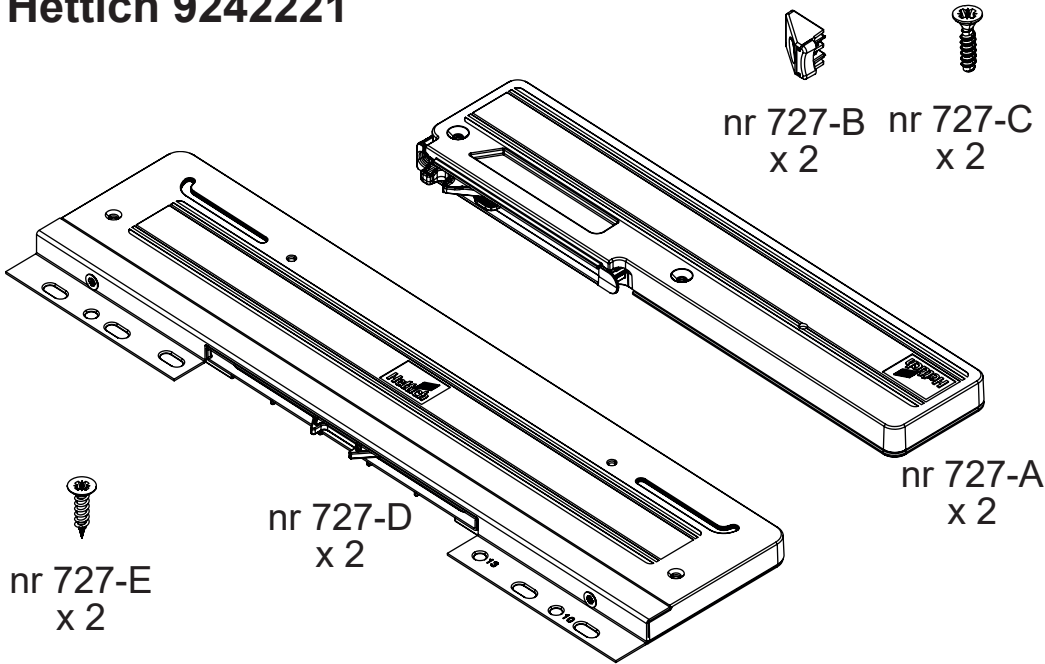

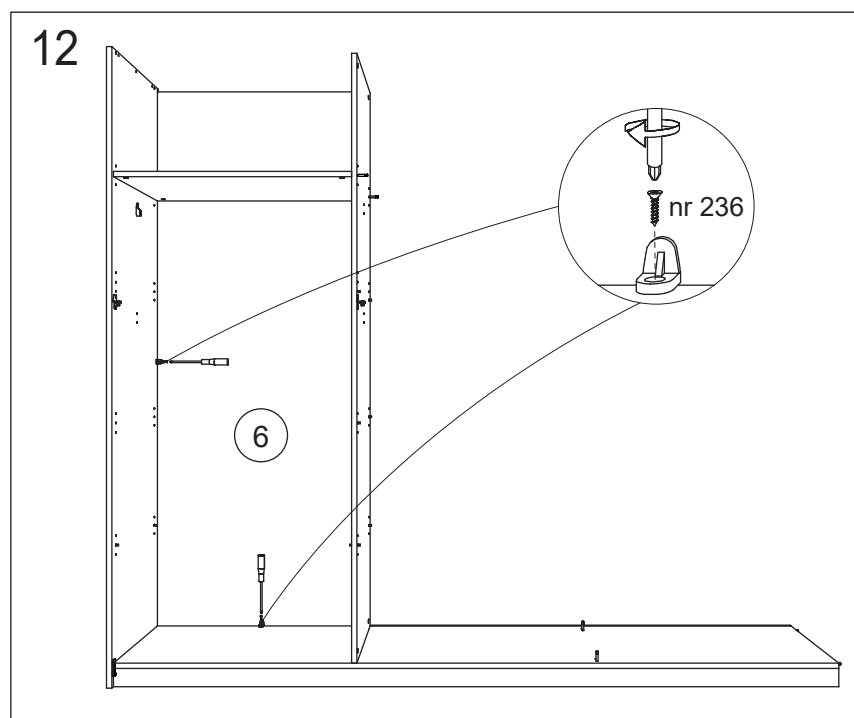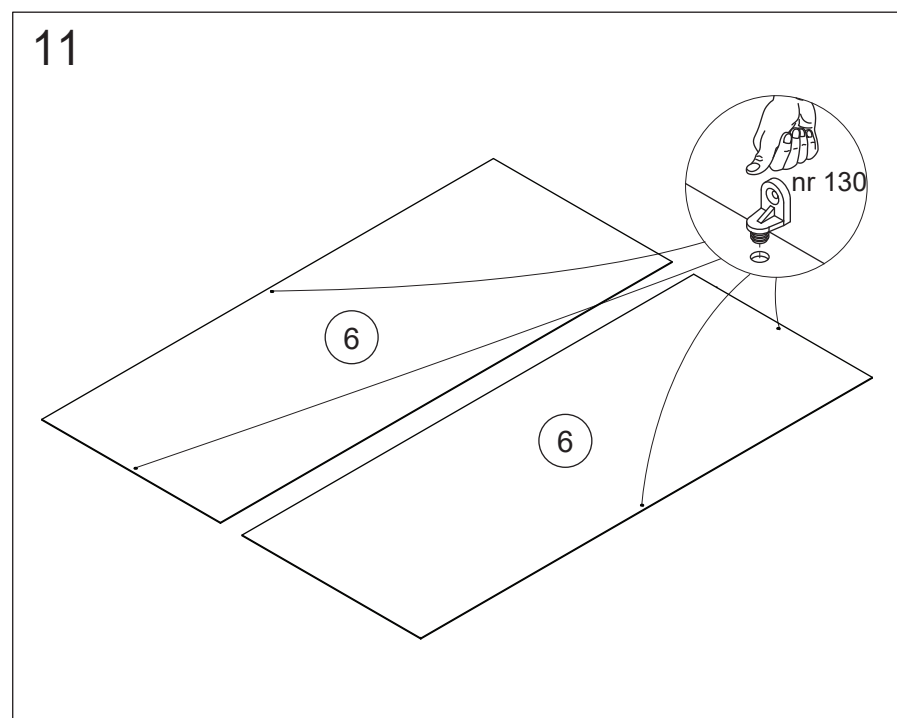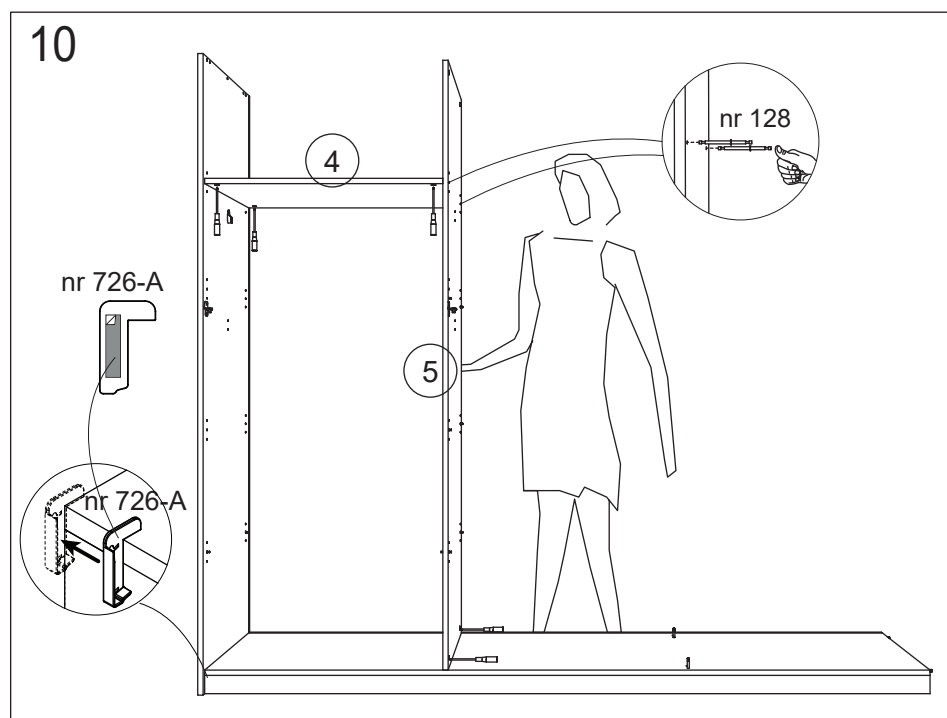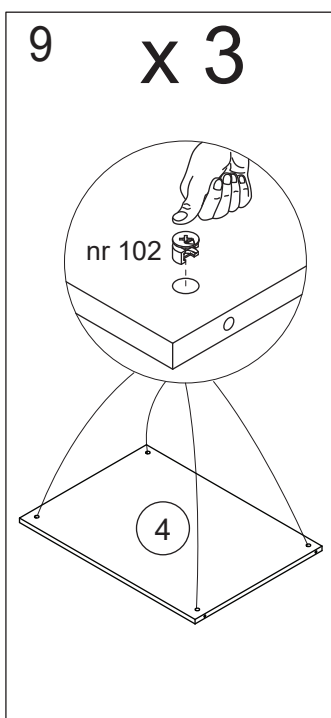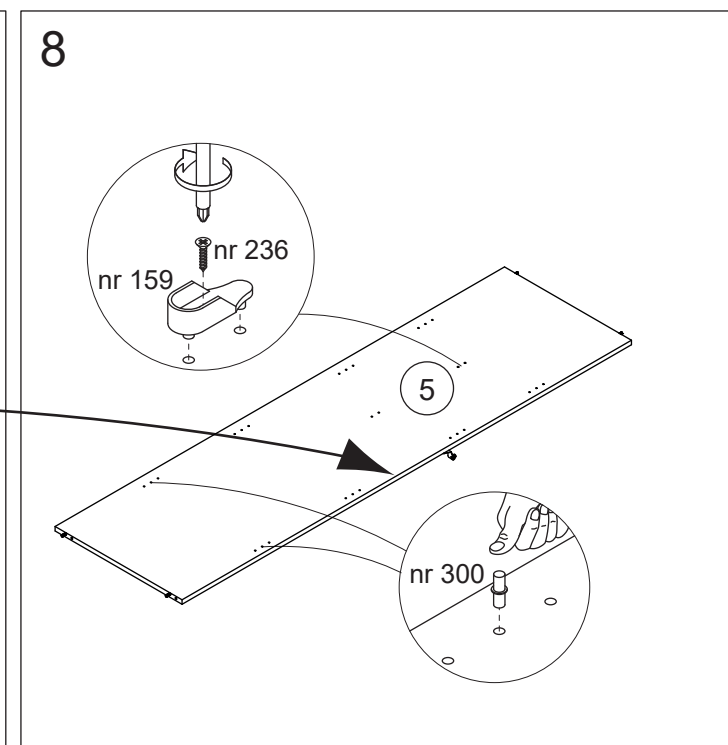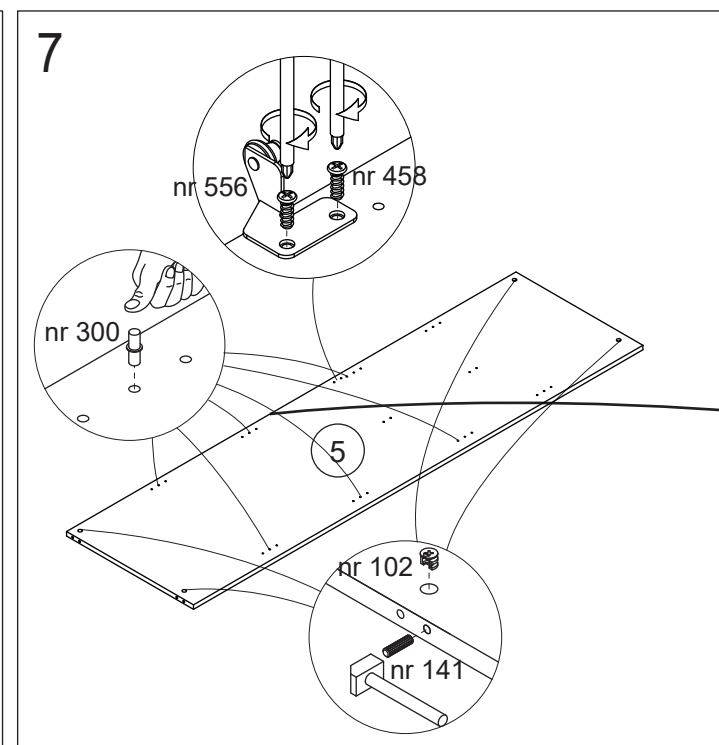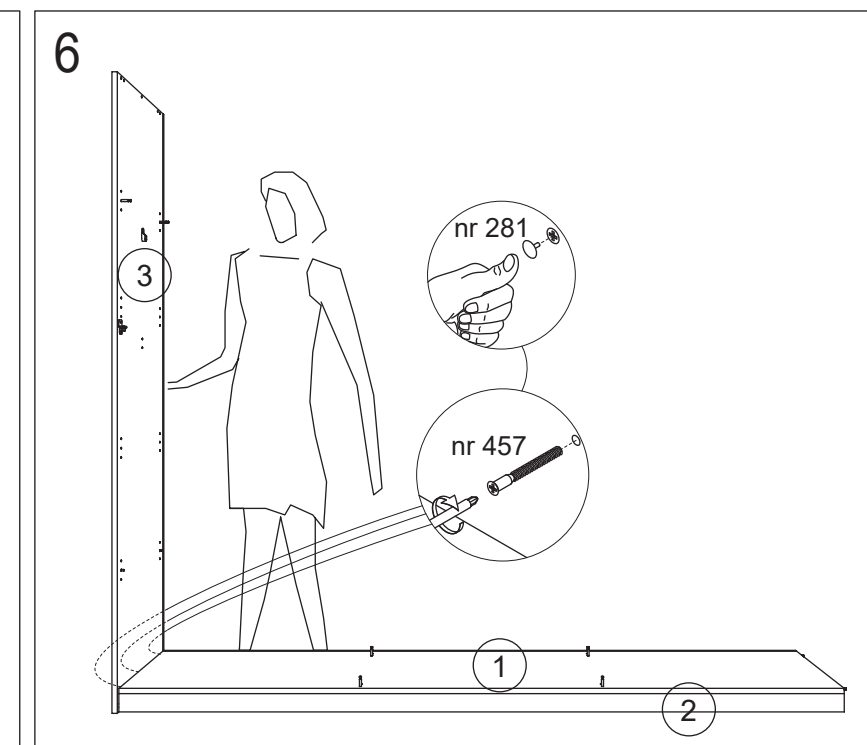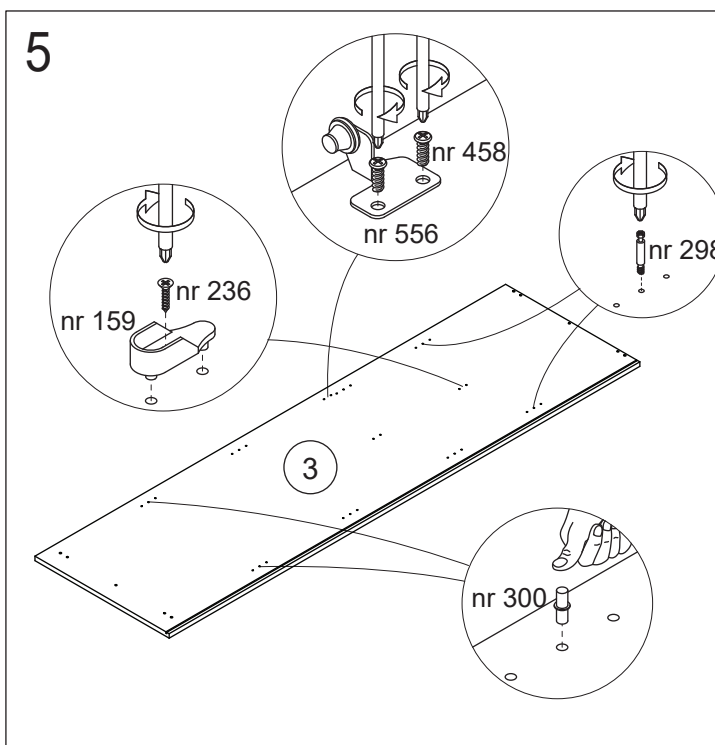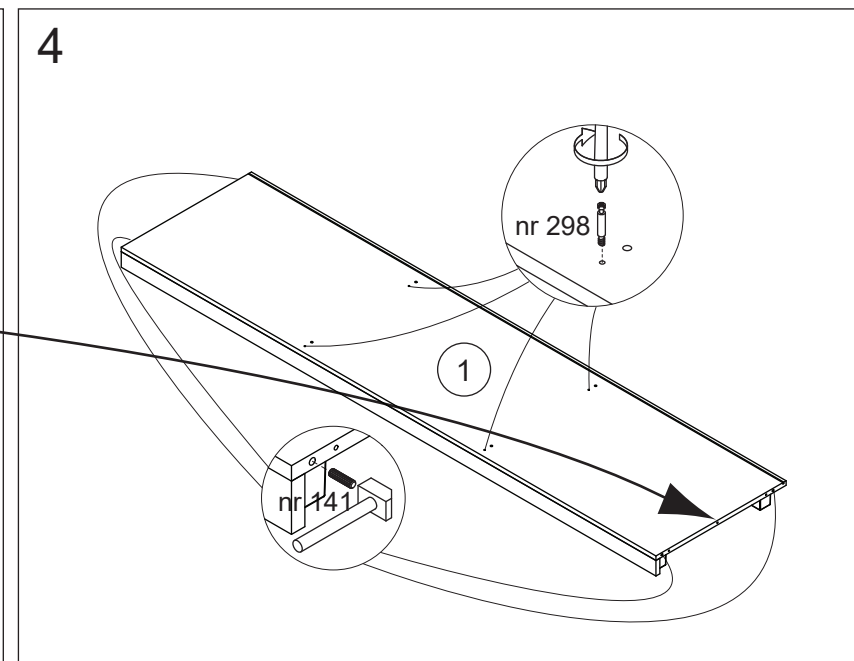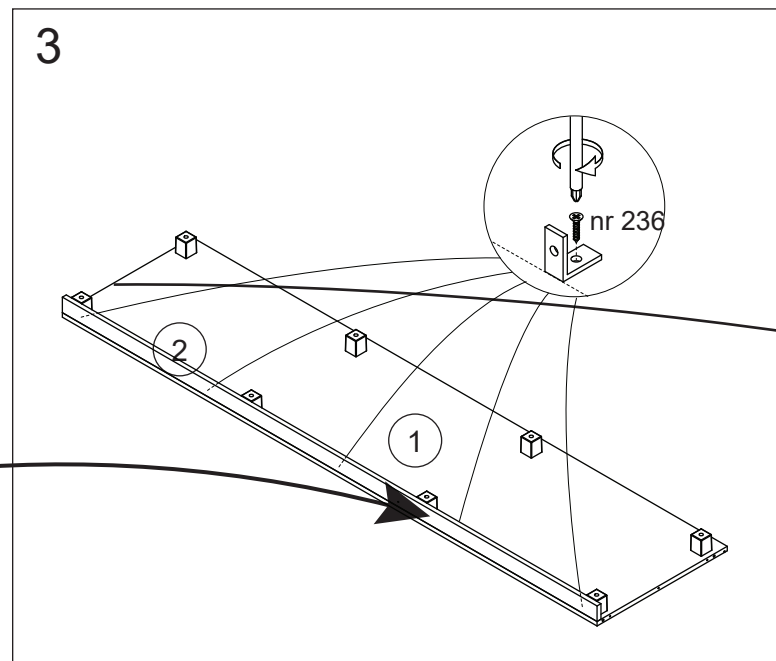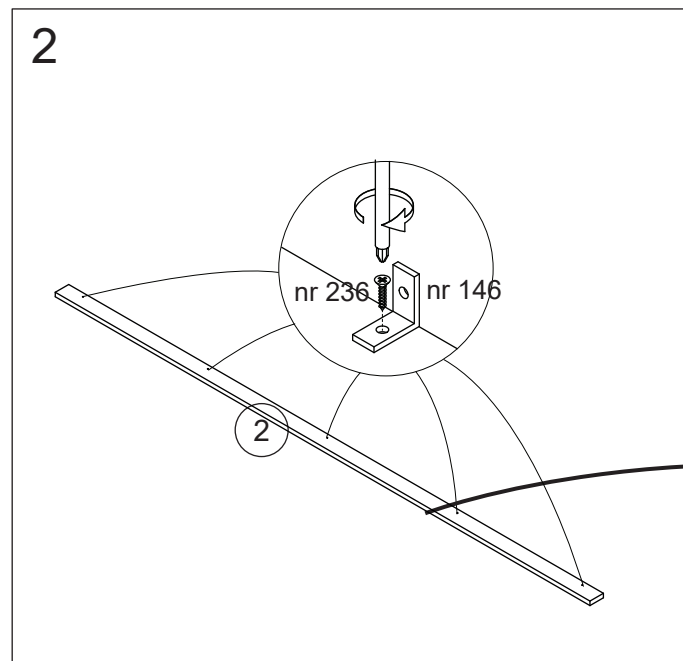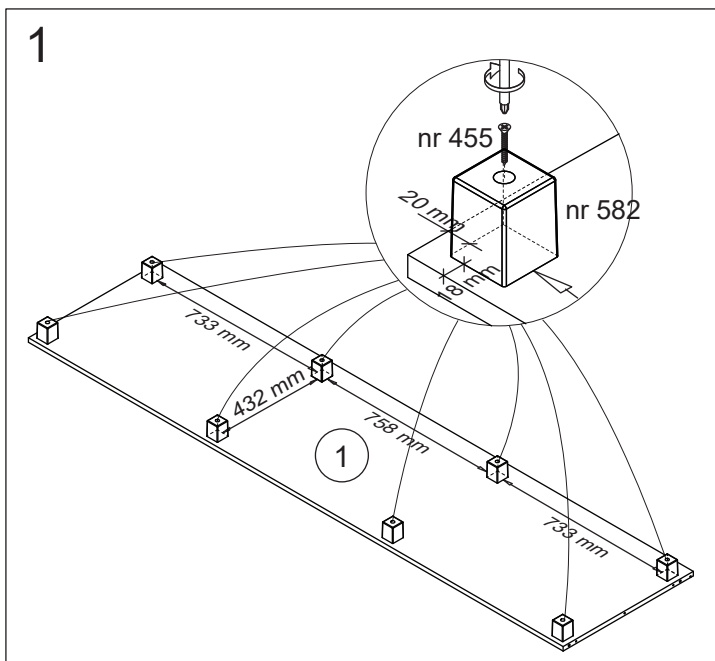


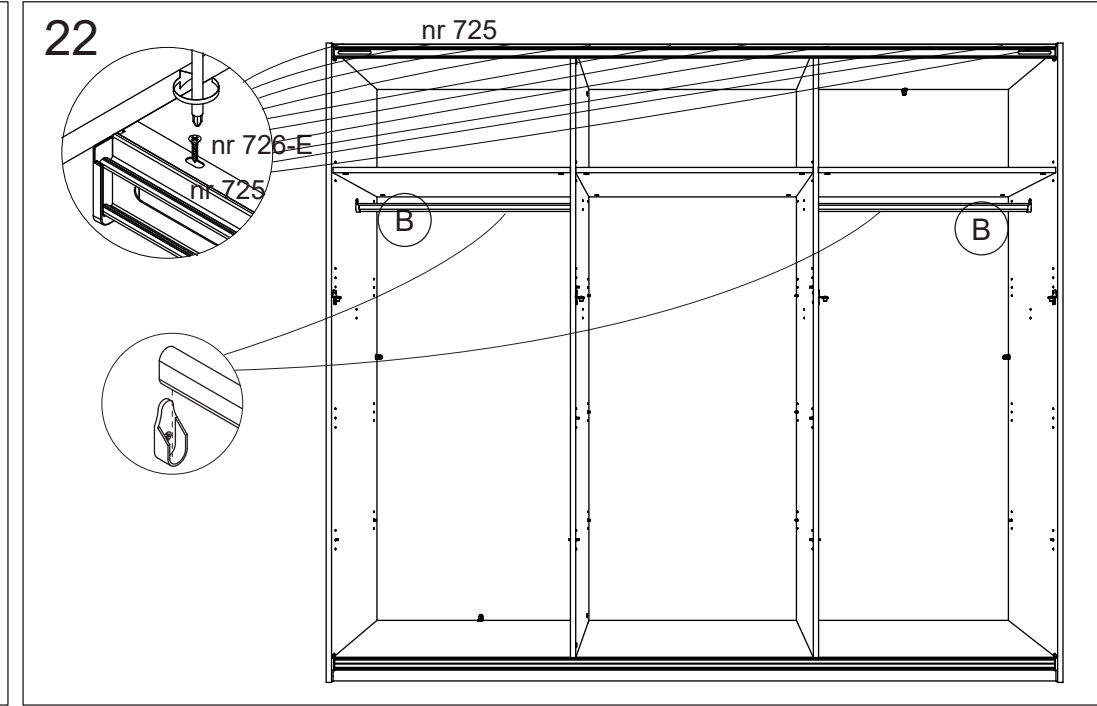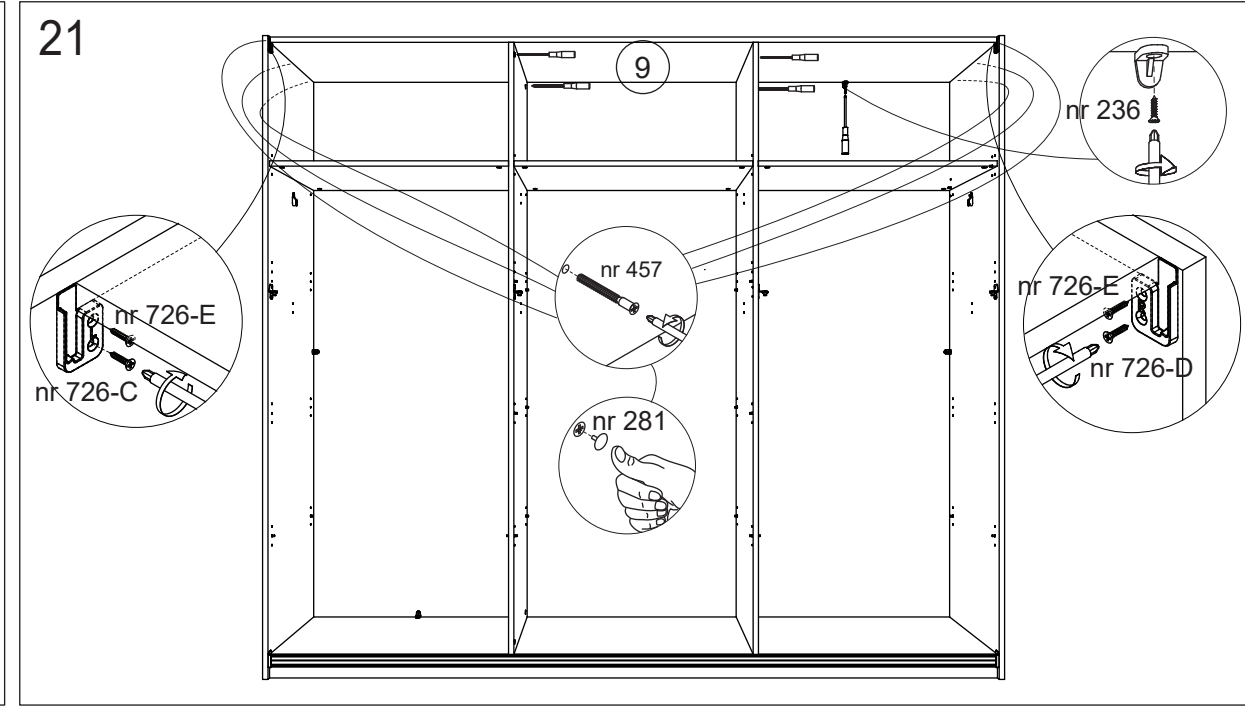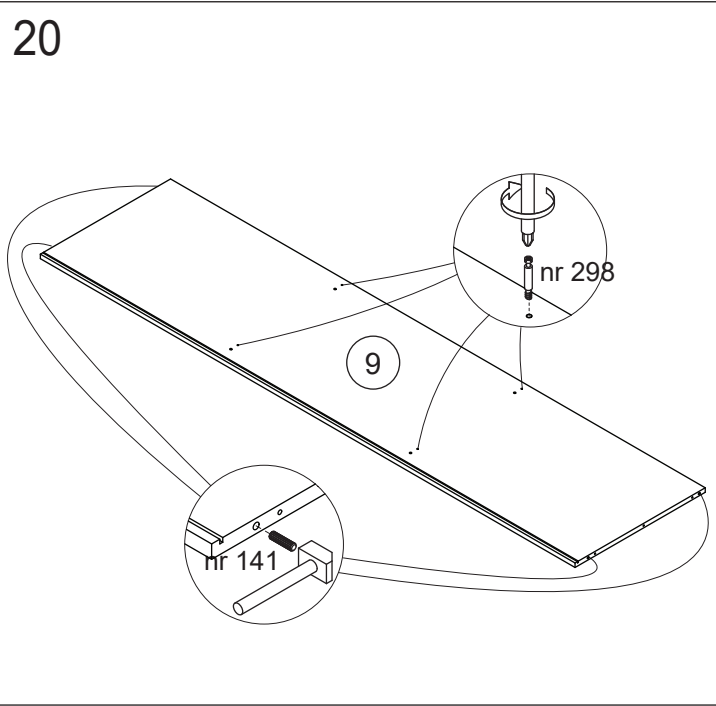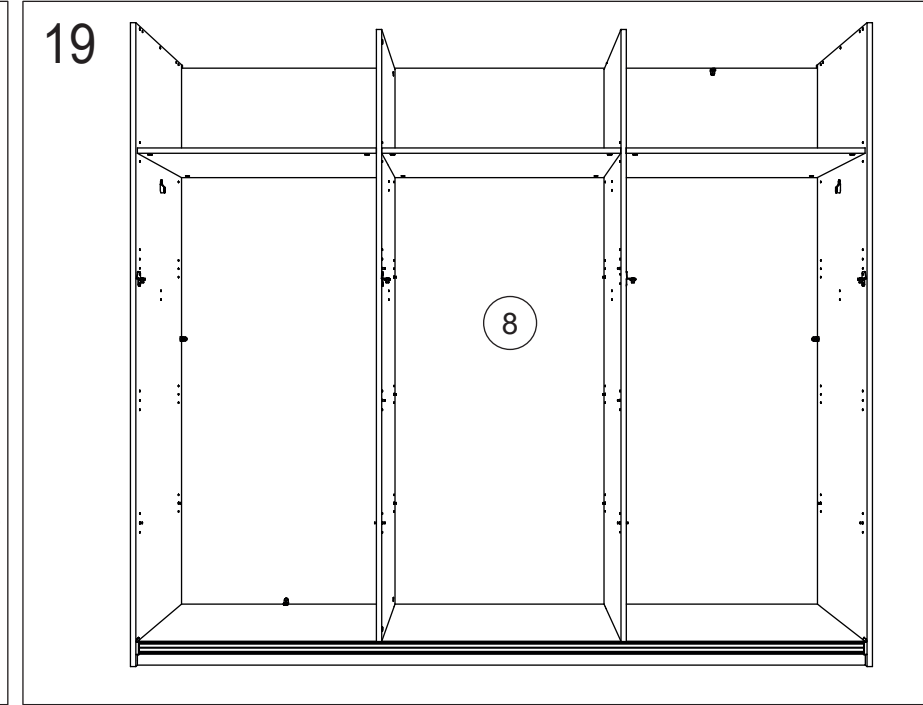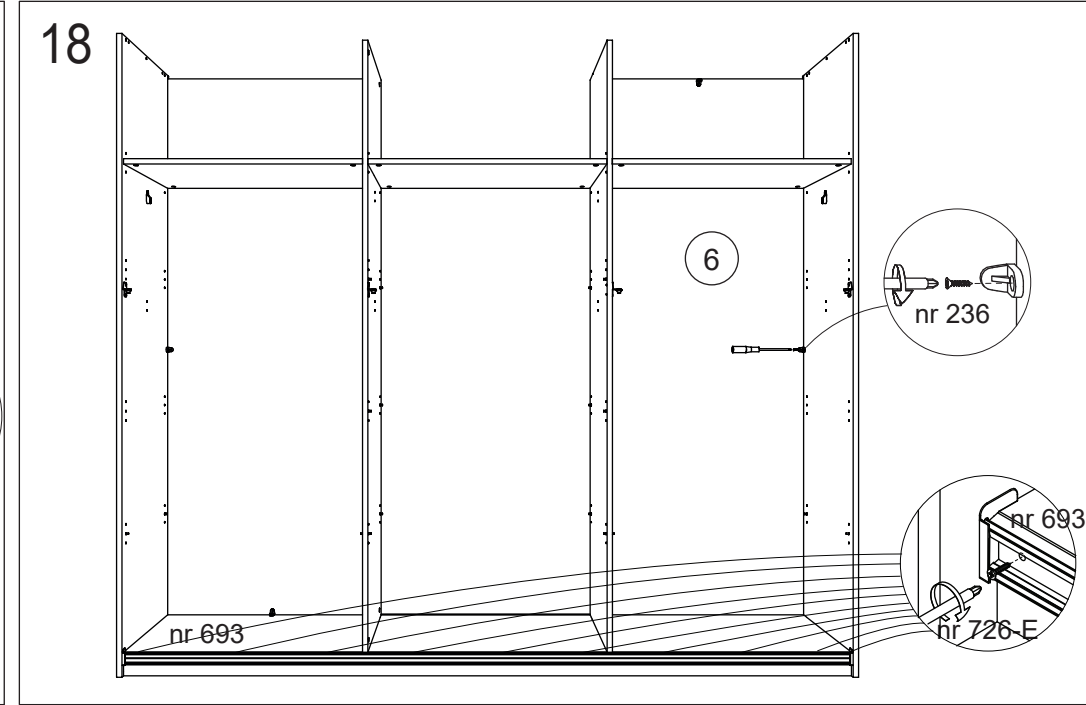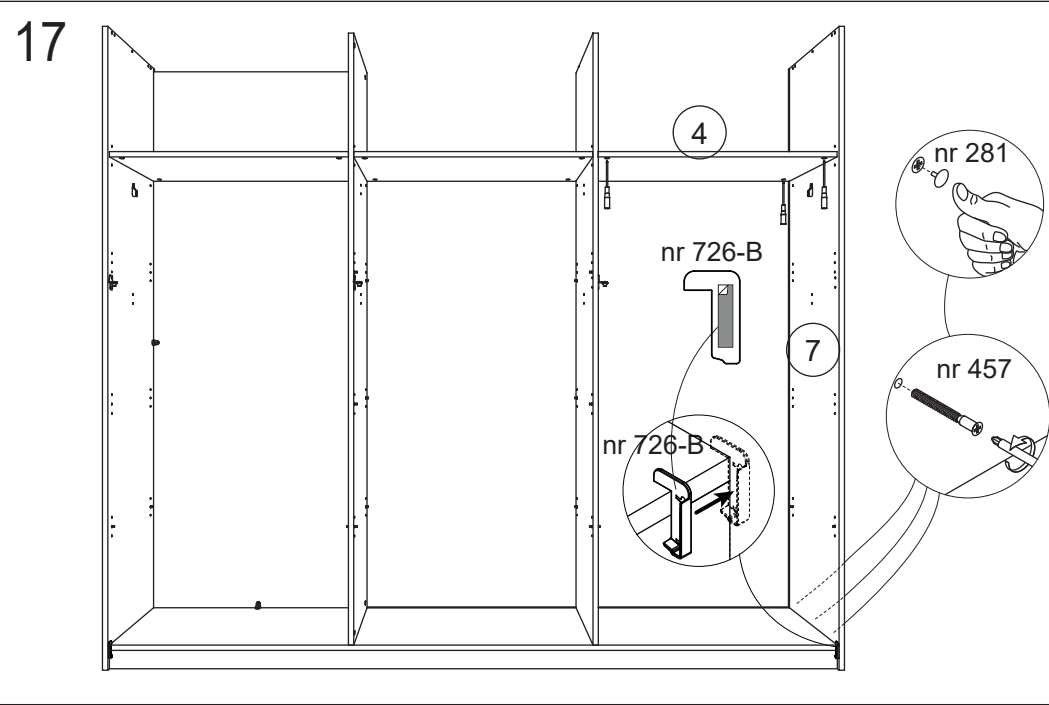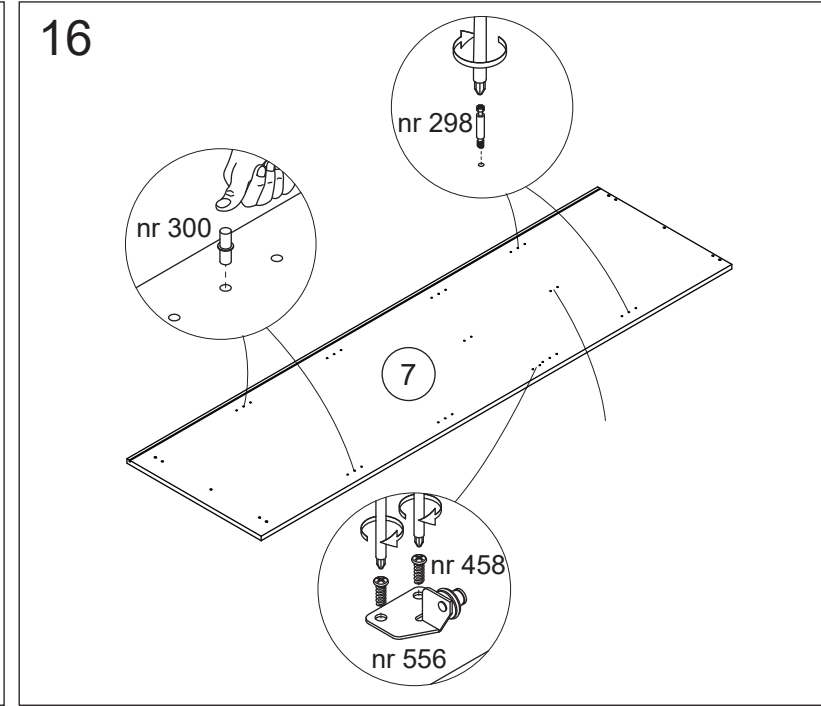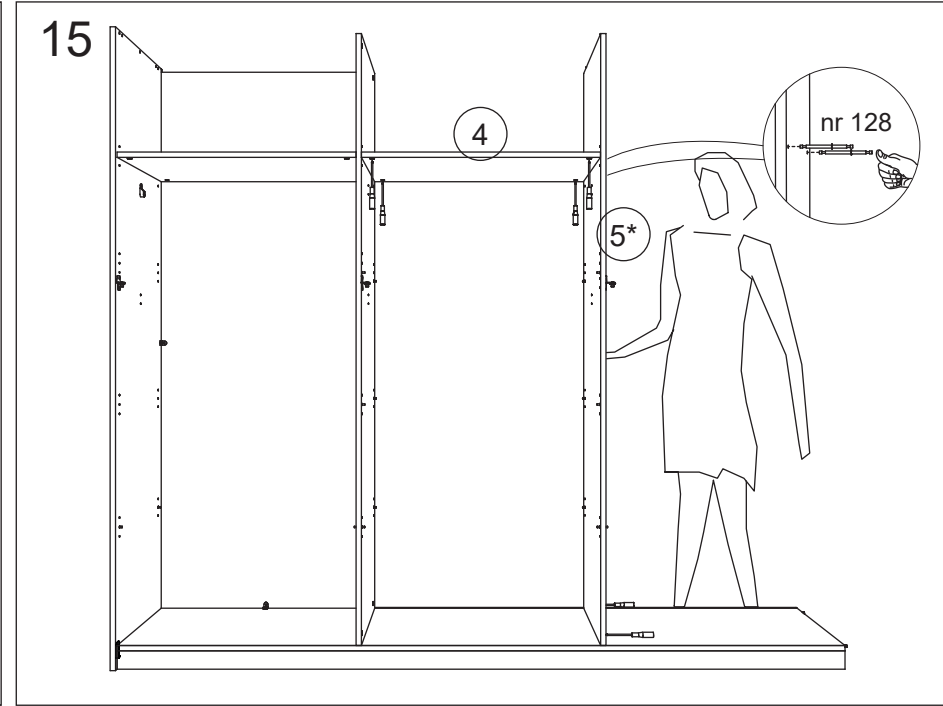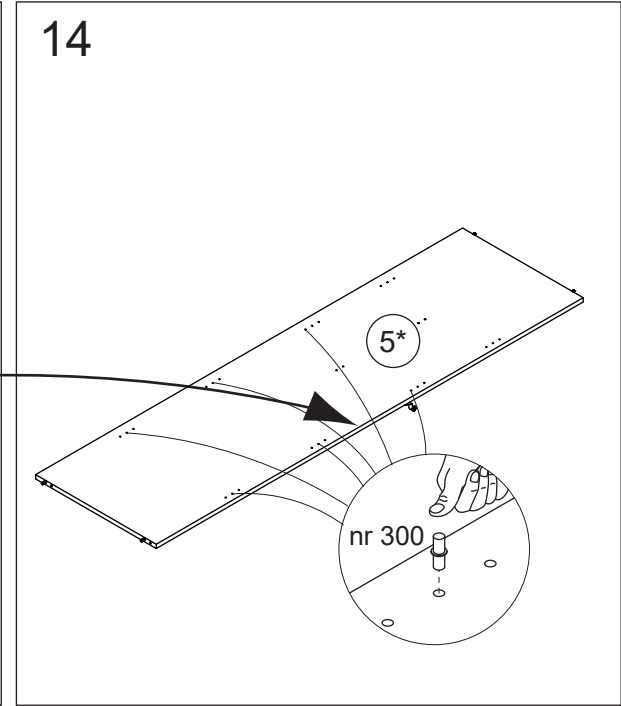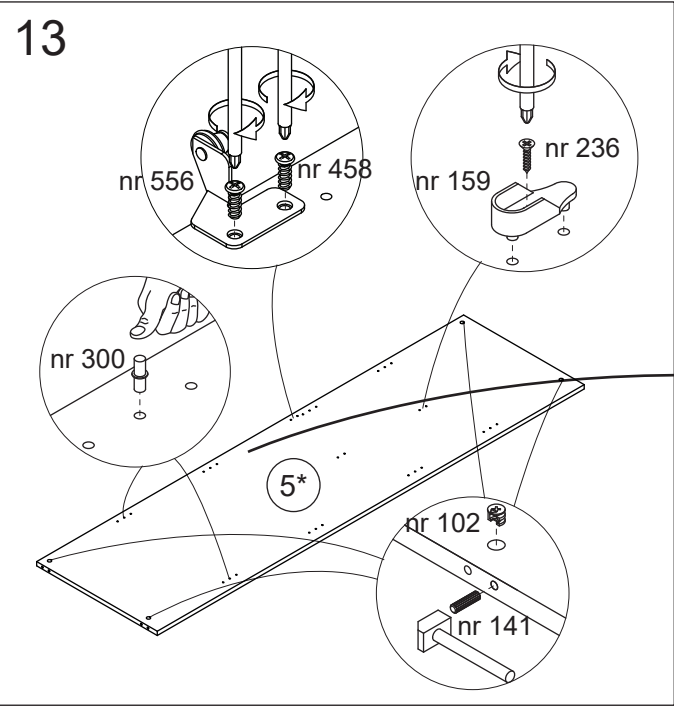

23

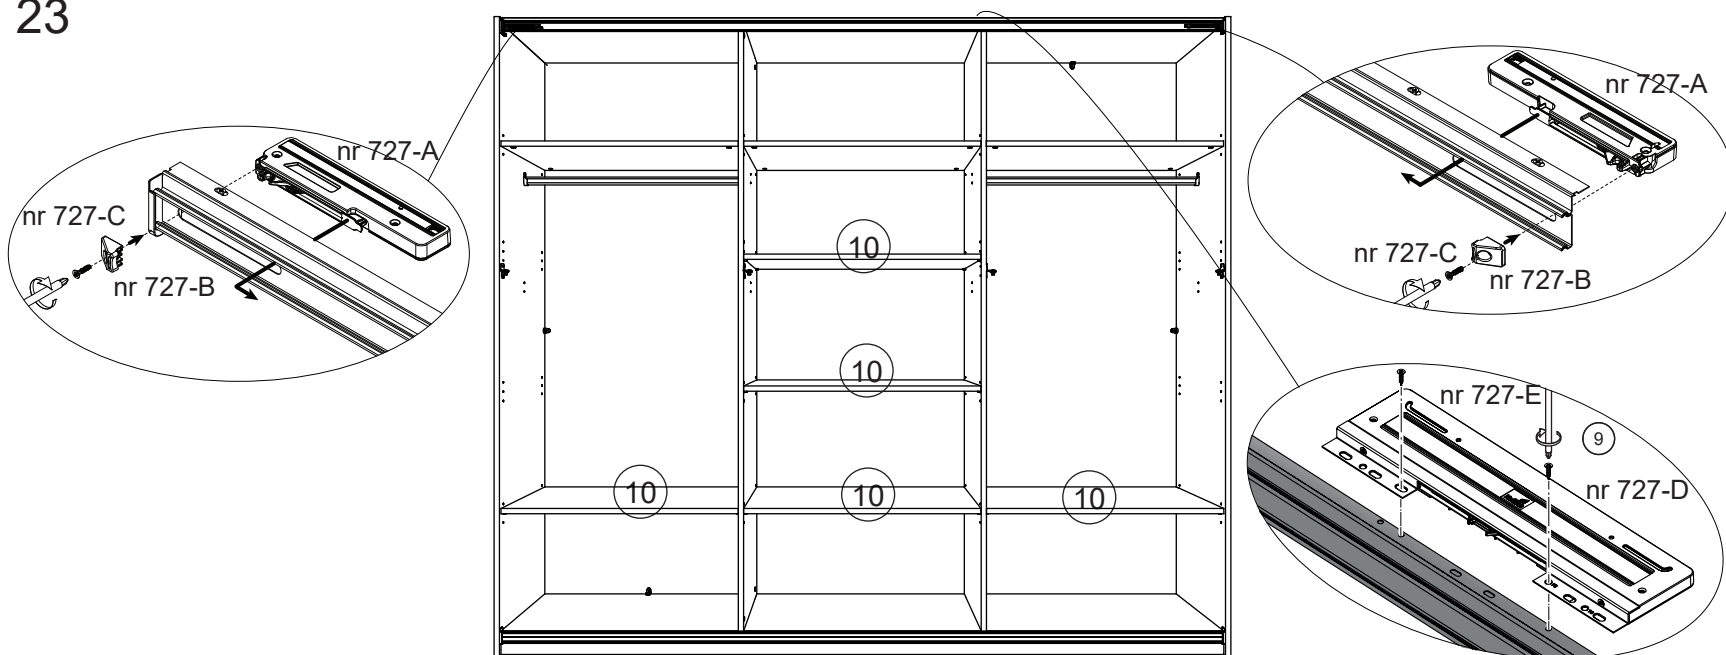

24

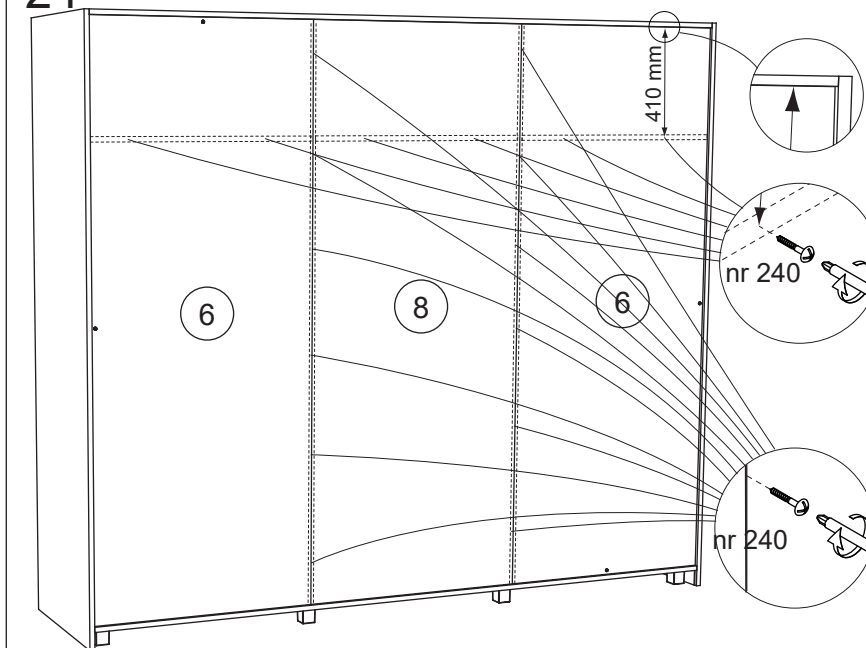


Voor de regeling van het sluiten van de deuren, moet u nu de kast goed waterpas zetten.

Pour le règlement de fermeture des portes, il faut mettre l'armoire de niveau maintenant.


To adjust the closing of the doors, you have to put the robe at level now.

Der Schrank soll jetzt waagrecht stehen, für die Reglung des Schliessens der Türe


25

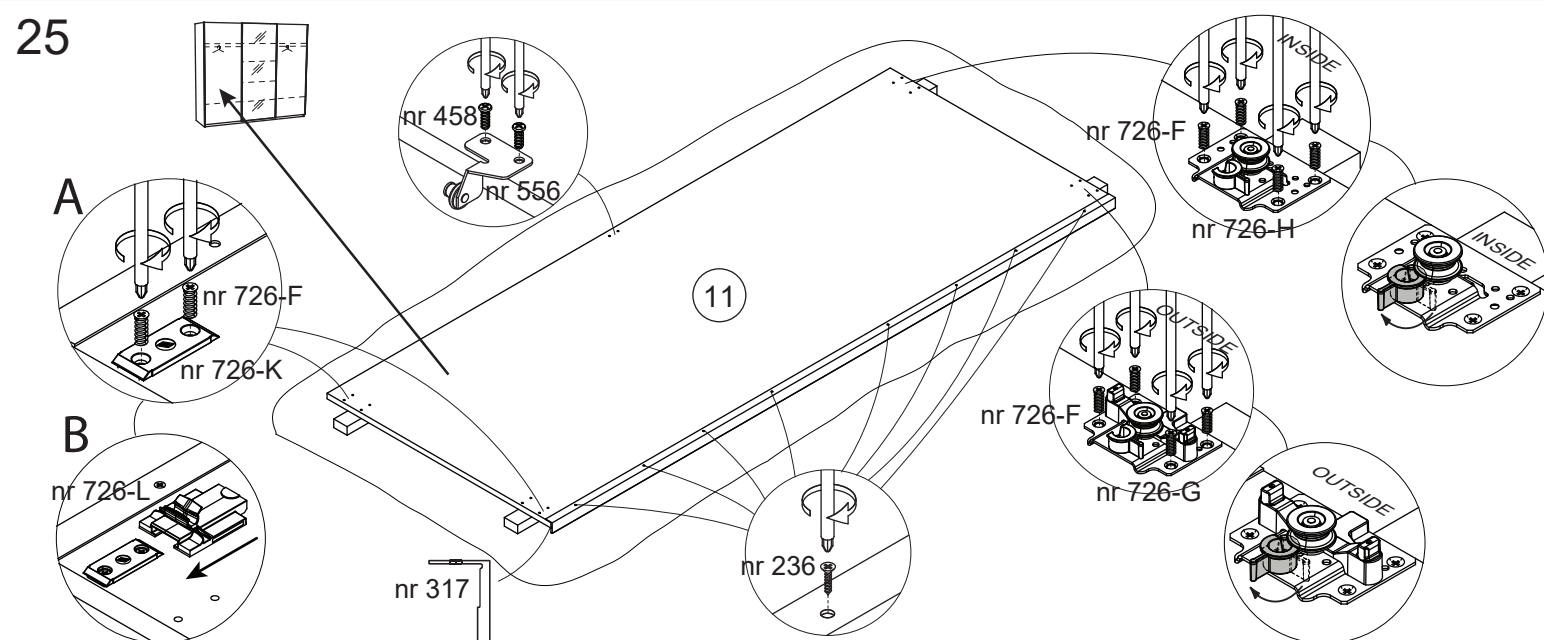


26

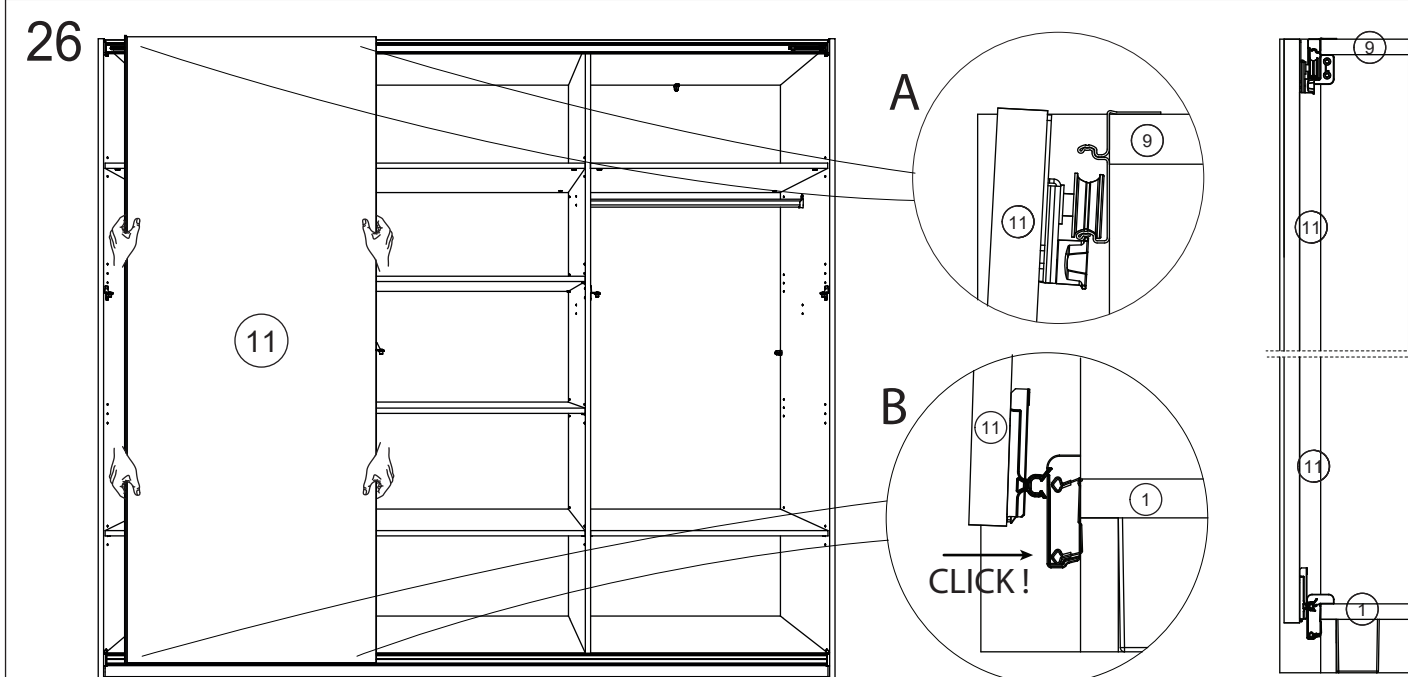


27

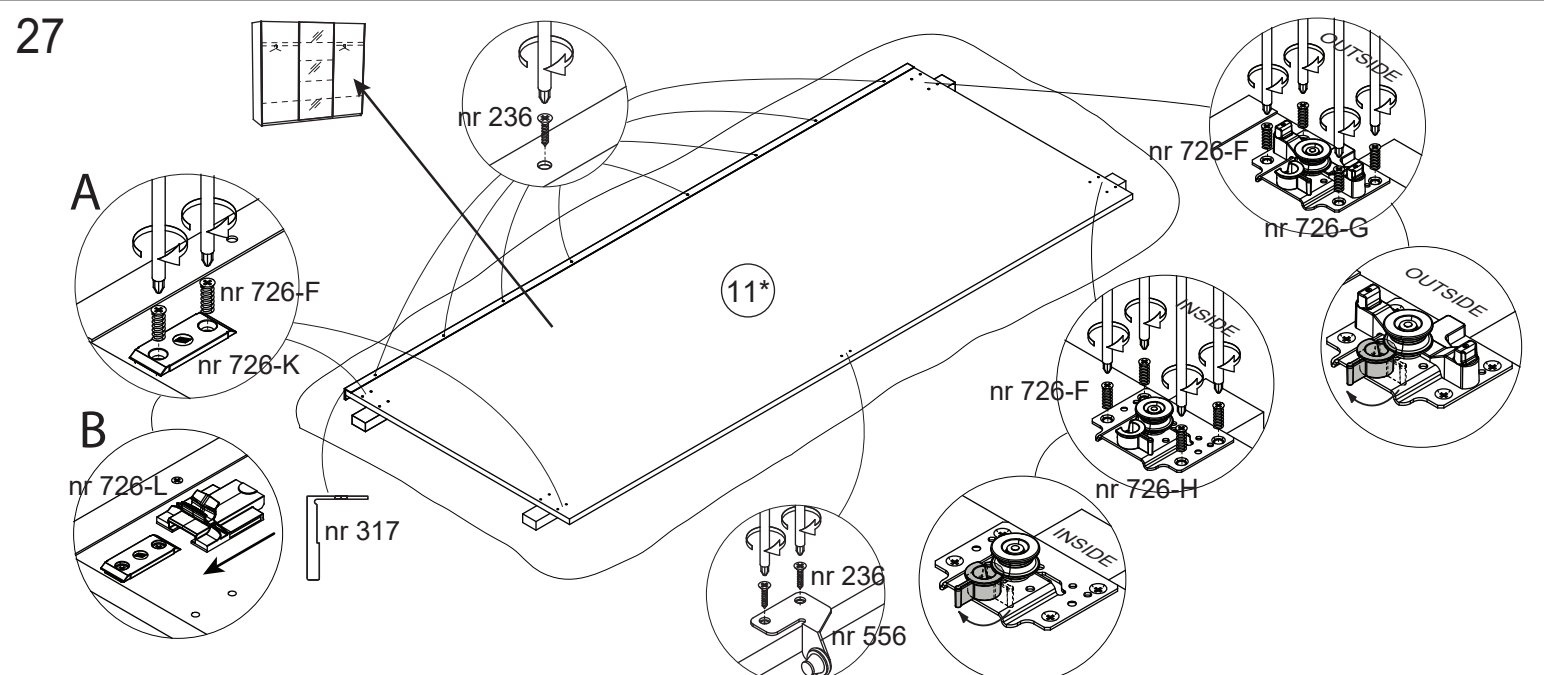


28

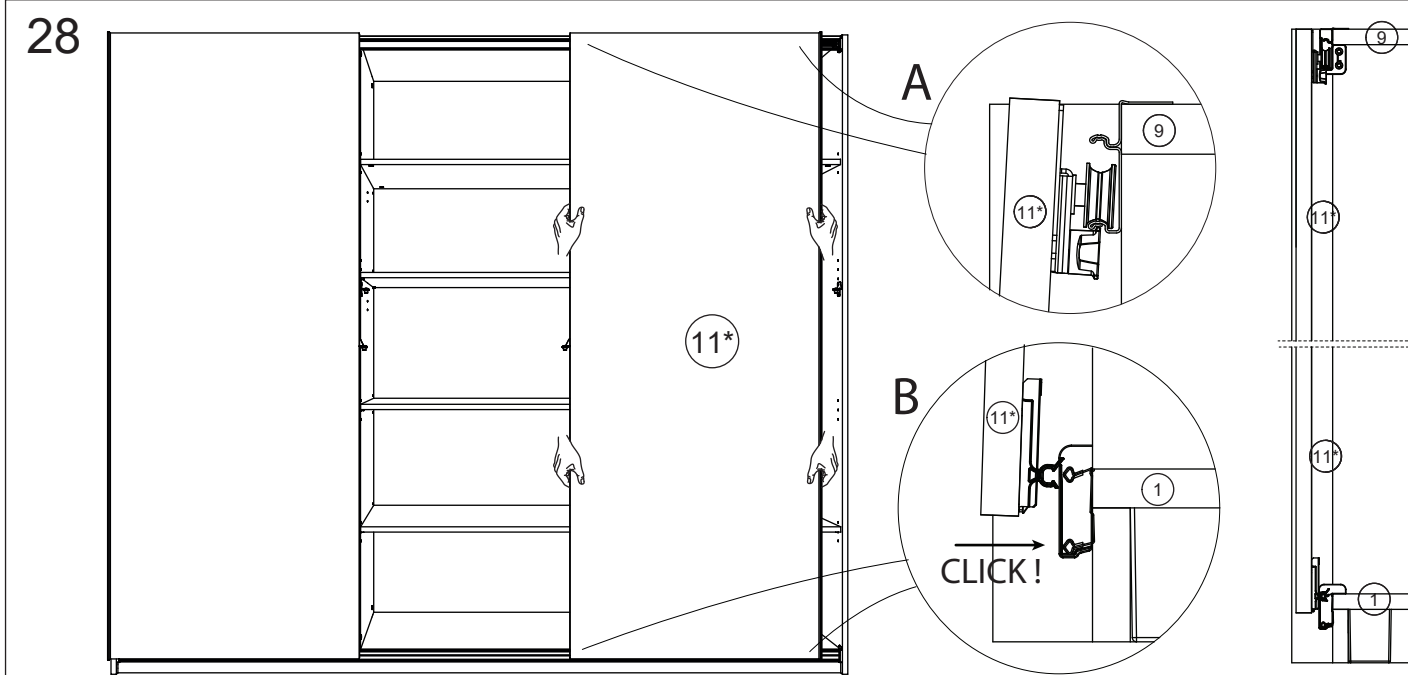


29

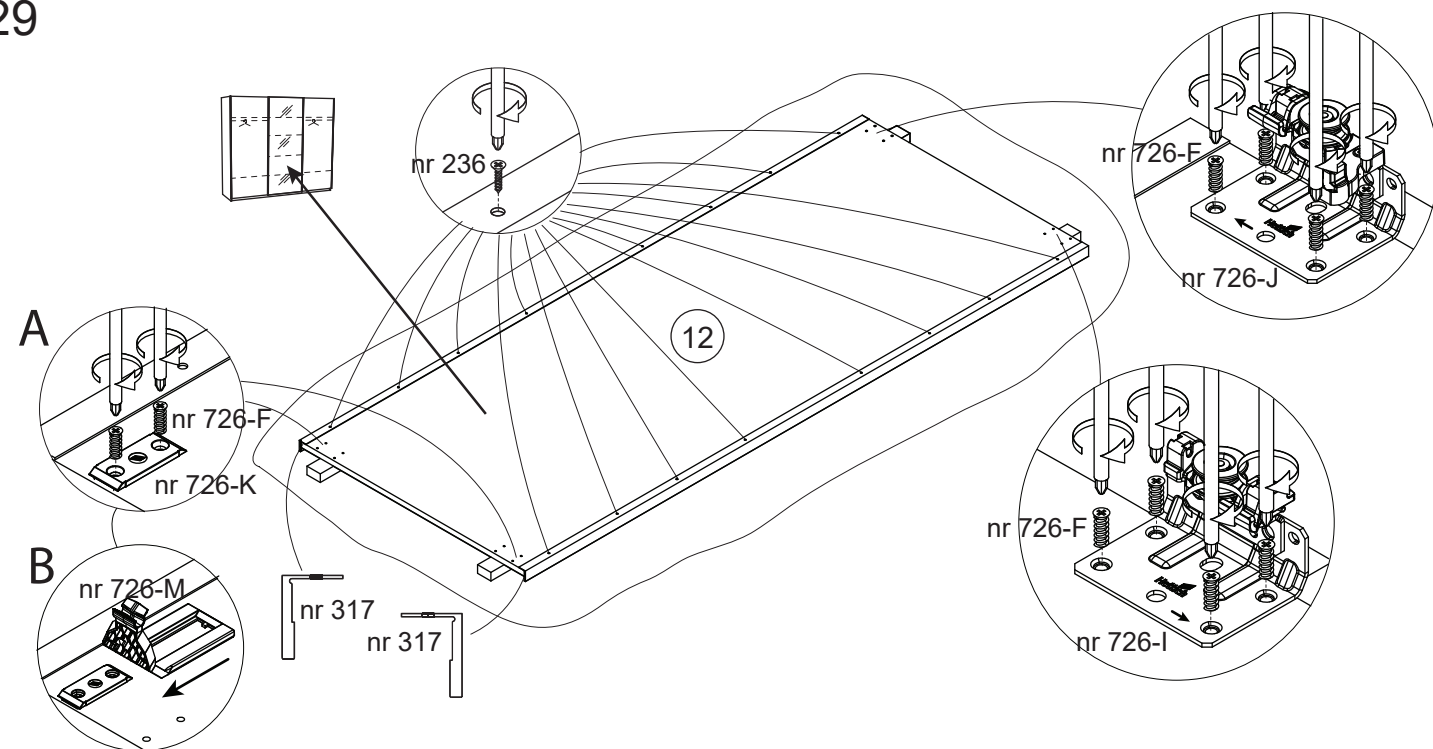

30

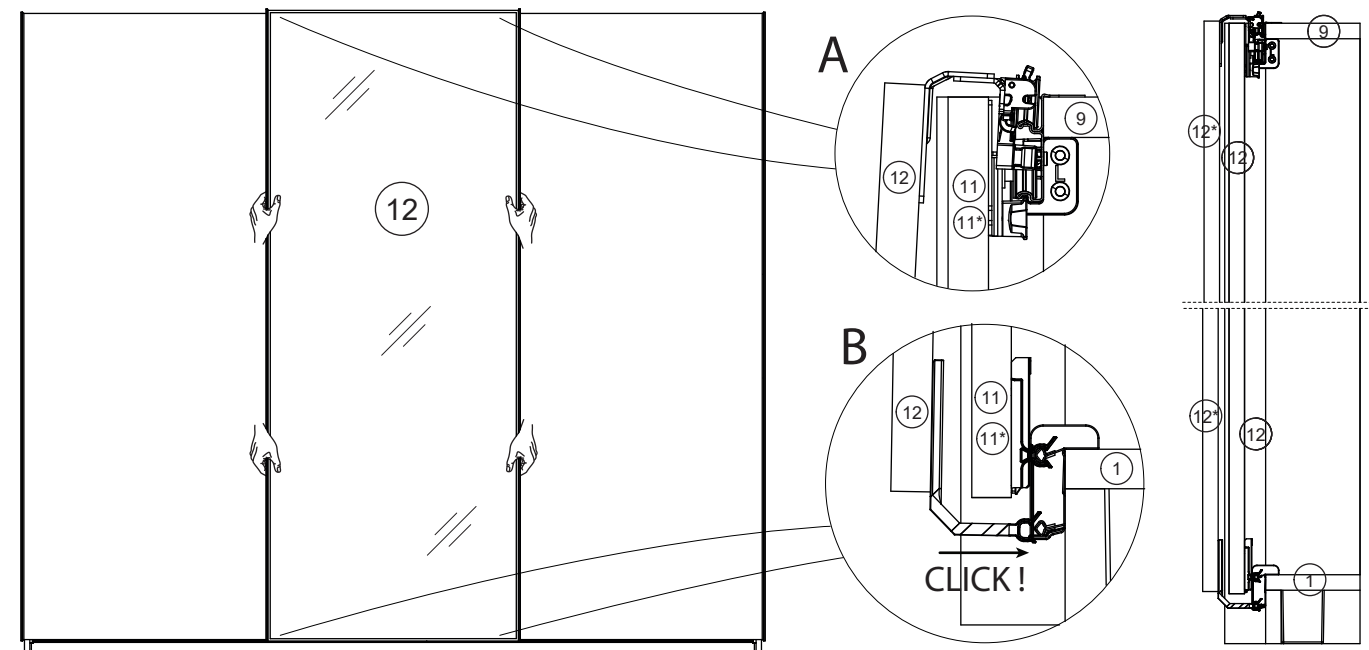

31

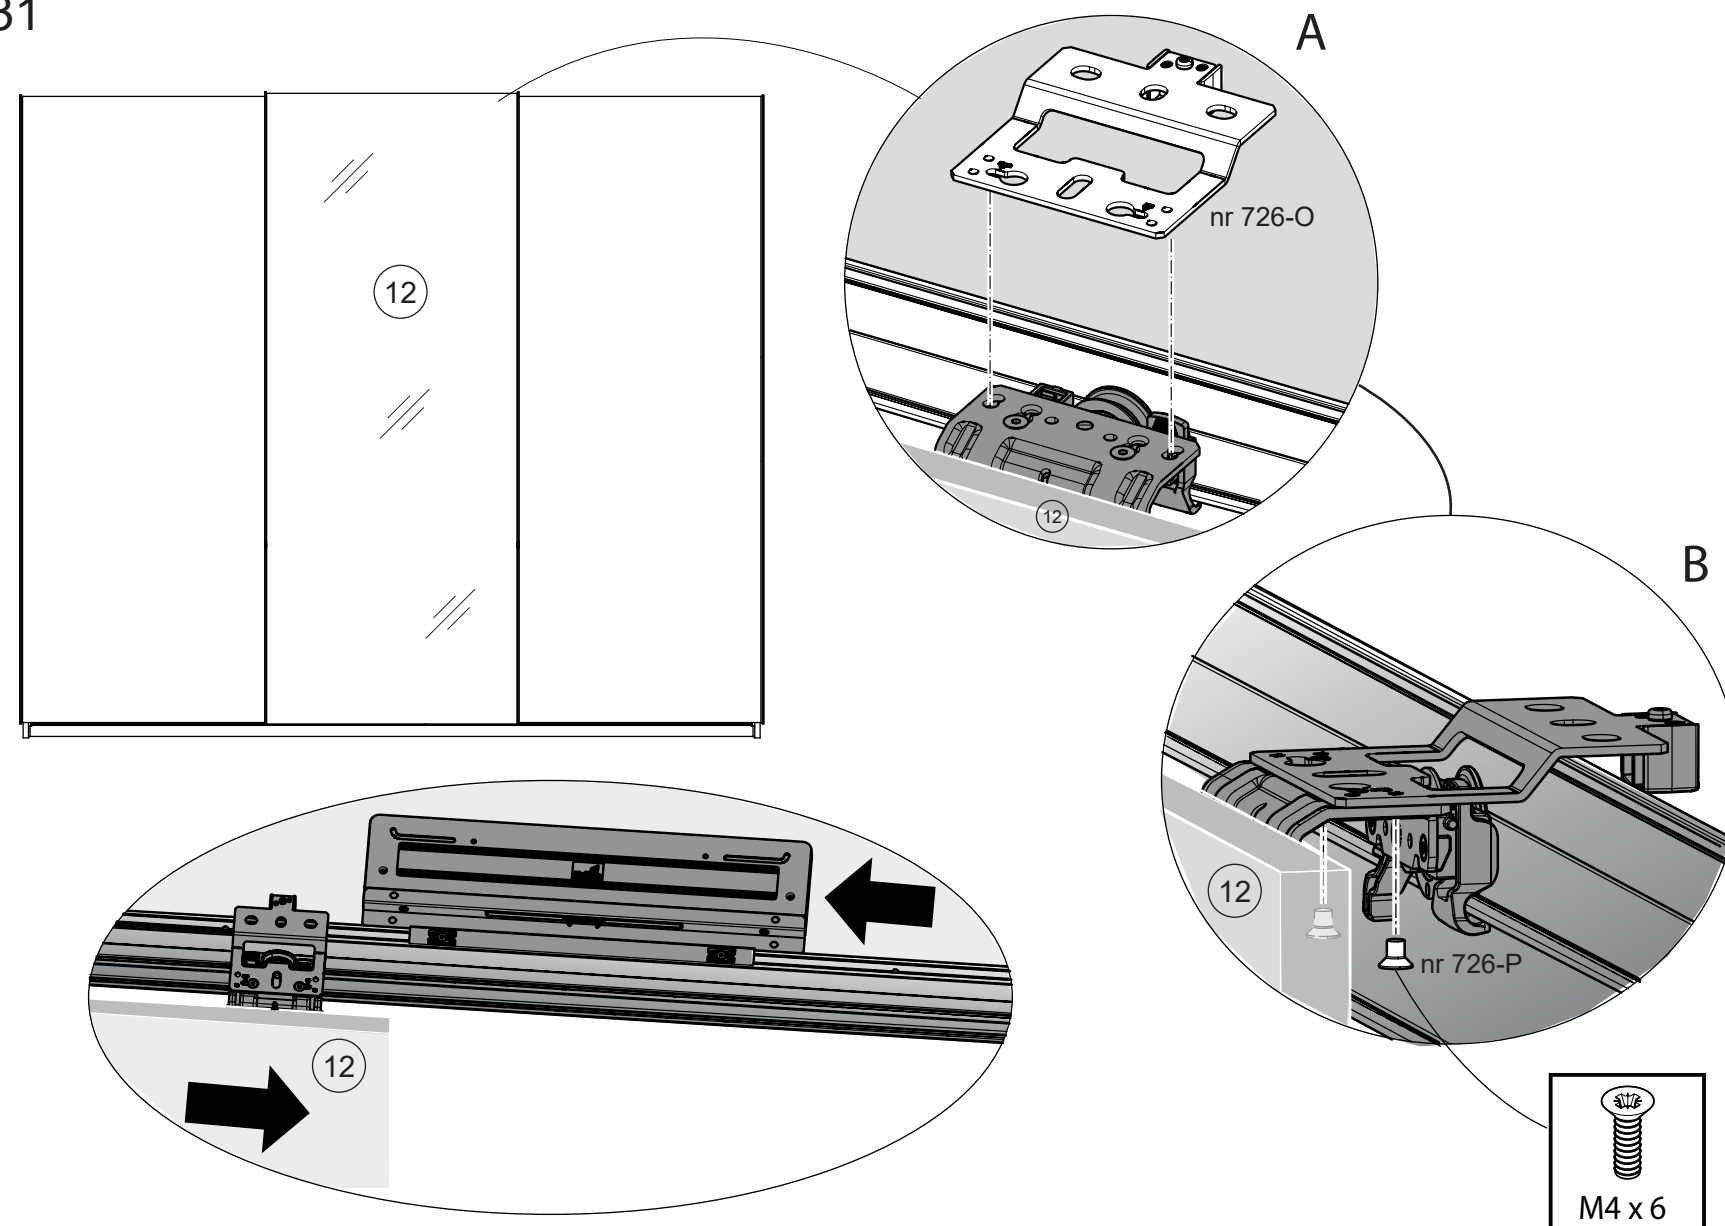

32

Van binnen gezien
Vu de l'intérieur
Interior sight
Innen gesehen

