


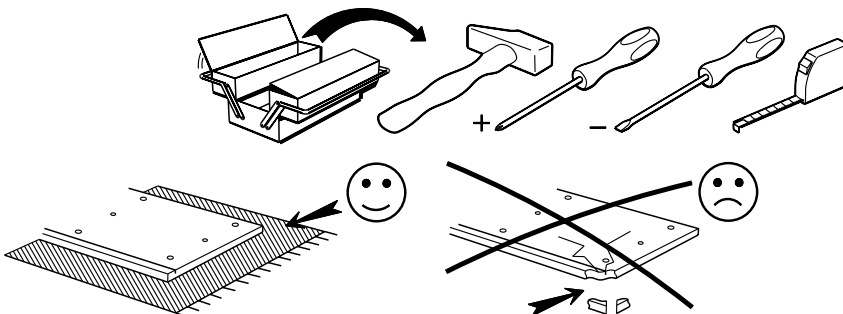
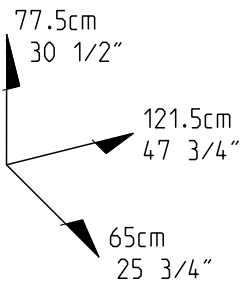
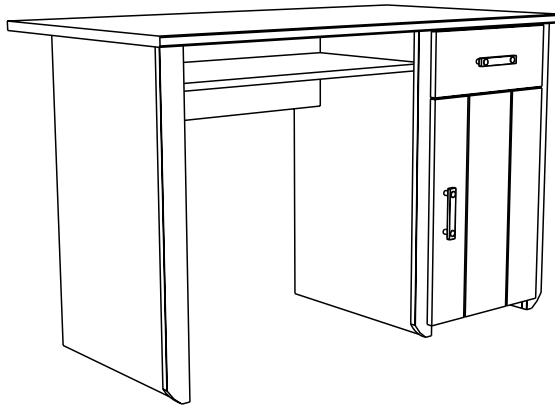


2273BURE



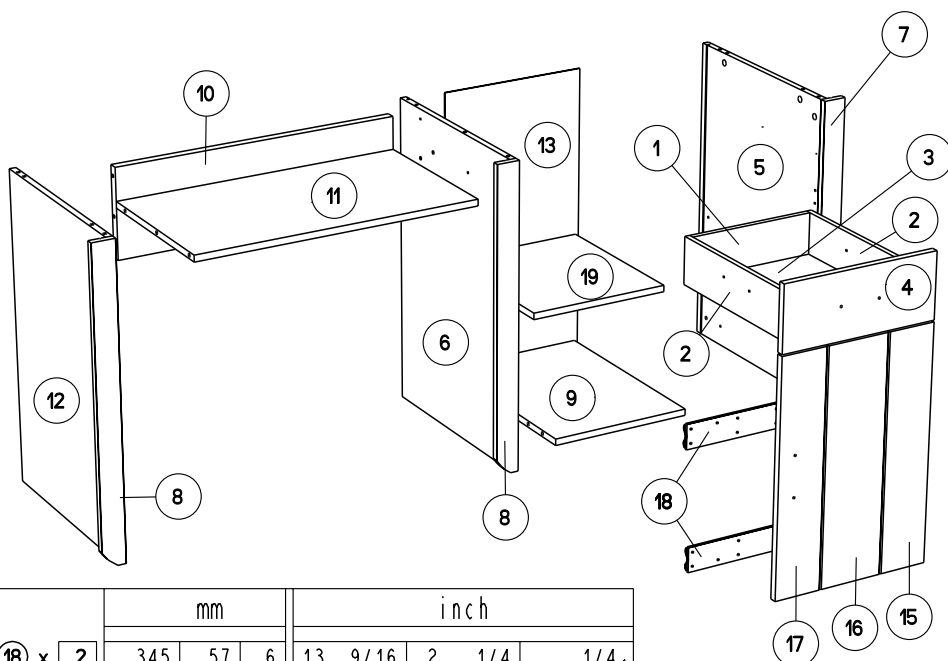


A line drawing of a tape measure. The white plastic housing is on the right, and the metal tape is extended to the left. The tape has markings for inches and feet.




ADM x26



ADU x4




AD x24




DA x4




EP x2



VJ x2



WZ x4




AMO x20



ZK x1



CF x1




BRL x4



Ai x24




EO x1




Vi x10



ANK x20

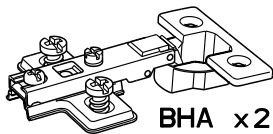


BHA x2

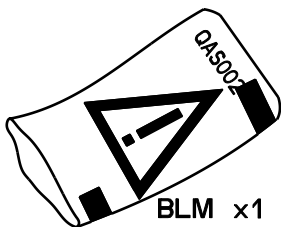

BLM x1




PU x3

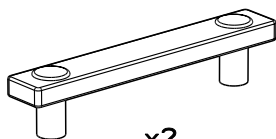

x2




AFM x1





AFN x1




AFK x1




AFL x1

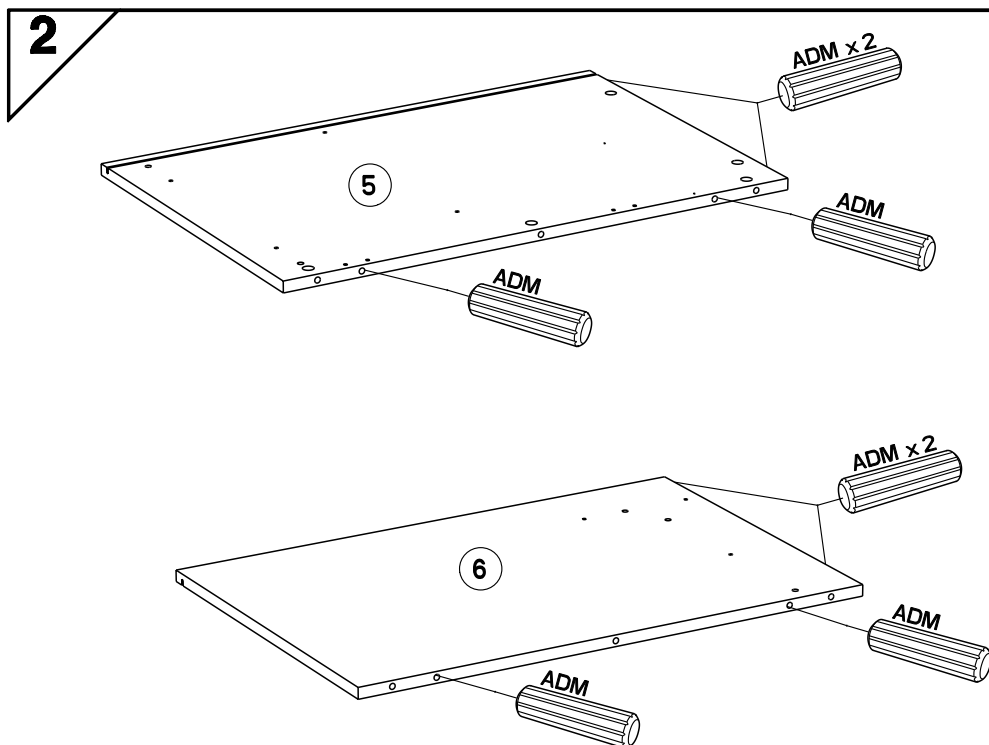
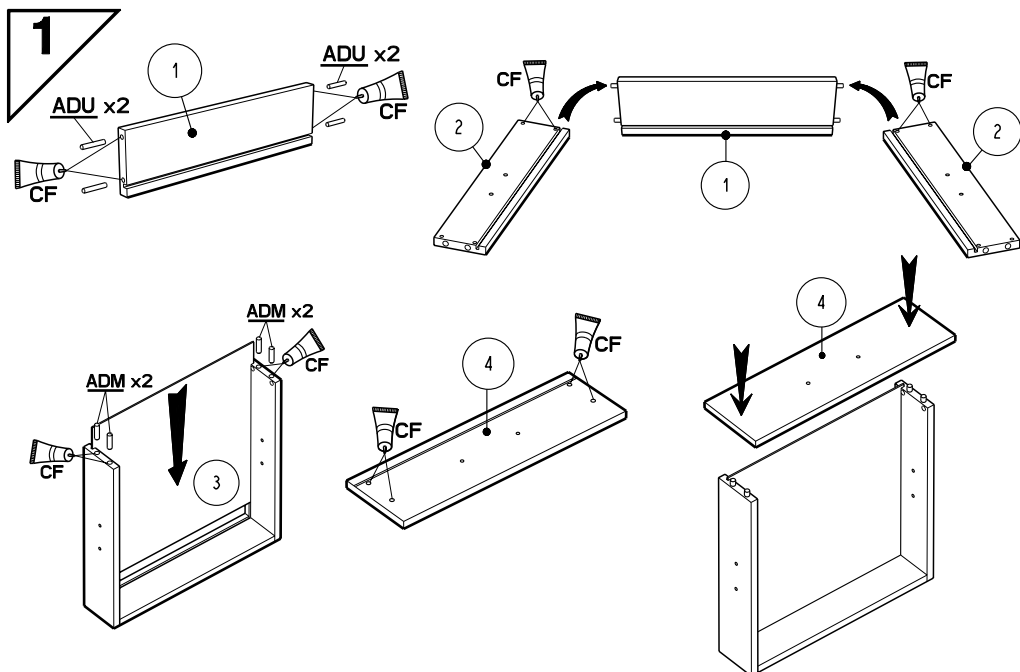


3


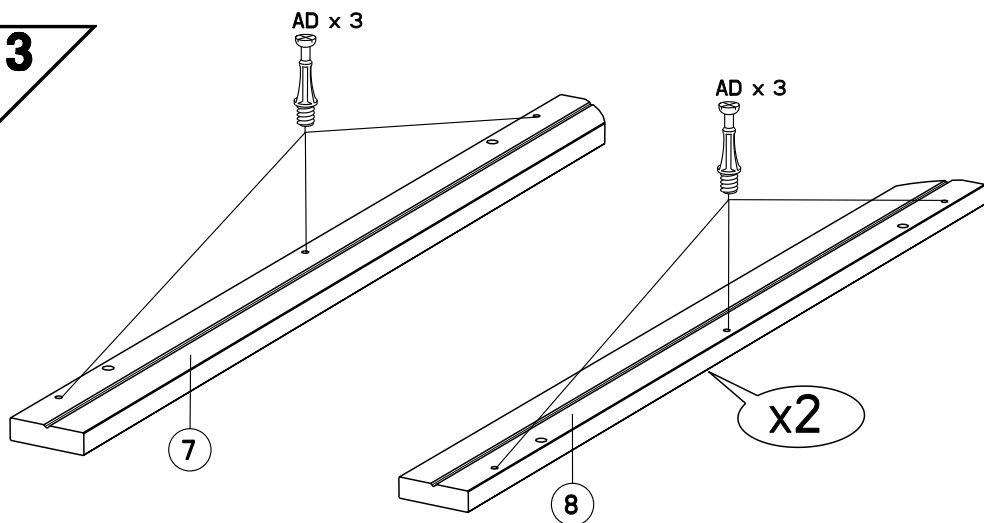


4

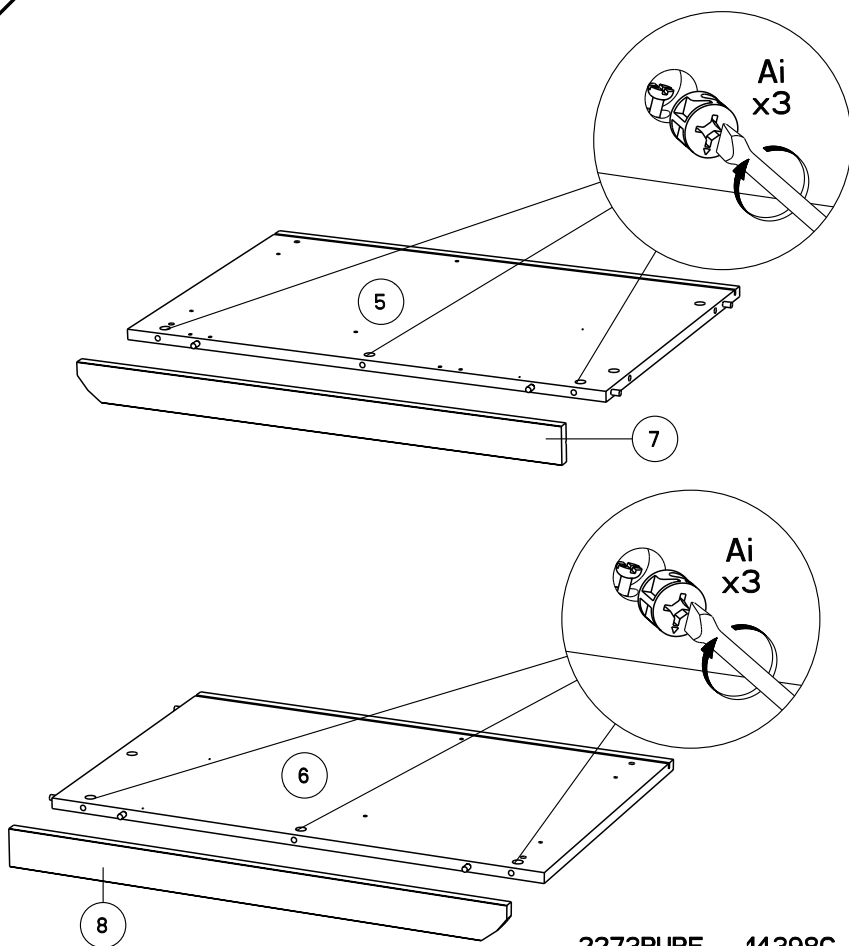


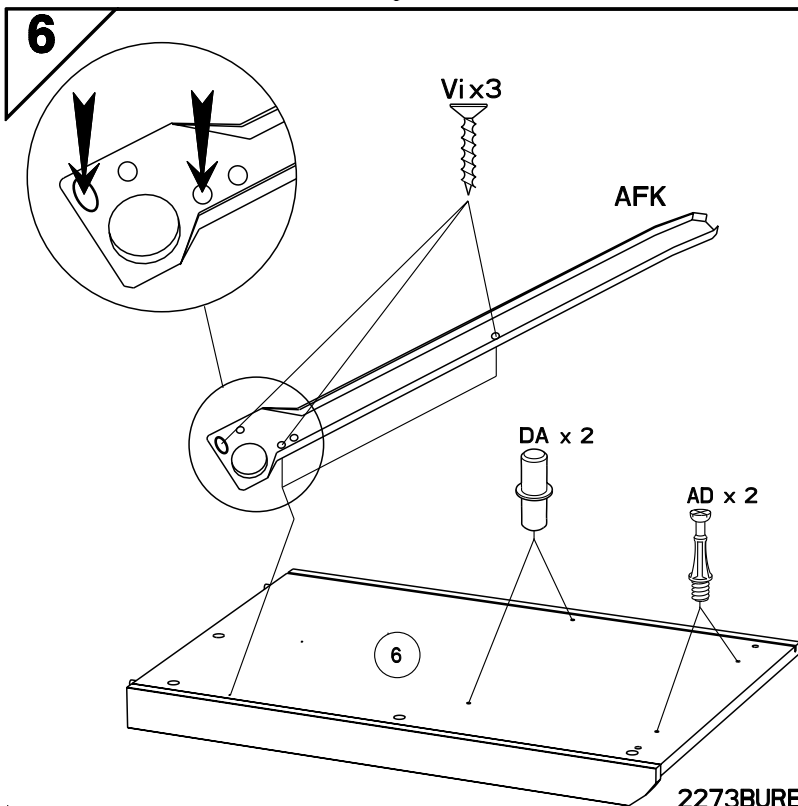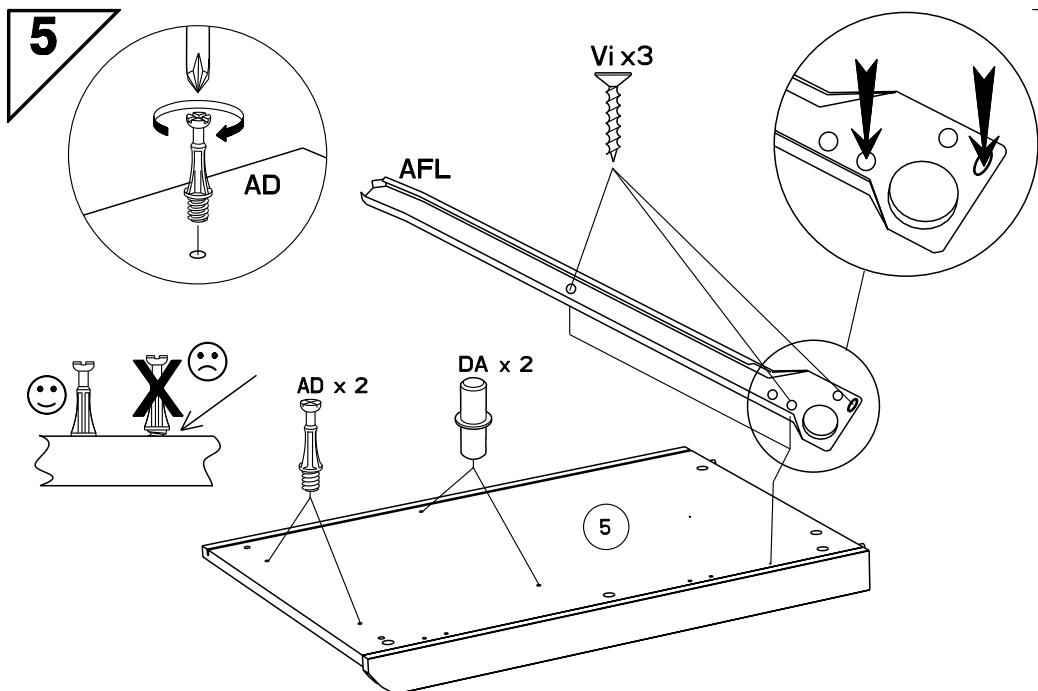


7

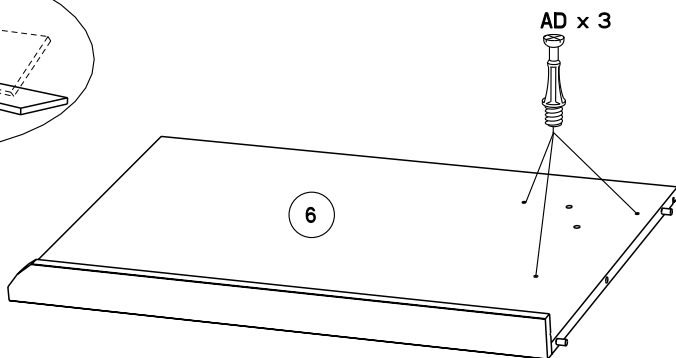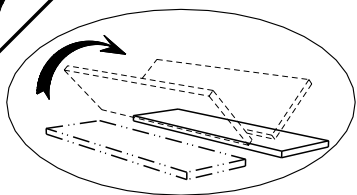


8

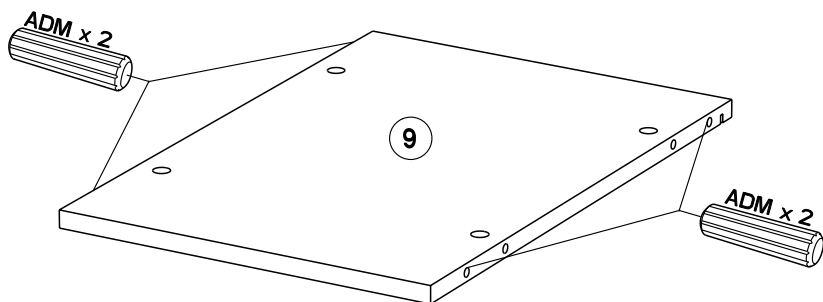


9

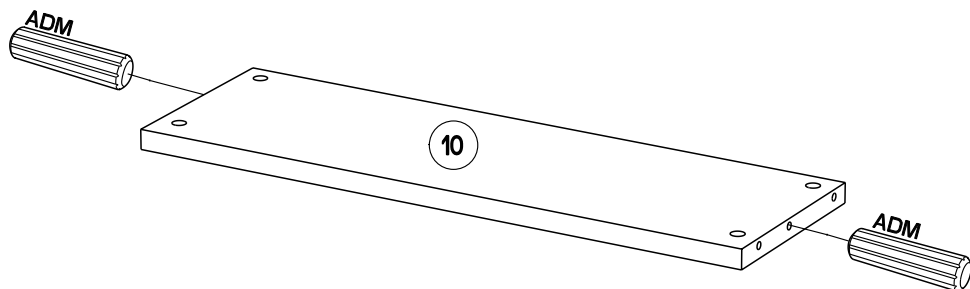


10

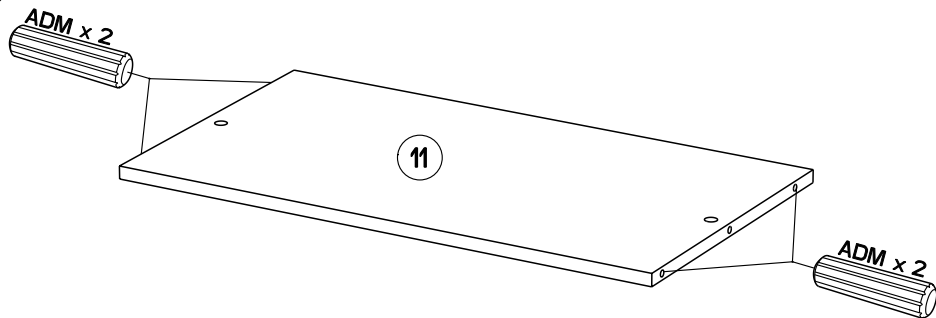


11

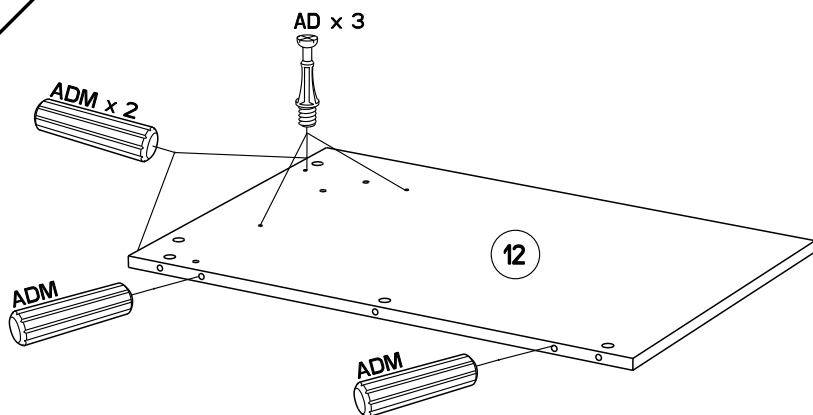


12

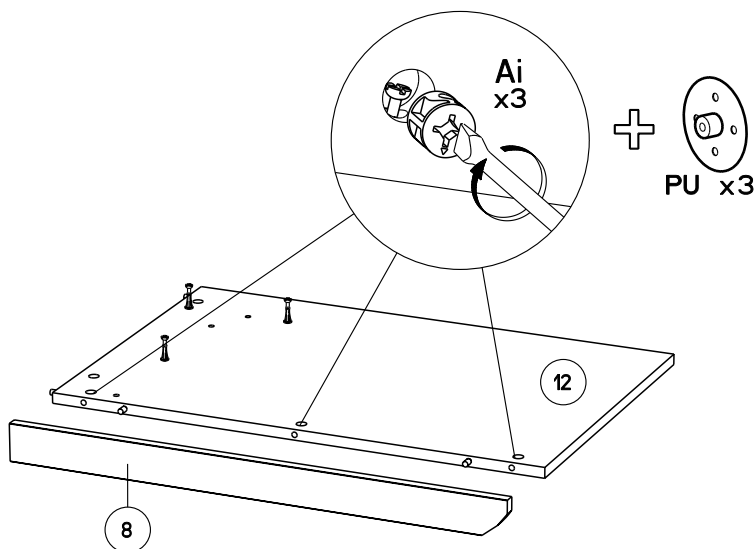


13

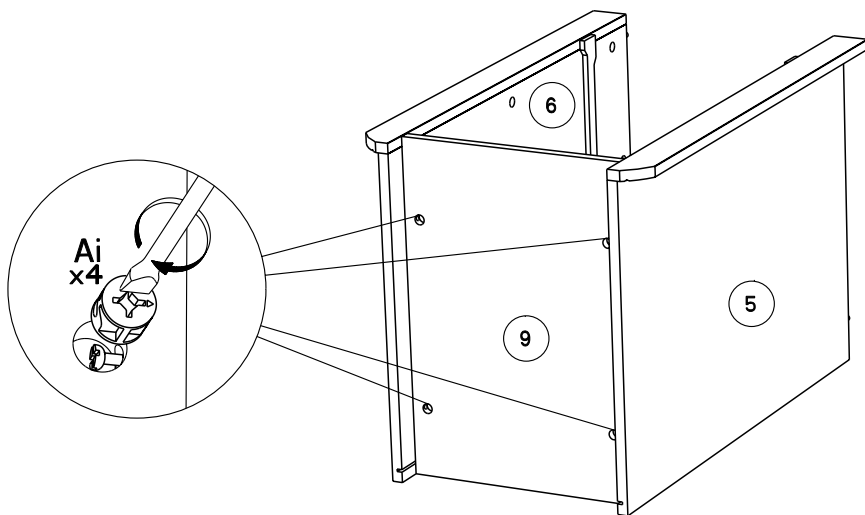


14

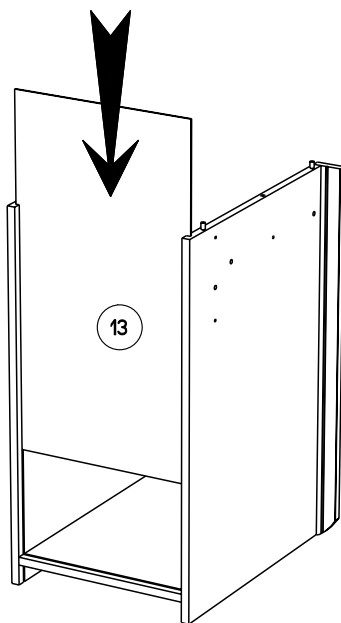


15

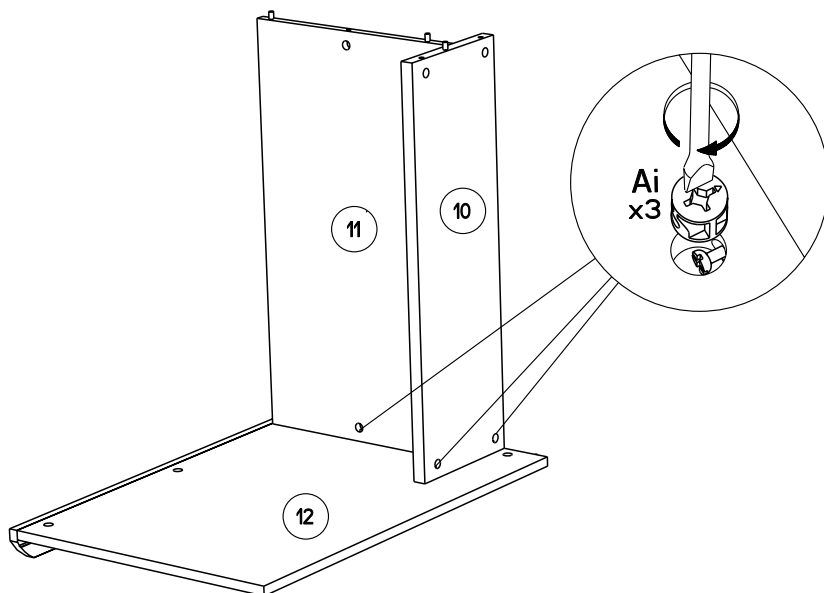


16

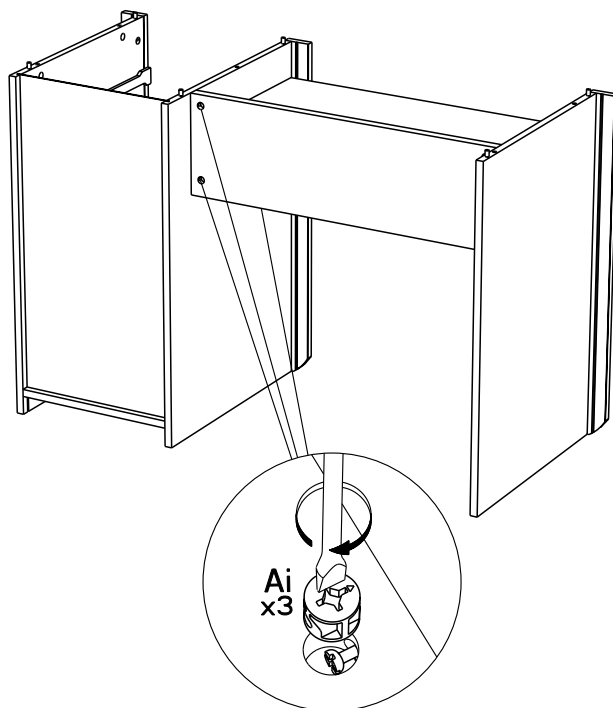


17

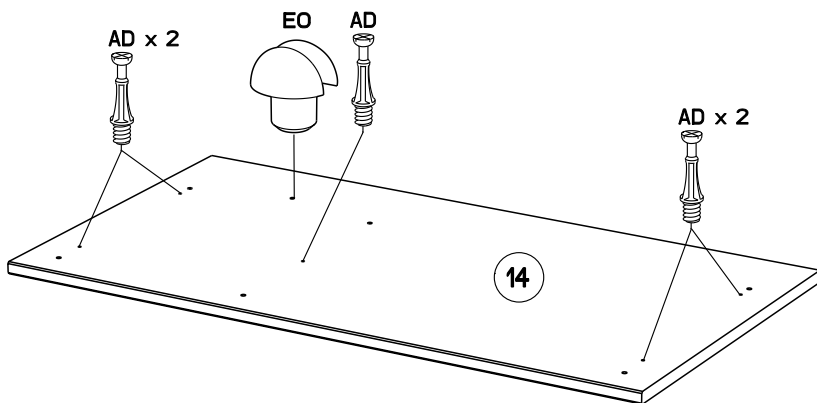


18

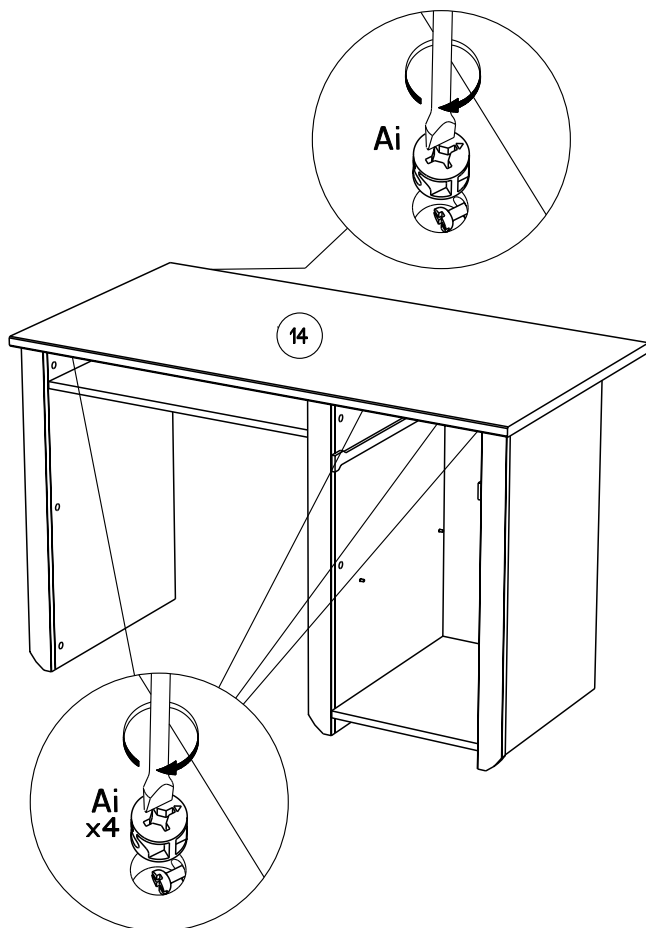


19

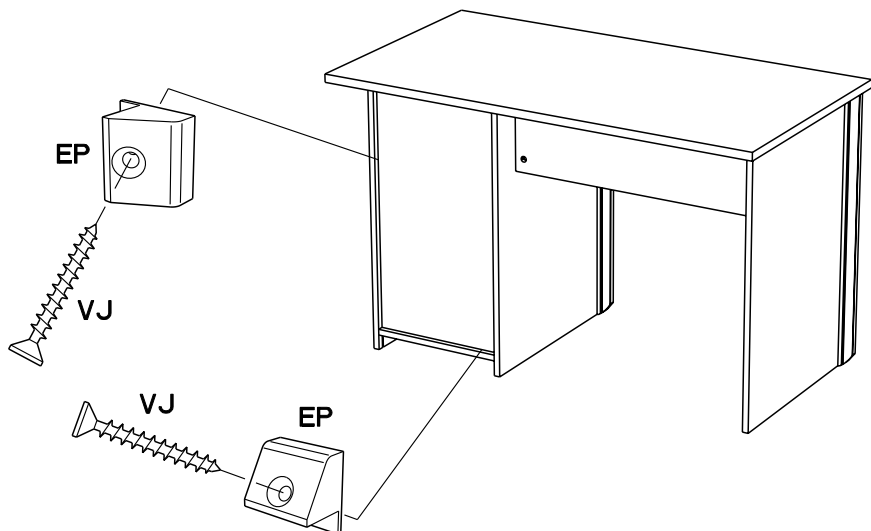





20

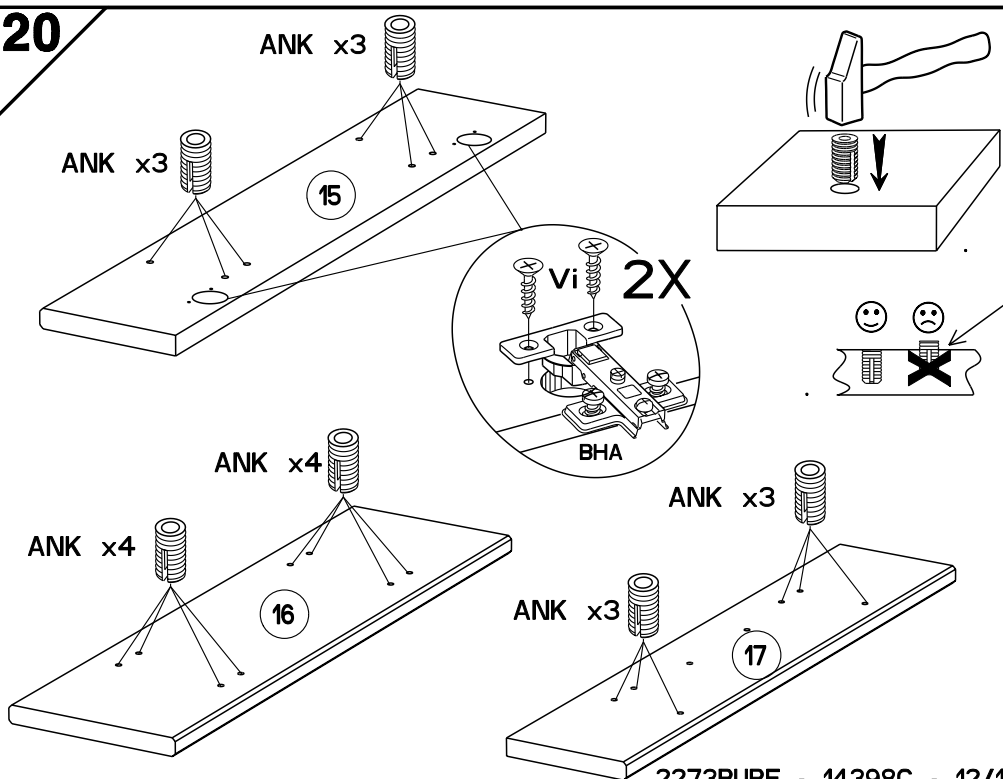


21

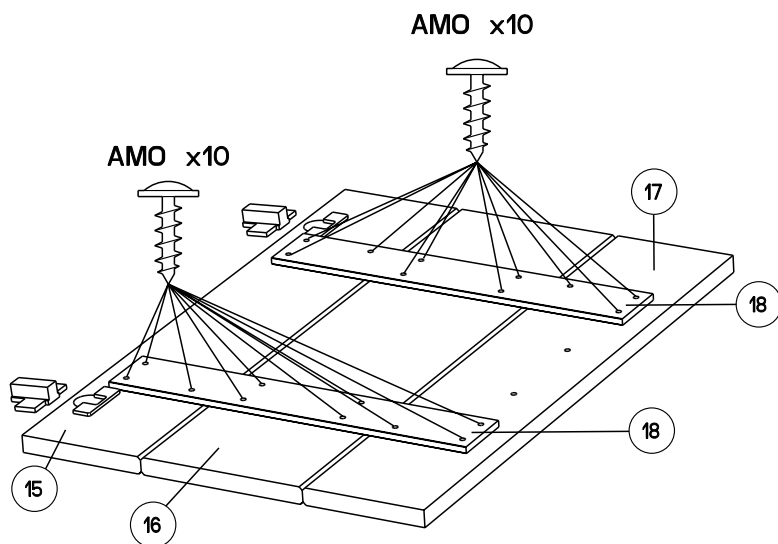


22

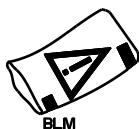
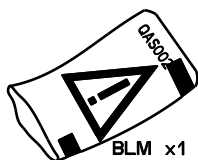
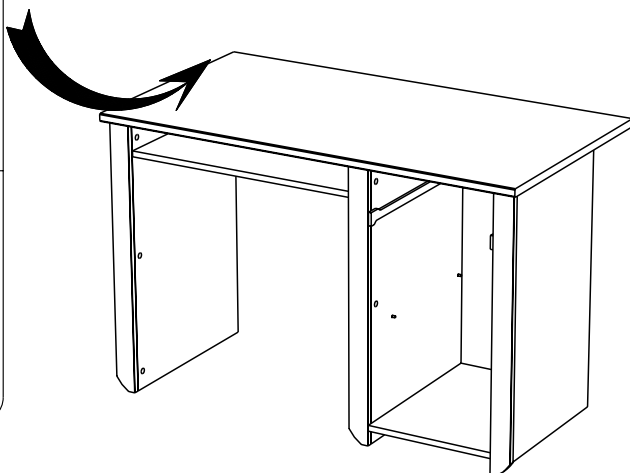
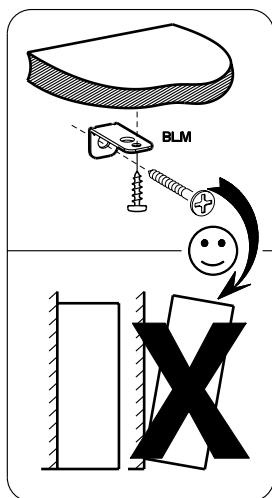


23

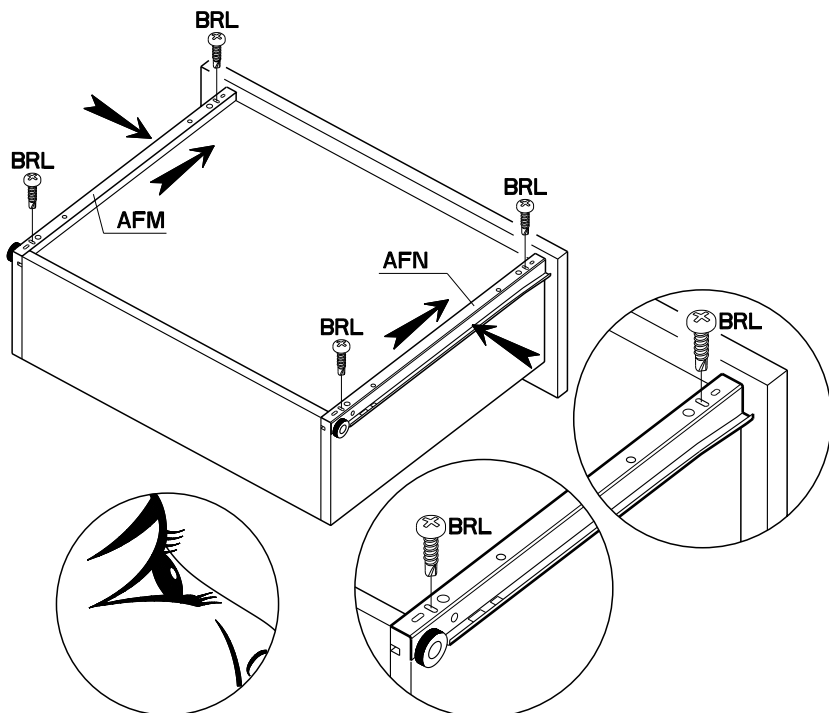

24

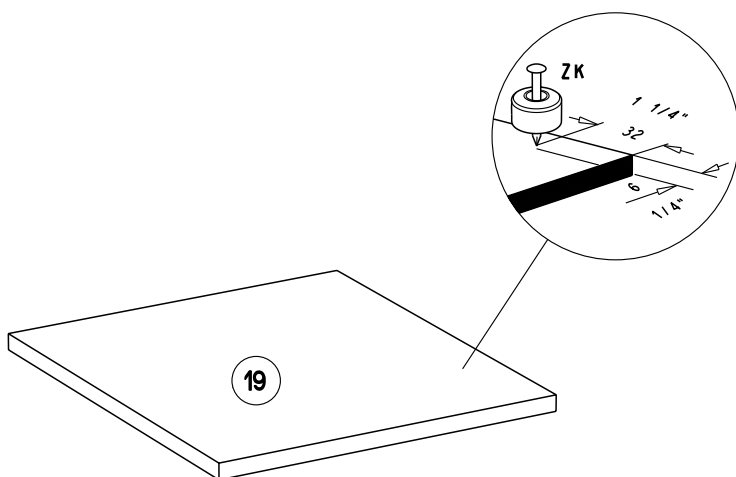

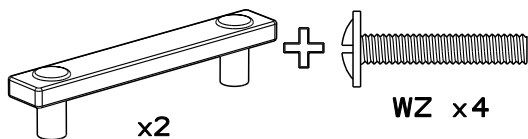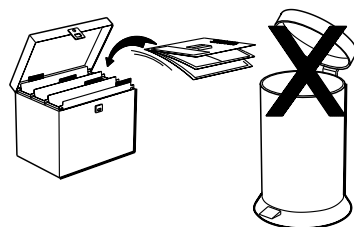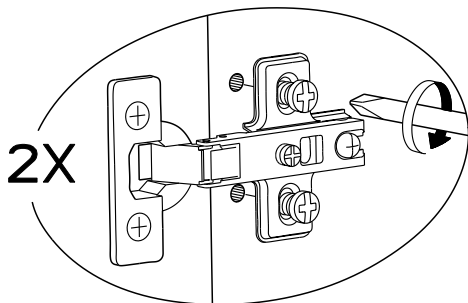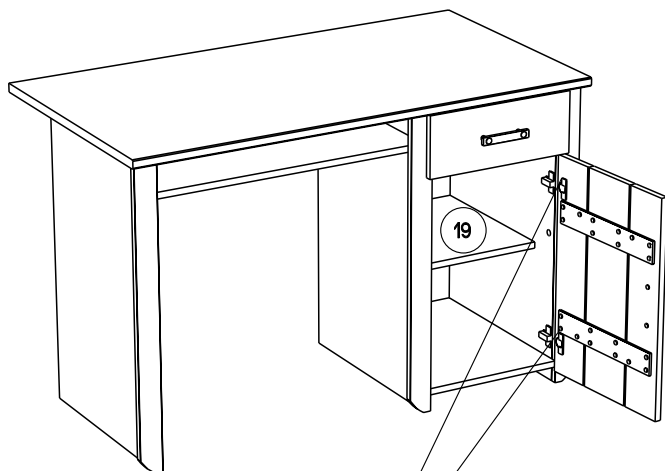

(F) REGLAGE (GB) ADJUSTING (E) AJUSTER (I) AGGIUSTAMENTO
 (D) ANPASSUNG (P) REGULACAO (NL) AFSTELLING

