




SOFT, DRY CLOTH




CHEMICAL

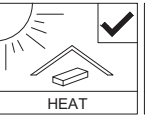

HEAT



KEEP DRY

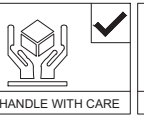

HANDLE WITH CARE



DO NOT USE KNIFE

ASSEMBLY INSTRUCTION

MODEL : WT 1892-S5 - EVOQUE BUREEL / BUREAU / WRITING TABLE 130

HARDWARE	A	B	C	D	E	F	G	H1 H2	I	J	K	K1 K2	L	M	N	O	P
	PLASTIC DOWEL M8X25 1X32	CB SCREW M3.5X12 1X36	CB SCREW M3.5X16 1X8	CB SCREW M4X20 1X12	CB SCREW M4X25 1X6	CB SCREW M4X35 1X24	CSK CAP M6X40 1X8	MINIFIX 5654 15 SETS	POWER NAIL 6/8 1X24	CAP 1X21	HANDLE VSC 12 PVC (160MM) 1X3	P/H SCREW M4X40 1X6	ABS DRAWER PIN (56MM) 1X6	ALLEN KEY 1X1	PLASTIC PIN 1X7	METAL BRACKET 1X2	DRAWER SLIDE 16" 3SETS

PART LIST

STEP 1

STEP 2

STEP 3

STEP 4

STEP 5

STEP 6

STEP 7


STEP 8



SOFT, DRY CLOTH



CHEMICAL



HEAT



KEEP DRY



HANDLE WITH CARE




DO NOT USE KNIFE


ASSEMBLY INSTRUCTION

MODEL : WT 1892-S5 - EVOQUE BUREEL / BUREAU / WRITING TABLE 130

STEP 9

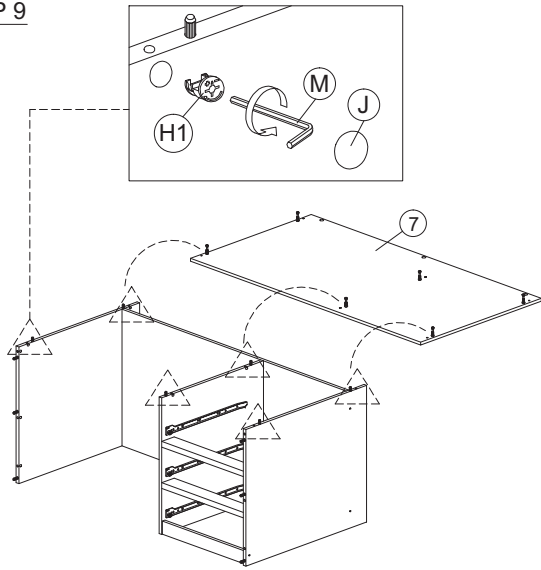


STEP 10

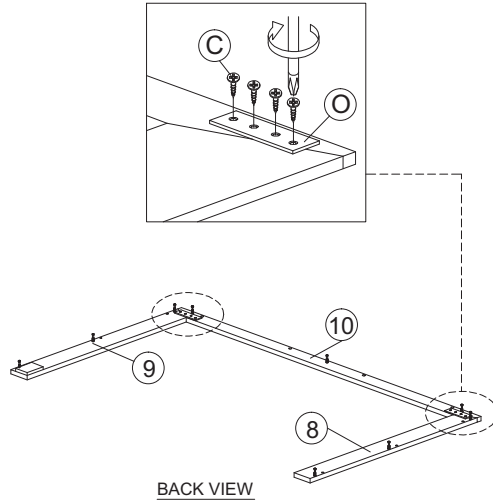


BACK VIEW


STEP 11

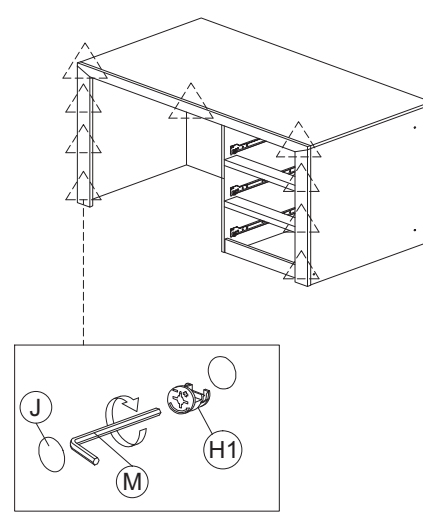


STEP 12

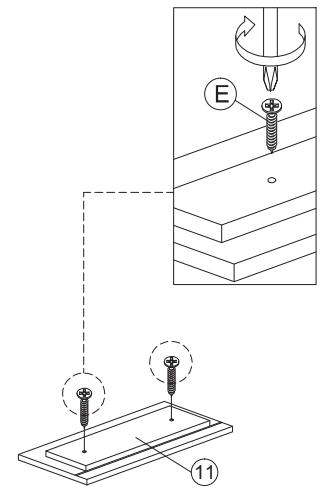


STEP 13

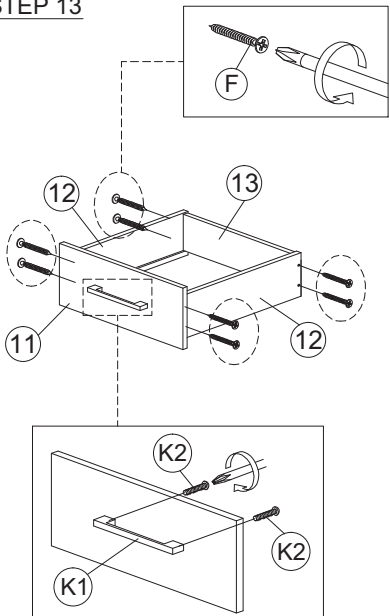

STEP 14

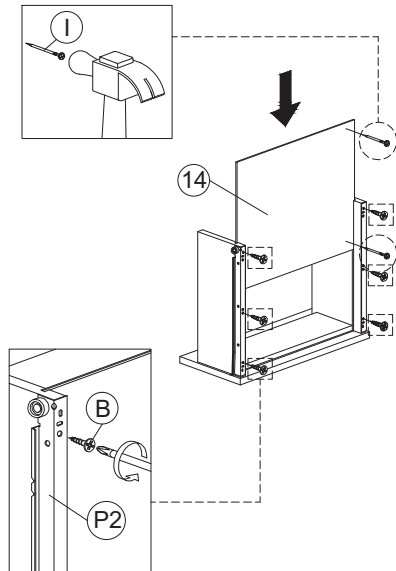

STEP 15

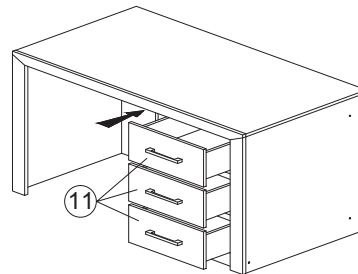

COMPLETED

