


# ASSEMBLY INSTRUCTION


MODEL : WR 80091-S5 - ERIKA KLEERKAST / ARMOIRE 3 D/P / 3 DOORS WARDROBE

HARDWARE	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	
	PLASTIC DOWEL M8X25 1X56	CB SCREW M3.5X16 1X48	CB SCREW M4X20 1X8	CB SCREW M4X25 1X8	CSK CAP M6X40 1X24	CSK CAP M6X50 1X16	HINGES (OUTSIDE) 1X12	MINIFIX 5654 16 SETS	CAP 1X32	IP 303 PLASTIC ROUND LEG 1X8	HANDLE VSC 15 (192MM) - PVC 1X3	P/H SCREW M4X24 1X6	ABS DRAWER PIN 25MM 1X4	POWER NAIL 6/8 1X110	ALLEN KEY 1X1	ALUMINIUM PIPE (532MM) 1X2


## PARTS LIST

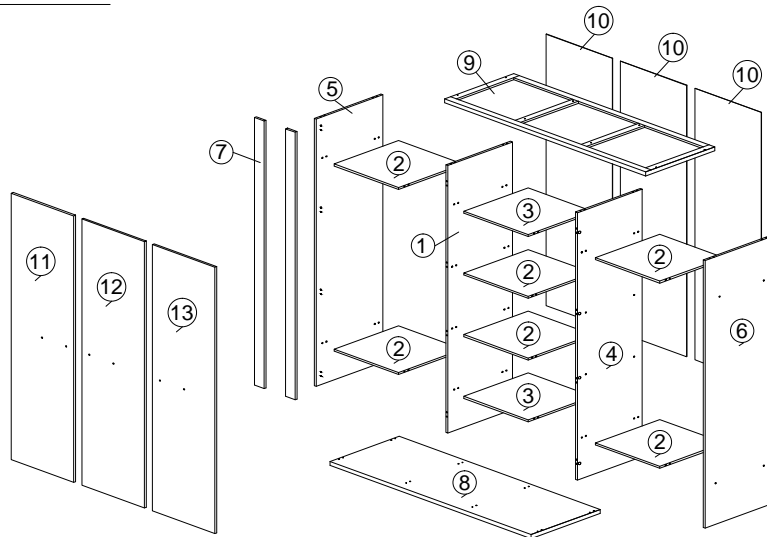


## STEP 1

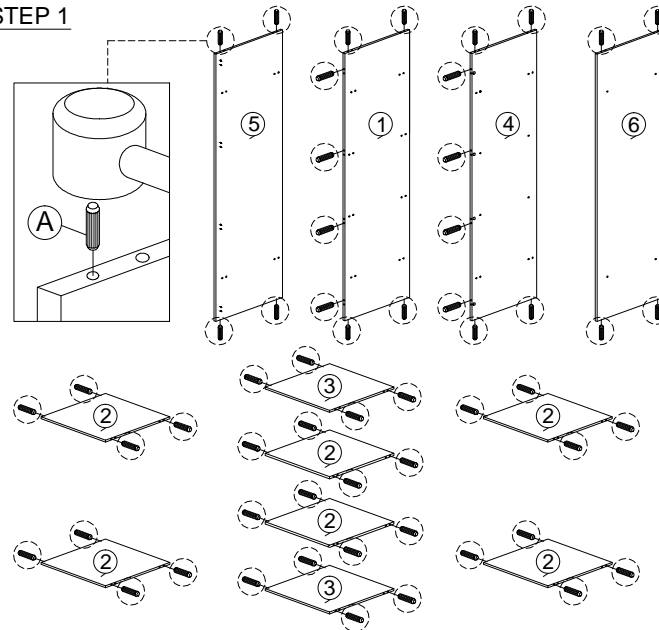


## STEP 2

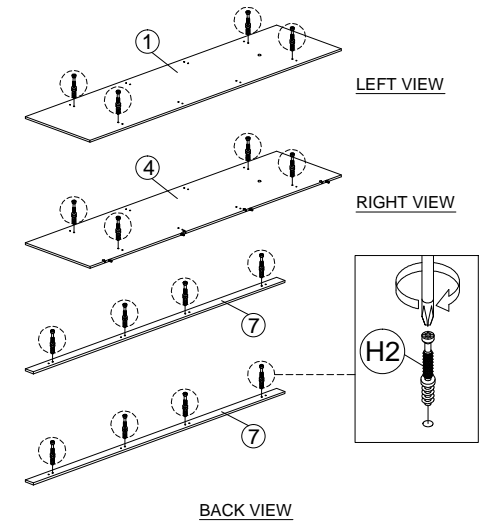


## STEP 3

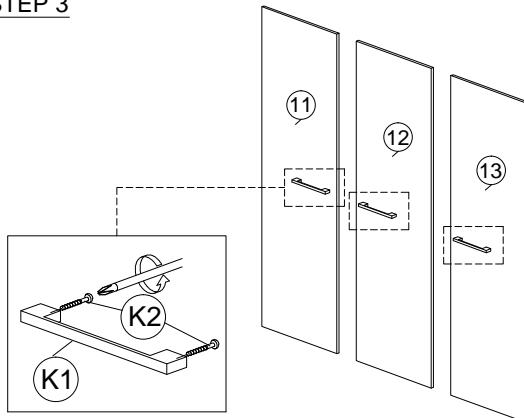


## STEP 4

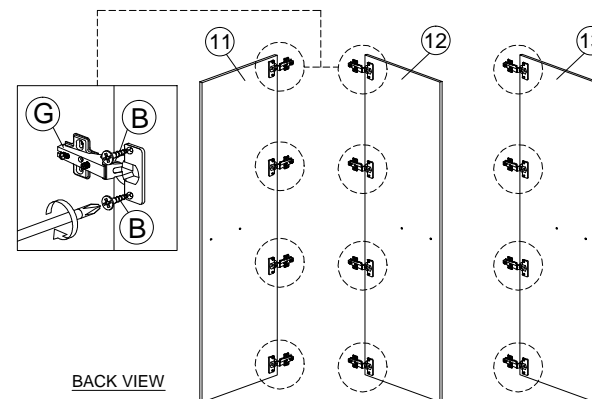

## STEP 6

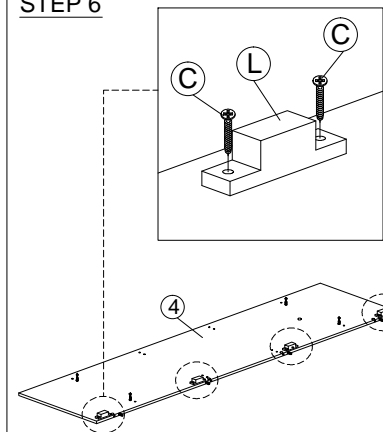


## STEP 7

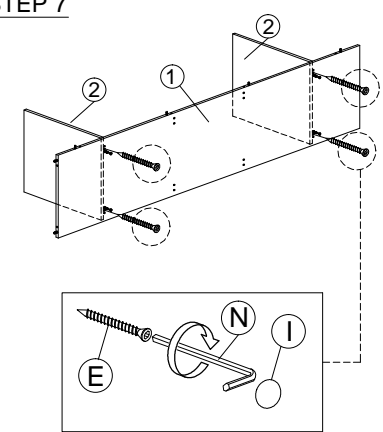




SOFT, DRY CLOTH



CHEMICAL



HEAT



KEEP DRY



HANDLE WITH CARE




DO NOT USE KNIFE


# ASSEMBLY INSTRUCTION

MODEL : WR 80091-S5 - ERIKA KLEERKAST / ARMOIRE 3 D/P / 3 DOORS WARDROBE


STEP 8

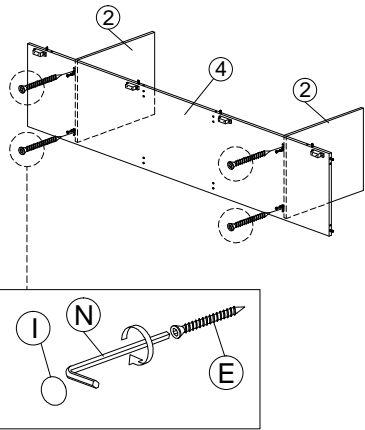


STEP 9

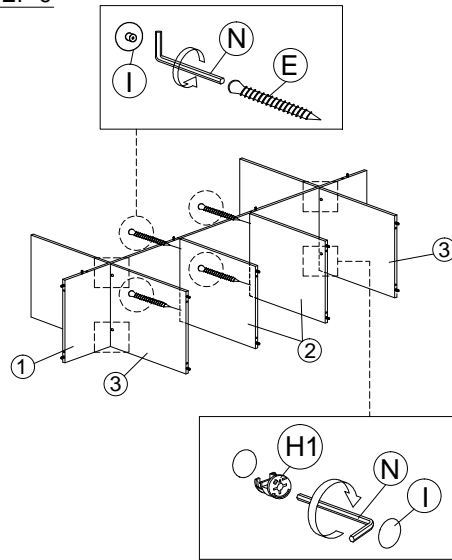


STEP 10

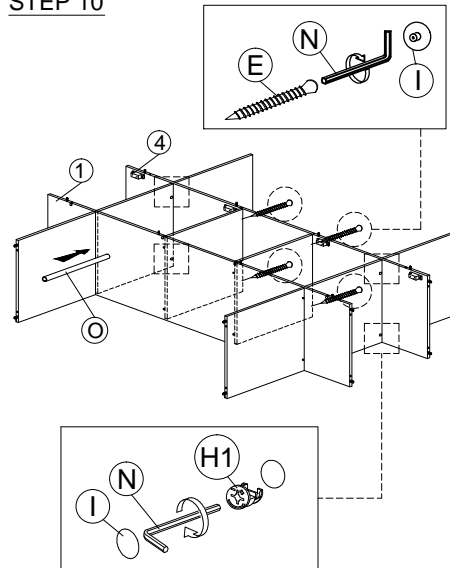


STEP 11

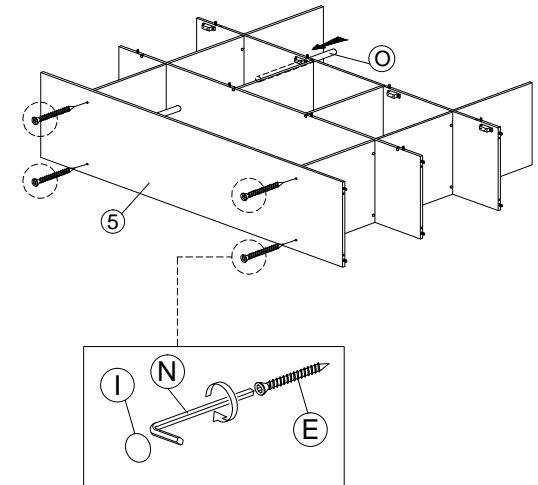


STEP 12

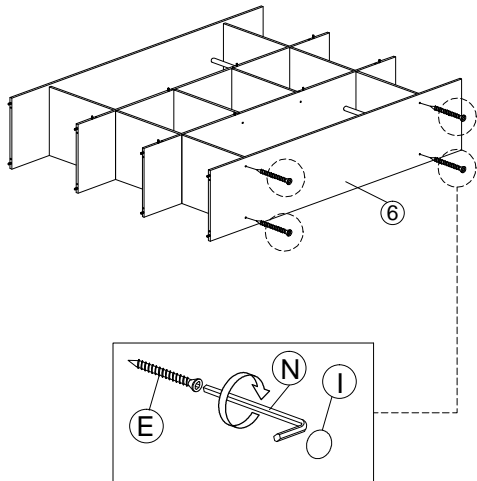


STEP 13



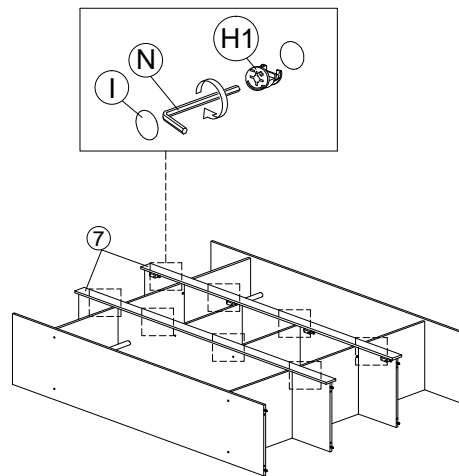


STEP 14

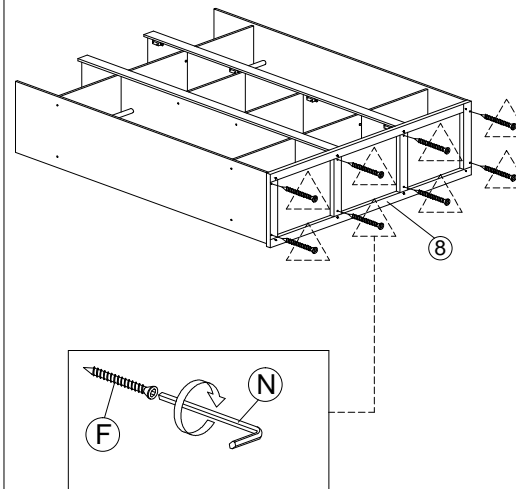

STEP 15

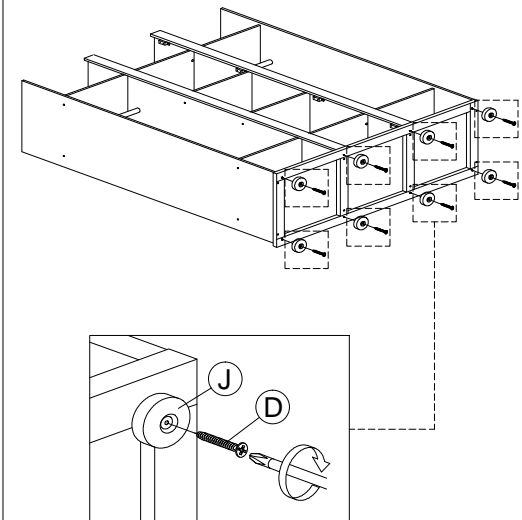





# ASSEMBLY INSTRUCTION

MODEL : WR 80091-S5 - ERIKA KLEERKAST / ARMOIRE 3 D/P / 3 DOORS WARDROBE


## STEP 16

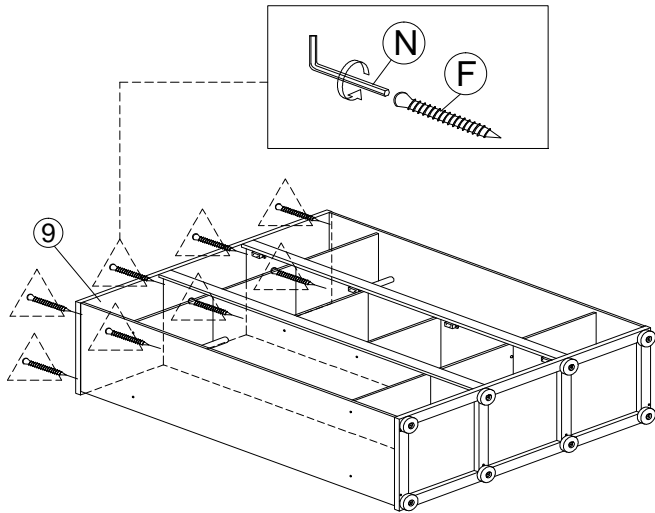


## STEP 17

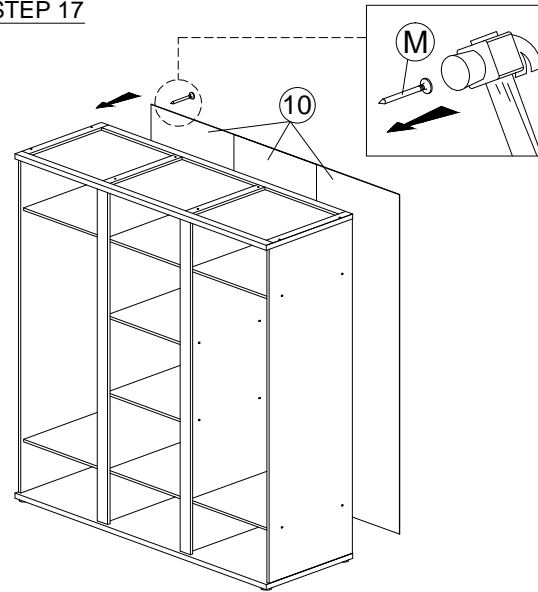

## STEP 18

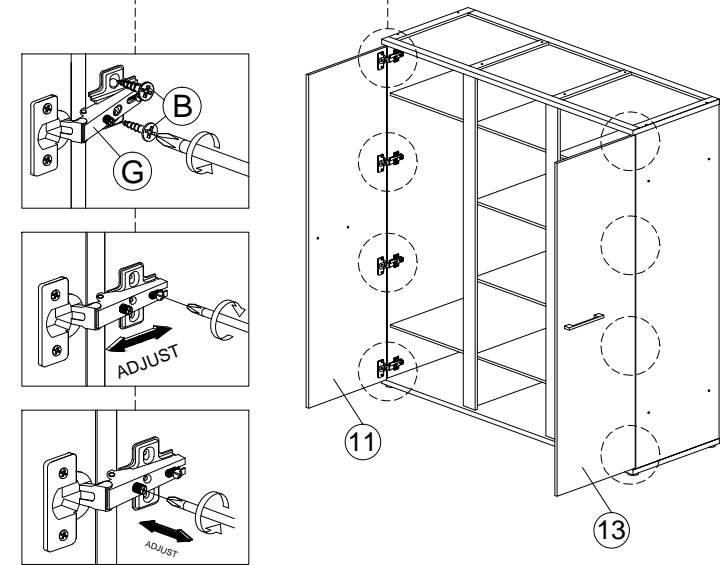

## STEP 19

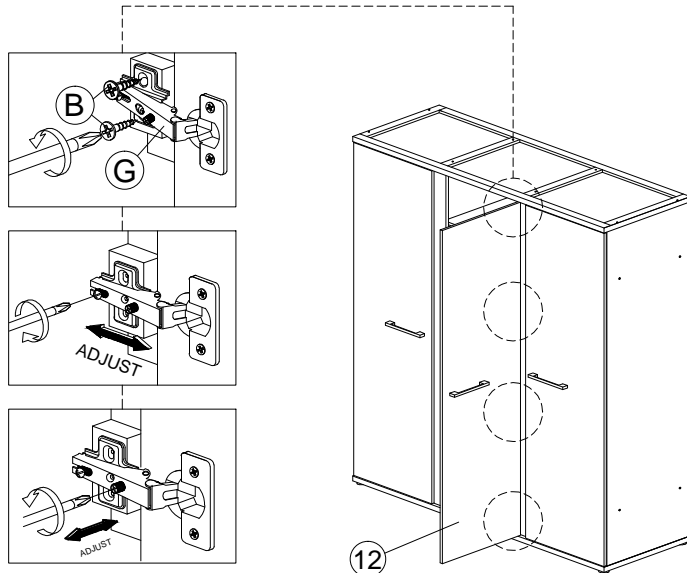

## COMPLETED

