




SOFT, DRY CLOTH



CHEMICAL



HEAT



KEEP DRY



HANDLE WITH CARE




DO NOT USE KNIFE

# ASSEMBLY INSTRUCTION



MODEL : BC 70065-S5 - ERIKA COMMODE 1 DOOR / 1 PORTE / 1 DOOR CABINET

HARDWARE	A	B	C	D	E	F	G	H	I	J	K	L
	PLASTIC DOWEL M8X25 1X16	CB SCREW M3.5X16 1X12	CB SCREW M4X25 1X6	CSK CAP M6X50 1X6	METAL SHELF SUPPORT 1X16	POWER NAIL 6/8 1X54	C163 PLASTIC ROUND LEG (H12MM) - BLK 1X6	MINIFIX 5654 10 SETS	CAP 1X10	ALLEN KEY 1X1	HINGES 5/4* (OUTSIDE) 3 SETS	HANDLE VSC15 (192MM) 1X1 P/H SCREW M4X24 1X2



## PART LIST

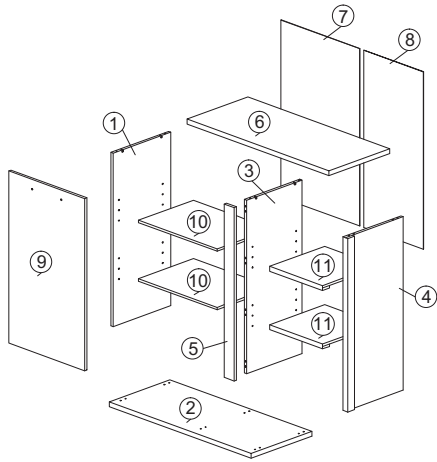


## STEP 1 - Dowel fitting

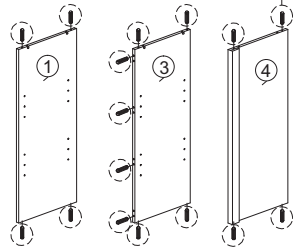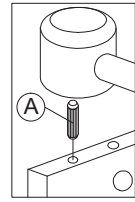

## STEP 2

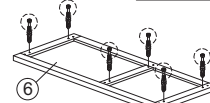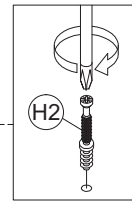


BOTTOM VIEW




BACK VIEW

## STEP 3


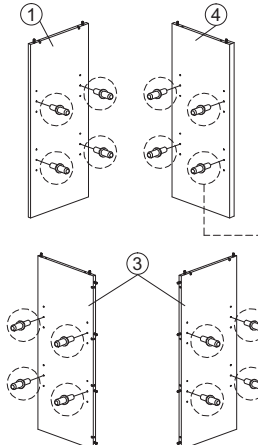


RIGHT VIEW

LEFT VIEW





## STEP 4

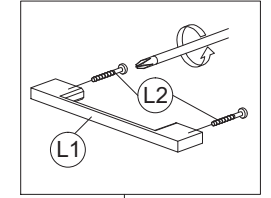


FRONT VIEW

## STEP 5

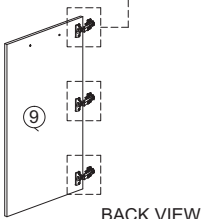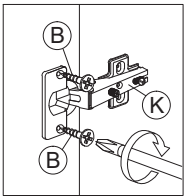


BACK VIEW



## STEP 6

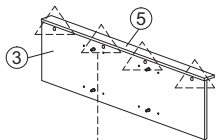



RIGHT VIEW

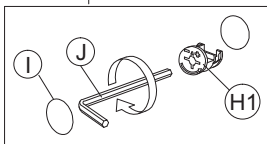



## STEP 7

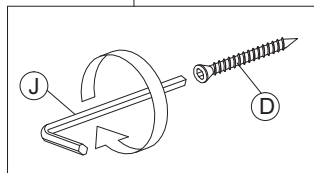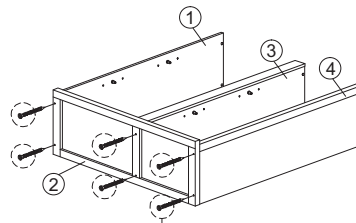

## STEP 8

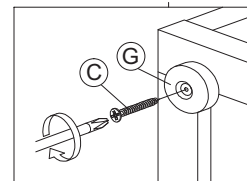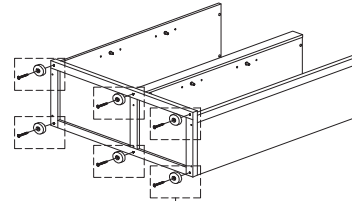

## STEP 9

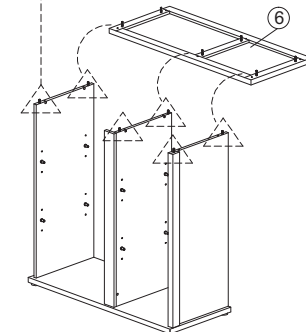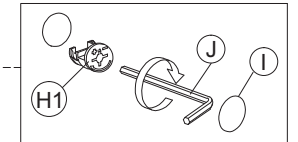




SOFT, DRY CLOTH



CHEMICAL



HEAT



KEEP DRY



HANDLE WITH CARE




DO NOT USE KNIFE

# ASSEMBLY INSTRUCTION

MODEL : BC 70065-S5 - ERIKA COMMUNE 1 DOOR / 1 PORTE / 1 DOOR CABINET

## STEP 10

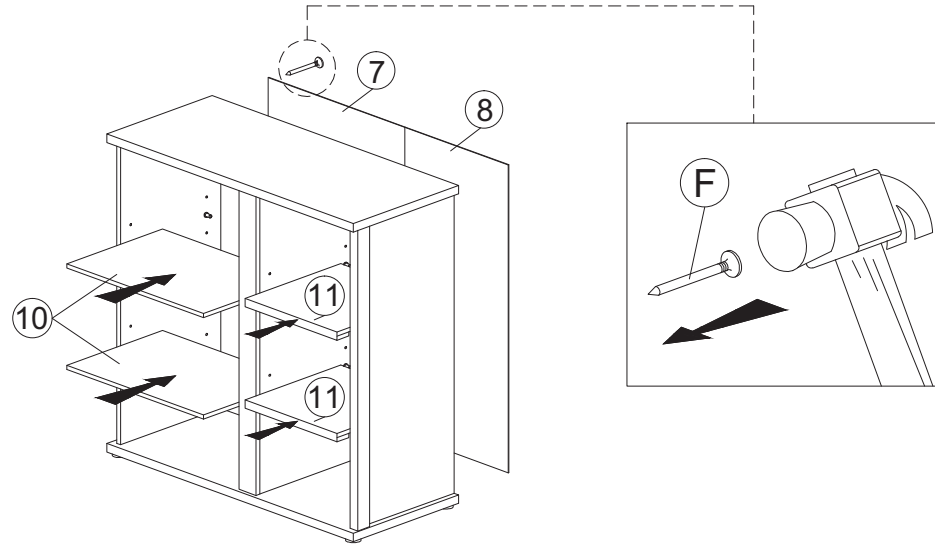

## COMPLETED



## STEP 11

